



**Avaya one-X™ Deskphone Edition  
for 9600 Series IP Telephones  
Administrator Guide  
Release 1.5**

16-300698  
Issue 4  
May 2007

© 2007 Avaya Inc.  
All Rights Reserved.

#### Notice

While reasonable efforts were made to ensure that the information in this document was complete and accurate at the time of printing, Avaya Inc. can assume no liability for any errors. Changes and corrections to the information in this document may be incorporated in future releases.

**For full legal page information, please see the complete document, Avaya Legal Page for Hardware Documentation, Document number 03-600759.**

**To locate this document on our Web site, simply go to <http://www.avaya.com/support> and search for the document number in the search box.**

#### Documentation disclaimer

Avaya Inc. is not responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya. Customer and/or End User agree to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation to the extent made by the Customer or End User.

#### Link disclaimer

Avaya Inc. is not responsible for the contents or reliability of any linked Web sites referenced elsewhere within this documentation, and Avaya does not necessarily endorse the products, services, or information described or offered within them. We cannot guarantee that these links will work all of the time and we have no control over the availability of the linked pages.

#### Warranty

Avaya Inc. provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product, while under warranty, is available through the following Web site:

<http://www.avaya.com/support>

#### Copyright

Except where expressly stated otherwise, the Product is protected by copyright and other laws respecting proprietary rights. Unauthorized reproduction, transfer, and or use can be a criminal, as well as a civil, offense under the applicable law.

#### Avaya support

Avaya provides a telephone number for you to use to report problems or to ask questions about your product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Web site:

<http://www.avaya.com/support>

#### Software License

USE OR INSTALLATION OF THE PRODUCT INDICATES THE END USER'S ACCEPTANCE OF THE TERMS SET FORTH HEREIN AND THE GENERAL LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE AT <http://support.avaya.com/LicenseInfo/> ("GENERAL LICENSE TERMS"). IF YOU DO NOT WISH TO BE BOUND BY THESE TERMS, YOU MUST RETURN THE PRODUCT(S) TO THE POINT OF PURCHASE WITHIN TEN (10) DAYS OF DELIVERY FOR A REFUND OR CREDIT.

Avaya grants End User a license within the scope of the license types described below. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the Documentation or other materials available to End User. "Designated Processor" means a single stand-alone computing device. "Server" means a Designated Processor that hosts a software application to be accessed by multiple users. "Software" means the computer programs in object code, originally licensed by Avaya and ultimately utilized by End User, whether as stand-alone Products or pre-installed on Hardware. "Hardware" means the standard hardware Products, originally sold by Avaya and ultimately utilized by End User.

#### License Type(s):

Designated System(s) License (DS). End User may install and use each copy of the Software on only one Designated Processor, unless a different number of Designated Processors is indicated in the Documentation or other materials available to End User. Avaya may require the Designated Processor(s) to be identified by type, serial number, feature key, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

#### Third-party Components

Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information identifying Third Party Components and the Third Party Terms that apply to them is available on Avaya's Web site at:

<http://support.avaya.com/ThirdPartyLicense/>

#### Interference

Using a cell, mobile, or GSM telephone, or a two-way radio in close proximity to an Avaya IP Telephone might cause interference.

#### Security

See <http://support.avaya.com/security> to locate and/or report known vulnerabilities in Avaya products. See <http://support.avaya.com> to locate the latest software patches and upgrades. For information about secure configuration of equipment and mitigation of toll fraud threats, see the Avaya Toll Fraud and Security Handbook at <http://support.avaya.com>.

## Contents

<b>Chapter 1: Introduction</b>	<b>9</b>
About This Guide	9
Differences Between 9600 Series and 4600 Series IP Telephones	10
Change History	12
What's New in Release 1.5	12
Document Organization	13
Other Documentation	14
<b>Chapter 2: Administration Overview and Requirements</b>	<b>15</b>
9600 Series IP Telephones	15
Parameter Data Precedence	18
The Administrative Process	18
Administrative Checklist	19
Telephone Initialization Process	20
Step 1: Telephone to Network	20
Step 2: DHCP Server to Telephone	21
Step 3: Telephone and File Server	21
Step 4: Telephone and the Call Server	21
Error Conditions	22
<b>Chapter 3: Network Requirements</b>	<b>23</b>
Network Assessment	23
Hardware Requirements	23
Server Requirements	24
DHCP Server	24
HTTP/HTTPS Server	24
Web Server (Optional)	24
Required Network Information	25
Other Network Considerations	26
SNMP	26
Reliability and Performance	27
QoS	27
IEEE 802.1D and 802.1Q	27
Network Audio Quality Display on 9600 Series IP Telephones	28
IP Address Lists and Station Number Portability	28
TCP/UDP Port Utilization	29

## Contents

Security . . . . .	32
Registration and Authentication . . . . .	33
Time-to-Service (TTS) . . . . .	33
<b>Chapter 4: Communication Manager Administration . . . . .</b>	<b>35</b>
Call Server Requirements . . . . .	35
Switch Compatibility and Aliasing IP Telephones. . . . .	35
Media Server (Switch) Administration . . . . .	36
IP Interface and Addresses . . . . .	37
UDP Port Selection . . . . .	37
RSVP and RTCP/SRTCP. . . . .	37
QoS . . . . .	37
IEEE 802.1D and 802.1Q. . . . .	38
NAT . . . . .	38
DIFFSERV . . . . .	38
Voice Mail Integration . . . . .	39
9600 Series IP Telephones with CM 4.0+ Native Support . . . . .	39
9600 Series IP Telephones Aliased as 4600 Series IP Telephones. . . . .	39
Call Transfer Considerations . . . . .	40
Conferencing Call Considerations . . . . .	41
Telephone Administration. . . . .	42
System-Wide Administration . . . . .	42
Feature-Related System Parameters . . . . .	42
Administering Stations . . . . .	44
Aliasing 9600 Series IP Telephones . . . . .	45
Administering Features . . . . .	45
Feature Buttons and Call Appearances . . . . .	46
For the 9610 IP Telephone . . . . .	46
For the 9620 IP Telephone . . . . .	47
For 9630/9630G, 9640/9640G, and 9650 IP Telephones . . . . .	47
Button Module(s) (SBM24) on the 9630/9630G, 9640/9640G, and 9650 . . . . .	48
Conference Details Screen for Ad-Hoc Conferences . . . . .	49
Special Considerations for the 9650 IP Telephone . . . . .	49
Shuffling . . . . .	50
Wide Band Codecs . . . . .	50

<b>Chapter 5: Server Administration</b>	<b>51</b>
Software Checklist	51
DHCP and File Servers	51
DHCP Server Administration	52
Configuring DHCP for 9600 Series IP Telephones	52
DHCP Generic Setup	54
Windows NT 4.0 DHCP Server	57
Verifying the Installation of the DHCP Server	57
Creating a DHCP Scope for the IP Telephones	58
Editing Custom Options	59
Adding the DHCP Option	59
Activating the Leases	60
Verifying Your Configuration	60
Windows 2000 DHCP Server	61
Verifying the Installation of the DHCP Server	61
Adding DHCP Options	63
Activating the New Scope	64
HTTP Generic Setup	64
HTTP/HTTPS Configuration for Backup/Restore	65
For IIS Web Servers	65
For Apache Web Servers	72
Web Configuration Tool	73
<b>Chapter 6: Telephone Software and Application Files</b>	<b>77</b>
General Download Process	77
Software	77
9600 Series IP Telephone Scripts and Application Files	78
Choosing the Right Application File and Upgrade Script File	78
Upgrade Script File	78
Settings File	79
Contents of the Settings File	80
The GROUP System Value	81

<b>Chapter 7: Administering Telephone Options . . . . .</b>	<b>83</b>
Administering Options for the 9600 Series IP Telephones . . . . .	83
VLAN Considerations . . . . .	91
VLAN Tagging . . . . .	92
VLAN Detection . . . . .	92
VLAN Default Value and Priority Tagging . . . . .	93
VLAN Separation. . . . .	93
DNS Addressing . . . . .	95
IEEE 802.1X . . . . .	96
802.1X Pass-Through and Proxy Logoff . . . . .	96
802.1X Supplicant Operation . . . . .	97
Link Layer Discovery Protocol (LLDP) . . . . .	98
Local Administrative Options Using the Telephone Dialpad . . . . .	102
Language Selection . . . . .	102
Gigabit Ethernet Adapter . . . . .	104
Enhanced Local Dialing . . . . .	104
Enhanced Local Dialing Requirements . . . . .	105
Backup/Restore . . . . .	106
Backup . . . . .	107
Restore . . . . .	109
9610 Backup/Restore . . . . .	110
9610 Retrieval Procedures . . . . .	111
General 9610 Restore Processing . . . . .	111
<b>Chapter 8: Administering Applications and Options . . . . .</b>	<b>113</b>
Customizing 9600 Series IP Telephone Applications and Options. . . . .	113
The Application Status Flag (APPSTAT) . . . . .	117
Special Administration for the 9610 . . . . .	119
Avaya "A" Menu Administration . . . . .	119
Administering Phone Settings and Options and Settings (OPSTAT) . . . . .	120
Main Avaya Menu with WML Applications Administered . . . . .	120
Main Avaya Menu with Browser (Only) Administered. . . . .	122
Main Menu – No WML Applications Administered . . . . .	123
Avaya Menu Administration With WML Applications . . . . .	124
Sample Avaya Menu Administration File Template . . . . .	125
Timer Operation for the 9620, 9630/9630G, 9640/9640G, and 9650 . . . . .	127

<b>Chapter 9: Administering Specific 9600 Series IP Telephones. . . . .</b>	<b>129</b>
Introduction . . . . .	129
Special Administration for the 9610 IP Telephone. . . . .	129
General Functionality . . . . .	129
Key 9610 Administration Concepts. . . . .	130
Backup File Format . . . . .	130
Main Menu (MM) Administration . . . . .	131
Contacts Application Administration. . . . .	133
The 9610 Idle Application, WMLIDLETIME, SCREENSAVERON, IDLEAPP, and WMLSMALL . . . . .	133
9610 Craft Procedures. . . . .	135
Troubleshooting a 9610 IP Telephone . . . . .	135
Sample 9610data.txt File . . . . .	136
Sample idle.wml File. . . . .	138
Sample hotel.wml File . . . . .	138
<b>Appendix A: Glossary of Terms . . . . .</b>	<b>139</b>
<b>Appendix B: Related Documentation . . . . .</b>	<b>143</b>
IETF Documents . . . . .	143
ITU Documents. . . . .	143
ISO/IEC, ANSI/IEEE Documents . . . . .	143
<b>Appendix C: Sample Administration Forms. . . . .</b>	<b>145</b>
<b>Index . . . . .</b>	<b>155</b>

## **Contents**



# Chapter 1: Introduction

---

## About This Guide

This guide is for personnel who administer Avaya Communication Manager, DHCP, HTTP/HTTPS servers for 9600 Series IP Telephones, a Local Area Network (LAN), or a Web server.

The 9600 Series IP Telephones use Internet Protocol (IP) technology with Ethernet line interfaces and support the H.323 protocol only. The 9600 Series IP Telephones provide support for DHCP, HTTP, and HTTPS over IPv4/UDP, which enhance the administration and servicing of the telephones. These telephones use DHCP to obtain dynamic IP Addresses, and HTTPS or HTTP to download new versions of software or customized settings for the telephones.



### CAUTION:

Avaya does not support many of the products mentioned in this document. Take care to ensure that there is adequate technical support available for servers used with any 9600 Series IP Telephone system. If the servers are not functioning correctly, the 9600 Series IP Telephones might not operate correctly.

### Note:

This guide covers administration of 9600 Series IP Telephones using H.323 protocol only. For information about administering these telephones in a Session Initiation Protocol (SIP) environment, see *Avaya one-X™ Deskphone Edition for 9600 Series SIP IP Telephones Administrator Guide* (Document Number 16-601944).



### Tip:

For a quick reference to Avaya Communication Manager settings for 9600 Series IP Telephones and related telephone interface information, see *Avaya one-X™ Deskphone Edition for 9600 Series IP Telephones Read This First* (Document Number 16-601533), available at: [www.avaya.com/support](http://www.avaya.com/support).

---

## Differences Between 9600 Series and 4600 Series IP Telephones

Review this section if you administer both 4600 and 9600 Series IP Telephones.

**Signaling** - 46xx Series IP Telephones can use H.323 or SIP for telephony signaling. 96xx Series IP Telephones only use H.323. SIP-related administration of 96xx telephones is neither necessary nor relevant.

**Avaya Communication Manager Release** - 46xx telephones are supported prior to Communication Manager Release 3.0. The 96xx telephones are not officially supported prior to Release 3.0.

**DHCP & SSON** - 46xx telephones use Option 176 as the default DHCP Site Specific Option Number (SSON); 96xx telephones use Option 242.

**Upgrade Script** - The upgrade script files have different names and content ("46xxupgrade.scr" versus "96xxupgrade.txt").

**File Servers** - 46xx telephones can use either TFTP or HTTPS servers as file servers, for example, to download new phone firmware, upgrade script files, or settings files. 96xx telephones only use HTTP or HTTPS.

**Backup** - 46xx telephones use FTP as the protocol to create and access backup files. Users can specify unique backup server addresses, backup directories, FTP User IDs, and FTP User Passwords. 96xx telephones use HTTP as the protocol to create and access backup files, and users have no options to change backup parameters. 96xx telephones use the settings file parameter BRURI to identify the backup file site.

**Backup Filenames** - Except for the 9610, 96xx telephones store their backup files with titles that do not include the model number, for example, **1234\_96xxdata.txt** vs. **1234\_4610data.txt** or **1234\_4620data.txt**. While the 9610 never "backs up" data, for consistent terminology with other 9600 Series IP Telephones, we use the term "backup file" to describe the 9610 administration file which uses names like **1234\_9610data.txt**. The telephone extension number is always included in the backup filenames. In these examples, **1234** denotes the extension.

**Backup File Content** - Except for the 9610, backup file contents are generally the same, except that the 96xx Contacts data is stored as:

**ABKNAMEmmm** = label

**ABKNUMBERmmm** = telephone number

**ABKTYPEmmm** = entry type

where **mmm** is **001** to **250**. A given Contact entry in the 96xx Backup file must have both name and number to be valid. Type is optional and not applicable for Releases 1.0 and 1.1. **ABK** stands for "Address Book", the original Contacts application name. See [Special Administration for the 9610](#) on page 119 for backup file content information.

**Settings File** - Although both 46xx and 96xx telephones use the 46xxsettings file, the 96xx uses the following new parameters:

**AMADMIN** - to get the AvayaMenuAdmin.txt file for A (AVAYA) Menu WML-applications  
**AUDASYS**, **AUDIOENV**, **AUDIOSTHD**, and **AUDIOSTHS** - controls audio alerting, audio environment selection, and headset/handset sidetones

**BRURI** - to specify a URI to place the backup file; set as the path of the file server where the backup file resides (supported by 46xx telephones as of Release 2.8 in February 2007)

**HTTPDIR** - to specify a subdirectory path on the HTTP server (supported by 46xx telephones as of Release 2.8 in February 2007)

**LANG0STAT**, **LANGxFILE**, and **LANGSYS** -control language file selection and available language files

**LANGLARGEFONT** - to specify which of the selected language files can appear in a larger font size

**MSGNUM** - for voice mail access

**WMLHOME** - to access the browser on all 9600 Series IP Telephones except the 9610

**WMLSMALL** - to specify the Home page for the 9610 IP Telephone Web browser

Any 46xx telephone receiving these 96xx-specific parameters ignores them.

**IR/SMTP** - 96xx telephones do not support Infrared (IR) or Simple Message Transport Protocol (SMTP), so any such 46xx administration is ignored.

**Local Administration** - The 46xx QOS, CTI, and ALERT Local Procedures are not supported by the 96xx telephones. Also, there is no indication of IR interfaces in the INT Local Procedure.

**Language** - As of Release 1.1, 96xx IP Telephones allow language administration, which was enhanced in subsequent releases. Note that 4600 Series and 9600 Series IP Telephones might not support the same languages, and the language files differ between the two telephone series.

**SNMP & MIBs** - Although both 46xx and 96xx telephones support SNMP v2c and have custom Management Information Bases (MIBs), the MIBs are formatted somewhat differently. Note that as of Release 1.1, SNMP is disabled by default in both IP Telephone series. Administrators must initiate SNMP by setting the SNMPADD and SNMPSTRING system values appropriately.

**Wideband Codecs** - 96xx telephones support G.722 (wide band) codecs, unlike 46xx telephones.

**Feature Button Administration** - Although 96xx telephones do not require administration of the following feature buttons, the user experience is enhanced if the following is administered: Conference Display, Selective Conference Party Mute, Send All Calls (SAC), Directory, EC500, Call Forward, etc.

---

## Change History

<b>Issue 1</b>	This document was issued for the first time in July 2006 to support the first release of 9600 Series IP Telephones.
<b>Issue 2</b>	This version of the document, revised and issued in September 2006, supports 9600 Series IP Telephone Software Release 1.1.
<b>Issue 3</b>	This version of the document was revised in January, 2007 to support 9600 Series IP Telephone Software Release 1.2.
<b>Issue 4</b>	This is the current version of the document, revised and issued in May, 2007 to support Software Release 1.5. This release adds several new system parameters and adds telephone models 9630G and 9640G. <a href="#">What's New in Release 1.5</a> describes Release 1.5 in more detail.

---

---

## What's New in Release 1.5

New material in this issue to support Release 1.5 software includes:

**New GigE Models** - Release 1.5 adds two telephones, the 9630G and 9640G, to the 9600 Series. Both models provide built-in Gigabyte Ethernet (GigE) support, but are otherwise identical to their 9630 and 9640 counterparts.

**Bluetooth™ Support** - Certain 9600 Series IP Telephones now support a Bluetooth adapter and any device compatible with the headset profile. However, this release supports only a wireless headset. Safety and installation instructions are provided with the adapter and headset and are also available on the Avaya support Web site.

**Arabic Language** - Arabic has been added to the available language choices.

**Emergency Button** - Administrators can now program an “Emergency” number using the new [PHNEMERGNUM](#) parameter.

**Administration Enhancements** - Release 1.5 supports functionality introduced on Avaya Communication Manager Release 4.0. Call server administration of four key parameters is directly downloaded to the telephone during registration, instead of or in addition to, from the settings file or locally on the telephone. The four parameters are: SNMP community string, SNMP Source IP Addresses, Craft Access Code (PROCPSWD), and Group ID. The first three parameters are system parameters, while the fourth parameter is administered on a station-by-station basis.

**Local Administrative (Craft) Procedures** - The *Avaya one-X™ Deskphone Edition for 9600 Series IP Telephones Installation and Maintenance Guide* describes a new user interface for all local administrative (Craft) procedures.

**Enhanced security** - to defend against sequence number attacks, as per RFC 1948.

---

# Document Organization

The guide contains the following sections:

<a href="#">Chapter 1: Introduction</a>	Provides an overview of this document.
<a href="#">Chapter 2: Administration Overview and Requirements</a>	Provides an overview of the administrative process and describes general hardware, software, and operational requirements.
<a href="#">Chapter 3: Network Requirements</a>	Describes administrative requirements for your Local Area Network.
<a href="#">Chapter 4: Communication Manager Administration</a>	Describes how to administer Avaya Communication Manager to operate with 9600 Series IP Telephones.
<a href="#">Chapter 5: Server Administration</a>	Describes DHCP, TFTP, and HTTP/HTTPS administration for the 9600 Series IP Telephones.
<a href="#">Chapter 6: Telephone Software and Application Files</a>	Describes telephone software, covers application software downloads, and provides information about the configuration file.
<a href="#">Chapter 7: Administering Telephone Options</a>	Describes how to use file parameters and options to administer 9600 Series IP Telephones. Covers backup and restoration of telephone data. Also describes how to use local procedures to customize a single telephone from the dialpad.
<a href="#">Chapter 8: Administering Applications and Options</a>	Provides a table of customizable application-specific parameters, to provide administrative control of telephone functions and options.
<a href="#">Chapter 9: Administering Specific 9600 Series IP Telephones</a>	Covers special administration requirements for applicable 9600 Series IP Telephone models.
<a href="#">Appendix A: Glossary of Terms</a>	Provides a glossary of terms used in this document or which can be applicable to 9600 Series IP Telephones.
<a href="#">Appendix B: Related Documentation</a>	Provides references to external documents that relate to telephony in general, which can provide additional information about specific aspects of the telephones.
<a href="#">Appendix C: Sample Administration Forms</a>	Provides examples of Avaya Communication Manager forms related to system wide and individual telephone administration.

---

## Other Documentation

See the Avaya support site at <http://www.avaya.com/support> for 9600 Series IP Telephone technical and end user documentation.

See [Appendix B: Related Documentation](#) for information about accessing non-Avaya documents, such as those published by the Internet Engineering Task Force (IETF) and the International Telecommunication Union (ITU).

# Chapter 2: Administration Overview and Requirements

---

## 9600 Series IP Telephones

All 9600 Series IP Telephones currently support the H.323 signaling protocol. The 9620 and 9630 can alternately be configured to support Session Initiation Protocol (SIP), as covered in the *Avaya one-X™ Deskphone Edition for 9600 Series SIP IP Telephones Administrator Guide* (Document Number 16-601944). This document covers only 9600 Series IP Telephones supporting H.323.

The H.323 standard provides for real time audio, video, and data communications transmission over a packet network. An H.323 telephone protocol stack comprises several protocols:

- H.225 for registration, admission, status (RAS), and call signaling,
- H.245 for control signaling,
- Real Time Transfer Protocol (RTP) and Secure Real Time Transfer Protocol (SRTP)
- Real Time Control Protocol (RTCP) and Secure Real Time Control Protocol (SRTCP)

The parameters under which the 9600 Series IP Telephones need to operate are summarized as follows:

- Telephone Administration on the Avaya Media Server, as covered in [Chapter 4: Communication Manager Administration](#).
- IP Address management for the telephone, as covered in [DHCP and File Servers](#) on page 51 for dynamic addressing. For static addressing, see the *Avaya one-X™ Deskphone Edition for 9600 Series IP Telephones Installation and Maintenance Guide*.
- Tagging Control and VLAN administration for the telephone, if appropriate, as covered in [Chapter 7: Administering Telephone Options](#).
- Quality of Service (QoS) administration for the telephone, if appropriate. QoS is covered in [QoS](#) on page 27 and [QoS](#) on page 37.
- Protocol administration, for example, Simple Network Management Control (SNMP) and Link Layer Discovery Protocol (LLDP).
- Interface administration for the telephone, as appropriate. Administer the telephone to LAN interface using the PHY1 parameter described in [Chapter 3: Network Requirements](#). Administer the telephone to PC interface using the PHY2 parameter described in “Interface Control” in the *Avaya one-X™ Deskphone Edition for 9600 Series IP Telephones Installation and Maintenance Guide*.
- Application-specific telephone administration, if appropriate, as described in [Chapter 8: Administering Applications and Options](#). An example of application-specific data is Web-specific information required for this optional application.

[Table 1](#) indicates that you can administer system parameters in a variety of ways and use a variety of delivery mechanisms like:

- Maintaining the information on the call server.
- Manually entering the information by means of the telephone dialpad.
- Administering the DHCP server.
- Editing the configuration file on the applicable HTTP or HTTPS file server.
- User modification of certain parameters, when given administrative permission to do so.

**Note:**

Not all parameters can be administered on all delivery mechanisms.

**Table 1: Administration Alternatives and Options for 9600 Series IP Telephones**

Parameter(s)	Administrative Mechanisms	For More Information See:
Telephone Administration	Avaya call server	<a href="#">Chapter 4: Communication Manager Administration</a> , <a href="#">Chapter 5: Server Administration</a> , and <a href="#">Appendix B: Related Documentation</a> .
IP Addresses	DHCP (strongly recommended)	<a href="#">DHCP and File Servers</a> on page 51, and especially <a href="#">DHCP Server Administration</a> on page 52.
	Configuration file	<a href="#">Chapter 6: Telephone Software and Application Files</a> and <a href="#">Chapter 7: Administering Telephone Options</a> .
	Manual administration at the telephone	“Static Addressing Installation” in the <i>Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide</i> .
	LLDP	<a href="#">Link Layer Discovery Protocol (LLDP)</a> on page 98
Tagging and VLAN	LLDP	<a href="#">Link Layer Discovery Protocol (LLDP)</a> on page 98.
	DHCP	<a href="#">DHCP Server Administration</a> on page 52, and <a href="#">Chapter 7: Administering Telephone Options</a> .
	Configuration file (strongly recommended)	<a href="#">DHCP and File Servers</a> on page 51 and <a href="#">Chapter 7: Administering Telephone Options</a> .
	Manual administration at the telephone	“Static Addressing Installation” in the <i>Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide</i> .

1 of 2



**Table 1: Administration Alternatives and Options for 9600 Series IP Telephones (continued)**

Parameter(s)	Administrative Mechanisms	For More Information See:
Quality of Service	Avaya call server (strongly recommended)	<a href="#">UDP Port Selection</a> on page 37 and <a href="#">Appendix B: Related Documentation</a> .
	DHCP	<a href="#">DHCP and File Servers</a> on page 51, and <a href="#">Chapter 7: Administering Telephone Options</a> .
	Configuration file	<a href="#">DHCP and File Servers</a> on page 51, and <a href="#">Chapter 7: Administering Telephone Options</a> .
Interface	DHCP	<a href="#">DHCP and File Servers</a> on page 51, and <a href="#">Chapter 6: Telephone Software and Application Files</a> .
	Configuration file (strongly recommended)	<a href="#">DHCP and File Servers</a> on page 51, and <a href="#">Chapter 6: Telephone Software and Application Files</a> .
	LLDP	<a href="#">Link Layer Discovery Protocol (LLDP)</a> on page 98.
	Manual administration at the telephone	“Secondary Ethernet (Hub) Interface Enable/Disable” in the <i>Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide</i> .
Application - specific parameters	DHCP	<a href="#">DHCP and File Servers</a> on page 51, and especially <a href="#">DHCP Server Administration</a> on page 52. Also, <a href="#">Chapter 8: Administering Applications and Options</a> .
	Configuration file (strongly recommended)	<a href="#">DHCP and File Servers</a> on page 51, and especially <a href="#">HTTP Generic Setup</a> on page 64. Also, <a href="#">Chapter 8: Administering Applications and Options</a> .
<b>2 of 2</b>		

General information about administering DHCP servers is covered in [DHCP and File Servers](#) on page 51, and more specifically, [DHCP Server Administration](#) on page 52. General information about administering HTTP servers is covered in [DHCP and File Servers](#), and more specifically, [HTTP Generic Setup](#). Once you are familiar with that material, you can administer telephone options as described in [Chapter 7: Administering Telephone Options](#).

## Parameter Data Precedence

If a given parameter is administered in multiple places, the last server to provide the parameter has precedence. The precedence, from lowest to highest, is:

1. LLDP,
2. Manual administration, with the two exceptions described for the system parameter [STATIC](#) on page 90,
3. DHCP, except as indicated in [Table 7: DHCPACK Setting of System Values](#).
4. HTTP,
5. the Avaya Media Server, and finally,
6. Backup files, if administered and if permitted.

Settings the IP telephone receives from backup files or the media server overwrite any previous settings, including manual settings. The only exception to this sequence is in the case of VLAN IDs. In the case of VLAN IDs, LLDP settings of VLAN IDs are the absolute authority. Then the usual sequence applies through HTTP. If the VLAN ID after HTTP is not zero, any VLAN ID from the media server is ignored.

**Note:**

For the L2QVLAN and L2Q system values, LLDP settings of VLAN IDs are the absolute authority only if the LLDP task receives the VLAN IDs before DHCP and HTTP, and the DHCP client of the telephone is activated at all. If the LLDP task receives the VLAN IDs after DHCP negotiation, several criteria must be successful before the telephone accepts VLAN IDs from LLDP. For more information, see [Link Layer Discovery Protocol \(LLDP\)](#).

---

## The Administrative Process

The following list depicts administration for a typical 9600 Series IP Telephone network. Your own configuration might differ depending on the servers and system you have in place.

1. Switch administered for 9600 Series IP Telephones.
2. LAN and applicable servers administered to accept the telephones.
3. Telephone software downloaded from the Avaya support site.
4. 46xxsettings file updated with site-specific information, as applicable.
5. 9600 Series IP Telephones installed. For more information, see the *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide*.
6. Individual 9600 Series IP Telephones updated using Craft procedures, as applicable. For more information, see “Local Administrative Procedures” in the *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide*.

## Administrative Checklist

Use the following checklist as a guide to system and LAN administrator responsibilities. This high-level list helps ensure that all telephone system prerequisites and requirements are met prior to telephone installation.

**Note:**

One person might function as both the system administrator and the LAN administrator in some environments.

**Table 2: Administrative Checklist**

Task	Description	For More Information See:
Network Requirements Assessment	Determine that network hardware is in place and can handle telephone system requirements.	<a href="#">Chapter 3: Network Requirements.</a>
Administer the call server	Verify that the call server is licensed and is administered for Voice over IP (VoIP).  Verify the individual telephones are administered as desired.	<a href="#">Chapter 4: Communication Manager Administration.</a>  <a href="#">Chapter 4: Communication Manager Administration.</a>
DHCP server installation	Install a DHCP application on at least one new or existing PC on the LAN.	Vendor-provided instructions.
Administer DHCP application	Add IP telephone administration to DHCP application.	<a href="#">DHCP Server Administration</a> in <a href="#">Chapter 5: Server Administration.</a>
HTTP/HTTPS server installation	Install an HTTP/HTTPS application on at least one new or existing PC on the LAN.	Vendor-provided instructions.
Application file(s), script file, and settings file installation on HTTP/HTTPS server	Download the files from the Avaya support site.	<a href="http://www.avaya.com/support">http://www.avaya.com/support</a>  <a href="#">Chapter 6: Telephone Software and Application Files.</a>
Modify settings file as desired	Edit the settings file as desired, using your own tools or the [Avaya] Web configuration tool.	<a href="#">Chapter 6: Telephone Software and Application Files</a> and <a href="#">Web Configuration Tool</a> on page 73.

**1 of 2**

**Table 2: Administrative Checklist (continued)**

Task	Description	For More Information See:
Administer WML servers	Add WML content as applicable to new or existing WML servers. Administer push content as applicable.	<i>Avaya one-X™ Deskphone Edition for 9600 IP Telephones Application Programmer Interface (API) Guide</i> (Document Number 16-600888).
Administer telephones locally as applicable	As a Group:	<a href="#">The GROUP System Value</a> on page 81 and the <i>Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide</i> .
	Individually:	The applicable Craft Local Procedures in the <i>Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide</i> .
Installation of telephones in the network		<i>Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide</i> .
Allow user to modify Options, if applicable		<a href="#">OPSTAT</a> on page 87 and the respective User Guide for the specific telephone model.
<b>2 of 2</b>		

---

## Telephone Initialization Process

These steps offer a high-level description of the information exchanged when the telephone initializes and registers. This description assumes that all equipment is properly administered ahead of time. This description can help you understand how the 9600 Series IP Telephones relate to the routers and servers in your network.

---

### Step 1: Telephone to Network

The telephone is appropriately installed and powered. After a short initialization process, the telephone identifies the LAN speed and sends a message out into the network, identifying itself and requesting further information. A router on the network receives and relays this message to the appropriate DHCP server.

---

## Step 2: DHCP Server to Telephone

The DHCP file server provides information to the telephone, as described in [DHCP and File Servers](#) on page 51. Among other data passed to the telephone is the IP Address of the HTTP or HTTPS server.

---

## Step 3: Telephone and File Server

The 9600 Series IP Telephones can download script files, application files, and settings files from either an HTTP or HTTPS server. The telephone queries the file server, which transmits a script file to the telephone. This script file, at a minimum, tells the telephone which application file the telephone must use. The application file is the software that has the telephony functionality.

The telephone uses the script file to determine if it has the proper application file. If the telephone determines the proper application file is missing, the telephone requests an application file download from the file server. The telephone then downloads the file and conducts some checks to ensure that the file was downloaded properly. If the telephone determines it already has the proper file, the telephone proceeds as described in the next paragraph without downloading the application file again.

The telephone checks and loads the application file, then uses the script file to look for a settings file, if appropriate. The optional settings file can contain settings you have administered for any or all of the 9600 Series IP Telephones in your network. For more information about this download process and settings file, see [Chapter 6: Telephone Software and Application Files](#).

---

## Step 4: Telephone and the Call Server

The call server referred to in this step is the Avaya Media Server.

In this step, the telephone might prompt the user for an extension and password. The telephone uses that information to exchange a series of messages with the call server. For a new installation and for full service, the user can enter the telephone extension and the password configured on the call server for that particular extension. For a restart of an existing installation, this information is already stored on the telephone, but the user might have to confirm the information. The telephone and the call server exchange more messaging. The expected result is that the telephone is appropriately registered and call server data such as feature button assignments are downloaded.

The 9600 Series IP Telephones support a feature called Unnamed Registration. Unnamed Registration allows a telephone to register with the Avaya Media Server without an extension, assuming the Avaya Media Server also supports this feature. To invoke Unnamed Registration, take no action. Allow the **Extension...** prompt display for 60 seconds without making an entry. The telephone automatically attempts to register by means of Unnamed Registration. A telephone registered with Unnamed Registration has the following characteristics:

- only one call appearance,
- no administrable features,
- can make only outgoing calls, subject to call server Class of Restriction/Class of Service limitations, and
- can be converted to normal “named” registration by the user entering a valid extension and password.

You can also administer the telephone to avoid unnamed registration and remain unregistered if no extension and password are provided. For more information, see [UNNAMEDSTAT](#) in [Table 9](#).

For more information about the installation process, see the *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide*.

---

## Error Conditions

Assuming proper administration, most of the problems reported by telephone users are likely to be LAN-based. Quality of Service, server administration, and other issues can impact user perception of IP telephone performance.

The *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide* covers possible operational problems that might be encountered after successful 9600 Series IP Telephone installation. The User Guides for a specific telephone model also contain guidance for users having problems with specific IP telephone applications.

# Chapter 3: Network Requirements

---

## Network Assessment

Perform a network assessment to ensure that the network will have the capacity for the expected data and voice traffic, and that it can support for all applications:

- H.323,
- DHCP,
- HTTP/HTTPS, and
- Jitter buffers

Also, QoS support is required to run VoIP on your configuration. For more information, see [Appendix B: Related Documentation](#) and [UDP Port Selection](#) on page 37.

---

## Hardware Requirements

To operate properly, you need:

- Category 5e cables designed to the IEEE 802.3af-2003 standard, for LAN powering,
- TN2602 IP Media Processor circuit pack. Sites with a TN2302 IP Media Processor circuit pack are strongly encouraged to install a TN2602 circuit pack.
- TN799C or D Control-LAN (C-LAN) circuit pack.



### Important:

IP telephone firmware Release 1.0 or greater requires TN799C V3 or greater C-LAN circuit pack(s). For more information, see the *Communication Manager Software and Firmware Compatibility Matrix* on the Avaya support Web site <http://www.avaya.com/support>.

To ensure that the appropriate circuit pack(s) are administered on your media server, see [Chapter 4: Communication Manager Administration](#). For more information about hardware requirements in general, see the *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide*.

---

## Server Requirements

Three server types can be configured for the 9600 Series IP Telephones:

- DHCP
- HTTP or HTTPS
- Web (optional)

While the servers listed provide different functions that relate to the 9600 Series IP Telephones, they are not necessarily different boxes. For example, DHCP provides file management whereas HTTP provides application management, yet both functions can co-exist on one hardware unit. Any standards-based server is recommended.

For parameters related to Avaya Media Server information, see [Chapter 4: Communication Manager Administration](#), and the administration documentation for your call server. For parameters related to DHCP and file servers, see [Chapter 5: Server Administration](#).



### CAUTION:

The telephones obtain important information from the script files on the file server and depend on the application file for software upgrades. If the DHCP file server is unavailable when the telephones reset, the telephones register with the media server and operate. Some features might not be available. To restore them you need to reset the telephone(s) when the file server is available.

---

## DHCP Server

Avaya recommends that a DHCP server and application be installed and that static addressing be avoided. Install the DHCP server and application as described in [DHCP and File Servers](#) on page 51.

---

## HTTP/HTTPS Server

Administer the HTTP or HTTPS file server and application as described in [HTTP Generic Setup](#) on page 64.

---

## Web Server (Optional)

If users have access to corporate WML Web sites, administer the telephones as described in [Chapter 5: Server Administration](#).



For routine WML functionality only a WML server is required. For “push” functionality, a Trusted Push Server is needed. The Trusted Push Server can be the same server as your routine WML server. Separate the two functions for security purposes. Avaya recommends that you restrict access to push directories on the WML server.

Your Web server configuration must be compatible with the requirements covered in the *9600 Series IP Telephone Application Programmer Interface (API) Guide*.

## Required Network Information

Before you administer DHCP and HTTP, and TLS, as applicable, complete the information in [Table 3](#). If you have more than one Gateway, HTTP/TLS server, subnetwork mask, and Gatekeeper in your configuration, complete [Table 3](#) for each DHCP server.

The 9600 Series IP Telephones support specifying a list of IP Addresses for a gateway/router, HTTP/HTTPS server, and Avaya Media Server Gatekeeper(s). Each list can contain up to 255 total ASCII characters, with IP Addresses separated by commas with no intervening spaces. Depending on the specific DHCP application, only 127 characters might be supported.

When specifying IP Addresses for the file server or media server, use either dotted decimal format (“xxx.xxx.xxx.xxx”) or DNS names. If you use DNS, the system value DOMAIN is appended to the IP Addresses you specify. If DOMAIN is null, the DNS names must be fully qualified, in accordance with IETF RFCs 1034 and 1035. For more information about DNS, see [DHCP Generic Setup](#) on page 54 and [DNS Addressing](#) on page 95.

**Table 3: Required Network Information Before Installation - Per DHCP Server**

1. Gateway (router) IP Address(es)	
2. HTTP server IP Address(es)	
3. Subnetwork mask	
4. Avaya Media Server Gatekeeper IP Address(es)	
5. Avaya Media Server Gatekeeper port	Although this can be a value between 0 and 65535, the default value is <b>1719</b> . Do not change the default value unless that value conflicts with an existing port assignment.
6. HTTP/HTTPS server file path	
7. Telephone IP Address range	
From:	
To:	
8. DNS server address(es)	If applicable.
9. HTTPS server address(es)	If applicable.

## Network Requirements

The file server file path is the “root” directory used for all transfers by the server. All files are uploaded to or downloaded from this default directory. In configurations where the upgrade script and application files are in the default directory, do not use item 6 in [Table 3](#).

As the LAN or System Administrator, you are also responsible for:

- Administering the DHCP server as described in [Chapter 5: Server Administration](#).
- Editing the configuration file on the applicable HTTP or HTTPS file server, as covered in [9600 Series IP Telephone Scripts and Application Files](#).

---

## Other Network Considerations

---

### SNMP

The 9600 Series IP Telephones are fully compatible with SNMPv2c and with Structure of Management Information Version 2 (SMIv2). The telephones respond correctly to queries from entities that comply with earlier versions of SNMP, such as SNMPv1. “Fully compatible” means that the telephones respond to queries directed either at the MIB-II or the read-only Custom MIB. Read-only means that the values therein cannot be changed externally by means of network management tools.

You can restrict which IP Addresses the telephone accepts SNMP queries from. You can also customize your community string with system values SNMPADD and SNMPSTRING, respectively. Release 1.5 supports the functionality introduced on Avaya Communication Manager Release 4.0 that allows call server administration of the SNMP community string and SNMP Source IP Addresses. For more information, see [Chapter 5: Server Administration](#) and [Table 9: 9600 Series IP Telephone Customizable System Parameters](#).

**Note:**

As of Release 1.1, SNMP is disabled by default. Administrators must initiate SNMP by setting the SNMPADD and SNMPSTRING system values appropriately.

For more information about SNMP and MIBs, see the IETF reference listed in [Appendix B: Related Documentation](#). The Avaya Custom MIB for the 9600 Series IP Telephones is available for download in \*.txt format on the Avaya support Web site at <http://www.avaya.com/support>.

---

## Reliability and Performance

All 9600 Series IP Telephones respond to a ping or traceroute message sent from the call server switch or any other network source. The telephones do not originate a ping or traceroute. The 9600 Series IP Telephones offer and support “remote ping” and “remote traceroute.” The switch can instruct the telephone to originate a ping or a traceroute to a specified IP Address. The telephone carries out that instruction and sends a message to the switch indicating the results. For more information, see your switch administration documentation.

If applicable, the telephones test whether the network Ethernet switch port supports IEEE 802.1D/q tagged frames by ARPing the router with a tagged frame. For more information, see [VLAN Considerations](#) on page 91. If your LAN environment includes Virtual LANs (VLANs), your router must respond to ARPs for VLAN tagging to work properly.

---

## QoS

For more information about the extent to which your network can support any or all of the QoS initiatives, see your LAN equipment documentation. See [QoS](#) on page 37 about QoS implications for the 9600 Series IP Telephones.

All 9600 Series IP Telephones provide some detail about network audio quality. For more information see [Network Audio Quality Display on 9600 Series IP Telephones](#) on page 28.

---

## IEEE 802.1D and 802.1Q

For more information about IEEE 802.1D and IEEE 802.1Q and the 9600 Series IP Telephones, see [IEEE 802.1D and 802.1Q](#) on page 38 and [VLAN Considerations](#) on page 91. Three bits of the 802.1Q tag are reserved for identifying packet priority to allow any one of eight priorities to be assigned to a specific packet.

- **7:** Network management traffic
- **6:** Voice traffic with less than 10ms latency
- **5:** Voice traffic with less than 100ms latency
- **4:** “Controlled-load” traffic for critical data applications
- **3:** Traffic meriting “extra-effort” by the network for prompt delivery, for example, executive e-mail
- **2:** Reserved for future use
- **0:** The default priority for traffic meriting the “best-effort” for prompt delivery of the network.
- **1:** Background traffic such as bulk data transfers and backups

**Note:**

Priority 0 is a higher priority than Priority 1.

---

# Network Audio Quality Display on 9600 Series IP Telephones

All 9600 Series IP Telephones give the user an opportunity to monitor network audio performance while on a call. For more information, see the telephone user guide.

While on a call, the telephones display network audio quality parameters in real-time, as shown in [Table 4](#):

**Table 4: Parameters in Real-Time**

Parameter	Possible Values
Received Audio Coding	<b>G.711, G.722, G.726A, or G.729.</b>
Packet Loss	No data or a percentage. Late and out-of-sequence packets are counted as lost if they are discarded. Packets are not counted as lost until a subsequent packet is received and the loss confirmed by the RTP sequence number.
Packetization Delay	No data or an integer number of milliseconds. The number reflects the amount of delay in received audio packets, and includes any potential delay associated with the codec.
One-way Network Delay	No data or an integer number of milliseconds. The number is one-half the value RTCP or SRTCP computes for the round-trip delay.
Network Jitter Compensation Delay	No data or an integer number of milliseconds reporting the average delay introduced by the jitter buffer of the telephone.

The implication for LAN administration depends on the values the user reports and the specific nature of your LAN, like topology, loading, and QoS administration. This information gives the user an idea of how network conditions affect the audio quality of the current call. Avaya assumes you have more detailed tools available for LAN troubleshooting.

---

## IP Address Lists and Station Number Portability

The 9600 Series IP Telephones provide the capability to specify IP Address lists. On startup or a reboot, the telephone attempts to establish communication with these various network elements in turn. The telephone starts with the first address on the respective list. If the communication is denied or times out, the telephone proceeds to the next address on the appropriate list and tries that one. The telephone does not report failure unless all the addresses on a given list fail, thereby improving the reliability of IP telephony.

This capability also has the advantage of making station number portability easier. Assume a situation where the company has multiple locations in London and New York, all sharing a corporate IP network. Users want to take their telephones from their offices in London and bring them to New York. When users start up their telephones in the new location, the local DHCP server usually routes them to the local call server. With proper administration of the local DHCP server, the telephone knows to try a second call server IP Address, this one in London. The user can then be automatically registered with the London call server.

[Chapter 5: Server Administration](#) contains details on administration of DHCP servers for lists of alternate media servers, router/gateways, and HTTP/HTTPS servers. For more information, see [DNS Addressing](#) on page 95.

 


---

## TCP/UDP Port Utilization


The 9600 Series IP Telephones use a variety of protocols, particularly TCP and UDP, to communicate with other equipment in the network. Part of this communication identifies which TCP or UDP ports each piece of equipment uses to support each protocol and each task within the protocol. For additional TCP/UDP port utilization information as it applies to Avaya Communication Manager, see [UDP Port Selection](#) on page 37.


Depending on your network, you might need to know what ports or ranges are used in the operation of 9600 Series IP Telephones. Knowing these ports or ranges helps you administer your networking infrastructure.

In [Figure 1](#), [Figure 2](#), and [Figure 3](#):

- The box on the left always represents the 9600 Series IP Telephone.
- Depending on the diagram, the boxes on the right refer to various pieces of network equipment with which the telephone can communicate.
- Open-headed arrows (for example, ) represent the direction(s) of socket initialization.
- Closed-headed arrows (for example,  ) represent the direction(s) of data transfer.
- The text the arrows point to identifies the port or ports that the 9600 Series IP Telephones support for the specific situation. Brackets identify ranges when more than one port applies. The text indicates any additional qualifications or clarifications. In many cases, the ports used are the ones called for by IETF or other standards bodies.
- Many of the explanations in the diagrams refer to system parameters or options settings, for example, DIRSRVR. For more information about parameters and settings, see [Administering Options for the 9600 Series IP Telephones](#).


**Figure 1: Signaling, Audio and Management Diagram**

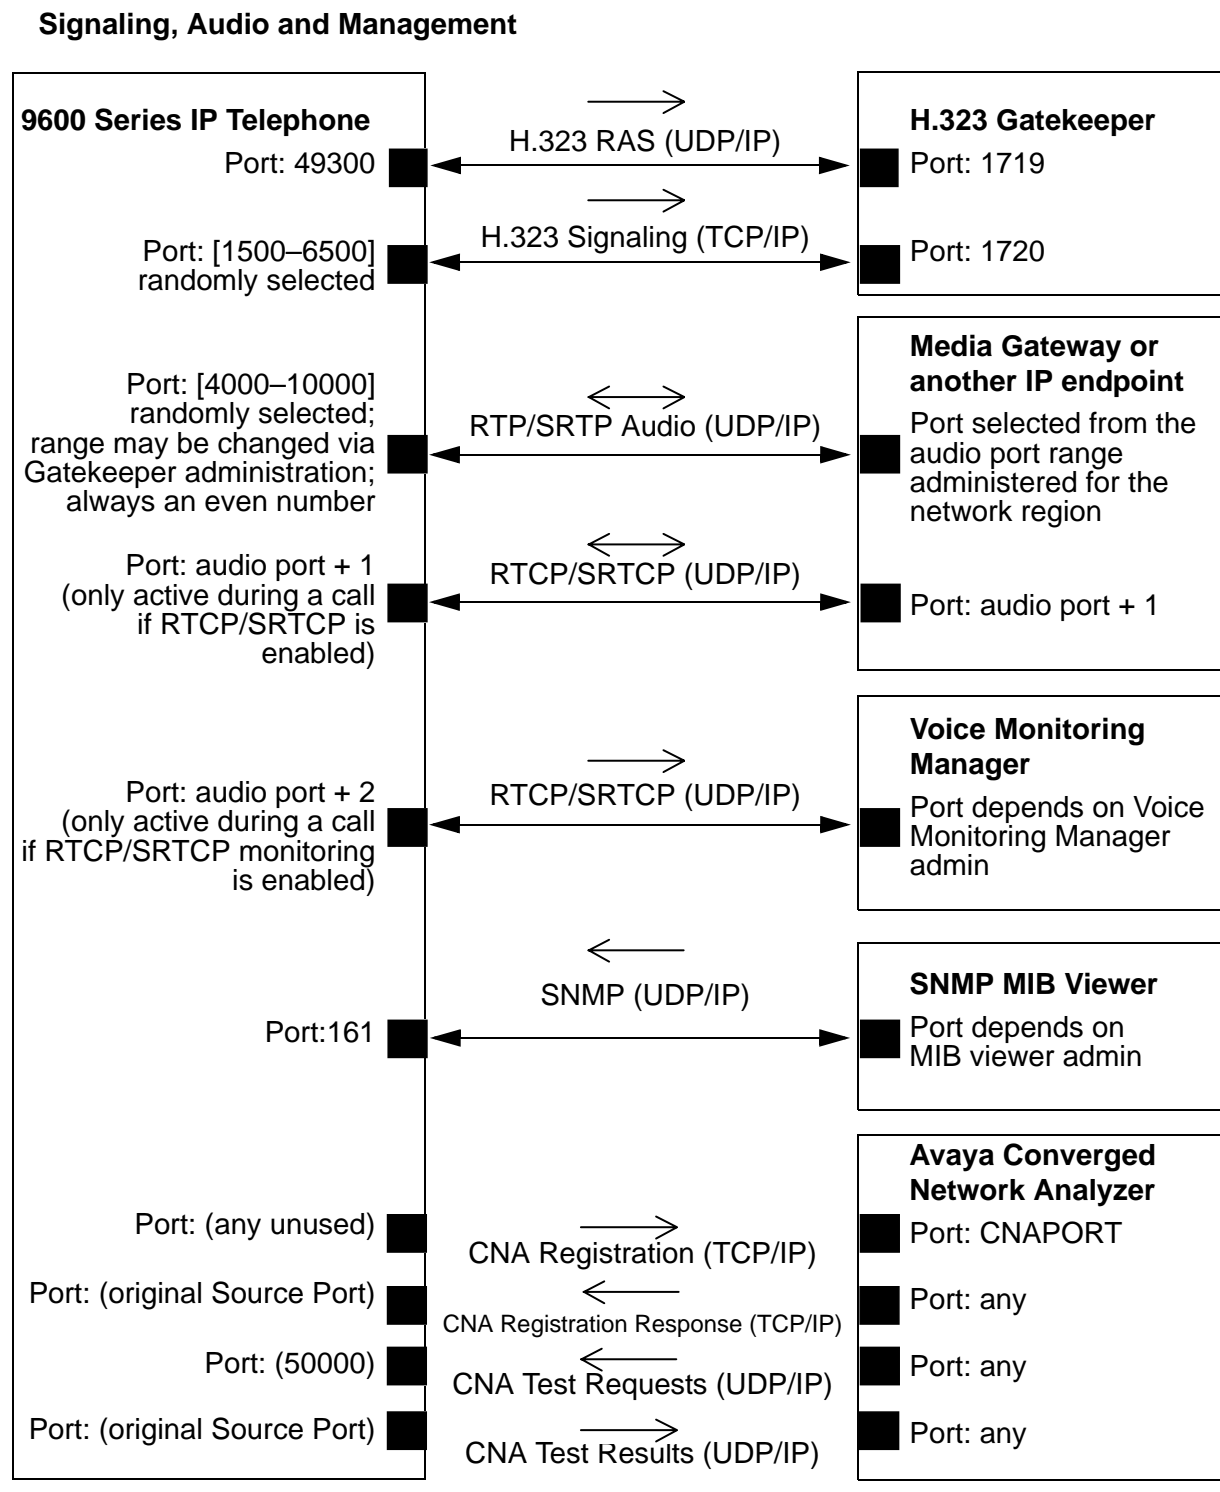

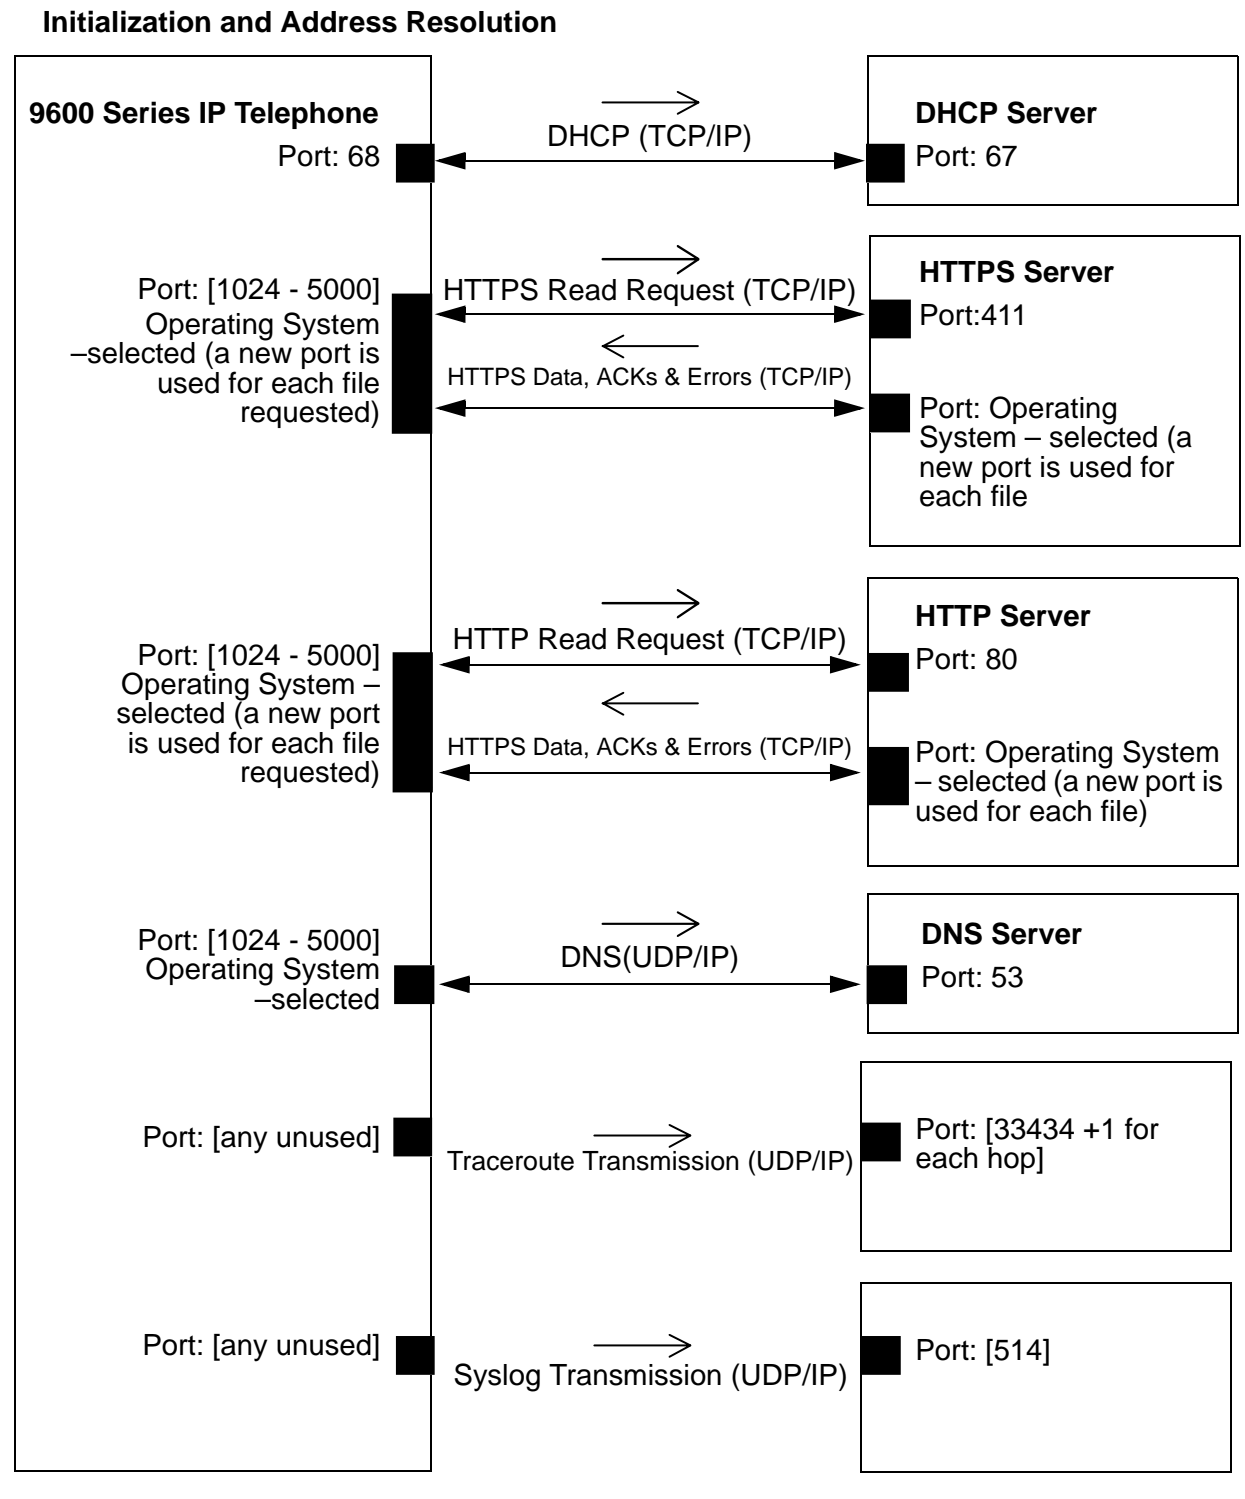**Figure 2: Initialization and Address Resolution Diagram**

**Figure 3: Applications Diagram**

### Applications

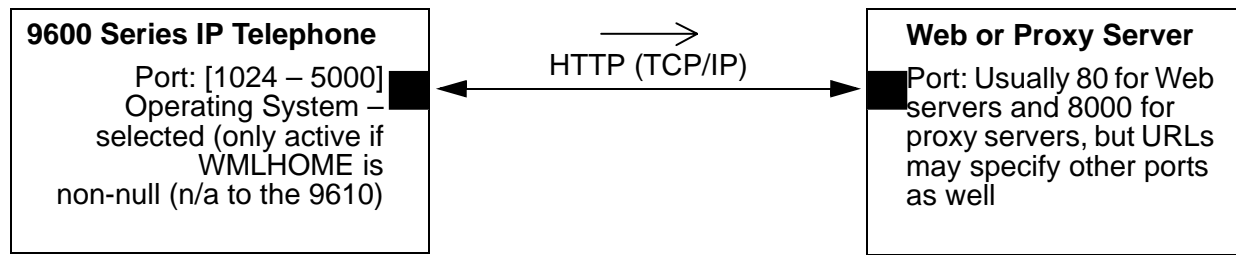

## Security

For information about toll fraud, see the respective call server documents on the Avaya support Web site. The 9600 Series IP Telephones cannot guarantee resistance to all Denial of Service attacks. However, there are checks and protections to resist such attacks while maintaining appropriate service to legitimate users.

All 9600 Series IP Telephones that have WML Web applications support Transport Layer Security (TLS). This standard allows the telephone to establish a secure connection to a HTTPS server, in which the upgrade and settings file can reside. This setup adds security over another alternative.

You also have a variety of optional capabilities to restrict or remove how crucial network information is displayed or used. These capabilities are covered in more detail in [Chapter 5: Server Administration](#).

- Support signaling channel encryption while registering, and when registered, with appropriately administered Avaya Media Servers.

### Note:

Signaling and audio are not encrypted when unnamed registration is effective.

- Restricting the response of the 9600 Series IP Telephones to SNMP queries to only IP Addresses on a list you specify.
- Specifying an SNMP community string for all SNMP messages the telephone sends.
- Restricting dialpad access to Local Administration Procedures, such as specifying IP Addresses, with a password.
- Restricting dialpad access to Craft Local Procedures to experienced installers and technicians.
- Restricting the end user's ability to use a telephone Options application to view network data.



- As of Release 1.5, 9600 Series IP Telephones are fully compliant with IETF RFC 1948 *Defending Against Sequence Number Attacks*, May 1996, by S. Bellovin.
- As of Release 1.5, three existing security-related parameters can be administered on the call server and downloaded with encrypted signaling, in addition to unencrypted HTTP or encrypted HTTPS. Those parameters are SNMP community string, SNMP Source IP Addresses, and Craft Access Code (PROCPSWD)).

## Registration and Authentication

The Avaya Media Server supports using the extension and password to register and authenticate 9600 Series IP Telephones. For more information, see the current version of your call server administration manual.

---

## Time-to-Service (TTS)

The IP Endpoint Time-to-Service (TTS) feature was introduced in Software Release 1.2, along with Avaya Communication Manager (CM) Release 4.0. TTS changes the way IP endpoints register with their gatekeeper, reducing the time to come into service. Currently, IP endpoints are brought into service in two steps, which are coupled (1) H.323 registration and (2) TCP socket establishment for call signaling. The TTS feature de-couples these steps. In CM 4.0, IP endpoints can be enabled for service with just the registration step. TCP sockets are established later, as needed.

The TTS feature also changes the direction of socket establishment. With TTS, Communication Manager, rather than the endpoint, initiates socket establishment, which further improves performance. In CM 4.0, TTS is enabled by default, but can be disabled for all IP endpoints in a given IP network region by changing the IP Network form. TTS applies only to IP endpoints whose firmware has been updated to support this feature. It does not apply to the following endpoints: third party H.323, DCP, BRI, and analog. For more information, see the *Administrator Guide for Avaya Communications Manager* (Document Number 03-300509).



# Chapter 4: Communication Manager Administration

---

## Call Server Requirements

Before you perform administration tasks, ensure that the proper hardware is in place, and your call server software is compatible with the 9600 Series IP Telephones. Avaya recommends the latest PBX software and the latest IP telephone firmware.

---

## Switch Compatibility and Aliasing IP Telephones

As of Release 1.2, 9600 Series IP Telephones were natively supported by Avaya Communication Manager (CM) Release 4.0. Native support means that if you have CM 4.0, you:

- do not have to alias 9600 Series IP Telephones,
- can add up to three SBM24 Button Modules on each 9600 Series IP Telephone that supports an SBM24, and
- can administer a call coverage telephone number on a station-by-station basis.

If you have Avaya Communication Manager (CM) Release 3.1 or earlier you must alias the telephones as follows:

9600 Series Telephone Model	Aliased as...	Earliest CM Release
9610	4610SW	CM 3.0
9620	4610SW (recommended)	CM 3.0
	4620SW	CM 3.0
9630/9630G	4620SW	CM 3.0
9640/9640G	4620SW	CM 3.0
9650	4620SW	CM 3.0

**Note:**

Although support for a 9620 aliased as a 4620SW IP Telephone extends back to DEFINITY Release 11, some features are not available. For example, the 9620 only supports a total of 12 call appearances and administered feature buttons. The 4620 can be administered for a total of 24 call appearances and feature buttons.

For specific administration instructions about aliasing 9600 Series IP Telephones, see [Administering Stations](#) on page 44.

When a 9610 IP Telephone is aliased as a 4610SW IP Telephone, its five administrable call appearances should be:

- one primary call appearance
- the Directory, Next, and Make Call feature buttons (hard-coded with CM4.0)
- one other feature button, for example, a "Normal" button to allow Directory exit.

When a 9620 IP Telephone is aliased as a 4620SW IP Telephone, do not administer:

- a button module (SBM24, EU24, or EU24BL), or
- feature buttons 13 through 24.

The 9630/9630G, 9640/9640G, and 9650 IP Telephones support twenty-four administrable telephony call appearances or features. In addition, the 9630/9630G, 9640/9640G, and 9650 IP Telephones support the SBM24 Button Module.

The SBM 24 Button Module provides another twenty-four administrable call appearances and features. The button module can be used freestanding or attached directly to the 9630/9630G, 9640/9640G, or 9650.

---

## Media Server (Switch) Administration

For switch administration information not covered in this chapter, see the following documents on the Avaya support Web site:

- *The Administrator Guide for Avaya Communication Manager* (Document Number 03-300509) provides detailed instructions for administering an IP telephone system on Avaya Communication Manager. See Chapter 3 “Managing Telephones,” which describes the process of adding new telephones. Also, you can locate pertinent screen illustrations and field descriptions in Chapter 19 “Screen References” of that guide.
- *Administration for Network Connectivity for Avaya Communication Manager* (Document Number 555-233-504) provides detailed information about switch administration for your network.

---

## IP Interface and Addresses

Follow these general guidelines:

- Define the IP interfaces for each CLAN and Media processor circuit pack on the switch that uses the IP Interfaces screen. For more information, see *Administration for Network Connectivity for Avaya Communication Manager* (Document Number 555-233-504).
- On the Customer Options form, verify that the **IP Stations** field is set to “y” (Yes). If it is not, contact your Avaya sales representative. The **IP Softphone** field does not have to be set to “y” (Yes).

---

## UDP Port Selection

The 9600 Series IP Telephones can be administered from the Avaya Communication Manager Network Region form to support UDP port selection. Locate specific port assignment diagrams in the *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide*. For information about Avaya Communication Manager implementation, see *Administration for Network Connectivity for Avaya Communication Manager* (Document Number 555-233-504) on the Avaya support Web site.

Administer the switch to use a port within the proper range for the specific LAN, and the IP telephone(s) copy that port. If no UDP port range is administered on the switch, the IP telephone uses an even-numbered port, randomly selected from the interval 4000 to 10000.

---

## RSVP and RTCP/SRTCP

Avaya IP Telephones implement the Resource ReSerVation Protocol (RSVP) administered from the media server and the RTP/SRTP Control Protocol (RTCP/SRTCP). The Avaya Voice over IP (VoIP) Monitoring Manager (VMON) software can then provide real-time monitoring and historical data of audio quality for VoIP calls.

The only way to change these parameters is by appropriate switch administration. For more information, see your Avaya Media Server administration documentation and *Administration for Network Connectivity for Avaya Communication Manager* (Document Number 555-233-504).

---

## QoS

The 9600 Series IP Telephones support both IEEE 802.1D/Q and DiffServ. Other network-based QoS initiatives such as UDP port selection do not require support by the telephones. However, they contribute to improved QoS for the entire network.

---

## IEEE 802.1D and 802.1Q

The 9600 Series IP Telephones can simultaneously support receipt of packets using, or not using, 802.1Q parameters. To support IEEE 802.1D/Q, you can administer 9600 Series IP Telephones from the network by appropriate administration of the DHCP or HTTP/HTTPS servers, or by using dialpad input at the telephone.



### Important:

Avaya Communication Manager administration always takes precedence over manual administration of IEEE 802.1D/Q data.

The four IEEE 802.1D/Q QoS parameters in the telephones that can be administered on the IP Network Region form are **L2Q**, **L2QVLAN**, **L2QAUD**, and **L2QSIG**. To set these parameters at the switch, see “About Quality of Service (QoS) and voice quality administration” in *Administration for Network Connectivity for Avaya Communication Manager* (Document Number 555-233-504). To set these parameters manually see the *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide*. You can specify VLAN ID and VLANTEST values with the ADDR Local Administrative Option.

### Note:

All Craft local procedures are on a phone-by-phone basis. Administration using Communication Manager, DHCP, and HTTP applies to the telephone system itself or to a range of telephones.

---

## NAT

Network Address Translation (NAT) usage can lead to problems that affect the consistency of addressing throughout your network. All H.323 IP Telephones support NAT interworking. Support for NAT does not imply support for Network Address Port Translation (NAPT). The telephones do not support communication to the PBX through any NAPT device.

NAT requires specific administration on the media server. A direct Avaya IP Telephone-to-Avaya IP Telephone call with NAT requires Avaya Communication Manager Release 3.0 or greater software. For more information, see *Administration for Network Connectivity for Avaya Communication Manager* (Document Number 555-233-504) on the Avaya support Web site.

---

## DIFFSERV

The DiffServ values change to the values administered on the media server as soon as the telephone registers. For more information, see Chapter 4 “Network Quality Administration” in *Administration for Network Connectivity for Avaya Communication Manager* (Document Number 555-233-504). Unless there is a specific need in your enterprise LAN, Avaya recommends that you do not change the default values.

---

# Voice Mail Integration

---

## 9600 Series IP Telephones with CM 4.0+ Native Support

Release 1.2 provides native support for 9600 Series IP Telephones running on Avaya Communication Manager (CM) Release 4.0 or later. When native support applies, pressing the **Messages** button causes the telephone to first determine if the call server has a dedicated number for retrieving voice mail and when found, to proceed with voice mail retrieval.

---

## 9600 Series IP Telephones Aliased as 4600 Series IP Telephones

When native support does not apply, 9600 Series IP Telephones are aliased as 4600 Series IP Telephones and run under a CM Release earlier than 4.0. In this case, use the settings file to configure the **Messages** button by setting the system parameter [MSGNUM](#) to any dialable string. MSGNUM examples are:

- a standard telephone number the telephone should dial to access your voice mail system, such as AUDIX or Octel.
- a Feature Access Code (FAC) that allows users to transfer an active call directly to voice mail. FACs are supported only for QSIG-integrated voice mail systems like AUDIX or Octel. QSIG is an enhanced signaling system that allows the voice mail system and Avaya Communication Manager Automated Call Processing (ACP) to exchange information.

When the user presses the **Messages** button on the telephone, that number or FAC is automatically dialed, giving the user one-touch access to voice mail.

The settings file specifies the telephone number to be dialed automatically when the user presses this button. The command is:

```
SET MSGNUM 1234
```

where **1234** is the Voice Mail extension (CM hunt group or VDN). For more information, see [Table 9](#).

**Note:**

MSGNUM is only used when the telephone is aliased using non-native support. Messaging must be configured for native support.

A separate Voice Mail extension can be administered for each station.

---

## Call Transfer Considerations

This section provides information about call transfer behaviors to consider when administering the call server. The telephone application presents a user interface, based in part on the deduction of the call state. But, as the administrator, be aware that the following server-based features can interact with the user interface resulting in a call state that might need explanation:

- When the system parameter **Abort Transfer?** is set to *Yes*, once a transfer has been started the user cannot press a non-idle call appearance until the transfer is complete or the transfer is aborted.
- When the system parameter **Abort Transfer?** is set to *No*, the transfer proceeds normally even if the user presses a non-idle call appearance before the transfer is complete.
- When the system parameter **Transfer Upon Hang-up** is set to *No*, the user must press the **Complete** softkey after dialing the intended destination for the transfer to be completed.
- When the **Transfer Upon Hang-up** is set to *Yes*, the user can hang up immediately after dialing and the transfer proceeds normally.

The features **Abort Transfer** and **Transfer Upon Hang-up** can interact. If a user initiates a transfer, dials the destination, and hangs up without pressing the **Complete** softkey, the three possible outcomes are:

- The transfer is completed. This is the case when **Transfer Upon Hang-up** is set to *Yes*, regardless of the **Abort Transfer?** setting.
- The transfer is aborted. This is the case when **Transfer Upon Hang-up** is set to *No* and **Abort Transfer?** is set to *Yes*.
- The transfer is denied. This is the case when **Transfer Upon Hang-up** is set to *No* and **Abort Transfer?** is set to *No* and the call appearance of the transferee remains on soft hold.

Attempts to transfer an outside call to an outside line are denied. However, the user can drop the denied destination and initiate a transfer to an internal destination.

The call server feature, **Toggle Swap**, allows the user to swap the soft-held and setup call appearances. That is, the setup call appearance becomes soft-held, and the soft-held call appearance becomes active as the setup call appearance. This only works once the setup call appearance is connected on a call. If Toggle Swap is pressed while the setup call appearance has ringback, the call server sends a broken flutter to the setup call appearance. Toggle Swap is ignored without a broken flutter if pressed while the setup call appearance is still dialing. Toggle swapping the hold status of call appearances can be confusing to the user.



## Conferencing Call Considerations

This section provides information about conference call behaviors to consider when administering the call server. The telephone application presents a user interface, based in part on the deduction of the call state. But, as the administrator, be aware that the following server-based features can interact with the user interface resulting in a call state that might need explanation:

- When the system parameter **Abort Conference Upon Hang-up** is set to *Yes*, the user must dial and press the **Complete** softkey for the conference to be completed. When the system parameter **Abort Conference Upon Hang-up** is set to *No*, the user can hang up immediately after dialing and the conference proceeds normally.
- When the system parameter **No Dial Tone Conferencing** is set to *No*, and the **Conference** or **Add** softkey is pressed, the call server automatically selects an idle call appearance for the user to dial on. This action allows the next conferee to be added. When the system parameter **No Dial Tone Conferencing** is set to *Yes*, the user must manually select a call appearance after pressing the **Conference** or **Add** softkey.

Conferencing behavior changes significantly when **Select Line Conferencing** is set to *Yes*, which automatically sets **No Dial Tone Conferencing** to *Yes*. Specifically:

- If the user finishes dialing the intended conferee, pressing the initial call appearance allows the conference to proceed normally, as if the **Join** softkey was pressed.
- If the user has not finished dialing the intended conferee, pressing the initial call appearance (placed on soft hold when **Conference** or **Add** was pressed) cancels the conference set up.
- If the user presses the **Conference** or **Add** softkey, then immediately presses a hard-held call appearance, the previously held call appearance is retrieved from hold and joins the existing conference.

When the system parameter **Select Line Conferencing** is set to *No*, the user cancels the conference setup by pressing the call appearance on soft hold before pressing **Join**. Selecting a hard-held call appearance during conference setup establishes the held call as the intended conferee. If the user is in conference setup and answers an incoming call, the incoming call is established as the intended conferee, but **Join** must then be pressed. If the user does not want the incoming call to be part of the conference, the call should not be answered, or the call can be answered and then hung up before continuing the conference setup. Pressing an in-use call appearance during conference setup makes that call appearance the intended conferee. The **Toggle Swap** feature works for Conference setup just like it does for Transfer Setup. For more information, see the last paragraph of [Call Transfer Considerations](#).

---

# Telephone Administration

---

## System-Wide Administration

This section refers to Communication Manager (CM) administration on the Switch Administration Terminal (SAT) or by Avaya Site Administration. The system wide CM form and the particular page that needs to be administered for each feature are provided. These features, which already exist, are not required but are recommended because they optimize the telephone user interface. CM 3.0 or greater is required.

**Note:**

See [Appendix C: Sample Administration Forms](#) for illustrated examples of the pages used to administer Communication Manager features.

---

## Feature-Related System Parameters

Release 1.5 supports the functionality introduced on Avaya Communication Manager Release 4.0 that allows call server administration of three system-wide parameters. By administering these parameters on CM, they can be automatically downloaded to the telephone during registration, instead of or in addition to from the settings file or locally per telephone. The three system parameters are: SNMP community string, SNMP Source IP addresses, and Craft Access Code (PROCPSWD). Administer these three parameters using Page 3 of the change system-parameters ip-options form.

### Communication Manager Feature Administration

Feature	Administration
On-Hook Dialing	Set up CM so that the phone supports on-hook dialing. Use the System Parameters Features form page 10. Use the command <b>Change system-parameters features</b> to view the form and make the change.
Auto Hold	Set up CM to enable <b>Auto Hold</b> , so that the phone automatically places an active call on hold when the user answers or resumes a call on another call appearance. Use the System Parameters Features form, page 6.

1 of 2

## Communication Manager Feature Administration (continued)

Feature	Administration
<b>Coverage Path</b>	Administer a coverage path for both phone demonstration and normal operations. Use the Coverage Path form and give it a number, for example, Coverage path 1. If Voice Mail is available, this is also where you administer the hunt group or VDN, depending on the type of VM system being used.
<b>Enhanced Conference Features</b>	Enable enhanced conference display to support the user experience for conferences. Block Enhanced Conference Display on the Class of Restriction (COR) form must be set to <b>No</b> . Use the command <b>change COR</b> , followed by a number, to view the form and make the change. a sample of the Class of Restriction form.
<b>EC500</b>	<p>If EC500 licenses have been acquired, enable EC500 on the Off-PBX Telephones Station Mapping form. This feature requires trunking to work properly. Use the following command to make the change:</p> <p style="text-align: center;"><b>Change Off-pbx Telephone Mapping</b></p>
<b>Wideband Audio</b>	<p>To enable Wideband Audio, use the <b>Change IP codec</b> command on CM. Ensure that <b>G.722-64K</b> is first on the list of codecs. Note that wide band audio works only for direct-IP calls between two 96xx endpoints, either with both registered to the same server, or registered to different servers when connected by IP trunks. Calls between two 96xx phones connected by an IP trunk do not currently support wide band audio when the call is shuffled such that the media travels directly between the two 96xx IP telephones. Calls involving three or more parties, even if they are all 96xx IP telephones, will not use wide band. Calls between two 96xx IP telephones where audio is terminated at a port network/gateway (PN/GW) media resource will not use wideband.</p> <p>Ensure that G.722 is added to all codec-sets that can possibly be used between all regions on the IP-Network Regions form where 96xx IP telephones exist. Technically, G722 does not need to be first. What is needed, however, is that all the non media processor-supported codecs (G722, SIREN, etc.) be placed before the media processor-supported codecs (G711, G729, G726, G723).</p>

2 of 2

Figure 4: Sample Class of Restriction (COR) Form

The screenshot displays the 'Avaya Site Administration - Lincroft sray GED1' window. The main area is titled 'Lincroft sray GED1' and shows the 'CLASS OF RESTRICTION' form. The form contains the following fields and values:

- MF Incoming Call Trace? n
- Brazil Collect Call Blocking? n
- Block Transfer Display? n
- Block Enhanced Conference/Transfer Displays? n
- Remote Logout of Agent? n
- Station Lock COR: 1
- Outgoing Trunk Disconnect Timer (minutes):
- Block Enhanced Call Pickup Alerting? y
- Station-Button Display of UUI IE Data? n

At the bottom of the window, there is a log table with the following data:

Severity	Date/Time	System	Description
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012

# Administering Stations

This section refers to Communication Manager (CM) administration on the Switch Administration Terminal (SAT) or by Avaya Site Administration. Administer the following items on the Station form, sample screens of which are provided in [Figure 9](#) through [Figure 12](#). Avaya recommends setting the features covered in this section because they optimize the user interface.

Release 1.5 supports the functionality introduced on Avaya Communication Manager Release 4.0 that allows call server administration of the GROUP parameter on a station-by-station basis. As covered in [The GROUP System Value](#) on page 81, the GROUP Identifier can be used in conjunction with the 46xxsettings file to allow administration to apply to specific “groups” of telephones. Before Release 1.5, the Group Identifier had to be administered locally on each applicable telephone. As of Release 1.5, the Group Identifier can be administered centrally, and

downloaded to each applicable telephone. The GROUP ID parameter is administered on page 3 of the Change Station Form. Once downloaded, the Group Identifier takes effect starting with the next telephone boot-up.

For sample Station Forms, see [Appendix C: Sample Administration Forms](#).

---

## Aliasing 9600 Series IP Telephones

Communication Manager releases earlier than 4.0 do not provide native support for 96xx IP Telephones. On the Station Form, administer (alias) the telephones as follows:

Change Alias Station:

- Alias set up type 9610 to a 4610
- Alias set up type 9620 to a 4610
- Alias set up type 9630/9630G to a 4620SW/4621SW
- Alias set up type 9640/9640G to a 4620SW/4621SW
- Alias set up type 9650 to a 4620SW/4621SW

Communication Manager release 4.0 (and later) provides native support for the 9610, 9620, 9630/9630G, 9640/9640G, and 9650. Softphone is currently not supported using native support of the 96xx phones.

### Note:

Call appearances are not configurable for native support of the 9610 in CM 4.0. Care should be taken when aliasing the 9610 as a 4610, since the call appearances are configurable but must adhere to the unique 9610 administrative guidelines found in [For the 9610 IP Telephone](#) on page 46 and [Special Administration for the 9610 IP Telephone](#).

---

## Administering Features

### Administrable Station Features

Feature	Administration
<b>Enhanced Conference Features</b>	Administer <b>Conf-dsp</b> (conference display) on the station form as a feature button. Doing so turns on enhanced conference features and gives users advanced conference features.
<b>Call Forward</b>	On the Station form, administer <b>Call Forward</b> as a feature button for the 9630/9630G.
<b>Far End Mute</b>	Administer <b>fe-mute</b> (far end mute). When this is enabled the phone shows a "Silence" softkey on the Conference details screen. This feature works only for trunk calls.

---

1 of 2

**Administrable Station Features (continued)**

Feature	Administration
<b>Directory Features</b>	Administer <b>Directory</b> , <b>Next</b> , and <b>call-disp</b> (Make Call) on feature buttons for demonstration purposes.
<b>Send All Calls (SAC)</b>	On the Station form, administer <b>SAC</b> (send-calls) as a feature button. On the Station form to the right of where send all calls is administered, leave the extension box empty. This feature requires a coverage path to be administered on the station form.
<b>Coverage Path</b>	For normal operation, you must set up a coverage path for each telephone. Administer the Station form to point to the appropriate system coverage path, for example, coverage path 1.
<b>Auto select any idle appearance</b>	Set <b>Auto select any idle appearance</b> to <b>N</b> (no) to optimize answering calls.
<b>Restrict Last Call Appearance</b>	Set <b>Restrict Last Call Appearance</b> to <b>Y</b> (yes).
<b>Conference/Transfer on Primary Appearance</b>	Set <b>Conference/Transfer on Primary Appearance</b> to <b>Y</b> (yes) to ensure that conference/transfer of a bridged appearance works properly.
<b>2 of 2</b>	

---

## Feature Buttons and Call Appearances

---

### For the 9610 IP Telephone

The 9610 must be administered on releases earlier than CM3.1 as a 4610. On Release CM4.0 and later, administer the 9610 as a 9610. The 9610 has only one line appearance. As a consequence, you must follow these CM administration steps:

- Administer the first call appearance/feature button on the CM Station form as a call appearance.
- Administer "Directory," "Next," and "Call-disp (the latter being shown as "Make Call" on the telephone) as the next three feature buttons. This is hard-coded on CM 4.0.
- Anything administered beyond the first six call appearances will be ignored. On CM4.0 the call appearance/feature button assignments are hard-coded.

**Important:**

Set "Restrict last appearance" to "n" (no) on the Station form so that incoming calls can be placed and outgoing calls can be answered.

**Note:**

A 9610 IP telephone does not reflect CM administrative changes until the telephone is reset/restarted. The 9610 does not support the SBM24 button module.

---

## For the 9620 IP Telephone

You can administer Feature/Call Appearance Buttons 1 – 12 on the CM Station form, which the telephone Feature screen then displays in sequence. The telephone does not display any of the Feature Button labels administered on buttons 13 – 24. The 9620 does not support the SBM24 Button Module.

---

## For 9630/9630G, 9640/9640G, and 9650 IP Telephones

You can administer Feature/Call Appearance Buttons 1 – 24 on the CM Station form. The features administered on the Station form appear in the same sequence on the telephone Feature screen. Features administered on the Expansion Module SBM24 Call Appearance buttons display on the telephone Features screen following the first 24 administered feature buttons. All administered SBM24 Button Labels (Call Appearances and Feature Buttons) display on the corresponding SBM24 module buttons.

The 9650 CM 4.0 Station form assigns buttons 4 to 11 to the Aux Labels 1 to 8, and buttons 12 to 19 to the shifted view of Aux buttons 9 to 16. CM button assignments 20-24 do not appear on the Aux button labels. Additionally, any call appearances that are assigned to CM buttons 4 through 24, like all the 96xx phones, appear on the Phone screen in a scrollable list. Any feature assigned to CM buttons 4 through 24, like the other 96xx phones, appears on the features list (reached by pressing the left or right arrow key while viewing the call appearances screen on the phone).

In [Table 5](#) the term “phone screen” refers to either the call appearance screen or the features screen, as applicable to the button type.

**Table 5: Station Form Administration Results**

Feature / Call Appearance (CA) / Bridged Call Appearance (BA) buttons on the Station form...	Is displayed on the phone as:			
	9620	9630/9630G	9640/9640G	9650
1 to 3	Phone screen	Phone screen	Phone screen	Phone screen
				<b>1 of 2</b>



Table 5: Station Form Administration Results (continued)

Feature / Call Appearance (CA) / Bridged Call Appearance (BA) buttons on the Station form...	Is displayed on the phone as:			
4 to 11	CAs/BAs on Phone screen; must scroll to see more than 3	CAs/BAs on Phone screen: must scroll to see more than 6	CAs/BAs on Phone screen: must scroll to see more than 6	Aux buttons 1 to 8 CAs/BAs on Phone screen; must scroll to see more than 3
	<b>9620</b>	<b>9630/9630G</b>	<b>9640/9640G</b>	<b>9650</b>
12 to 19	N/A	Scroll to see CAs/BAs, features on Feature List	Scroll to see CAs/BAs, features on Feature List	Aux buttons 9 to 16
20 to 24	N/A	Features on Feature List	Features on Feature List	Features on Feature List
25 to 48	N/A	SBM24	SBM24	SBM24
<b>2 of 2</b>				

For additional information about administering the media server for 9600 Series IP Telephones, see the following Avaya documents, available on the Avaya Support Web site:

- *Administrator Guide for Avaya Communication Manager* (Document Number 03-300509).
- *Feature Description and Implementation for Avaya Communication Manager* (Document Number 555-245-770).

## Button Module(s) (SBM24) on the 9630/9630G, 9640/9640G, and 9650

Use the 9630/9630G, 9640/9640G, or 9650 Station form to enable the SBM24 Button (Expansion) Module(s) and administer Call Appearances as primary appearances, bridged appearances, or busy indicators.

If the SBM24 Call Appearance corresponding to the CM call-associated display message or dialed-digits string is not visible because the user is not on the Phone screen, the telephone Top Line displays the call-associated display message or dialed-digits string.



---

## Conference Details Screen for Ad-Hoc Conferences

Conference Details allows the user to view parties on a conference call and selectively mute or drop individual parties for a conference call setup.

If administered on an Expansion Module button, the SBM24 Button Module must be connected.

### To enable Conference Details capabilities:

1. On the Class of Restriction (COR) form make sure that **Block Enhanced Conference/Transfer Displays** is set to **No**.
2. As described in [On-Hook Dialing](#), administer the Conference Display Feature Button to a Phone button on the Phone screen.

---

## Special Considerations for the 9650 IP Telephone

Call appearances, bridged call appearances, or features can be displayed on the 16 Aux button labels. The telephone displays eight labels at a time on the bottom two rows of the screen. Users can toggle between the two sets of 8 labels using the Aux shift button to the right of the Aux labels.

- The Aux button label area can fit 6-7 characters, depending on the width of the characters used.
- Cluster any call appearances together, bridged call appearances together, or similar features together. For example, keep "Director" "Next" and "Make Call" adjacent on the same Aux button row. Do not split like labels between the two sets of Aux buttons.
- Administer features that are not directly usable by the user, such as enhanced conference display, on the Station Form on buttons 20 to 24.
- Call appearances display 5 digits with a reserved area for a call state icon.
- Under the A menu, the first two Call Settings items allow the users to set the phone to go to the Phone screen when the phone is ringing (Go to Phone Screen on Ringing) and/or when the user is dialing (Go to Phone Screen on Dialing). In general, Avaya recommends that you set both to Yes - except for users covering many bridged appearances who may prefer to set the Go to Phone Screen on Ringing option to No. Users can change these settings for themselves using the Call Settings submenu.

- Group similar types of Aux buttons together on one page (Aux buttons 1-8 or Aux buttons 9-16) if possible.
  - If the user has bridged call appearances on Aux buttons, assign the bridged lines to Aux buttons 1-8 or to Aux buttons 9-16.
  - If the user has AD buttons, put them on the same page, if possible.
  - Keep related features on the same page of Aux buttons. For example, keep “Directory,” “Next,” and “Make call” together on the same row of Aux button labels and do not split between Aux buttons 8 and 9, which represent two different “pages.”
- Administer features that are not directly usable by the user, such as enhanced conference display on the Station form on buttons 20 to 24.
- Call appearances display 5 digits with a reserved area for a call state icon.

---

## Shuffling

Administer shuffling on three forms:

- Feature-Related Parameters form, shown in [Figure 13](#). Set the **Direct IP-IP Audio Connections?** field to **y** (yes).
- IP Network Region form, shown in [Figure 17](#). Set both the **Intra-region IP-IP Direct Audio** field and the **Inter-region IP-IP Direct Audio** field to **y** (yes).
- Station form, shown in [Figure 10](#). Set the **Direct IP-to-IP Audio Connection** to **y** (yes). The Station form setting overrides the network region, which overrides the system setting.

---

## Wide Band Codecs

You must administer wide band codecs for each IP codec set and for IP network regions. See [Appendix C: Sample Administration Forms](#) for sample screens.

# Chapter 5: Server Administration

---

## Software Checklist

Ensure that you own licenses to use the DHCP, HTTP, and HTTPS server software.

**Note:**

You can install the DHCP and HTTP server software on the same machine.



**CAUTION:**

The firmware in the 9600 Series IP Telephones reserves IP Addresses of the form **192.168.2.x** for internal communications. The telephone(s) improperly use addresses you specify if they are of that form.

---

## DHCP and File Servers

Dynamic Host Configuration Protocol (DHCP) minimizes maintenance for a 9600 Series IP Telephone network by removing the need to individually assign and maintain IP Addresses and other parameters for each IP telephone on the network.

The DHCP server provides the following information to the 9600 Series IP Telephones:

- IP Address of the 9600 Series IP Telephone(s)
- IP Address of the Gatekeeper board on the Avaya Media Server
- IP Address of the HTTP or HTTPS server
- The subnet mask
- IP Address of the router
- DNS Server IP Address

Administer the LAN so each IP telephone can access a DHCP server that contains the IP Addresses and subnet mask.

The IP telephone cannot function without an IP Address. The failure of a DHCP server at boot time leaves all the affected telephones unusable. A user can manually assign an IP Address to an IP telephone. When the DHCP server finally returns, the telephone never looks for a DHCP server unless the static IP data is unassigned manually. In addition, manual entry of IP data is an error-prone process.

Avaya recommends that:

- A minimum of two DHCP servers be available for reliability.
- A DHCP server be available when the IP telephone reboots.
- A DHCP server be available at remote sites if WAN failures isolate IP telephones from the central site DHCP server(s).

The file server provides the 9600 Series IP Telephone with a script file and, if appropriate, new or updated application software. See [Step 3: Telephone and File Server](#) on page 21 under [Telephone Initialization Process](#). In addition, you can edit an associated settings file to customize telephone parameters for your specific environment. For more information, see [Chapter 7: Administering Telephone Options](#).

---

## DHCP Server Administration

This document concentrates on the simplest case of the single LAN segment. Information provided here can be used for more complex LAN configurations.



### **CAUTION:**

Before you start, understand your current network configuration. An improper installation will cause network failures or reduce the reliability and performance of your network.

---

## Configuring DHCP for 9600 Series IP Telephones

To administer DHCP option 242, make a copy of an existing option 176 for your 46xx IP Telephones. You can then either:

- leave any parameters the 9600 Series IP Telephones do not support for setting via DHCP in option 242 to be ignored, or
- delete unused or unsupported 9600 IP Series Telephone parameters to shorten the DHCP message length.

Only the following parameters can be set in the DHCP site-specific option for 96xx telephones, although most of them can be set in a 46xxsettings.txt file as well.

Table 6: Parameters Set by DHCP

Parameter	Description
TLSSRVR	IP Address(es) or DNS name(s) of Avaya file server(s) used to download configuration files. <b>Note:</b> Transport Layer Security is used to authenticate the server.
HTTPSRRVR	IP Address(es) or DNS name(s) of HTTP file server(s) used to download 96xx telephone software files. The files are digitally signed, so TLS is not required for security.
HTTPDIR	Specifies the path name to prepend to all file names used in HTTP and HTTPS GET operations during startup. (0 to 127 ASCII characters, no spaces.) The command is <code>"SET HTTPDIR myhttpdir"</code> . The path (relative to the root of the TLS or HTTP file server) where 96xx telephone files are stored. If an Avaya file server is used to download configuration files over TLS, but a different server is used to download software files via HTTP, set the path of the Avaya server in the DHCP site-specific option, and set HTTPDIR again in the 46xxsettings.txt file with the appropriate path for the second server. HTTPDIR is the path for all HTTP operations <b>except</b> for BRURI.
STATIC	Controls whether to use a manually-programmed file server or CM IP Address instead of those received via DHCP or a settings file. If a manually-programmed file server IP Address is to be used, STATIC <b>must</b> be set via DHCP.
MCIPADD	CM server(s) IP Address(es) or DNS name(s). If there are too many addresses or names to include all of them in the DHCP site-specific option, include at least one from each major system. Then set MCIPADD again in the 46xxsettings.txt file with the complete list of addresses. Providing a subset of the addresses via DHCP improves reliability if the file server is not available due to server or network problems.
DOT1X	Controls the operational mode for 802.1X. The default is 0 (pass-through of multicast EAPOL messages to an attached PC, and enable Supplicant operation for unicast EAPOL messages).
ICMPDU	Controls the extent to which ICMP Destination Unreachable messages are sent in response to messages sent to closed ports so as not to reveal information to potential hackers. The default is 1 (sends Destination Unreachable messages for closed ports used by traceroute).
ICMPRED	Controls whether ICMP Redirect messages are processed. The default is 0 (redirect messages are not processed).
L2Q	802.1Q tagging mode. The default is 0 (automatic).
L2QVLAN	VLAN ID of the voice VLAN. The default is 0.
LOGLOCAL	Controls the severity level of events logged in the SNMP MIB. The default is 7.
PHY1STAT	Controls the Ethernet line interface speed. The default is 1 (auto-negotiate).
PHY2STAT	Controls the secondary Ethernet interface speed. The default is 1 (auto-negotiate).
PROCPSWD	Security string used to access local procedures. The default is 27238 (CRAFT).
PROCSTAT	Controls whether local (Craft) procedures are allowed. The default is 0 (access to all administrative options is allowed).
SNMPADD	Allowable source IP Address(es) for SNMP queries. The default is " " (Null).
SNMPSTRING	SNMP community name string. The default is " " (Null).
VLANTEST	Controls the length of time the telephone tries DHCP with a non-zero VLAN ID. When the interval is exceeded, the telephone records the VLAN ID so that it is not used again, and DHCP continues on the default VLAN. The default is 60 seconds.

---

## DHCP Generic Setup

This document is limited to describing a generic administration that works with the 9600 Series IP Telephones. Three DHCP software alternatives are common to Windows operating systems:

- Windows NT<sup>®</sup> 4.0 DHCP Server
- Windows 2000<sup>®</sup> DHCP Server
- Windows 2003<sup>®</sup> DHCP Server

Any other DHCP application might work. It is the responsibility of the customer to install and configure the DHCP server correctly.

DHCP server setup involves:

1. Installing the DHCP server software according to vendor instructions.
2. Configuring the DHCP server with:
  - IP Addresses available for the 9600 Series IP Telephones.
  - The following DHCP options:
    - **Option 1 - Subnet mask.**  
As described in [Table 3](#), item 3.
    - **Option 3 - Gateway (router) IP Address(es).**  
As described in [Table 3](#), item 1. If using more than one address, the total list can contain up to 255 total ASCII characters. You must separate IP Addresses with commas with no intervening spaces.
    - **Option 6 - DNS server(s) address list.**  
If using more than one address, the total list can contain up to 127 total ASCII characters. You must separate IP Addresses with commas with no intervening spaces. At least one address in Option 6 must be a valid, non zero, dotted decimal address.
    - **Option 12 - Host Name.**  
Value is **AVohhhhhh**, where: o is "A" if the OID (first three octets) of the MAC address for the telephone is 00-04-0D. "E" if the OID is 00-09-6E, "L" if the OID is 00-60-1D, and "X" if the OID is anything else and where **hhhhhh** are ASCII characters for the hexadecimal representation of the last three octets of the MAC address for the telephone.
    - **Option 15 - DNS Domain Name.**  
This string contains the domain name to be used when DNS names in system parameters are resolved into IP Addresses. This domain name is appended to the DNS name before the 9600 IP Telephone attempts to resolve the DNS address. Option 15 is necessary if you want to use a DNS name for the HTTP server. Otherwise, you can specify a DOMAIN as part of customizing HTTP as indicated in [DNS Addressing](#) on page 95.

- **Option 51 - DHCP lease time.**

If this option is not received, the DHCP OFFER is not be accepted. Avaya recommends a lease time of six weeks or greater. If this option has a value of FFFFFFFF hex, the IP Address lease is assumed to be infinite as per RFC 2131, Section 3.3, so that renewal and rebinding procedures are not necessary even if Options 58 and 59 are received. Expired leases cause Avaya IP Telephones to reboot. Avaya recommends providing enough leases so an IP Address for an IP telephone does not change if it is briefly taken offline.

**Note:**

The DHCP standard states that when a DHCP lease expires, the device should immediately cease using its assigned IP Address. If the network has problems and the only DHCP server is centralized, the server is not accessible to the given telephone. In this case the telephone is not usable until the server can be reached.

Avaya recommends, once assigned an IP Address, the telephone continues using that address after the DHCP lease expires, until a conflict with another device is detected. As [Table 9: 9600 Series IP Telephone Customizable System Parameters](#) indicates, the system parameter DHCPSTD allows an administrator to specify that the telephone will either:

- a). Comply with the DHCP standard by setting DHCPSTD to "1", or
- b). Continue to use its IP Address after the DHCP lease expires by setting DHCPSTD to "0."

The latter case is the default. If the default is invoked, after the DHCP lease expires the telephone sends an ARP Request for its own IP Address every five seconds.

The request continues either forever, or until the telephone receives an ARP Reply. After receiving an ARP Reply, the telephone displays an error message, sets its IP Address to 0.0.0.0, and attempts to contact the DHCP server again.

- **Option 52 - Overload Option, if desired.**

If this option is received in a message, the telephone interprets the **sname** and **file** fields in accordance with IETF RFC 2132, Section 9.3, listed in [Appendix B: Related Documentation](#).

- **Option 53 - DHCP message type.**

Value is 1 (DHCPDISCOVER) or 3 (DHCPREQUEST).

- **Option 55 - Parameter Request List.**

Acceptable values are:

- 1 (subnet mask),
- 3 (router IP Address[es])
- 6 (domain name server IP Address[es])
- 15 (domain name)
- NVSSON (site-specific option number)

- **Option 57 - Maximum DHCP message size.**
- **Option 58 - DHCP lease renew time.**  
If not received or if this value is greater than that for Option 51, the default value of T1 (renewal timer) is used as per IETF RFC 2131, Section 4.5, listed in [Related Documentation](#).
- **Option 59 - DHCP lease rebind time.**  
If not received or if this value is greater than that for Option 51, the default value of T2 (rebinding timer) is used as per RFC 2131, Section 4.5

The 9600 Series IP Telephones do not support Regular Expression Matching, and therefore, do not use wildcards. For more information, see [Administering Options for the 9600 Series IP Telephones](#) on page 83.

In configurations where the upgrade script and application files are in the default directory on the HTTP server, do not use the HTTPDIR=<path>.

You do not have to use Option 242. If you do not use this option, you must ensure that the key information, especially HTTPSRVR and MCIPADD, is administered appropriately elsewhere.

Avaya recommends that you administer DHCP servers to deliver only the options specified in this document. Administering additional, unexpected options might have unexpected results, including causing the IP telephone to ignore the DHCP server.

The media server name and HTTP server name must each be no more than 32 characters in length.

Examples of good DHCP administration include:

- Option 6: "**aaa.aaa.aaa.aaa**"
- Option 15: "**dnsexample.yourco.com,zzz.zzz.zzz.zzz**"
- Option 242: "**MCIPADD=xxxx.xxx.xxx.xxx**"

Depending on the DHCP application you choose, be aware that the application most likely does not immediately recycle expired DHCP leases. An expired lease might remain reserved for the original client a day or more. For example, Windows NT<sup>®</sup> DHCP reserves expired leases for about one day. This reservation period protects a lease for a short time. If the client and the DHCP server are in two different time zones, the clocks of the computers are not in sync, or the client is not on the network when the lease expires, there is time to correct the situation.

The following example shows the implication of having a reservation period: Assume two IP Addresses, therefore two possible DHCP leases. Assume three IP telephones, two of which are using the two available IP Addresses. When the lease for the first two telephones expires, the third telephone cannot get a lease until the reservation period expires. Even if the other two telephones are removed from the network, the third telephone remains without a lease until the reservation period expires.



In [Table 7](#), the 9600 Series IP Telephone sets the system values to the DHCPACK message field values shown.

**Table 7: DHCPACK Setting of System Values**

System Value	Set to
IPADD	The <b>yiaddr</b> field.
NETMASK	Option #1 (if received).
GIPADD	Option #3 (if received, which might be a list of IP Addresses).
TLSSRVR	The <b>siaddr</b> field, if that field is non-zero.
HTTPSRVR	The <b>siaddr</b> field, if that field is non-zero.
DNSSRVR	Option #6 (if received, which might be a list of IP Addresses).
DOMAIN	Option #15 (if received).
DHCP lease time	Option #51 (if received).
DHCP lease renew time	Option #58 (if received).
DHCP lease rebind time	Option #59 (if received).

The system values L2Q, L2QVLAN, and PHY2VLAN are not set from a *name=value* pair if those system values were previously set by LLDP. For more information, see [Link Layer Discovery Protocol \(LLDP\)](#).

---

## Windows NT 4.0 DHCP Server

### Verifying the Installation of the DHCP Server

Use the following procedure to verify whether the DHCP server is installed.

1. Select **Start-->Settings-->Control Panel**.
2. Double-click the **Network** icon.
3. Verify that **Microsoft DHCP Server** is listed as one of the Network Services on the **Services** tab.
4. If it is listed, continue with the next section. If it is not listed, install the DHCP server.

## Creating a DHCP Scope for the IP Telephones

Use the following procedure to create a DHCP scope for the IP telephones.

1. Select **Start-->Programs-->Admin Tools-->DHCP Manager**.
2. Expand **Local Machine** in the DHCP Servers window by double clicking it until the **+** sign changes to a **-** sign.
3. Select **Scope-->Create**.
4. Using information recorded in [Table 3: Required Network Information Before Installation - Per DHCP Server](#):

Define the **Telephone IP Address Range**.

Set the **Subnet Mask**.

To **exclude** any IP Addresses you do not want assigned to IP telephones within the **Start** and **End** addresses range:

- a. In the **Exclusion Range Start Address** field, enter the **first IP Address** in the range that you want to exclude.
- b. In the **Exclusion Range End Address** field, enter the **last IP Address** in the range that you want to exclude.
- c. Click the **Add** button.
- d. Repeat steps a. through c. for each IP Address range to be excluded.

**Note:**

Avaya recommends that you provision the 9600 Series IP Telephones with sequential IP Addresses. Also do not mix 9600 Series IP Telephones and PCs in the same scope.

5. Under **Lease Duration**, select the **Limited To** option and set the **lease duration** to the maximum.
6. Enter a **sensible name** for the **Name** field, such as "CM IP Telephones," where CM would represent Avaya Communication Manager.
7. Click **OK**.

A dialog box prompts you: Activate the new scope now?

8. Click **No**.

**Note:**

Activate the scope only after setting all options.

## Editing Custom Options

Use the following procedure to edit custom options.

1. Highlight the newly created scope.
2. Select **DHCP Options-->Defaults** in the menu.
3. Click the **New** button.
4. In the **Add Option Type** dialog box, enter an appropriate custom option name, for example, "9600OPTION."
5. Change the **Data Type Byte** value to **String**.
6. Enter **242** in the **Identifier** field.
7. Click the **OK** button.

The **DHCP Options** menu displays.

8. Select the **Option Name** for 242 and set the *value string*.
9. Click the **OK** button.
10. For the **Option Name** field, select **003 Router** from the drop-down list.
11. Click **Edit Array**.
12. Enter the **Gateway IP Address** recorded in [Table 3: Required Network Information Before Installation - Per DHCP Server](#) for the **New IP Address** field.
13. Select **Add** and then **OK**.

## Adding the DHCP Option

Use the following procedure to add the DHCP option.

1. Highlight the scope you just created.
2. Select **Scope** under **DHCP Options**.
3. Select the **242** option that you created from the **Unused Options** list.
4. Click the **Add** button.
5. Select option **003** from the **Unused Options** list.
6. Click the **Add** button.
7. Click the **OK** button.
8. Select the **Global parameter** under **DHCP Options**.
9. Select the **242** option that you created from the **Unused Options** list.
10. Click the **Add** button.
11. Click the **OK** button.

## Activating the Leases

Use the following procedure to activate the leases.

- Click **Activate** under the **Scope** menu.  
The light-bulb icon for the scope lights.

## Verifying Your Configuration

This section describes how to verify that the **96XXOPTIONS** are correctly configured for the Windows NT<sup>®</sup> 4.0 DHCP server.

### Note:

Although this configuration represents that for 9600 Series IP Telephones, the file remains as 46XXOPTIONS. This allows shared use for both 4600 and 9600 Series IP Telephones.

### Verify the Default Option, 242 96XXOPTION

1. Select **Start-->Programs-->Admin Tools-->DHCP Manager**.
2. Expand **Local Machine** in the DHCP servers window by double clicking until the **+** sign changes to a **-** sign.
3. In the DHCP servers frame, click the *scope* for the IP telephone.
4. Select **Defaults** from the **DHCP\_Options** menu.
5. In the **Option Name** pull-down list, select **242 96XXOPTION**.
6. Verify that the **Value String** box contains the correct string from [DHCP Server Administration](#).

If not, update the string and click the **OK** button twice.

### Verify the Scope Option, 242 96XXOPTION

1. Select **Scope** under **DHCP OPTIONS**.
2. In the **Active Options:** scroll list, click **242 96XXOPTION**.
3. Click the **Value** button.
4. Verify that the **Value String** box contains the correct string from [DHCP Generic Setup](#) on page 54.

If not, update the string and click the **OK** button.

## Verify the Global Option, 242 96XXOPTION

1. Select **Global** under **DHCP OPTIONS**.
2. In the **Active Options:** scroll list, click **242 96XXOPTION**.
3. Click the **Value** button.
4. Verify that the **Value String** box contains the correct value from [DHCP Generic Setup](#) on page 54. If not, update the string and click the **OK** button.

---

## Windows 2000 DHCP Server

### Verifying the Installation of the DHCP Server

Use the following procedure to verify whether the DHCP server is installed.

1. Select **Start-->Program-->Administrative Tools-->Computer Management**.
2. Under **Services and Applications** in the Computer Management tree, find **DHCP**.
3. If DHCP is not installed, install the DHCP server. Otherwise, proceed directly to [Creating and Configuring a DHCP Scope](#) for instructions on server configuration.

### Creating and Configuring a DHCP Scope

Use the following procedure to create and configure a DHCP scope.

1. Select **Start-->Programs-->Administrative Tools-->DHCP**.
2. In the console tree, click the *DHCP server* to which you want to add the DHCP scope for the IP telephones. This is usually the name of your DHCP server machine.
3. Select **Action-->New Scope** from the menu.

Windows displays the **New Scope Wizard** to guide you through rest of the setup.

4. Click the **Next** button.

The **Scope Name** dialog box displays.

5. In the **Name** field, enter a name for the scope such as "CM IP Telephones" (where CM would represent Avaya Communication Manager), then enter a brief comment in the **Description** field.

6. When you finish Steps 1 - 5, click the **Next** button.

The **IP Address Range** dialog box displays.

7. Define the range of IP Addresses used by the IP telephones listed in [Table 3: Required Network Information Before Installation - Per DHCP Server](#). The **Start IP Address** is the first IP Address available to the IP telephones. The **End IP Address** is the last IP Address available to the IP telephones.

#### Note:

Avaya recommends not mixing 9600 Series IP Telephones and PCs in the same scope.

8. Define the **subnet mask** in one of two ways:

- The number of bits of an IP Address to use for the network/subnet IDs.
- The subnet mask IP Address.

Enter only one of these values. When you finish, click the **Next** button.

The **Add Exclusions** dialog box displays.

9. Exclude any IP Addresses in the range specified in the previous step that you do not want assigned to an IP telephone.

- a. In the **Start Address** field under **Exclusion Range**, enter the *first IP Address* in the range you want to exclude.
- b. In the **End Address** field under **Exclusion Range**, enter the *last IP Address* in the range you want to exclude.
- c. Click the **Add** button.
- d. Repeat steps a. through c. for each IP Address range that you want to exclude.

**Note:**

You can add additional exclusion ranges later by right clicking the **Address Pool** under the newly created scope and selecting the **New Exclusion Range** option.

Click the **Next** button after you enter all the exclusions.

The **Lease Duration** dialog box displays.

10. For all telephones that obtain their IP Addresses from the server, enter **30 days** in the **Lease Duration** field. This is the duration after which the IP Address for the device expires and which the device needs to renew.

11. Click the **Next** button.

The **Configure DHCP Options** dialog box displays.

12. Click the **No, I will activate this scope later** button.

The **Router** (Default Gateway) dialog box displays.

13. For each router or default gateway, enter the **IP Address** and click the **Add** button.

When you are done, click the **Next** button.

The **Completing the New Scope Wizard** dialog box displays.

14. Click the **Finish** button.

The new scope appears under your server in the DHCP tree. The scope is not yet active and does not assign IP Addresses.

15. Highlight the newly created scope and select **Action-->Properties** from the menu.

16. Under **Lease duration for DHCP clients**, select **Unlimited** and then click the **OK** button.

**CAUTION:**

IP Address leases are kept active for varying periods of time. To avoid having calls terminated suddenly, make the lease duration unlimited.

## Adding DHCP Options

Use the following procedure to add DHCP options to the scope you created in the previous procedure.

1. On the DHCP window, right-click the **Scope Options** folder under the scope you created in the last procedure.  
A drop-down menu displays.
2. In the left pane of the DHCP window, right click the **DHCP Server name**, then click **Set Predefined Options...**
3. Under **Predefined Options and Values**, click **Add**.
4. In the **Option Type Name** field, enter *any appropriate name*, for example, "Avaya IP Telephones."
5. Change the **Data Type** to **String**.
6. In the **Code** field, enter **242**, then click the **OK** button twice.  
The **Predefined Options and Values** dialog box closes, leaving the DHCP dialog box enabled.
7. Expand the newly created scope to reveal its **Scope Options**.
8. Click **Scope Options** and select **Action-->Configure Options** from the menu.
9. In the **General** tab page, under the **Available Options**, check the **Option 242** checkbox.
10. In the **Data Entry** box, enter the *DHCP IP telephone option string* as described in [DHCP Generic Setup](#) on page 54.

**Note:**

You can enter the text string directly on the right side of the **Data Entry** box under the ASCII label.

11. From the list in **Available Options**, check option **003 Router**.
12. Enter the *gateway (router) IP Address* from the IP Address field of [Table 3: Required Network Information Before Installation - Per DHCP Server](#).
13. Click the **Add** button.
14. Click the **OK** button.

## Activating the New Scope

Use the following procedure to activate the new scope.

1. In the DHCP console tree, click the **IP Telephone Scope** you just created.
2. From the **Action** menu, select **Activate**.

The small red down arrow over the scope icon disappears, indicating that the scope was activated.

---

## HTTP Generic Setup

You can store the same application software, script file, and settings file on an HTTP server as you can on a TFTP server. TFTP is not supported for 9600 Series IP Telephones. With proper administration, the telephone seeks out and uses that material. Some functionality might be lost by a reset if the HTTP server is unavailable. For more information, see [DHCP and File Servers](#) on page 51.



### CAUTION:

The files defined by HTTP server configuration must be accessible from all IP telephones invoking those files. Ensure that the file names match the names in the upgrade script, including case, since UNIX systems are case-sensitive.

### Note:

Use any HTTP application you want. Commonly used HTTP applications include Apache® and Microsoft® IIS™.



### Important:

You must use the Avaya Web configuration server to obtain HTTPS so information is authenticated.

The Avaya Web configuration server does not support backup/restore. If you intend to use HTTP for backup/restore purposes, you must use an HTTP server that is independent of the Avaya Web configuration server.

To set up an HTTP server:

- Install the HTTP server application.
- Administer the system parameters HTTPSRVR and CODESRVR to the address(es) of the HTTP server. Include these parameters in DHCP Option 242, or the appropriate SSON Option.



- Download the upgrade script file and application file(s) from the Avaya Web site <http://www.avaya.com/support> to the HTTP server. For more information, see [Contents of the Settings File](#) on page 80.

**Note:**

Many LINUX servers distinguish between upper and lower case names. Ensure that you specify the settings file name accurately, as well as the names and values of the data within the file.

If you choose to enhance the security of your HTTP environment by using Transport Layer Security (TLS), you also need to:

- Install the TLS server application.
- Administer the system parameter TLSSRV to the address(es) of the Avaya HTTP server.

---

## HTTP/HTTPS Configuration for Backup/Restore

In addition to the procedures in this section, you can use the Avaya File Server Application for configuration, firmware file download, and backup/restore. You can download this application from <http://www.avaya.com/support>.

---


### For IIS Web Servers



**Important:**


You must have accounts in the domain of your IIS server.

1. Go to **control panel/Administrative Tools/Internet Services Manager** and select the directory you created to hold the backups.

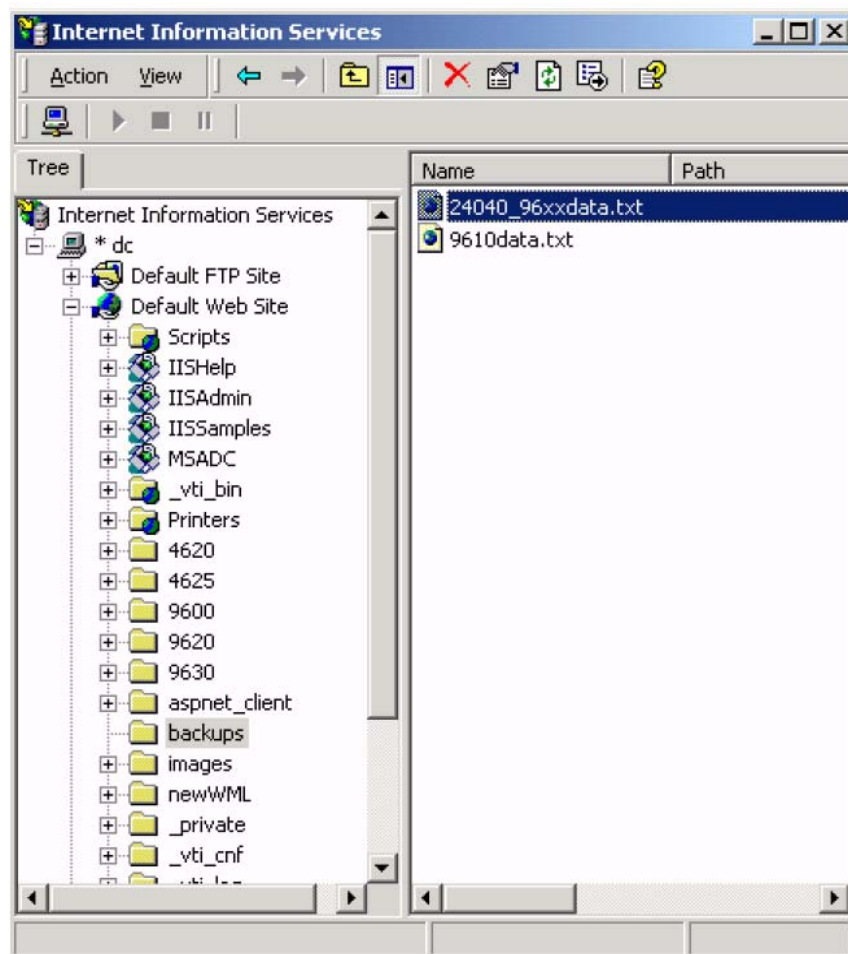


2. Right click and select **Properties**.


3. Select **Directory** and enable write access.

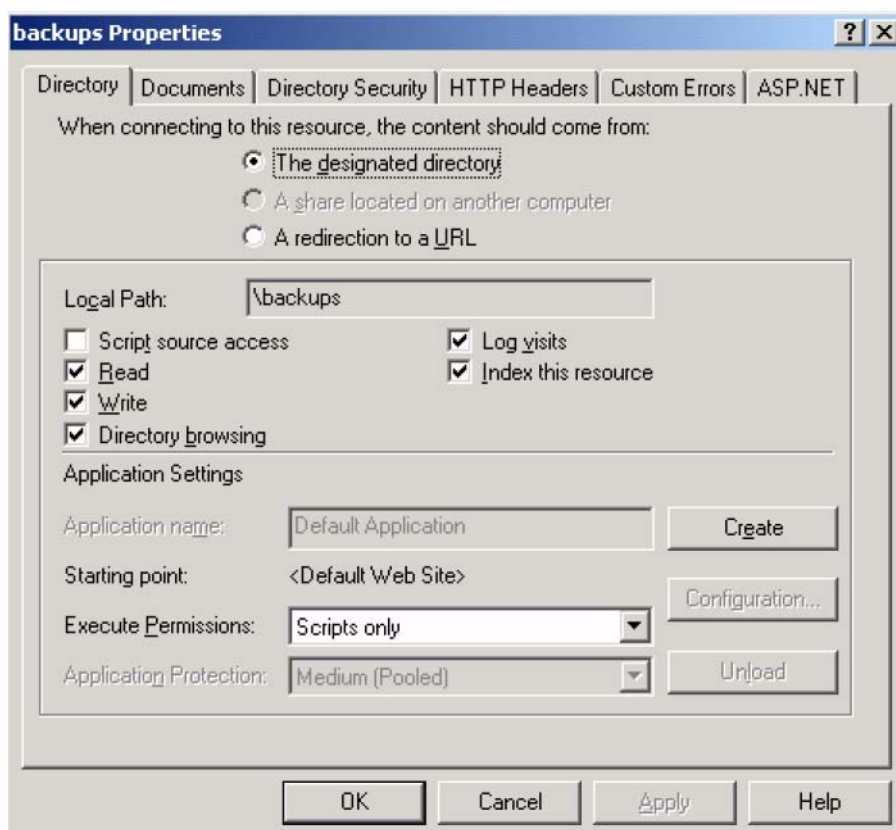

4. Select **Directory Security**.

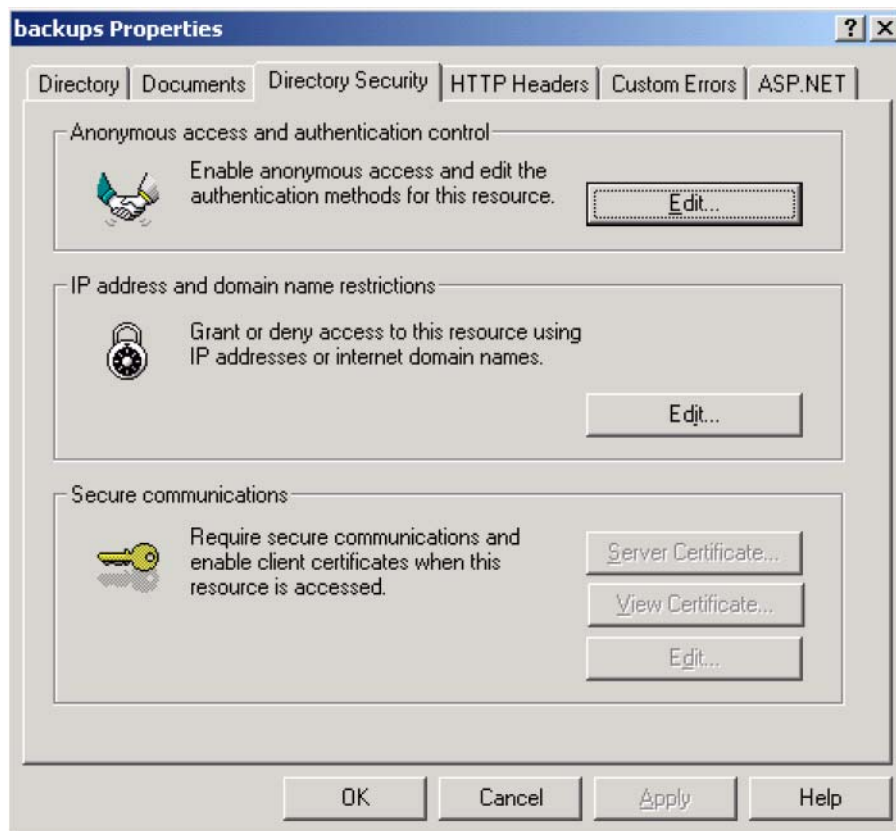


5. Select **Directory Security/Anonymous access** and **authentication control/Edit**.

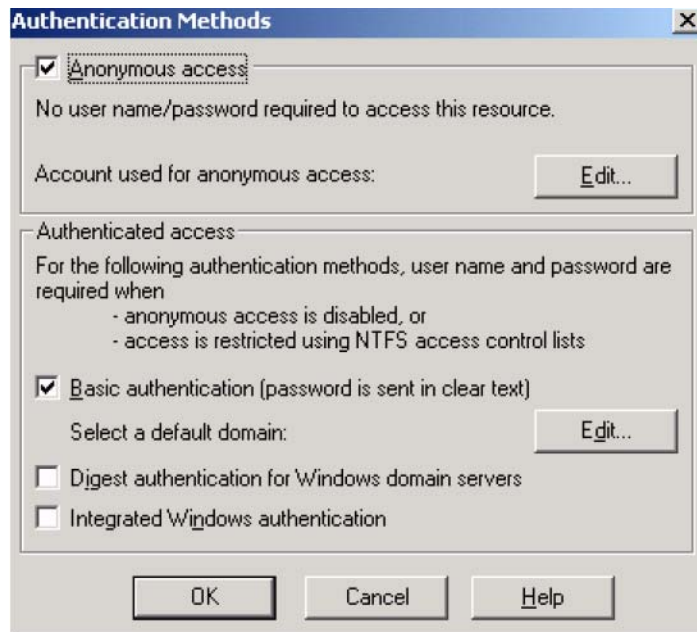

6. Select **Basic authentication** (password is sent in clear text).


7. Click **Edit** next to Select a default domain:

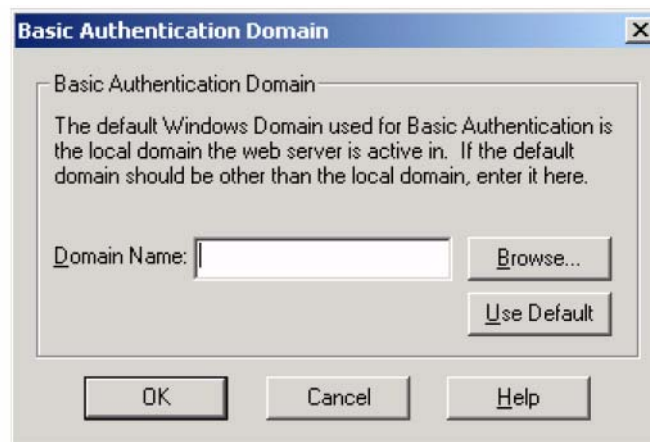


The domain name should be blank.

8. Press **OK** several times to accept your settings.

9. Stop and restart the Web server. Right click on the default Web server.

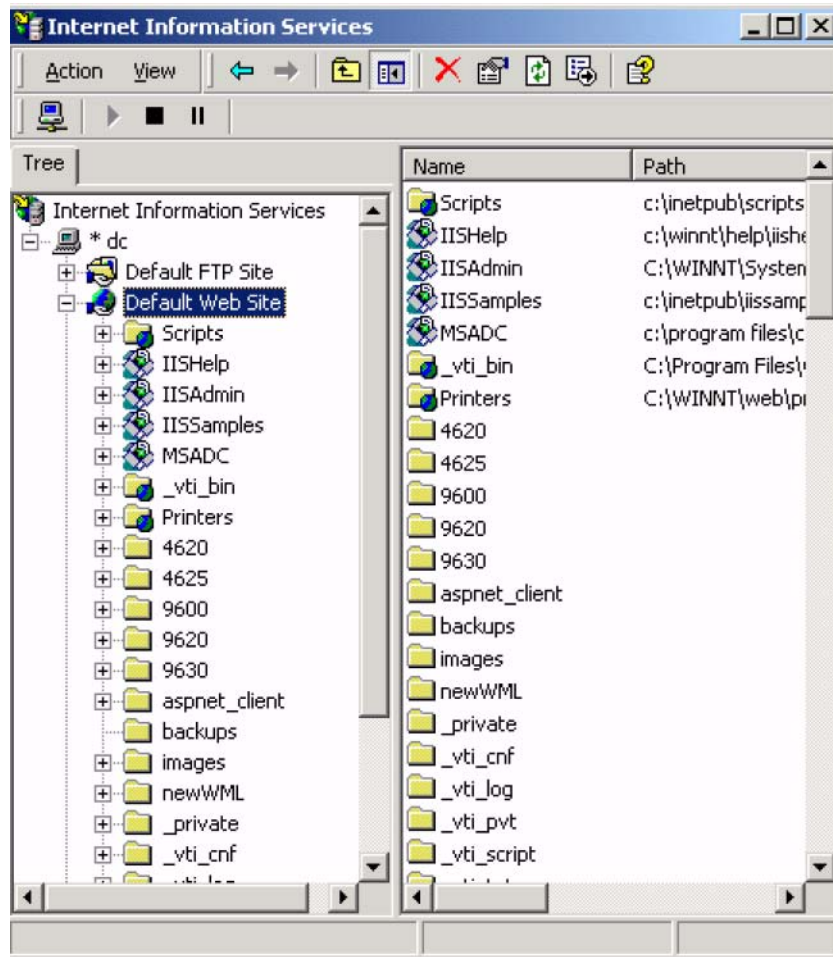


10. Select **Stop**.

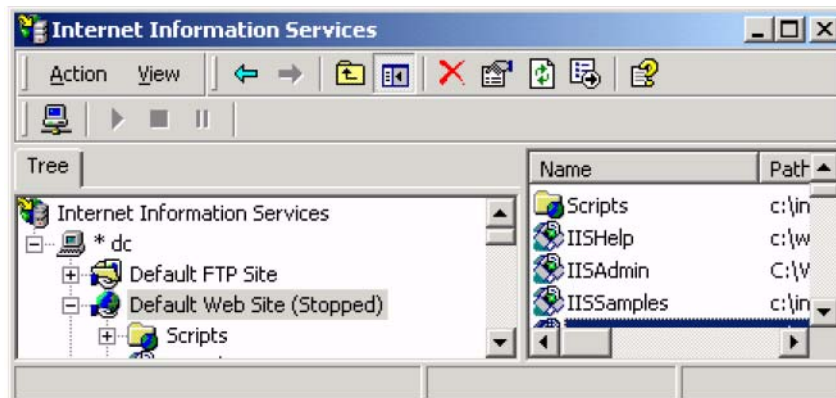

11. Right click again and Select **Start**.

12. Open Explorer and find the directory. Right click and open properties. Ensure that all of your telephone users have write permission in this directory.

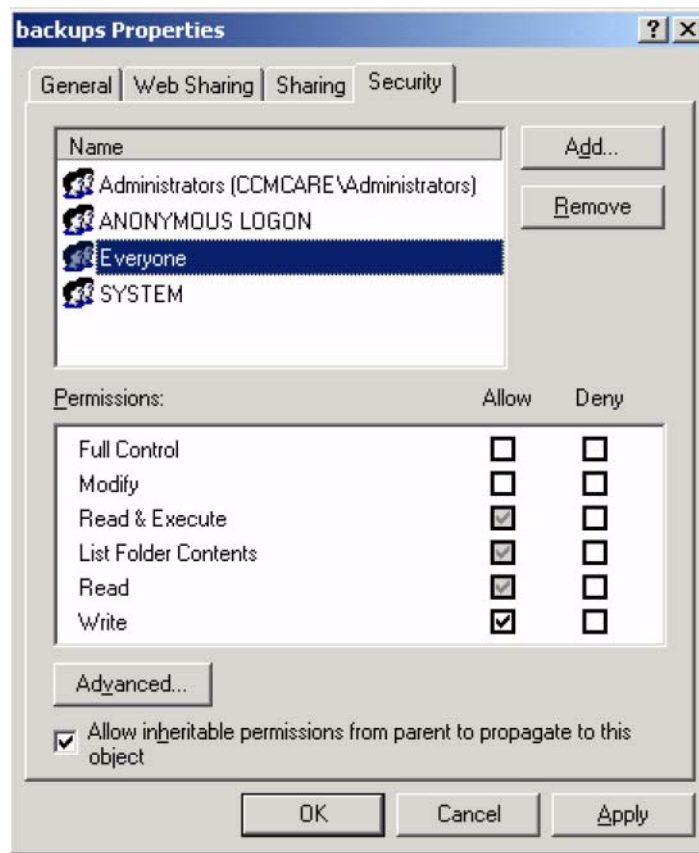

13. Now have your users do a manual backup. They will be prompted for their user id and password.

When each backup completes successfully, the telephone will remember the userid and password and automatic backups will proceed normally.

---

## For Apache Web Servers

1. Create a “backup” folder under the root directory of your Web server, and **make the folder writable by everyone**. All backup files will be stored in that directory.

If your backup folder is for instance **C:/Program Files/Apache Group/Apache2/htdocs/backup**, the 46xxsettings.txt file should have a line similar to:

```
[SET BRURI http://www.website.com/backup/]
```

If your backup folder is the root directory, the 46xxsettings.txt file should have a line similar to:

```
[SET BRURI http://www.website.com/]
```

2. Edit your Web server configuration file **httpd.conf**.
3. Uncomment the two LoadModule lines associated with DAV:

```
LoadModule dav_module modules/mod_dav.so
```

```
LoadModule dav_fs_module modules/mod_dav_fs.so
```

**Note:**

If these modules are not available on your system, typically the case on some Unix/Linux Apache servers, you have to recompile these two modules (mod\_dav & mod\_dav\_fs) into the server. Other ways to load these modules might be available. Check your Apache documentation at <http://httpd.apache.org/docs/> for more details.

4. Add the following lines in the **httpd.conf** file:

```
#  
# WebDAV configuration  
#  
DavLockDB "C:/Program Files/Apache Group/Apache2/var/DAVLock"  
    <Location />  
        Dav On  
    </Location>
```

For Unix/Linux Web servers the fourth line might look more like:

```
DavLockDB/usr/local/apache2/var/DAVLock
```

5. Create the var directory and **make it writable by everyone**. Right click **Properties-->Security-->Add-->Everyone-->Full Control**.



---

## Web Configuration Tool

Recent call server versions provide all the Web configuration support the 9600 Series IP Telephones require. Also, the media server has an easy to use, PC-based interface for creating script files. Given these resources, you do not need to manually create the text files discussed in [9600 Series IP Telephone Scripts and Application Files](#). For more information about the media server, see *Installation and Upgrades for Avaya G700 Media Gateway and Avaya S8300 Media Server*, available on the Avaya support Web site.

[Table 9: 9600 Series IP Telephone Customizable System Parameters](#) lists the parameters you can administer when manually creating the configuration file. Manual administration is discussed in [9600 Series IP Telephone Scripts and Application Files](#). When using the media server, you do not need to know the specific parameter names, since the media server handles that. For more information, [Table 8](#) lists the parameter names from [9600 Series IP Telephone Customizable System Parameters](#) and the corresponding field name from the media server HTTP server application. Any limits, restrictions, etc. about the parameters are built into the media server.

**Note:**

The Web Configuration application covers other IP telephones. This document covers only data applicable to 9600 Series IP Telephones.

**Table 8: Media Server Field Names & Corresponding Script File Parameter Names**

Media Server Field Name	Script File Parameter Name
Handset Audio Gain Control Status	AGCHAND
Headset Audio Gain Control Status	AGCHEAD
Speaker Audio Gain Control Status	AGCSPKR
AvayaMenuAdmin.txt file URI	AMADMIN
Application Status	APPSTAT
Audible Alerting	AUDASYS
Audio Environment Selection Index	AUDIOENV
Headset Sidetone Setting	AUDIOSTHD
Handset Sidetone Setting	AUDIOSTHS

---

1 of 4

---

**Table 8: Media Server Field Names & Corresponding Script File Parameter Names (continued)**

Media Server Field Name	Script File Parameter Name
Script File Server Authentication <b>Note:</b> Applicable only when configuration file downloaded using HTTPS. Not applicable if file downloaded using HTTP.	AUTH
Idle Time Before Backlight Turnoff	BAKLIGHTOFF
Backup and Restore URI	BRURI
CNA Server Addresses	CNASRVR
CNA Port Number	CNAPORT
802.1X Supplicant Mode	DOT1X
DHCP Lease Violation Flag	DHCPSTD
Domain Name	DOMAIN
Domain Name Server	DNSSRVR
Headset Operational Mode	HEADSYS
HTTP Server IP Address	HTTPSRVR
HTTP Directory	HTTPDIR
Send Destination Unreachable Messages	ICMPDU
Process Received Redirect Messages	ICMPRED
Layer 2 Frame Tagging	L2Q
802.1A VLAN Identifier	L2QVLAN
Large Font Language Filename	LANGLARGEFONT
System-Wide Language	LANGSYS
English Language Selection Status	LANG0STAT
Language File Name	LANGxFILE (with x being 1-4)
Event Log Security Level	LOGLOCAL
Syslog Server Address	LOGSRVR
Management Complex IP Addresses	MCIPADD

**2 of 4**

**Table 8: Media Server Field Names & Corresponding Script File Parameter Names (continued)**

<b>Media Server Field Name</b>	<b>Script File Parameter Name</b>
Voice Mail Telephone Number	MSGNUM
User Options Access	OPSTAT
Telephone Country Code	PHNCC
Telephone Dial Plan Length	PHNDPLENGTH
International Access Code	PHNIC
Long Distance Access Code	PHNLD
National Telephone # Length	PHNLDLENGTH
Outside Line Access Code	PHNOL
Ethernet Line Interface Status	PHY1STAT
Secondary Ethernet Interface Layer 2 Priority Value	PHY2PRIO
Secondary Ethernet Line Interface Status	PHY2STAT
Secondary Ethernet Interface VLAN Identifier	PHY2VLAN
Local (dial pad) Procedure Password	PROCPSWD
Local Dialpad Procedures Allowed	PROCSTAT
Reregistration Timer	REREGISTER
RTCP Monitor IP Address	RTCPMON
Screen Saver	SCREENSAVERON
Source IP Addresses for SNMP Queries	SNMPADD
SNMP Community String	SNMPSTRING
Subscription List	SUBSCRIBELIST
Trusted Domains/Paths	TPSLIST
Unnamed Registration Status	UNNAMEDSTAT
Secondary Ethernet Interface Layer 2 Frame Tagging	VLANSEP
Wait Time for DHCP Offer	VLANTEST
9600 Home Page	WMLHOME

**3 of 4**

**Table 8: Media Server Field Names & Corresponding Script File Parameter Names (continued)**

Media Server Field Name	Script File Parameter Name
9600 HTTP Proxy Server	WMLPROXY
9600 HTTP Proxy Server Port	WMLPORT
9600 HTTP Proxy Server Exception Domains	WMLEXCEPT
Idle Time Before Web Page Display	WMLIDLETIME
Idle Time Web Page Display	WMLIDLEURI
9610 WML Browser Home Page	WMLSMALL
<b>4 of 4</b>	

# Chapter 6: Telephone Software and Application Files

---

## General Download Process

The 9600 Series IP Telephones download script files, application files, and settings files from either an HTTP or HTTPS server. The HTTPS server applies only if the server supports Transport Layer Security (TLS) encryption.

**Note:**

The script files, application files, and settings files discussed in this chapter are identical for HTTP and HTTPS servers. The generic term “file server” refers to both “HTTP server” and “HTTPS server.”

The file downloading process is the same for both servers, except when you use an HTTPS server, a TLS server is contacted first. The telephone queries the file server, which transmits a script file to the telephone. The script file tells the telephone which application file the telephone must use. The application file is the software that has the telephony functionality, and is easily updated for future enhancements. In a newly installed telephone, the application file might be missing. In a previously installed telephone, the application file might not be the proper one. In both cases, the telephone requests a download of the proper application file from the file server. The file server downloads the file and conducts some checks to ensure that the file was downloaded properly. If the telephone determines it already has the proper file, the telephone proceeds to the next step without downloading the application file again.

After checking and loading the application file, the 9600 Series IP Telephone, if appropriate, uses the script file to look for a settings file. The settings file contains options you have administered for any or all of the 9600 Series IP Telephones in your network. For more information about the settings file, see [Contents of the Settings File](#) on page 80.

---

## Software

When shipped from the factory, the 9600 Series IP Telephones might not contain sufficient software for registration and operation. When the telephone is first plugged in, a software download from an HTTP or HTTPS server starts to give the phone its proper functionality.

For software upgrade downloads, the call server provides the capability for a remote restart of the 9600 Series IP Telephone. As a result of restarting, the telephone automatically starts reboot procedures. If new software is available on the server, the telephone downloads it as part of the reboot process. The *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide* covers upgrades to a previously installed telephone and related information.

---

## 9600 Series IP Telephone Scripts and Application Files

---

---

### Choosing the Right Application File and Upgrade Script File

The software releases containing the files needed to operate the 9600 Series IP Telephones are bundled together. You download this self-extracting executable file to your file server from the Avaya support Web site at: <http://www.avaya.com/support>. The file is available in both zipped and unzipped format.

The bundle contains:

- An upgrade script file and a settings file, which allow you to upgrade to new software releases and new functionality without having to replace IP telephones.
- Application files for all current 9600 Series IP Telephones.
- Other useful information such as a ReadMe file and a settings file template to customize parameters and settings, and the latest binary code.

---

### Upgrade Script File

An upgrade script file tells the IP telephone whether the telephone needs to upgrade software. The Avaya IP Telephones attempt to read this file whenever they reset. The upgrade script file also points to the settings file.

You download a default upgrade script file, sometimes called the “script file,” from <http://www.avaya.com/support>. This file allows the telephone to use default settings for customer-definable options. To administer customer-defined settings, you must create a file called **46xxsettings.txt**, which resides in the same directory as the upgrade script file.

**Note:**

Avaya recommends that the settings file have the extension **\*.txt**. The Avaya IP Telephones can operate without this file. You can also change these settings with DHCP or, in some cases, from the dialpad of the telephone.

## Settings File

The settings file contains the option settings you need to customize the Avaya IP Telephones for your enterprise.

**Note:**

You can use one settings file for all your Avaya IP Telephones. The settings file includes the 9600 Series IP Telephones covered in this document and 4600 Series IP Telephones, as covered in the *4600 Series IP Telephone LAN Administrator Guide* (Document Number 555-233-507).

The settings file can include any of five types of statements, one per line:

- Comments, which are statements with a “#” character in the first column.
- Tags, which are comments that have exactly one space character after the initial #, followed by a text string with no spaces.
- **GOTO** commands, of the form **GOTO tag**. **Goto** commands cause the telephone to continue interpreting the configuration file at the next line after a **# tag** statement. If no such statement exists, the rest of the configuration file is ignored.
- Conditionals, of the form **IF \$name SEQ string GOTO tag**. Conditionals cause the **Goto** command to be processed if the value of **name** is a case-insensitive equivalent to **string**. If no such **name** exists, the entire conditional is ignored. The only system values that can be used in a conditional statement are: BOOTNAME, GROUP, and SIG.
- **SET** commands, of the form **SET parameter\_name value**. Invalid values cause the specified value to be ignored for the associated **parameter\_name** so the default or previously administered value is retained. All values must be text strings, even if the value itself is numeric, a dotted decimal IP Address, and so on.

**Note:**

Enclose all data in quotation marks for proper interpretation.

The upgrade script file Avaya provides includes a line that tell the telephone to **GET 46xxsettings.txt**. This line causes the telephone to use HTTP to attempt to download the file specified in the **GET** command. If the file is obtained, its contents are interpreted as an additional script file. That is how your settings are changed from the default settings. If the file cannot be obtained, the telephone continues processing the upgrade script file.

If the configuration file is successfully obtained but does not include any setting changes the telephone stops using HTTP. This happens when you initially download the script file template from the Avaya support Web site, before you make any changes. When the configuration file contains no setting changes, the telephone does not go back to the upgrade script file.

Avaya recommends that you do **not** alter the upgrade script file. If Avaya changes the upgrade script file in the future, any changes you have made will be lost. Avaya recommends that you use the **46xxsettings** file to customize your settings instead. However, you can change the settings file name, if desired, as long as you also edit the corresponding **GET** command in the upgrade script file.

For more information on customizing your settings file, see [Contents of the Settings File](#).

---

## Contents of the Settings File

After checking the application software, the 9600 Series IP Telephone looks for a 46xxsettings file. This optional file is where you identify non-default option settings, application-specific parameters, and so on. You can download a template for this file from the Avaya support Web site. An example of what the file might look like follows.

**Note:**

The following is intended only as a simple example. Your settings will vary from the settings shown. This sample assumes specification of a DNS Server, turning off enhanced local dialing, and a Web Browser.

DNSSRVR="dnsexample.yourco.com"

ENDIALSTAT=0

WMLHOME="http://yourco.com/home.wml"

WMLPORT="8000"

WMLPROXY="11.11.11.11"

See [Chapter 7: Administering Telephone Options](#) for details about specific values. You need only specify settings that vary from defaults, although specifying defaults is harmless.

VLAN separation controls whether or not traffic received on the secondary Ethernet interface is forwarded on the voice VLAN and whether network traffic received on the data VLAN is forwarded to the telephone. Add commands to the 46xxsettings.txt file to enable VLAN separation. The following example assumes the data VLAN ID is "yyy" and the data traffic priority is "z":

SET VLANSEP 1

SET PHY2VLAN yyy

SET PHY2PRIO z

**Note:**

Also configure the network switch so that 802.1Q tags are not removed from frames forwarded to the telephone.



---

## The GROUP System Value

You might have different communities of users, all of which have the same telephone model, but which require different administered settings. For example, you might want to restrict Call Center agents from being able to Logoff, which might be an essential capability for “hot-desking” associates. We provide examples of the group settings for each of these situations later in this section.

Use the GROUP system value for this purpose:

1. identify which telephones are associated with which group, and designate a number for each group. The number can be any integer from 0 to 999, with 0 as the default, meaning your largest group is assigned as Group 0.
2. At each non-default telephone, instruct the installer or user to invoke the GROUP Craft Local procedure as specified in the *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide* and specify which GROUP number to use. The GROUP System value can only be set on a phone-by-phone basis.
3. Once the GROUP assignments are in place, edit the configuration file to allow each telephone of the appropriate group to download its proper settings.

Here is an example of the configuration file for the Call Center agent:

```
IF $GROUP SEQ 1 goto CALLCENTER
IF $GROUP SEQ 2 goto HOTDESK
{specify settings unique to Group 0}
goto END

# CALLCENTER
{specify settings unique to Group 1}
goto END

# HOTDESK
{specify settings unique to Group 2}

# END
{specify settings common to all Groups}
```



# Chapter 7: Administering Telephone Options

---

## Administering Options for the 9600 Series IP Telephones

This chapter explains how to change parameters by means of the DHCP or HTTP servers. In all cases, you are setting a system parameter in the telephone to a desired value. [Table 9](#) lists:

- the parameter names,
- their default values,
- the valid ranges for those values, and
- a description of each one.

For DHCP, the DHCP Option sets these parameters to the desired values as discussed in [DHCP and File Servers](#) on page 51. For HTTP, the parameters in [Table 9](#) are set to desired values in the script file. For more information, see [Contents of the Settings File](#) on page 80. When using a media server, see [Table 8: Media Server Field Names & Corresponding Script File Parameter Names](#) on page 73 for information on parameters set by the media server application.

Avaya recommends that you administer options on the 9600 Series IP Telephones using script files. Some DHCP applications have limits on the amount of user-specified information. The administration required can exceed those limits for the more full-featured telephone models.

You might choose to completely disable the capability to enter or change option settings from the dialpad. You can set the system value, PROCPSWD, as part of standard DHCP/HTTP administration. Alternately, you can set PROCPSWD on the system-parameters ip-options form, as of Communication Manager Release 4.0. If PROCPSWD is non-null and consists of 1 to 7 digits, a user cannot invoke any local options without first entering the PROCPSWD value on the Craft Access Code Entry screen. For more information on craft options, see the *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide*.

**CAUTION:**

If you administer PROCPSWD as part of DHCP/HTTP administration, the value is stored and transmitted unencrypted. Therefore, do not consider PROCPSWD as a high-security technique to inhibit a sophisticated user from obtaining access to local procedures unless you administer it using page 3 of the system-parameters IP-options form, as of Avaya Communication Manager Release 4.0.

Administering this password limits access to all local procedures, including VIEW. VIEW is a read-only Craft option that allows review of the current telephone settings.

**Table 9: 9600 Series IP Telephone Customizable System Parameters**

Parameter Name	Default Value	Description and Value Range
AGCHAND	1	Automatic Gain Control status for handset (0=disabled, 1=enabled).
AGCHEAD	1	Automatic Gain Control status for headset (0=disabled, 1=enabled).
AGCSPKR	1	Automatic Gain Control status for Speaker (0=disabled, 1=enabled).
AMADMIN	" " (Null)	WML-Application URI. The URI used to obtain the AvayaMenuAdmin.txt file for WML-applications under the A (AVAYA) Menu. Specify the HTTP server and directory path to the administration file. Do not specify the administration file name. For more information, see <a href="#">Avaya "A" Menu Administration</a> on page 119.
APPNAME	" " (Null)	Primary application image file name, as provided in the 9600upgrade.txt file.
APPSTAT	1	Controls whether specific applications are enabled, restricted, or disabled. Values are: 1=all applications enabled, 2=Speed Dial (Contacts) changes and Call Log disabled and Redial last number only, 3=Speed Dial (Contacts) changes disabled, 0=Speed Dial (Contacts) changes, Call Log, and Redial disabled.
AUDASYS	3	Globally controls audible alerting. Possible system settings for audible alerting are "0" through "3" with "3" being the default.
AUDIOENV	0	Audio environment selection index. Valid values are 0 through 107.
AUDIOSTHD	0	Headset sidetone setting. Valid values are: 0=No change to sidetone level 1=6dB below nominal 2=no sidetone (infinite loss).
AUDIOSTHS	0	Handset sidetone setting. Valid values are: 0=No change to sidetone level 1=6dB below nominal 2=no sidetone (infinite loss)

**1 of 8**

Table 9: 9600 Series IP Telephone Customizable System Parameters (continued)

Parameter Name	Default Value	Description and Value Range
AUTH	0	Script file authentication value (0=HTTP is acceptable, 1=HTTPS is required).
BAKLIGHTOFF	120	Number of minutes without display activity to wait before turning off the backlight. The default is 120 minutes (2 hours). Valid values range from zero (never turn off) to 999 minutes (16.65 hours).
BRURI	" " (Null)	<p>URL used for backup and retrieval of user data. Specify HTTP or HTTPS server and directory path and/or port number to backup file. Do not specify backup file name. Value: 0-255 ASCII characters. Null is a valid value and spaces are allowed. A subdirectory can be specified, for example:</p> <pre>SET BRURI http://135.8.60.10/backup</pre> <p>This puts the user backup/restore files in a subdirectory away from all other files (.bins, .txts, etc.) and permits authentication to be turned on for that subdirectory, without turning it on for the root directory.</p>
CNAPORT	50002	Avaya Converged Network Analyzer (CNA) server registration transport-layer port number (0-65535).
CNASRVR	" " (Null)	Text string containing the IP Addresses of one or more Avaya Converged Network Analyzer (CNA) servers to be used for registration. Format is dotted decimal or DNS format, separated by commas, with no spaces (0-255 ASCII characters, including commas).
DHCPSTD	0	DHCP Standard lease violation flag. Indicates whether to keep the IP Address if there is no response to lease renewal. If set to "1" (No) the telephone strictly follows the DHCP standard with respect to giving up IP Addresses when the DHCP lease expires. If set to "0" (Yes) the telephone continues using the IP Address until it detects reset or a conflict (see <a href="#">DHCP Generic Setup</a> ).
DNSSRVR	0.0.0.0	Text string containing the IP Address of zero or more DNS servers, in dotted-decimal format, separated by commas with no intervening spaces (0-255 ASCII characters, including commas).
DOMAIN	" " (Null)	Text string containing the domain name to be used when DNS names in system values are resolved into IP Addresses. Valid values are 0-255 ASCII characters. If Null, no spaces allowed.
DOT1X	0	802.1X Supplicant operation mode. Valid values are: 0=With PAE pass-through, 1=with PAE pass-through and proxy Logoff, 2=without PAE pass-through or proxy Logoff.
ENHDIALSTAT	1	Enhanced Dialing Status. If set to "1" the <a href="#">Enhanced Local Dialing</a> feature is turned on for all associated applications. If set to "0" the feature is turned off.

2 of 8

**Table 9: 9600 Series IP Telephone Customizable System Parameters (continued)**

Parameter Name	Default Value	Description and Value Range
HEADSYS	1	Headset operational mode. One ASCII numeric digit. Valid values are: 0 or 2 = General Operation, where a disconnect message returns the telephone to an idle state. 1 or 3 = Call Center Operation, where a disconnect message does not change the state of the telephone.
HTTPDIR	" " (Null)	HTTP server directory path. The path name prepended to all file names used in HTTP and HTTPS get operations during initialization. Value: 0-127 ASCII characters, no spaces. Null is a valid value. Leading or trailing slashes are not required. The command syntax is "SET HTTPDIR <i>myhttpdir</i> " where "myhttpdir" is your HTTP server path. HTTPDIR is the path for all HTTP operations <b>except</b> for BRURI.
HTTPSRVR	" " (Null)	Text list of HTTP server addresses in dotted decimal or DNS format, separated by commas (0-255 ASCII characters, including commas).
ICMPDU	0	Controls whether ICMP Destination Unreachable messages will be processed. Values are: 0=No, 1=Send limited Port Unreachable messages, 2=Send Protocol and Port Unreachable messages.
ICMPRED	0	Controls whether ICMP Redirect messages will be processed. Values are: 0=No, 1=Yes.
L2Q	0	Controls whether Layer 2 frames have IEEE 802.1Q tags (0=auto, 1=enabled, 2=disabled).
L2QVLAN	0	802.1Q VLAN Identifier (0 to 4094). Null (" ") is not a valid value and the value cannot contain spaces. VLAN identifier used by IP telephones. Set this parameter only when IP telephones are to use a VLAN that is separate from the default data VLAN. If the VLAN identifier is to be configured via H.323 signaling based on Avaya Communication Manager administration forms, it should not be set here.
LANG0STAT	1	Controls whether the built-in English language text strings can be selected by the user. Valid values are: 0 = User cannot select English language text strings 1 = User can select English language text strings. SET LANG0STAT 1
LANGxFILE	" " (Null)	Contains the name of the language file x, where x is 1 through 4. The file name must end in .txt. Example: SET LANG1FILE "mlf_russian.txt" LANG1FILE = LANG2FILE = LANG3FILE = LANG4FILE =
LANGLARGEFONT	" " (Null)	Larger text font file name. A string of up to 32 characters specifies the loadable language file on the HTTP server for the Large Text font.

**3 of 8**

Table 9: 9600 Series IP Telephone Customizable System Parameters (continued)

Parameter Name	Default Value	Description and Value Range
LANGSYS	" " (Null)	System-wide language that contains the name of the default system language file, if any. Value is 0 to 32 ASCII characters. The file name must end in .txt. The default is a null string. Example: SET LANGSYS "mlf_german.txt"
LOGLOCAL	0	Event Log Severity Level (one 0-8 ASCII numeric digit). Controls the level of events logged in the endptRecentLog and endptResetLog objects in the SNMP MIB. Events with the selected level and with a higher severity level will be logged. Valid values are: 0=Disabled, 1=emergencies, 2=alerts, 3=critical, 4=errors, 5=warnings, 6=notices, 7=information, 8=debug.
LOGSRVR	" " (Null)	Voice Monitoring Manager (VMM) Server Address. Zero or one IP Address in dotted-decimal format or DNS Name format (0-15 ASCII characters).
MCIPADD	0.0.0.0	Call Server Address. Zero or more Avaya Communication Manager server IP Addresses. Format is dotted-decimal or DNS name format, separated by commas without intervening spaces (0-255 ASCII characters, including commas). Null is a valid value.
MSGNUM	" " (Null)	Voice mail system telephone/extension number. Specifies the number to be dialed automatically when the telephone user presses the <b>Message</b> button. MSGNUM is only used when the phone is aliased using non-native support. Messaging must be configured for native support. Value: 0-30 ASCII dialable characters (0-9, * and #) and no spaces. Null is a valid value.
OPSTAT	111	Options status flag(s) (1 or 3 ASCII numeric digits) indicate which options are user-selectable. The default of 111 grants access to all options and related applications. Single digit valid values are: 1=user can access all options, including Logout, 2= user can access only view-oriented applications.  Three-digit valid values are a concatenation of binary values, in the form <i>abc</i> , where each letter represents a 0 (disabled/off) or 1 (enabled/on), interpreted as: <i>a</i> = base settings for all user options and related applications, except as noted in <i>b</i> or <i>c</i> . <i>b</i> = setting for view-oriented applications (for example, the Network Information application), as applicable. <i>c</i> = setting for Logout application, if applicable. The binary "0" does not allow an end user to see or invoke options and related applications. The binary "1" allows full display and access to all options and related applications.

4 of 8

Table 9: 9600 Series IP Telephone Customizable System Parameters (continued)

Parameter Name	Default Value	Description and Value Range
PHNCC	1	Telephone country code. The administered international country code for the location by the algorithm that dials calls from the incoming Call Log or from Web pages. Range: 1-3 digits, from "1" to "999."
PHNDPLENGTH	5	Internal extension telephone number length. Specifies the number of digits associated with internal extension numbers by the algorithm that dials calls from the incoming Call Log or from Web pages. Range: 1 or 2 digits, from "3" to "13."
PHNEMERGNUM	" " (Null)	Emergency telephone/extension number. Specifies the number to be dialed automatically when the telephone user presses the <b>Emerg</b> button. Value: 0-30 ASCII dialable characters (0-9, * and #) and no spaces. Null is a valid value.
PHNIC	011	Telephone international access code. The maximum number of digits, if any, dialed to access public network international trunks by the algorithm that dials calls from the incoming Call Log or from Web pages. Range: 0-4 digits.
PHNLD	1	Telephone long distance access code. The digit, if any, dialed to access public network long distance trunks by the algorithm that dials calls from the incoming Call Log or from Web pages. Range: 1 digit or " " (Null).
PHNLDPLENGTH	10	Length of national telephone number. The number of digits in the longest possible national telephone number by the algorithm that dials calls from the incoming Call Log or from Web pages. Range: 1 or 2 digits, from "3" to "10." Range: 1 or 2 ASCII numeric characters, from "5" to "15."
PHNOL	9	Outside line access code. The character(s) dialed, including # and *, if any, to access public network local trunks by the algorithm that dials calls from the incoming Call Log or from Web pages. Range: 0-2 dialable characters, including " " (Null).
PHY1STAT	1	Ethernet line interface setting (1=auto-negotiate, 2=10Mbps half-duplex, 3=10Mbps full-duplex, 4=100Mbps half-duplex, 5=100Mbps full-duplex, and 6=1000Mbps full-duplex if supported by the hardware).
PHY2PRIO	0	Layer 2 priority value for frames received on or forwarded to the secondary Ethernet interface. Set this parameter only when VLAN separation is "1" (enabled). Values are from 0-7 and correspond to the drop-down menu selection.
PHY2STAT	1	Secondary Ethernet interface setting (0=Secondary Ethernet interface off/disabled, 1=auto-negotiate, 2=10Mbps half-duplex, 3=10Mbps full-duplex, 4=100Mbps half-duplex, 5=100Mbps full-duplex), and 6=1000Mbps full-duplex if supported by the hardware).

5 of 8



Table 9: 9600 Series IP Telephone Customizable System Parameters (continued)

Parameter Name	Default Value	Description and Value Range
PHY2VLAN	0	VLAN identifier used by frames received on or forwarded to the secondary Ethernet interface. Set this parameter only when VLAN separation is "1" (enabled). Value is 1-4 ASCII numeric digits from "0" to "4094." Null is not a valid value, nor can the value contain spaces. If this value is set by LLDP using the Port VLAN ID TLV value, it will not change regardless of settings from other sources. For more information, see <a href="#">Parameter Data Precedence</a> .
PROCPSWD	27238	Text string containing the local (dialpad) procedure password (Null or 1-7 ASCII digits). If set, password must be entered immediately after accessing the Craft Access Code Entry screen, either during initialization or when Mute (or Contacts for the 9610) is pressed to access a craft procedure. Intended to facilitate restricted access to local procedures even when command sequences are known. Password is viewable, not hidden.
PROCSTAT	0	Local (dialpad) Administrative Options status (0=all Administrative (Craft) Options are allowed, 1=only VIEW is allowed).
REREGISTER	20	Registration timer in minutes. Controls an H.323 protocol timer that should only be changed under very special circumstances by someone who fully understands the system operation impact. Value is 1-120.
RTCPMON	" " (Null)	Text string containing the 4-octet IP Address of the RTCP monitor currently in use, in dotted decimal or DNS Name format (0-15 ASCII characters, no spaces).
SCREENSAVERON	60	Number of idle time minutes after which the screen saver is turned on. The default is 240 minutes (4 hours). Valid values range from zero (disabled) to 999 minutes (16.65 hours).
SNMPADD	" " (Null)	Text string containing zero or more allowable source IP Addresses for SNMP queries, in dotted decimal or DNS format, separated by commas, with up to 255 total ASCII characters including commas. Note that as of Avaya Communication Manager Release 4.0, SNMP addresses can also be administered on the system-parameters IP-options form.
SNMPSTRING	" " (Null)	Text string containing the SNMP community name string (up to 32 ASCII characters, no spaces). Note that as of Avaya Communication Manager Release 4.0, the SNMP community string can also be administered on the system-parameters IP-options form.

6 of 8

**Table 9: 9600 Series IP Telephone Customizable System Parameters (continued)**

Parameter Name	Default Value	Description and Value Range
STATIC	0	Static programming override flag. If set to "0" static programming never overrides call server (DHCP) or call server administered data. If set to "1" static programming overrides only file server administered data. If set to "2" static programming overrides only call server administered data. If set to "3" static programming overrides both file server- and call server-administered data. Allows a call server IP Address that has been manually programmed into a telephone to override any value received via DHCP or via this configuration file. A manually programmed IP Address will only be used if it is not 0.0.0.0, so this parameter may be used to allow only specific telephones to use a different value than otherwise provided by this configuration file. If STATIC is to be used to select a manual override of file server IP Address(es), STATIC must be set via DHCP, not via this configuration file.
SUBSCRIBELIST	" " (Null)	One or more Push application server subscription URLs, separated by commas without any intervening spaces (0-255 ASCII characters, including commas).
TPSLIST	" " (Null)	One or more trusted domain/path strings, separated by commas without any intervening spaces (0-255 ASCII characters, including commas). A URL pushed to a telephone must contain one of these strings if it is to be used to obtain content to be rendered by the telephone.
UNNAMEDSTAT	1	Unnamed Registration Status. Specifies whether unnamed registration is initiated if the user fails to enter a value at the <code>Extension:</code> prompt or Login screen. Unnamed registration provides the telephone with a TTI-level service, enabling a user, for example, to dial emergency services like 911. Value 1=Yes, 0=No.
VLANSEP	1	VLAN separation. Controls whether frames to/from the secondary Ethernet interface receive IEEE 802.1Q tagging treatment. The tagging treatment enables frames to be forwarded based on their tags in a manner separate from telephone frames. If tags are not changed, no tag-based forwarding is employed. Values are: 1=On/Enabled, 2= Off/Disabled. This parameter is used with several related parameters. For more information, see <a href="#">VLAN Separation</a> on page 93.
VLANTEST	60	Number of seconds to wait for a DHCP OFFER when using a non-zero VLAN ID (1-3 ASCII digits, from "0" to "999").
WMLEXCEPT	" " (Null)	One or more HTTP proxy server exception domains that do not require the use of the proxy server (0-127 ASCII characters, including commas, without any intervening spaces). Set this parameter only if a proxy server is used and if there are exception domains.

**Table 9: 9600 Series IP Telephone Customizable System Parameters (continued)**

Parameter Name	Default Value	Description and Value Range
WMLHOME	" " (Null)	URL that specifies the home page for Web browsers that use WML, except the 9610. Zero or one URL (0-255 ASCII characters, including spaces, if any). If Null, the Web application will not be displayed.
WMLIDLETIME	10	Idle time before displaying Web page. The number of minutes of inactivity after which the Web browser will be displayed if WMLIDLEURI is not null. The default is 10 minutes. Valid values range from 1 to 999 minutes (16.65 hours).
WMLIDLEURI	" " (Null)	Idle time Web page URI. URI that specifies the Web page the browser displays after an idle interval. Value: Zero or one URI (0-255 ASCII characters, no spaces). Null is valid but if Null, no page displays. Avaya recommends that WMLIDLEURI be specified for telephones in public areas through the use of a GROUP parameter. The idle timer is only reset if WMLIDLEURI is non-null such that an HTTP GET can be sent.
WMLPORT	8000	TCP port number for the HTTP proxy server, if applicable (1-5 ASCII numeric characters from "0" to "65535." Null is not a valid value.
WMLPROXY	" " (Null)	One HTTP proxy server IP Address in dotted decimal or DNS Name format (0-255 ASCII characters). Set this parameter only if Web pages requiring a proxy server will be supported.
WMLSMALL		Idle screen for the 9610 WML browser (only). Zero (0) to 255 ASCII characters. Zero or one URL. Other 9600 Series telephones use WMLHOME instead.

**8 of 8****Note:**

[Table 9](#) applies to all 9600 Series IP Telephones. Certain 9600 IP Telephones might have additional, optional information that you can administer. For more information, see [Chapter 8: Administering Applications and Options](#).

---

## VLAN Considerations

This section contains information on how to administer 9600 Series IP Telephones to minimize registration time and maximize performance in a Virtual LAN (VLAN) environment. If your LAN environment does not include VLANs, set the system parameter L2Q to 2 (off) to ensure correct operation.

---

## VLAN Tagging

IEEE 802.1Q tagging (VLAN) is a useful method of managing VoIP traffic in your LAN. Avaya recommends that you establish a *voice* VLAN, set L2QVLAN to that VLAN, and provide voice traffic with priority over other traffic. If LLDP was used set the telephones' VLAN, that setting has absolute authority. Otherwise, you can set VLAN tagging manually, by DHCP, or in the 46xxsettings.txt file.

If VLAN tagging is enabled (L2Q=0 or 1), the 9600 Series IP Telephones set the VLAN ID to L2QVLAN, and VLAN priority for packets from the telephone to L2QAUD for audio packets and L2QSIG for signalling packets. The default value (6) for these parameters is the recommended value for voice traffic in IEEE 802.1D.

Regardless of the tagging setting, a 9600 Series IP Telephone will always transmit packets from the telephone at absolute priority over packets from secondary Ethernet. The priority settings are useful only if the downstream equipment is administered to give the *voice* VLAN priority.

---

## VLAN Detection

The Avaya IP Telephones support automatic detection of the condition where the L2QVLAN setting is incorrect. When VLAN tagging is enabled (L2Q= 0 or 1) initially the 9600 Series IP Telephone transmits DHCP messages with IEEE 802.1Q tagging and the VLAN set to L2QVLAN. The telephones will continue to do this for VLANTEST seconds.

- If the VLANTEST timer expires and L2Q=1, the telephone sets L2QVLAN=0 and transmits DHCP messages with the default VLAN (0).
- If the VLANTEST timer expires and L2Q=0, the telephone sets L2QVLAN=0 and transmits DHCP messages without tagging.
- If VLANTEST is 0, the timer will never expire.

**Note:**

Regardless of the setting of L2Q, VLANTEST, or L2QVLAN, you must have DHCP administered so that the telephone will get a response to a DHCPDISCOVER when it makes that request on the default (0) VLAN.

After VLANTEST expires, if an Avaya IP Telephone running R1.2 receives a non-zero L2QVLAN value, the telephone will release the IP Address and send DHCPDISCOVER on that VLAN. Any other release will require a manual reset before the telephone will attempt to use a VLAN on which VLANTEST has expired. See the Reset procedure in Chapter 3 of the *Avaya one-X™ Deskphone Edition for 9600 Series IP Telephones Installation and Maintenance Guide*.

The telephone ignores any VLAN ID administered on the media server if a non-zero VLAN ID is administered either:

- by LLDP
- manually,
- through DHCP, and/or
- through TFTP or HTTP.

---

## VLAN Default Value and Priority Tagging

The system value **L2QVLAN** is initially set to “0” and identifies the 802.1Q VLAN Identifier. This default value indicates “priority tagging” as defined in IEEE 802.1Q Section 9.3.2.3. Priority tagging specifies that your network closet Ethernet switch automatically insert the switch port default VLAN without changing the user priority of the frame (cf. IEEE 802.1D and 802.1Q).

The VLAN ID = 0 (zero) is used to associate priority-tagged frames to the port/native VLAN of the ingress port of the switch. But some switches do not understand a VLAN ID of zero and require frames tagged with a non-zero VLAN ID.

If you do not want the default VLAN to be used for voice traffic:

- Ensure that the switch configuration lets frames tagged by the 9600 Series IP Telephone through without overwriting or removing them.
- Set the system value **L2QVLAN** to the **VLAN ID** appropriate for your voice LAN.

Another system value you can administer is **VLANTEST**. **VLANTEST** defines the number of seconds the 9600 IP Series Telephone waits for a DHCP OFFER message when using a non-zero VLAN ID. The **VLANTEST** default is “60” seconds. Using **VLANTEST** ensures that the telephone returns to the default VLAN if an invalid VLAN ID is administered or if the phone moves to a port where the **L2QVLAN** value is invalid. The default value is long, allowing for the scenario that a major power interruption is causing the phones to restart. Always allow time for network routers, the DHCP servers, etc. to be returned to service. If the telephone restarts for any reason and the **VLANTEST** time limit expires, the telephone assumes the administered VLAN ID is invalid. The telephone then initiates registration with the default VLAN ID.

Setting **VLANTEST** to “0” has the special meaning of telling the phone to use a non-zero VLAN indefinitely to attempt DHCP. In other words, the telephone does not return to the default VLAN.

### Note:

If the telephone returns to the default VLAN but must be put back on the **L2QVLAN** VLAN ID, you must Reset the telephone. See the Reset procedure in the *Avaya one-X™ Deskphone Edition for 9600 Series IP Telephones Installation and Maintenance Guide*.

---

## VLAN Separation

VLAN separation is available to control priority tagging from the device on the secondary Ethernet, typically PC data. The following system parameters control VLAN separation:

- **VLANSEP** - enables (1) or disables (0) VLAN separation.
- **PHY2VLAN** - provides the VLAN ID for tagged frames received on the secondary Ethernet interface.
- **PHY2PRIO** - the layer 2 priority value to be used for tagged frames received on the secondary Ethernet interface.

[Table 10](#) provides several VLAN separation guidelines.

**Note:**

9610 IP Telephones do not support full VLAN separation because they have no secondary Ethernet interface and therefore never have PHY2VLAN and PHY2PRIO values.

The 9610 IP Telephones do support VLAN tagging. For example, if 802.1Q in the telephone is "on/auto" then the telephone will tag the L2QVLAN to the egress traffic. If 802.1Q is "off" then the telephone will not tag the L2QVLAN to the egress traffic.

**Table 10: VLAN Separation Rules**

If	Then
VLANSEP is "0",  <b>OR</b> the telephone is not tagging frames,  <b>OR</b> the telephone is tagging frames with a VLAN ID equal to PHY2VLAN.	Frames received on the secondary Ethernet interface will not be changed before forwarding. For example, tagging is not added or removed and the VLAN ID and tagged frames priority are not changed. The Ethernet switch forwarding logic determines that frames received on the Ethernet line interface are forwarded to the secondary Ethernet interface or to the telephone without regard to specific VLAN IDs or the existence of tags.
VLANSEP is "1" (On/Enabled)	All tagged frames received on the secondary Ethernet interface are changed before forwarding to make the VLAN ID equal to the PHY2VLAN value and the priority value equal to the PHY2PRIO value. Untagged frames received on the secondary Ethernet interface are not changed before forwarding. Tagged frames with a VLAN ID of zero (priority-tagged frames) will either be: - forwarded without being changed (preferred), or - changed before they are forwarded such that the VLAN ID of the forwarded frame is equal to the PHY2VLAN value and the priority value is equal to the PHY2PRIO value.
VLANSEP is "1" (On/Enabled)	<b>AND</b> the telephone is not tagging frames,  <b>OR</b> if the telephone is tagging frames with a VLAN ID equal to PHY2VLAN,  <b>OR</b> if the PHY2VLAN value is zero.  The Ethernet switch forwarding logic determines that frames received on the Ethernet line interface are forwarded to the secondary Ethernet interface or to the telephone without regard to specific VLAN IDs or the existence of tags.  Frames received on the secondary Ethernet interface will not be changed before forwarding. In other words, tagging is not added or removed, and the VLAN ID and priority of tagged frames is not changed.

**1 of 2**

Table 10: VLAN Separation Rules (continued)

If	Then
VLANSEP is "1" (On/Enabled)	<p><b>AND</b> the telephone is tagging frames with a VLAN ID not equal to PHY2VLAN,</p> <p><b>AND</b> the PHY2VLAN value is not zero.</p> <p>Tagged frames received on the Ethernet line interface will only be forwarded to the secondary Ethernet interface if the VLAN ID equals PHY2VLAN.</p> <p>Tagged frames received on the Ethernet line interface will only be forwarded to the telephone if the VLAN ID equals the VLAN ID used by the telephone.</p> <p>Untagged frames will continue to be forwarded or not forwarded as determined by the Ethernet switch forwarding logic.</p> <p>Tagged frames with a VLAN ID of zero (priority-tagged frames) will either be:</p> <ul style="list-style-type: none"> <li>- forwarded to the secondary Ethernet interface or the telephone as determined by the forwarding logic of the Ethernet switch (preferred), or</li> <li>- dropped.</li> </ul>

2 of 2

## DNS Addressing

The 9600 IP Telephones support DNS addresses and dotted decimal addresses. The telephone attempts to resolve a non-ASCII-encoded dotted decimal IP Address by checking the contents of DHCP Option 6. See [DHCP Generic Setup](#) on page 54 for information. At least one address in Option 6 must be a valid, non-zero, dotted decimal address, otherwise, DNS fails. The text string for the **DOMAIN** system parameter (Option 15, [Table 9](#)) is appended to the address(es) in Option 6 before the telephone attempts DNS address resolution. If Option 6 contains a list of DNS addresses, those addresses are queried in the order given if no response is received from previous addresses on the list. As an alternative to administering DNS by DHCP, you can specify the DNS server and/or Domain name in the HTTP script file. But first **SET** the **DNSSRV** and **DOMAIN** values so you can use those names later in the script.

**Note:**

Administer Options 6 and 15 appropriately with DNS servers and Domain names respectively.

## IEEE 802.1X

Certain 9600 Series IP Telephones support the IEEE 802.1X standard for pass-through and Supplicant operation. The system parameter [DOT1X](#) determines how the telephones handle 802.1X multicast packets and proxy logoff, as follows:

- When DOT1X = 0, the telephone forwards 802.1X multicast packets from the Authenticator to the PC attached to the telephone and forwards multicast packets from the attached PC to the Authenticator (multicast pass-through). Proxy Logoff is not supported.
- When DOT1X = 1, the telephone supports the same multicast pass-through as when DOT1X=0. Proxy Logoff is supported.
- When DOT1X = 2, the telephone forwards multicast packets from the Authenticator only to the telephone, ignoring multicast packets from the attached PC (no multicast pass-through). Proxy Logoff is not supported.
- Regardless of the DOT1X setting, the telephone always properly directs unicast packets from the Authenticator to the telephone or its attached PC, as dictated by the MAC address in the packet.

---

## 802.1X Pass-Through and Proxy Logoff

9600 Series IP Telephones with a secondary Ethernet interface support pass-through of 802.1X packets to and from an attached PC. This enables an attached PC running 802.1X supplicant software to be authenticated by an Ethernet data switch.

The IP Telephones support two pass-through modes:

- pass-through and
- pass-through with proxy logoff.

The DOT1X parameter setting controls the pass-through mode. In Proxy Logoff mode (DOT1X=1), when the secondary Ethernet interface loses link integrity, the telephone sends an 802.1X EAPOL-Logoff message to the data switch on behalf of the attached PC. The message alerts the switch that the device is no longer present. For example, a message would be sent when the attached PC is physically disconnected from the IP telephone. When DOT1X = 0 or 2, the Proxy Logoff function is not supported.

**Note:**

Because the 9610 IP Telephone does not have a secondary Ethernet interface, it does not support 802.1X pass-through or pass-through with Proxy Logoff.



---

## 802.1X Supplicant Operation

9600 IP Telephones that support Supplicant operation also support Extensible Authentication Protocol (EAP), but only with the MD5-Challenge authentication method as specified in IETF RFC 3748 [8.5-33a].

A Supplicant identity (ID) and password of no more than 12 numeric characters are stored in reprogrammable non-volatile memory. The ID and password are not overwritten by telephone software downloads. The default ID is the MAC address of the telephone, converted to ASCII format without colon separators, and the default password is null. Both the ID and password are set to defaults at manufacture. EAP-Response/Identity frames use the ID in the Type-Data field. EAP-Response/MD5-Challenge frames use the password to compute the digest for the Value field, leaving the Name field blank.

When a telephone is installed for the first time and 802.1x is in effect, the dynamic address process prompts the installer to enter the Supplicant identity and password. The IP telephone does not accept null value passwords. See “Dynamic Addressing Process” in the *Avaya one-X™ Deskphone Edition for 9600 Series IP Telephones Installation and Maintenance Guide*. The IP telephone stores 802.1X credentials when successful authentication is achieved. Post-installation authentication attempts occur using the stored 802.1X credentials, without prompting the user for ID and password entry.

An IP telephone can support several different 802.1X authentication scenarios, depending on the capabilities of the Ethernet data switch to which it is connected. Some switches may authenticate only a single device per switch port. This is known as single-supplicant or port-based operation. These switches typically send multicast 802.1X packets to authenticating devices.

These switches support the following three scenarios:

- **Standalone telephone (Telephone Only Authenticates)** - When the IP telephone is configured for Supplicant Mode (DOT1X=2), the telephone can support authentication from the switch.
- **Telephone with attached PC (Telephone Only Authenticates)** - When the IP telephone is configured for Supplicant Mode (DOT1X=2), the telephone can support authentication from the switch. The attached PC in this scenario gains access to the network without being authenticated.
- **Telephone with attached PC (PC Only Authenticates)** - When the IP telephone is configured for Pass-Through Mode or Pass-Through Mode with Logoff (DOT1X=0 or 1), an attached PC running 802.1X supplicant software can be authenticated by the data switch. The telephone in this scenario gains access to the network without being authenticated.

Some switches support authentication of multiple devices connected through a single switch port. This is known as multi-suppliant or MAC-based operation. These switches typically send unicast 802.1X packets to authenticating devices. These switches support the following two scenarios:

- **Standalone telephone (Telephone Only Authenticates)** - When the IP telephone is configured for Suppliant Mode (DOT1X=2), the telephone can support authentication from the switch. When DOT1X is "0" or "1" the telephone is unable to authenticate with the switch.
- **Telephone and PC Dual Authentication** - Both the IP telephone and the connected PC can support 802.1X authentication from the switch. The IP telephone may be configured for Pass-Through Mode or Pass-Through Mode with Logoff (DOT1X=0 or 1). The attached PC must be running 802.1X suppliant software.

---

## Link Layer Discovery Protocol (LLDP)

Release 1.2 9600 Series IP Telephones support IEEE 802.1AB. Link Layer Discovery Protocol (LLDP) is an open standards layer 2 protocol IP Telephones use to advertise their identity and capabilities and to receive administration from an LLDP server. LAN equipment can use LLDP to manage power, administer VLANs, and provide some administration.

The transmission and reception of LLDP is specified in IEEE 802.1AB-2005. The 9600 Series IP Telephones use Type-Length-Value (TLV) elements specified in IEEE 802.1AB-2005, TIA TR-41 Committee - Media Endpoint Discovery (LLDP-MED, ANSI/TIA-1057), and Proprietary elements. LLDP Data Units (LLDPDUs) are sent to the LLDP Multicast MAC address (01:80:c2:00:00:0e).

These telephones:

- do not support LLDP on the secondary Ethernet interface.
- will not forward frames received with the 802.1AB LLDP group multicast address as the destination MAC address between the Ethernet line interface and the secondary Ethernet interface.

A 9600 Series IP Telephone initiates LLDP after receiving an LLDPDU message from an appropriate system. Once initiated, the telephones send an LLDPDU every 30 seconds with the following contents:

**Table 11: LLDPDU Transmitted by the 9600 Series IP Telephones**

Category	TLV Name (Type)	TLV Info String (Value)
Basic Mandatory	Chassis ID	IPv4 IP Address of telephone.
Basic Mandatory	Port ID	MAC address of the telephone.
Basic Mandatory	Time-To-Live	120 seconds.
Basic Optional	System Name	The Host Name sent to the DHCP server in DHCP option 12.
Basic Optional	System Capabilities	<p>Bit 2 (Bridge) will be set in the System Capabilities if the telephone has an internal Ethernet switch. If Bit 2 is set in Enabled Capabilities then the secondary port is enabled.</p> <p>Bit 5 (Telephone) will be set in the System Capabilities. If Bit 5 is set in the Enabled Capabilities then the telephone is registered.</p>
Basic Optional	Management Address	<p>Mgmt IPv4 IP Address of telephone.</p> <p>Interface number subtype = 3 (system port). Interface number = 1.</p> <p>OID = SNMP MIB-II sysObjectID of the telephone.</p>
IEEE 802.3 Organization Specific	MAC / PHY Configuration / Status	Reports autonegotiation status and speed of the uplink port on the telephone.
TIA LLDP MED	LLDP-MED Capabilities	Media Endpoint Discovery - Class III - IP Telephone.
TIA LLDP MED	Network Policy	Tagging Yes/No, VLAN ID for voice, L2 Priority, DSCP Value.
TIA LLDP MED	Inventory – Hardware Revision	MODEL - Full Model Name.
TIA LLDP MED	Inventory – Firmware Revision	BOOTNAME.
TIA LLDP MED	Inventory – Software Revision	APPNAME.

**1 of 2**

**Table 11: LLDPDU Transmitted by the 9600 Series IP Telephones (continued)**

Category	TLV Name (Type)	TLV Info String (Value)
TIA LLDP MED	Inventory – Serial Number	Telephone serial number.
TIA LLDP MED	Inventory – Manufacturer Name	Avaya.
TIA LLDP MED	Inventory – Model Name	MODEL with the final Dxxx characters removed.
Avaya Proprietary	PoE Conservation Level Support	Provides Power Conservation abilities/settings, Typical and Maximum Power values.  OUI = 00-40-0D (hex), Subtype = 1.
Avaya Proprietary	Call Server IP Address	Call Server IP Address.  Subtype = 3.
Avaya Proprietary	IP Phone Addresses	Phone IP Address, Phone Address Mask, Gateway IP Address.  Subtype = 4.
Avaya Proprietary	CNA Server IP Address	CNA Server IP Address = in-use value from CNASRVr.  Subtype = 5.
Avaya Proprietary	File Server	File Server IP Address.  Subtype = 6.
Avaya Proprietary	802.1Q Framing	802.1Q Framing = 1 if tagging or 2 if not.  Subtype = 7.
Basic Mandatory	End-of-LLDPDU	Not applicable.

**2 of 2**

On receipt of a LLDPDU message the Avaya IP Telephones will act on these TLV elements.

Table 12: Impact of TLVs on System Parameter Values

System Parameter Name	TLV Name	Impact
PHY2VLAN	IEEE 802.1 Port VLAN ID	System value changed to the Port VLAN identifier in the TLV.
L2QVLAN and L2Q	IEEE 802.1 VLAN Name	<p>The system value is changed to the TLV VLAN Identifier. L2Q will be set to 1 (ON).</p> <p>VLAN Name TLV is only effective if:</p> <ul style="list-style-type: none"> <li>• The telephone is not registered with the Call Server.</li> <li>• Name begins with VOICE (case does not matter).</li> <li>• The VLAN is not zero.</li> <li>• DHCP Client is activated.</li> <li>• The telephone is registered but is not tagging layer 2 frames with a non-zero VLAN ID.</li> </ul> <p>If VLAN Name causes the telephone to change VLAN and the telephone already has an IP Address the telephone will release the IP Address and reset.</p> <p>If the TLV VLAN ID matches the VLAN ID the telephone is using, the VLAN ID is marked as set by LLDP. Otherwise, if already registered, the telephone waits until there are no active calls, releases its IP Address, turns on tagging with the TLV VLAN ID, sets L2Q to "on," changes the default L2Q to "on," and resets. If there is no valid IP Address, the telephone immediately starts tagging with the new VLAN ID without resetting.</p>
MCIPADD	Proprietary Call Server TLV	MCIPADD will be set to this value if it has not already been set.
TLSSRVR and HTTPSRVR	Proprietary File Server TLV	TLSSRVR and HTTPSRVR will be set to this value if neither of them have already been set.
L2Q	Proprietary 802.1 Q Framing	The default L2Q is set to the value of this TLV. No change is made to the current L2 tagging, but the new default value is used on the next reboot. If TLV = 1, L2Q set to "1" (On). If TLV = 2, L2Q set to "2" (Off). If TLV = 3, L2Q set to "0" (Auto).
	Proprietary - PoE Conservation TLV	This proprietary TLV can initiate a power conservation mode. The telephones that support this will turn on/off the telephone backlight and the backlight of an attached Button Module in response to this TLV.

---

## Local Administrative Options Using the Telephone Dialpad

The *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide* details how to use Craft local procedures at the telephone for administration. The local procedures you might use most often as an administrator are:

- **CLEAR** - Remove all administered values, user-specified data, option settings, etc. and return a telephone to its initial “out of the box” default values.
- **DEBUG** - Enable or disable debug mode for the button module serial port.
- **GROUP** - Set the group identifier on a per-phone basis.
- **INT** - Set or change the interface control value(s) of PHY1STAT and/or PHY2STAT.
- **RESET** - Reset the telephone to default values including any values administered through local procedures, and values previously downloaded using DHCP or a settings file.
- **RESTART** - Restart the telephone in response to an error condition, including the option to reset system values.
- **VIEW** - Review the 9600 IP Telephone system parameters to verify current values and file versions.
- **INT - Secondary Ethernet (Hub) Interface Enable/Disable** - Enable or disable the secondary Ethernet hub locally.

---

## Language Selection

9600 Series IP Telephones are factory-set to display information in the English language. As of Release 1.1, all software downloads include language files for 13 additional languages. Software Release 1.2 added support for a large font version of English only and Release 1.5 added Arabic as an additional language. Administrators can specify from one to four languages per telephone to replace English. End users can then select which of those languages they want their telephone to display.

All downloadable language files contain all the information needed for the telephone to present the language as part of the user interface.

There are no dependencies between the languages available from the software download and the actual character input method. If a character input method is not supported, ASCII is used instead. Acceptable input methods are as follows:

● ASCII	● Croatian, Slovenian
● Latin-1	● Czech, Slovak
● German	● Estonian
● French	● Hungarian
● Italian	● Latvian
● Spanish	● Lithuanian
● Portuguese	● Polish
● Russian	● Romanian
● Albanian, Azeri, Turkish	● Arabic

Use the configuration file and these parameters to customize the settings for up to four languages:

- **LANGxFILE** - The name of a selected language file, for example, "French". In addition to providing the language name as this value, replace the "x" in this parameter with a "1", "2", "3", or "4" to indicate which of four languages you are specifying. For example, to indicate German and French are the available languages, the setting is:  
**LANG1FILE=mlf\_german.txt** and **LANG2FILE=mlf\_french.txt**.
- **LANG0STAT** - Allows the user to select the built-in English language when other languages are downloaded. If LANG0STAT is "0" and at least one language is downloaded, the user cannot select the built-in English language. If LANG0STAT is "1" the user can select the built-in English language text strings.
- **LANGSYS** - The file name of the system default language file, if any.
- **LANGLARGEFONT** - The name of the language file you want available for a "large font" display, currently only "English."

As of Release 1.2, a large text font is available for user selection on all 9600 Series IP Telephones but the 9610. The larger text font can only be activated if a language file for this font is available. The Text Size option is presented to the telephone user if and only if the system value LANGLARGEFONT is not null and if a language file for that value is being used as the current user interface language. If neither condition is met, the Text Size option is not presented to the user.

For example, if the language in use is English, and a large text font language file for English is specified in LANGLARGEFONT and available, the Text Size option is presented on the Screen and Sounds Options screen.

For more information, see [9600 Series IP Telephone Customizable System Parameters](#). To view multiple language strings, see the MLS local procedure in the *Avaya one-X™ Deskphone Edition for 9600 Series IP Telephones Installation and Maintenance Guide*. To download a language file or review pertinent information, go to <http://support.avaya.com/unicode>.

**Note:**

Specifying a language other than English in the configuration file has no impact on Avaya Communication Manager settings, values, or text strings.

## Gigabit Ethernet Adapter

As of Release 1.1, 9600 Series IP Telephones can accommodate a Gigabit Ethernet (GigE) Adapter. Release 1.5 introduced the 9630G and 9640G IP Telephones, which contain a built-in gigabit Ethernet adapter. When connected to an adapter interface, the Gigabit Ethernet Adapter sets the Ethernet line interface operational mode that is built into the telephone to 1000Mbps full-duplex and deactivates the built-in secondary Ethernet interface. When a Gigabit Ethernet Adapter is present, any considerations or processing that apply to the "Ethernet line interface" apply only to the Ethernet line interface on that adapter. Likewise, any considerations or processing that apply to the "secondary Ethernet interface" apply only to the secondary Ethernet interface on the Gigabit Ethernet Adapter.

With an internal or connected Gigabit Ethernet Adapter, system parameters PHY1STAT (the Ethernet line interface) and PHY2STAT (the secondary Ethernet interface) activate the respective Ethernet interface in the 1000Mbps operational mode when supported by the hardware. When not supported by the hardware, the respective Ethernet interface is set to auto-negotiate the speed and duplex.

---

## Enhanced Local Dialing

The 9600 Series IP Telephones have a variety of telephony-related applications that might obtain a telephone number during operation. For example, the Call Log saves a number of an incoming caller, but does not consider that the user has to then prepend the saved number with a digit to dial an outside line, and possibly a digit to dial long distance.

Avaya Communication Manager (CM) 4.0 gives the call server the potential to provide a superior level of enhanced "calltype digit analysis." With CM 4.0 the call server has access to the entire dialing plan through its log dialing digit analysis feature. When log digit dialing analysis is supported, the telephone does not attempt to enhance a number as described in this section, and the call server assumes responsibility for analysis and action.

9600 Series IP Telephones can evaluate a raw telephone number, based on administered parameters. The telephone can automatically prepend the correct digits, saving the user time and effort. This is the Enhanced Local Dialing feature. The key to the success of this feature is accurate administration of several important values, summarized below.

The system values relevant to the Enhanced Dialing Feature are:

- **ENHDIALSTAT** - Enhanced dialing status. If set to "1" the enhanced local dialing feature is turned on. If set to "0" enhanced local dialing is off.
- **PHNCC** - the international country code of the media server.  
For example, "1" for the United States, "44" for the United Kingdom, and so on.
- **PHNDLENGTH** - the length of the dial plan on the media server.



- **PHNIC** - the digits the media server dials to access public network international trunks. For example, "011" for the United States.
- **PHNLD** - the digit dialed to access public network long distance trunks on the media server.
- **PHNLDLENGTH** - the maximum length, in digits, of the national telephone number for the country in which the Avaya Media Server is located.
- **PHNOL** - the character(s) dialed to access public network local trunks on the media server.

**Note:**

In all cases, the values you administer are the values relevant to the location of the Avaya Media Server at which the IP telephones are registered. If a telephone is in Japan, but its media server is in the United States, set the **PHNCC** value to "1" for the United States.

In all cases, the digits the telephones insert and dial are subject to standard Avaya Media Server features and administration. This includes Class of Service (COS), Class of Restriction (COR), Automatic Route Selection (ARS), and so on.

As indicated in [Table 9](#), you can administer the system parameter **ENHDIALSTAT** to turn off the Enhanced Local Dialing feature.

**Example:** A corporate voice network has a 4-digit dialing plan. The corporate WML Web site lists a 4-digit telephone number as a link on the Human Resources page. A 9620 user selects that link. The 9620 deduces the telephone number is part of the corporate network because the length of the telephone number is the same as the corporate dialing plan. The telephone dials the number without further processing.

**Example:** A user notes a Web site contains an international telephone number that needs to be called and initiates the call. The telephone determines the number to be called is from another country code. The telephone then prepends the rest of the telephone number with PHNOL to get an outside line and PHNIC to get an international trunk. The telephone then dials normally, with the Avaya Media Server routing the call appropriately.

---

## Enhanced Local Dialing Requirements

The enhanced local dialing feature is invoked when all the following conditions are met:

- An application on a 9600 Series IP Telephone obtains or otherwise identifies a character string as containing a telephone number the user wants to dial, and
- The Phone application determines a call appearance is available for an outgoing call, and
- The originating application is the Missed Call Log, the Answered Call Log, or any Browser-based application, and

- The current value of ENHDIALSTAT is "1" (On), and
- The call server has not indicated it supports smart enbloc dialing (log dialing digit analysis available with Communication Manager Release 4.0).

The Phone application takes the incoming character string, applies an algorithm, and determines the string of digits to be sent to automated call processing (ACP) for dialing. At this point the Phone application goes off-hook and sends the digits to ACP.

**Note:**

The Enhanced Local Dialing algorithm requires that telephone numbers be presented in a standard format. The standard format depends on how you administer the parameters indicated in [Table 9](#). The algorithm also assumes that international telephone numbers are identified as such in, for example, WML Web sites. This is indicated by preceding that type of number with a plus (+) sign, and a space or some non-digit character following the country code.

---

## Backup/Restore

**Note:**

This section does not apply to the 9610 IP Telephone. For 9610 backup/restore information, see [Special Administration for the 9610 IP Telephone](#).

The 9600 Series IP Telephones support the HTTP client to back up and restore the user-specific data indicated in [Table 14](#). As of Software Release 1.5, HTTP over TLS (HTTPS) is also supported for backup/restore. For backup, the telephone creates a file with all the user-specific data if a backup file location is specified in system parameter BRURI. The file is sent to the server by an HTTP PUT message, with appropriate success or failure confirmation.

For restore, the initiating process must supply only the backup file name. The file is requested from the server by an HTTP GET message. If successful, the file is returned to the initiating process, otherwise a failure message is returned.

Backup and restore operations construct the URI used in the HTTP message from the value of the BRURI parameter and from the file name as follows:

- If BRURI ends with / (a forward slash), the file name is appended.
- Otherwise, a forward slash is appended to the BRURI value, then the file name is appended to that.

**Note:**

BRURI can include a directory path and/or a port number as specified in IETF RFCs 2396 and 3986 [7.3-25a,b].

HTTP/HTTPS authentication is supported for both backup and restore operations. The authentication credentials and realm are stored in re-programmable, non-volatile memory, which is not overwritten when new telephone software is downloaded. Both the authentication credentials and realm have a default value of null, set at manufacture or at any other time user-specific data is removed from the telephone. When TLS is used, the TLS\_RSA\_WITH\_AES\_128\_CBC\_SHA cipher suite is used for authentication. If the digital certificate of the server is signed by the Avaya Product Root Certificate Authority certificate, the telephone's call server registration password is included as the credentials in an Authorization request-header for each transmitted PUT (backup) and GET (for restore) method.

New value(s) replace the currently stored authentication and realm values:

- when HTTP authentication for backup or restore succeeds and
- if the userid, password or realm used differs from those currently stored in the telephone.

If HTTP authentication fails, the user is prompted to enter new credentials.

**Note:**

Users can request a backup or restore using the Advanced Options Backup/Restore screen, as detailed in the user guide for their specific telephone model. or specific error messages relating to Backup/Restore, see the *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Installation and Maintenance Guide*.

## Backup

When the system parameter BRURI is non-null, user changes are automatically backed up to the file **ext\_96xxdata.txt** (where **ext** is the value of NVPHONEXT) on the HTTP server to a user-specified directory. Backup formats are as follows:

**Table 13: Backup File Formats**

Item/Data Value	Format
Generic	<i>name=value</i>
Contacts	ABKNAME <i>mmm</i> =ENTRY_NAME ABKNUMBER <i>mmm</i> =ENTRY_NUMBER_1 ABKTYPE <i>mmm</i> =ENTRY_TYPE (where <i>mmm</i> is the one-, two-, or three-digit entry ID, with leading zeros for single and double-digit entry IDs)
User-generated Call Appearance labels with button identifiers of <i>mm</i> (the one- or two-digit button number of the entry with a lead zero for single-digit numbers)	PHNLABEL <i>mm</i> =CAUSERLABEL

1 of 2

**Table 13: Backup File Formats (continued)**

Item/Data Value	Format
User-generated telephone Feature Button labels with button identifiers of <i>mm</i> (the one- or two-digit button number of the entry with a lead zero for single-digit numbers)	PHNLABEL $mm$ =FBUSERLABEL
User-generated SBM24 Call Appearance or Feature Button labels with button identifiers of <i>mm</i> (the one- or two-digit button number of the entry with a lead zero for single-digit numbers)	SBMLABEL $mm$ =CAUSERLABEL or FBUSERLABEL, as applicable

**2 of 2**

In addition to the parameters listed in [Table 9](#), a backup saves the options and non-password parameters shown in [Table 14](#).

**Table 14: Options and Non-Password Parameters Saved During Backup**

Parameter Name	Setting
LOGACTIVE	Call Log Active
LOGBRIDGED	Log Bridged Calls
OPTAGCHAND	Handset Automatic Gain Control
OPTAGCHEAD	Headset Automatic Gain Control
OPTAGCSPKR	Speaker Automatic Gain Control
OPTAUDIOPATH	Audio Path
OPTCLICKS	Button Clicks
OPTERRORTONE	Error Tones
OPTTEXTSIZE	Text Size
PERSONALRING	Personalized Ring
PHNREDIAL	Redial
PHNSCRONCALL	Go to Phone Screen on Calling
PHNSCRONALERT	Go to Phone Screen on Ringing
PHNTIMERS	Call Timer
PHNVISUALALERT	Visual Alerting

## Restore

When automatic or user-requested retrieval of backup data is initiated, system values and internal values are set to values contained in the backup file. This occurs only if the OPSTAT parameter setting allows the user to change those values. Therefore, any restrictions set using OPSTAT are recognized and honored.

The backup file value is not retrieved, and the current setting remains valid:

- when a value in the backup file has changed and
- that value corresponds to an application that OPSTAT indicates should not be changed.

This prevents a user from bypassing the administration of OPSTAT and changing options settings in the backup file.

### Note:

If you administered the APPSTAT parameter to suppress changes to one or more applications, the telephone backs up and restores data as usual, but ignores data for “suppressed” applications. This prevents a user from bypassing your APPSTAT restrictions by editing the backup file. For information about APPSTAT, see [The Application Status Flag \(APPSTAT\)](#) on page 117.

During backup file restoration, user activity is prohibited until a `Retrieval successful` or `Retrieval Failed` message displays. When a restore attempt fails, if a retrieved file has no valid data, or if a retrieved file cannot be successfully stored, a `Retrieval Failed` message displays at the telephone until the user takes another action.

Data retrieval considerations are as follows:

- When you create a backup file rather than edit an existing one, be sure to create the file with UTF-16 LE (little endian) characters, with Byte Order Mark (BOM) for LE of 0xFFFE.
- Backup saves data values using the generic format *name=value*. For specific formats, see [Backup](#).
- All identifiers, for example, *names*, are interpreted in a case-insensitive manner, but the case of parameter values, Contact names, and numbers is preserved.
- Spaces preceding, within, or following a *name* are treated as part of the *name*.
- <CR> and <LF> (UTF-16 characters 0x000D and 0x000A, respectively) are interpreted as line termination characters.
- Blank lines are ignored.
- When an identifier is not recognized or is invalid, the entire line is ignored. Likewise, if an identifier is valid but the data itself is invalid or incomplete, the line is ignored.

- When an identifier is valid with valid and complete data, but the data is not applicable to the current state of the telephone, the data is retained for possible use later, and is considered data to be backed up at the appropriate time. For example, if button labels for an SBM24 button module unit are present, but no such module is attached to the telephone, the button labels are retained.
- When more than one line contains a value for an option, parameter, or Contacts entry, the last value read is retrieved, to allow new values to overwrite previous values as lines are read from the backup file. In all other cases, the line order in the backup file has no bearing on retrieval.
- The existence of invalid data does not constitute a failed retrieval. The success of the retrieval process requires the telephone to obtain the backup file and successfully restore valid data.

---

## 9610 Backup/Restore

The 9610 uses its backup/restore functionality differently than other 9600 Series IP Telephones. There is no user-created data nor are there options that need to be stored in a 9610 backup file. The 9610 uses its backup file as the source for administration of the button labels and associated telephone numbers in the Contacts application, the Main Menu list, and associated data, etc.

The administrator is expected to build the backup file in accordance with the requirements in this section, so that when the 9610 boots up and registers, it will obtain the appropriate data for user presentation.

Differences with the backup/restore procedures used on the other 9600 Series IP Telephones include:

- The 9610 never “backs up” data, it only retrieves data. Since the user has no mechanism to change any data, there is no need to back up changes. For consistent terminology with other 9600 Series IP Telephones, we use the term “backup file” here for the 9610 file.
- Because the user can never change data, the OPSTAT value is ignored for the purposes of populating the display from the 9610 backup file.
- When the 9610 attempts to retrieve the backup file, the telephone first attempts to retrieve a file labeled **ext\_9610data.txt**. If the 9610 does not retrieve this file successfully, unlike the other 96xx sets, the 9610 attempts to retrieve a file labeled **9610data.txt**. This file does not have an extension designation. This retrieval process has the advantage of allowing all 9610s that are not associated with a specific extension’s backup file to share a common backup file. You can have, for example, three unique 9610 backup files - one for a 9610 in the Marketing conference room, one for a 9610 in the Accounting conference room, and one for five 9610 IP Telephones in public areas of the company.

---

## 9610 Retrieval Procedures

When the telephone initiates an automatic retrieval, the telephone first attempts to retrieve a file with filename **ext\_9610data.txt**, where **ext** is the system value of NVPHONEXT. While in progress, the Top Line displays **Retrieval 1**. If the file is retrieved successfully, the Top Line displays **File obtained** while the telephone validates the data, and stores valid data in memory. All previous corresponding data is replaced, unless the restore fails, as described below. When data storage is completed successfully, the Top Line displays **Restore OK** for 30 seconds, or until the user selects another Application Line or application, whichever comes first.

If this first retrieval attempt fails for any reason, or if the successfully retrieved file had no valid data, the 9610 then attempts to retrieve a file with the filename **9610data.txt**. While this retrieval is in progress, the Top Line displays **Retrieval 2**. If the file is retrieved successfully the remaining steps are identical to those for the **ext\_9610data.txt** file.

If:

- this second retrieval attempt fails for any reason, or
- the file is successfully retrieved but has no valid data, or
- either successfully-retrieved file was not successfully stored, then

the Top Line displays **Restore failed** for 30 seconds, or until the user selects another Application Line or application, whichever comes first. Once the data storage starts and until the **Restore OK** or **Restore failed** message displays, the user cannot perform any action to display another screen, for example, the Avaya Menu button is temporarily locked out and any press of it is ignored. Once the appropriate result message is displayed, the corresponding 9610 user interface is presented.

---

## General 9610 Restore Processing

Characters are assumed to be coded in UTF-16 LE (little-endian, with Byte Order Mark (BOM) for LE (0xFFFE)), with each item on a separate line terminated by" <CR><LF>" (000D 000A in UTF-16) characters.



### Important:

If the file is not in this format, the telephone displays the message "Restore failed."

The generic format for data values is: *name=value*.

The format for retrieving a Main Menu entry is:

MMLBLxx =*entry label*  
 MMTYPExx =*entry type*  
 MMDATAxx =*entry data*

For more information, see [Main Menu \(MM\) Administration](#) on page 131.

## Administering Telephone Options

The format for retrieving a Contacts entry is:

CONLABELxxx = *entry label*

CONDATAxxx = *entry data*

For more information, see [Contacts Application Administration](#) on page 133.

The other parameters that have meaning in a 9610 backup file are:

IDLEAPP- as described in [The 9610 Idle Application, WMLIDLETIME, SCREENSAVERON, IDLEAPP, and WMLSMALL](#) on page 133.

LISTAPP - when LISTAPP is null (the default), the assumption is the administrator has not created an external equivalent to the local Contacts application. The local Contacts application is used unless it too is empty. When the local Contacts application is empty, selecting **List** is the same as pressing the **Start** button. When LISTAPP is non-null, the assumption is the administrator has populated it with a URI for a WML-based application to be displayed when **List** is selected.

When retrieving data, the following applies:

- If the Byte Order Mark (BOM) is not 0xFFFE, the entire file is rejected and the retrieval fails.
- All identifiers, for example, names, are interpreted in a case-insensitive manner.
- The case of parameter values and Contacts names and numbers are preserved.
- Spaces preceding, within, or following a *name* or *value* are treated as part of that entity.
- <CR> and <LF> are interpreted as line termination characters.
- Blank lines are ignored.
- If an identifier is not recognized or is invalid, the entire line is ignored.
- If an identifier is valid but the data itself is invalid or incomplete, the line is ignored. The determination of what constitutes a valid value for each data element is specified in [General 9610 Restore Processing](#) and [Backup File Format](#).
- If more than one line contains a value for a parameter or Contacts entry, the last value read is used (hence, new values overwrite previous values as lines are read from the file). In all other cases, the order of the lines in the file does not matter.

The success of the retrieval process requires the telephone to obtain the backup file, and to successfully store valid data. The existence of invalid data does not constitute a failed retrieval.



# Chapter 8: Administering Applications and Options

---

## Customizing 9600 Series IP Telephone Applications and Options

The 9600 Series IP Telephones have some unique and powerful capabilities that take advantage of their display and access to LAN facilities. If your LAN has a WML Web site, the telephone needs key information about the servers providing those facilities. You need to provide the information called for in relevant sections of [Table 15](#) in a customized script file. For more information, see [9600 Series IP Telephone Scripts and Application Files](#) on page 78.



### CAUTION:

For the telephones to work properly, you must have a *46xxsettings.txt* file in the same directory as the application file. If you do not edit the *46xxsettings.txt* file, those telephones use default settings only. The *46xxsettings* file is available as a standalone download. If you already have such a file because you downloaded it for a previous 9600 Series or 4600 Series IP Telephone release, installing the standalone file overwrites the original file.

### Note:

To facilitate administration, the 9600 Series and 4600 Series IP Telephones use the same *46xxsettings.txt* file.

In [Table 15](#), parameters shown with a **Mandatory** status must be accurate and non-null for the application to work. You can change parameters with an **Optional** status to suit your environment. If you do not change parameters, the defaults are used.

Table 15: 9600 Series IP Telephone Customizable System Parameters

Parameter Name	Default Value	Status	Description and Value Range
<b>General User Parameters:</b>			
APPSTAT	1	Optional	Applications status flag. See <a href="#">The Application Status Flag (APPSTAT)</a> on page 117 for a description. See <a href="#">Table 16</a> for the range of values.
OPSTAT	111	Optional	Options status flag(s) (1 or 3 ASCII numeric digits) indicate which options are user-selectable. The default of 111 grants access to all options and related applications. Single digit valid values are: 1=user can access all options, including Logout, 2= user can access only view-oriented applications.  Three-digit valid values are a concatenation of binary values, in the form <i>abc</i> , where each letter represents a 0 (disabled/off) or 1 (enabled/on), interpreted as: <i>a</i> = base settings for all user options and related applications, except as noted in <i>b</i> or <i>c</i> . <i>b</i> = setting for view-oriented applications (for example, the Network Information application), as applicable. <i>c</i> = setting for Logout application, if applicable. The binary "0" does not allow an end user to see or invoke options and related applications. The binary "1" allows full display and access to all options and related applications.
			<b>1 of 4</b>

Table 15: 9600 Series IP Telephone Customizable System Parameters (continued)

Parameter Name	Default Value	Status	Description and Value Range
<b>Web Access Application Parameters:</b>			
SUBSCRIBELIST	" " (Null)	Optional	Subscription list for potential pushed content. List of zero or more fully qualified URLs, separated by commas without intervening spaces, with up to 255 total characters.
TPSLIST	" " (Null)	Optional	List of Trusted Push Servers. List of zero or more fully qualified domain/path strings, separated by commas without intervening spaces, with up to 255 total characters. For more information, see the <i>Avaya one-X™ Deskphone Edition for 9600 Series IP Telephones Application Programmer Interface (API) Guide</i> (Document Number 16-600888).
WMLHOME	" " (Null)	Mandatory	Text string containing the URL of the home page for the Web Access application. Not applicable to the 9610, which uses WMLSMALL instead.
WMLPROXY	" " (Null)	Optional	Text string containing the IP Address, in dotted decimal or DNS format, of an HTTP proxy server. This parameter is optional if the Web pages a user accesses are all on the intranet of your organization.
WMLEXCEPT	" " (Null)	Optional	Text string containing a list of one or more HTTP proxy server exception domains, separated by commas, up to a total of 127 ASCII characters. This parameter is optional if the Web pages to be accessed by the user are all on the intranet of your organization. If WMLPROXY is null, the value of this parameter is ignored.

2 of 4

**Table 15: 9600 Series IP Telephone Customizable System Parameters (continued)**

Parameter Name	Default Value	Status	Description and Value Range
WMLIDLETIME	10	Optional	Idle time before displaying Web page. The number of minutes of inactivity after which the Web browser will be displayed if WMLIDLEURI is not null. The default is 10 minutes. Valid values range from 1 to 999 minutes (16.65 hours).
WMLIDLEURI	" " (Null)	Optional	Idle time Web page URI. URI that specifies the Web page the browser displays after an idle interval. Value: Zero or one URI (0-255 ASCII characters, no spaces). Null is valid but if Null, no page displays. Avaya recommends that WMLIDLEURI be specified for phones in public areas through the use of a GROUP parameter. The idle timer is only reset if WMLIDLEURI is non-null such that an HTTP GET can be sent.
WMLPORT	80	Optional	Text string containing the TCP port number for the HTTP proxy server. The default is the TCP default for HTTP. This parameter is optional if the Web pages to be accessed by the user are all on the intranet of your organization. If WMLPROXY is null, the value of this parameter is ignored.
WMLSMALL	" " (Null)	Optional	Home page for the 9610 WML browser (only). Zero (0) to 255 ASCII characters = 1 or one URL. This parameter must be non-null for Main Menu WML links to be displayed. Other 9600 Series telephones use WMLHOME instead

**3 of 4**

**Table 15: 9600 Series IP Telephone Customizable System Parameters (continued)**

Parameter Name	Default Value	Status	Description and Value Range
<b>Backup/Restore Parameters</b>			
BRURI	" " (Null)	Mandatory	URL used for backup and retrieval of user data. Specify HTTP server and directory path to backup file. Do not specify backup file name. Value: 0-255 ASCII characters. Null is a valid value and spaces are allowed. If this value is null or begins with a character sequence other than <i>http://</i> or <i>https://</i> the Backup/Restore option will not display to the telephone user.
<b>Backlight Parameters</b>			
BAKLIGHTOFF	120	Optional	Number of idle minutes after which the backlight turns off (1-3 ASCII digits, from 0-999).

**4 of 4****Note:**

The *Avaya one-X™ Deskphone Edition for 9600 Series IP Telephones Application Programmer Interface (API) Guide* (Document Number 16-600888) provides assistance in developing local Web sites.

---

## The Application Status Flag (APPSTAT)

The 9600 Series IP Telephones offer the user numerous applications like Contacts, Call Log, Redial, and so on. Each of these applications allows the user to add, delete, or in some cases, edit entries. You, as the administrator, might not want the user to have that level of functionality. For example, a hotel lobby telephone probably should not allow a user to delete the concierge's contact number. Further, for privacy reasons, that same telephone should not allow a Call Log display. You can use the Application Status Flag, APPSTAT, to administer specific application functionality permission levels for one or more telephones.

APPSTAT consists of one number, specifying a certain level of allowed functionality. A Zero ("0") value is the most limiting setting. Values "2" and "3" allow increasing levels of functionality, and "1" allows the user complete application functionality.

**Table 16: Application Status Flags and Their Meaning**

APPSTAT Value	Meaning
0	Redial and Call Log are suppressed. Contact changes are not allowed.
1	<b><i>All administered applications are displayed, with full functionality. This is the default value.</i></b>
2	Call Log is suppressed. Contact changes are not allowed. Only one-number Redial is allowed.
3	Contact changes are not allowed.

In [Table 16](#), “suppressed” applications are not displayed to the user. Softkey labels, application tabs, and so on are not labeled or displayed. Options associated with suppressed applications can continue to display unless you override them by appropriate OPSTAT parameter administration. Displayed options have no effect while the application is suppressed.

In [Table 16](#), “Contact changes are not allowed” means the Contact application displays and the user can make calls as normal. Any controls that allow the user to change any aspect of the Contact application do not display. This restriction includes the ability to add, delete, or edit any Contact name or number.

In [Table 16](#), “Only one-number Redial is allowed” means the user Option that allows a choice between displaying last numbers dialed is suppressed. The Redial buffer stores only one number. The Redial application does not display since the user can redial only one number. This restriction allows privacy once a given user has left the telephone.

You can:

- set **APPSTAT** to 1, for example, in a staging area,
- administer a given telephone with Contact entries of your choice, like the **Concierge telephone number** button in the earlier example,
- then move the telephone to where it will be used, where you have administered APPSTAT to be, for example, 0 (zero).

When the relocated telephone resets, it retains its Contact entries, like Concierge, but does not allow the user to create new entries.

When you set APPSTAT to any valid value other than 1, the telephone does not accept any Contact button label changes that might have been made directly on a backup file. Only the existing labels of the telephone are used. This restriction prevents circumvention of the APPSTAT restrictions. The WML applications are also suppressed by default.

---

## Special Administration for the 9610

Administration of the 9610 IP Telephone is handled using the restore file rather than the settings file which is used by all other 9600 Series IP Telephones. For information, see [9610 Backup/Restore](#) on page 110.

---

## Avaya "A" Menu Administration

Release 1.2 provides a new user interface (UI) that puts multiple WML applications in the first level of the "A" (Avaya) Menu. The A (Avaya) Menu is a list of sub-applications the user can select from to invoke the corresponding functionality. A new file called AvayaMenuAdmin.txt is now available with Release 1.2 downloads on which you can specify the menu label, URI, and list order of WML applications on the "A" Menu.

### Note:

This section applies to all 9600 Series IP Telephones except the 9610. For information on 9610 IP Telephone menu administration, see [Special Administration for the 9610 IP Telephone](#) in Chapter 9.



### Important:

You must set the system parameter AMADMIN in the 46xxsettings file for Avaya "A" Menu administration with WML applications to work.

If WML applications are installed and the system parameter AMADMIN is set in the settings file:

- the WML applications appear in the first-level A Menu as specified in the AvayaMenuAdmin file, as shown in [Figure 5](#).
- the first level A Menu includes a single entry (Phone Settings) that leads to a screen containing choices for Options & Settings and Network Information.
- the Phone Settings screen is essentially the current Options and Settings menu, with the addition of Network Information, as shown in [Figure 6](#).

If WML applications are installed and the system parameter WMLHOME is set in the settings file, the Avaya "A" Menu is identical to the pre-Release 1.2 "A" Menu, as shown in [Figure 7](#).

If WML applications are not installed, the A Menu is essentially the same as the current Options & Settings menu, with the addition of Network Information, Log Off, and About Avaya one-X. [Figure 8](#) provides an illustration.

There are alternatives for how the sub-applications are presented, depending on whether you have administered WML applications or not, as follows:

- Set the system parameter AMADMIN to the URL of the AvayaMenuAdmin.txt in the 46xxsettings file when you have multiple WML applications you want to display on the Avaya “A” Menu. For more information, see [Main Avaya Menu with WML Applications Administered](#) and [Avaya Menu Administration With WML Applications](#) in this chapter.
- Set the system parameter WMLHOME in the settings file for all but the 9610 when you want “Browser” to show instead of individual applications. For more information, see [Main Avaya Menu with Browser \(Only\) Administered](#).
- Take no action to administer WML applications. For more information, see [Main Menu – No WML Applications Administered](#).
- The Browser application is listed if and only if it is properly administered as specified in *Avaya one-X™ Deskphone Edition for 9600 IP Telephones Application Programmer Interface (API) Guide* (Document Number 16-600888). Administration also includes a non-null value for [WMLHOME](#).

---

## Administering Phone Settings and Options and Settings (OPSTAT)

The Phone Settings application is listed if and only if the value of OPSTAT is not 000.

The Options & Settings application is listed if and only if the OPSTAT value is not **0xy**, where **x** and **y** can be any value of 0 or 1, if OPSTAT is in 3-bit form, or if and only if the value of OPSTAT is 1, if OPSTAT is in the one-digit form.

The Network Information application is listed if and only if the OPSTAT value is not **x0y**, where **x** and **y** can be any value of 0 or 1 if OPSTAT is in 3-bit form, or in any case, if OPSTAT is in the one-digit form.


---

## Main Avaya Menu with WML Applications Administered

Administering AMADMIN provides direct links to one or more WML applications. As [Figure 5](#) shows, the first level Avaya Menu includes entries for three (sample) WML applications, a Phone Settings menu choice for telephone options and settings, and the telephone log out.



---

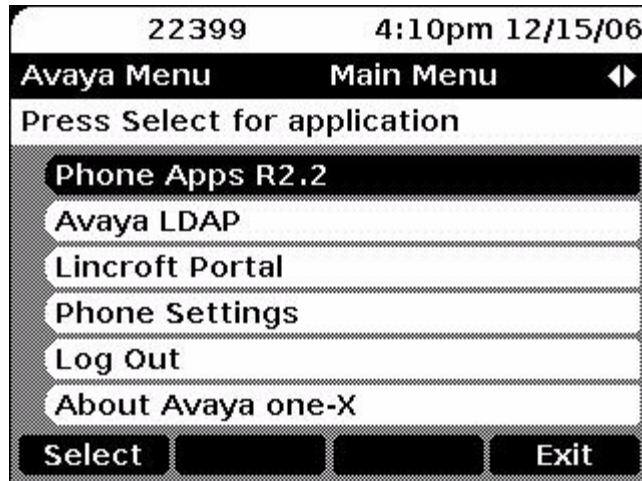
**Figure 5: Avaya Menu with WML Applications Installed as the first three Menu options**

Given that at least one WML application is administered, the administrator can choose to specify the order in which not only the WML applications are presented, but also the order in which the built-in applications are presented. Any built-in applications that are not specifically administered in the WML Administration file are automatically appended to the end of the administered list, in the following order:

- Phone Settings
- Log Out
- About Avaya one-X

Selecting (highlighting) an application and pressing **Select** or **OK** launches the application. When the Phone Settings application is listed, the Choice Indicator is also displayed on the Title Line. Pressing the Left or Right Navigation buttons displays the Phone Settings Screen. Selecting Phone Settings brings up the Phone Settings menu, shown in [Figure 6](#).

**Figure 6: Second Level Avaya Menu - Phone Settings Screen**

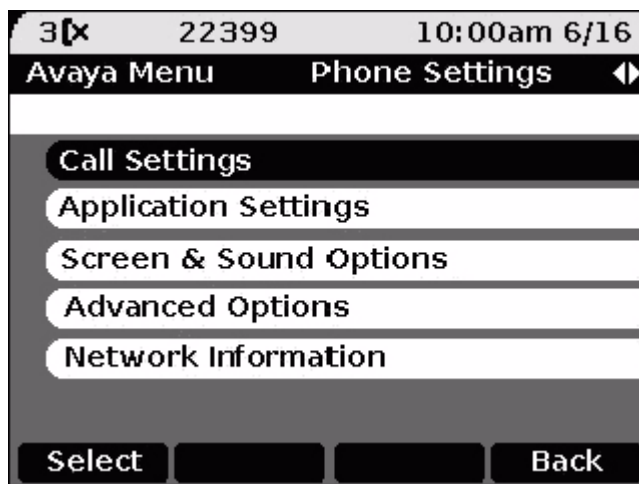


This menu is essentially the same as the current (pre-Release 1.2) Avaya Menu and provides access to user settings as well as the Log Out function.

## Main Avaya Menu with Browser (Only) Administered

Setting the system parameter WMLHOME in the settings file provides a way to link to the Browser Home page by specifying a URL. Administering WMLHOME produces the Avaya “A” Menu shown in [Figure 7](#).

**Figure 7: Avaya Menu with Browser Administered using WMLHOME**

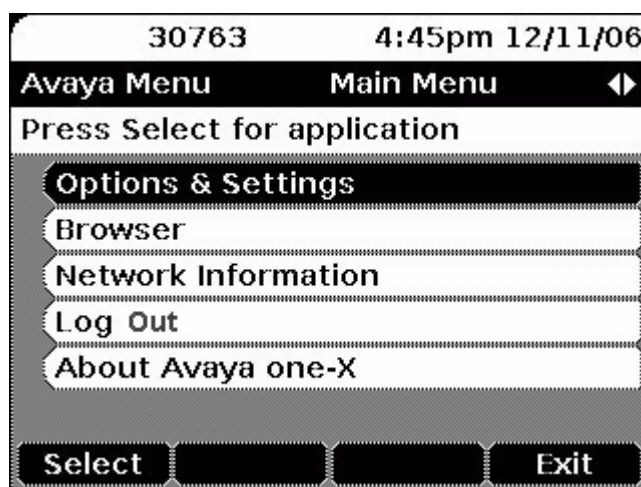

Each individual sub-application is listed left justified on an individual Application Line. From top to bottom, the sub-applications are:

- Options & Settings
- Browser
- Network Information
- Log Out
- About Avaya one-X


---

## Main Menu – No WML Applications Administered

[Figure 8](#) shows the Avaya Menu when no WML applications have been set up.

---

**Figure 8: Avaya Menu With No Applications Installed**

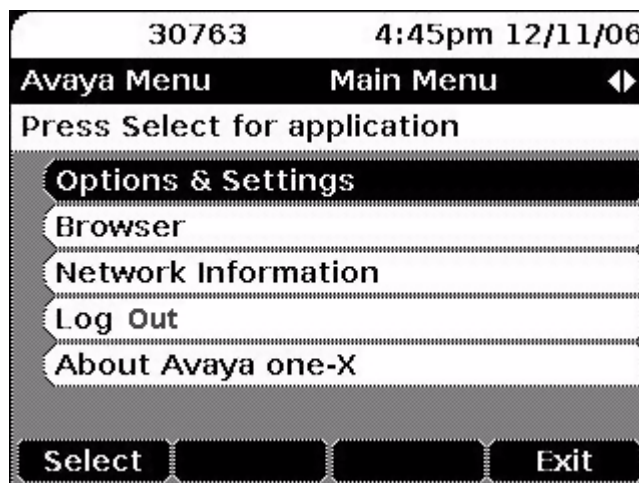

---

## Avaya Menu Administration With WML Applications

Administer the AMADMIN parameter in the 46xxsettings file to point to a URL where the AvayaMenuAdmin.txt file resides. Then specify objects for the Avaya Menu through the Avaya Menu Administration file, **AvayaMenuAdmin.txt**. Each administered object, up to the maximum of 12, must have valid, non-null parameter data:

- **AMTYPExx** - One of four choices. 01=URI, 02=the local “Phone Settings” sub-application, 03=local Log Off sub-application, 04= the About Avaya one-X screen.

If the AMTYPE for an associated administered object is “01”, an additional two parameters must have valid, non-null data for the object to be properly administered:

- **AMLBLxx** - The label displayed to the user for this object, up to 16 UTF-16 characters, shown left-justified unless spaces precede the label value to center the label.
- **AMDATAxx** - A URI of up to 255 ASCII characters, without spaces.

The **xx** in these three parameters is a two-digit integer from 01 to 12 inclusive, including a leading zero if applicable. If **AMTYPExx** is 01, **xx** must be the same for each of the three parameters for an Avaya Menu entry to be displayed and associated with the administered data. If **AMTYPExx** is 02, 03 or 04, any **AMLBLxx** or **AMDATAxx** data is ignored if provided.

If a given administered object has null or invalid data in any of the required associated parameters, that object is completely ignored. To list an AMTYPE01 entry on the Avaya Menu, all three associated parameters must be non-null with valid data. For example, an AMTYPE of “00” is considered invalid.

Do not administer more than nine URIs. By implication, there is no way to specify a telephone number as a TYPE (unlike the 9610).

In case of duplicate data in the settings file, the last entry is retained. For example, if two consecutive lines in the Avaya Menu Administration file are:

**AMLBL01=ABCD**

**AMLBL01=WXYZ**

then the user sees “WXYZ” as the label for the first WML application. This example assumes the rest of the administration is correct.

If no AvayaMenuAdmin.txt file is available, or if the file does not contain at least one valid type 1 (URI) object, the Release 1.0/1.1 Avaya Menu shown in [Figure 8](#) is presented instead.

# Sample Avaya Menu Administration File Template

```
#####
##                                     ##
##  AVAYA MENU CONFIGURATION FILE TEMPLATE  ##
#####
## This file is to be used as a template for configuring
## Avaya Main Menu. See the Avaya one-X™ Deskphone Edition for 9600 Series
##for IP Telephones Administrator Guide for details.
## Both are available on support.avaya.com
##
#####
##
## AMLBLxx=Label  up to 16 unicode characters
##
## AMTYPExx=Type  1=WML-Application;
##               2=local Phone Settings
##               3=local LogOff Application
##               4=local About Avaya Screen
##
## AMDATAxx      URI of up to 255 ASCII-characters
##               e.g. http://yy.yy.yy.yy/*.wml
##
## The tags AMLBLxx and AMDATAxx are only used if
## AMTYPExx = 1
##
## Multiple definitions of local applications (Type 2.4)
## will be suppressed. The last tag is valid.
##
## xx describes the sequence in A-Menu and is valid
## from 01 to 12
##
##

##AMTYPE01=
##AMLBL01=
##AMDATA01=

##AMTYPE02=
##AMLBL02=
##AMDATA02=
```

## Administering Applications and Options

##AMTYPE03=

##AMLBL03=

##AMDATA03=

##AMTYPE04=

##AMLBL04=

##AMDATA04=

##AMTYPE05=

##AMLBL05=

##AMDATA05=

##AMTYPE06=

##AMLBL06=

##AMDATA06=

##AMTYPE07=

##AMLBL07=

##AMDATA07=

##AMTYPE08=

##AMLBL08=

##AMDATA08=

##AMTYPE09=

##AMLBL09=

##AMDATA09=

##AMTYPE10=

##AMLBL10=

##AMDATA10=

##AMTYPE11=

##AMLBL11=

##AMDATA11=

##AMTYPE12=

##AMLBL12=

##AMDATA12=

## Timer Operation for the 9620, 9630/9630G, 9640/9640G, and 9650

When the idle timer in the telephone expires you can administer the telephone to turn off the backlight, put up a screen saver, and/or show a Web page while the telephone is idle. However, Avaya does not recommend setting all of these values on the same telephone. Avaya does recommend, for instance, that you set a lobby phone to go to a Web page when it is idle and to set a desk phone to go to the screen saver and/or turn off the backlight when idle.

The related system parameters and their default values, further described in [Table 9: 9600 Series IP Telephone Customizable System Parameters](#), are:

- WMLIDLETIME = 10 minutes
- BAKLIGHTOFF = 120 minutes
- SCREENSAVERON = 240 minutes
- WMLIDLEURI = null

The idle timer is only reset if WMLIDLEURI is non-null such that an HTTP GET can be sent. WMLIDLEURI is expected to be specified only for phones in public areas through the use of a GROUP parameter.

**Table 17: Idle Timer Settings and Results**

Shortest Timer	Middle Timer	Longest Timer	Operation
WMLIDLETIME and WMLIDLEURI are null	BAKLIGHTOFF is non-zero	SCREENSAVERON is non-zero	Default operation: After BAKLIGHTOFF minutes, the backlight turns off. After (SCREENSAVERON – BAKLIGHTOFF) additional minutes, the screen saver is displayed. WMLIDLETIME has no effect.
WMLIDLETIME and WMLIDLEURI are null	SCREENSAVERON is non-zero	BAKLIGHTOFF is non-zero	After SCREENSAVERON minutes, the screen saver is displayed. After (BAKLIGHTOFF – SCREENSAVERON) additional minutes, the backlight turns off.
WMLIDLETIME and WMLIDLEURI are non-null	BAKLIGHTOFF is non-zero	SCREENSAVERON is non-zero	Every WMLIDLETIME minutes, a GET is sent for WMLIDLEURI, the idle timer is reset, and the browser is displayed. The Web page may contain its own timer to cycle through additional Web pages. The backlight always stays on and the screen saver is never displayed.

**Note:**

The 9610 IP Telephone uses the IDLEAPP value in the 9610data.txt file instead of WMLIDLEURI in the settings file. For more information, see [Special Administration for the 9610](#) on page 119 and [9610 Backup/Restore](#) on page 110.





# Chapter 9: Administering Specific 9600 Series IP Telephones

---

## Introduction

Some 9600 IP Telephone models may require that you administer additional features or have special administrative requirements. For example, the 9610 IP Telephone is a one-line telephone designed as a courtesy, or walk-up, telephone. The 9610 is not full-featured like other 9600 IP Series Telephones, with just a Contacts application, but additional features like WML applications and a Directory can be administered for a 9610.

This chapter provides additional or alternate administration details for specific telephone models.

---

## Special Administration for the 9610 IP Telephone

---

### General Functionality

Because the 9610 is a single line phone, the user cannot transfer or conference calls, or put an active call on hold.

The 9610 does not have a phone screen like other 9600 Series IP Telephones. There are two application buttons - **Start** and **Contacts**. There are no “A” or Call Log buttons, Speaker or Mute buttons. The Web browser application is supported.

The **Main Menu (MM)** on the Start screen is an administrable list of “objects” from which a user can select a new application that is either local to the telephone or on an external server, or an outgoing call. Underlying Main Menu content administration directs the telephone to take action applicable to the given selection. The default Main Menu consists of Contacts and Directory, assuming they have been appropriately administered. The Main Menu displays when the telephone first powers up or resets.

The **Contacts Application** provides functionality similar to the other models but only to launch a call to a contact. Contacts cannot be edited, deleted or added.

The **Idle Application** displays when both a Web Idle Timer and the Idle application have been administered and the timer expires. For example, if the Idle application has been set to “Contacts,” when the Web Idle Timer expires the 9610 display changes to the Contacts application. The Idle application is either one of the existing local applications (Menu or Directory) or a URL, depending on the contents of IDLEAPP.

---

## Key 9610 Administration Concepts

Each 9610 seeks a backup/restore file which contains essential administration data in its user interface that enables different capabilities to walk-up users. The backup file concept is common to all phones, but in the case of the 9610, must be created by an administrator to specify the required behavior of the telephone to walk-up users. Backup and retrieval for the 9610 is covered in more detail in [9610 Backup/Restore](#) on page 110.

A group of 9610 phones can share a common backup file, or individual 9610 IP Telephones can have individual customized backup files.

Backup files must be created in an editor. There is no capability to store a current configuration from the phone to a backup file as there is for other 9600 Series models.

Within the backup file format, the configuration is split into three portions corresponding to the applications mentioned in [General Functionality](#):

- Main Menu administration as described on [page 131](#).
- Contacts administration as described on [page 133](#).
- Idle administration as described on [page 133](#).

Create a generic backup/restore file named "9610data.txt" that can be used as a default to provide basic functionality and serve as a template for any customized 9610 extensions. Create a backup/restore file named "Ext#\_9610data.txt" for the specific extension you want to customize.

See the Avaya support site <http://support.avaya.com> to download a 9610 backup file example. A sample file also appears on [Sample 9610data.txt File](#) on page 136.

### Note:

Like other telephone models, the 9610 looks for a 46xxsettings file at startup. In the 46xxsettings file, the system parameter BRURI must be set to the URI where the 9610data.txt file is located. This consists of the HTTP server IP Address and (optional) directory.

If the telephone cannot find the 9610data.txt file or if that file does not exist, the screen displays the default Main Menu (Contacts and Directory).

## Backup File Format

Use a text editor to create the 9610 backup file. Characters are assumed to be coded in UTF-16 LE (little-endian), with Byte Order Mark (BOM) for LE (0xFFFE)), with each item on a separate line terminated by" <CR><LF>" (000D 000A in UTF-16) characters.

The generic format for data values is: ***name=value***.

The format for a Main Menu entry is:

**MMLBLxx=entry label**

**MMTYPExx=entry type**

**MMDATAxx=entry data**

The format for a Contacts entry is:

**CONLABELxxx=entry label**

**CONDATAxxx=entry data**

Other parameters that have meaning in a 9610 backup file are:

**IDLEAPP**

**LISTAPP**

When retrieving data, the following applies:

- If the BOM is not 0xFFFE, the entire file is rejected and the retrieval is considered to have failed.
- All identifiers (for example, names) are interpreted in a case-insensitive manner.
- The case of parameter values and Contacts names and numbers is preserved.
- Spaces preceding, within, or following a name or value are treated as part of that entity.
- <CR> and <LF> are interpreted as line termination characters.
- Blank lines are ignored.
- If an identifier is not recognized or is invalid, the entire line is ignored.
- If an identifier is valid but the data itself is invalid or incomplete, the line is ignored. The determination of what constitutes a valid value for each data element is specified in the individual requirements in this document.
- If more than one line contains a value for a parameter or Contacts entry, the last value read is used. Hence, new values overwrite previous values as lines are read from the file. In all other cases, the order of the lines in the file does not matter.

The success of the retrieval process requires the telephone to obtain the backup file and to successfully store valid data. The existence of invalid data does **not** constitute a failed retrieval.

## Main Menu (MM) Administration

Use the 46xxsettings file to set the system parameter BRURI to point to the URI where the 9610 backup/restore file (9610data.txt) resides. Then specify objects for the Main Menu via the "9610data.txt" backup file.

### Note:

The 9610 will not display a Main Menu unless you set BRURI to point to the 9610data.txt file and specify Main Menu objects.

Each administered object, up to the maximum of 10, must have valid, non-null data in each of the three parameters as indicated:

- **MMLBLxx** - the label displayed to the user for this object, up to 16 characters.
- **MMTYPExx** - one of four choices: 01=URI, 02=telephone number, 03=local Contacts application, 04=local Directory application.
- **MMDATAxx** - the data used depends on the value of MMTYPExx:
  - a URI, if MMTYPE is "01,"
  - a dialable string if MMTYPE is "02,"
  - the English word "Contacts" if MMTYPE is "03," and
  - the English word "Directory" if MMTYPE is "04."

**Note:**

If administered as a URI, MMDATAxx is up to 255 ASCII characters in length.

In these parameters, **xx** is a two-digit integer from 01 to 10 inclusive, including a leading zero if applicable. If MMTYPE is 01 or 02, **xx** must be the same for each of the three parameters for a Main Menu entry to be displayed and associated with the administered data. If MMTYPE is 03 or 04, **xx** must be the same as a corresponding MMLBL item for a Main Menu entry to be displayed, but no MMDATA need be assigned. Any MMDATA assigned to that **xx** entry is ignored.

If a given administered object has null or invalid data in any of the required associated parameters, that object is completely ignored. Therefore for a MMTYPE 01 or 02 entry to be listed on the Main Menu, all three associated parameters must be non-null with valid data. An MMTYPExx of "00" is considered invalid.

The default values for Main Menu (MM) objects are:

Parameter	Default Value
MMLBL01	Contacts (automatically translated into the user interface language).
MMTYPE01	3 (Local Contacts application).
MMDATA01	Contacts (English only)
MMLBL02	Directory (automatically translated into the user interface language).
MMTYPE02	4 (Local Directory application).
MMDATA02	Directory (English only).

The default "Directory" will appear as the first Main Menu object whenever it is not administered in the Main Menu, if there is no 9610 backup file, or if retrieval of the backup file fails.

The DATA terms "Contacts" and "Directory" are always administered in English, and are independent of the user interface (UI) language. The administrator can create labels for the local applications in the UI language if desired. The administrator can use, for example, "Contacts" for a browser-based application, and "List" for the local Contacts application. Instead, the term used presents the appropriate local application, which does present the UI in the user's language.

The Main Menu allows up to 10 administrable objects including the two local application objects, Contacts, and Directory so that the total number of items fit on two screens.

## Contacts Application Administration

The administrator populates the Contacts Application via the backup file. Each administered object, up to the maximum of 250, must have valid, non-null, data in both of the parameters as indicated:

**CONLABELxxx** (the label displayed to the user for this object)

**CONDATAxxx**

In the list of parameters above, **xxx** is a three-digit integer from 001 to 250 inclusive. To display and associate with the administered data, the three-digit integer must be the same for both parameters. The **xxx** value includes leading zeroes as applicable.

If a given administered object has null or invalid data in any of the two associated parameters, that object is completely ignored. Hence, to be listed in the Contacts application, both associated parameters must be valid and non-null.

**CONLABELxxx** data maps to the corresponding ENTRY\_NAME. **CONDATAxxx** maps to the corresponding ENTRY\_NUMBER\_1.

All contacts are sorted in alphanumeric order on the Phone screen regardless of the order put in the backup/restore file.

---

## The 9610 Idle Application, WMLIDLETIME, SCREENSAVERON, IDLEAPP, and WMLSMALL

The 9610 IP Telephone can present a variety of behaviors if the telephone is left idle for a period of time.

**WMLIDLETIME** - This parameter (set in the 46xxsettings file, if administered) specifies the number of minutes the phone must be idle before an Idle Application specified by IDLEAPP can be presented on the display.

**SCREENSAVERON** - This parameter (set in the 46xxsettings file, if administered) specifies the number of minutes the phone must be idle before the Avaya Screen Saver can be presented on the screen.

### Note:

In the current firmware version, it is not advisable to use both WMLIDLETIME and SCREENSAVERON. For example, one value should be set to 999 and the other to some nominal time, perhaps 30 minutes.

**WMLSMALL** - This parameter (set in the 46xxsettings file, if administered) is required to be non-null for WML links specified in the Main Menu to be displayed. Set this value to a valid URL, and under certain circumstances, it will become the Idle Application displayed on the phone.

**IDLEAPP** - If the IDLEAPP parameter is administered as " " (Null, the default value), when the Web Idle Timer expires, the URL that WMLSMALL points to is presented, if WMLSMALL is administered. If both IDLEAPP and WMLSMALL are null, the 9610 displays the Avaya one-X Screen.

If IDLEAPP is administered as:

- **Menu** - when the Web Idle Timer expires, the telephone displays the Main Menu application if the Main Menu is not empty. If the Main Menu is empty, the Avaya Screen displays instead.
- **Directory** - when the Web Idle Timer expires, the telephone displays the Directory application. If a Directory does not exist, the telephone displays the Avaya Screen.
- **Contacts and LISTAPP is non-null** - when the Web Idle Timer expires, the telephone launches the Contacts application.
- **Contacts and LISTAPP is null** - and the local Contacts application is not empty when the Web Idle Timer expires, the telephone launches the local Contacts application. If the local Contacts application is empty, the telephone displays the Avaya Screen.

**Note:**

The terms “Menu,” “Contacts,” and “Directory” are always administered in English. The terms are independent of the user interface language, since the telephone does not directly present the value of IDLEAPP to the user. Instead, the term is used to present the appropriate local application, which does present the user interface in the user’s language.

If IDLEAPP is administered as “Directory”, and the Directory application is the ACP-based Integrated Directory, then the telephone will have to reinstate the application approximately every minute, since the feature automatically times out after that interval.

If the screen saver is displayed, the Idle Application is not visible until the screen saver is removed. The screen saver is removed when the user goes off-hook, presses a button, or the telephone receives an incoming call.

For example:

- if an IDLEAPP display is desired when the telephone has been idle for 30 minutes, Avaya recommends that IDLEAPP be administered as non-null, that WMLIDLETIME be set to “30” and SCREENSAVERON be set to “999.”
- If a WMLSMALL URL display is desired when the phone has been idle for 30 minutes, Avaya recommends that IDLEAPP be administered as " " (null), that WMLIDLETIME be set to “30,” that SCREENSAVERON be set to “999,” and that WMLSMALL be administered as a valid URL.
- To display the Avaya Screen Saver after 30 minutes of telephone idle time, set IDLEAPP to " " (null), set WMLIDLETIME to “999,” set WMLSMALL as desired (with a URL if Main Menu WML links are to be displayed, or null if not), and set SCREENSAVERON to “30.”

See [Sample 9610data.txt File](#), [Sample idle.wml File](#), and [Sample hotel.wml File](#) for examples of generic files to use as templates. Also see the Avaya 9600 Series IP Telephones support Web site for a downloadable example of typical 9610 setup files.

---

## 9610 Craft Procedures

Unlike the other 9600 Series IP Telephones, press the **Contact** button twice instead of pressing **Mute** to access local procedures.

---

## Troubleshooting a 9610 IP Telephone

- If the Directory functionality is not present, make sure that you administer "Directory," "Next," and "Call-disp" (the latter which shows as "Make call" on the telephone) on the CM station form in the first six call appearances/feature buttons. (Applies to pre-CM4.0 only.)
- Any call appearances/features administered beyond the first six call appearances/feature buttons will be ignored. (Applies to pre-CM4.0 only.)
- If calls cannot be received on the 9610, check the station administration for a "y" in the "Restrict Last Appearance" field. Change to "n" to allow incoming calls.
- If the "Ext#\_9610data.txt" is not set up, the phone will default to the "9610data.txt" file.
- If the "9610data.txt" file is not set up, the telephone displays the message "Restore Failed." and the default Avaya start screen. In this case, even if CM Directory is administered, the start screen appears and the Directory application will not be available.
- If "Restore Failed" appears on the screen when you bring up a 9610, this indicates the telephone could not find or load the backup file.
  - Check folder and file availability and permissions.
  - Check to be sure the filename matches the required conventions for individual extensions or generic backup for all 9610 IP Telephones.
  - Check to be sure the 46xxsettings.txt file has a "Set BRURI http://xxx.xxx.xxx.xxx" entry, where "xxx.xxx.xxx.xxx" is the IP Address of the HTTP server where the 9610data.txt file is stored.
  - Check to be sure there is a byte order mark (BOM) in the 9610data.txt file. The BOM is generated when the 9610data.txt file is saved in Unicode format.
- The WMLSMALL parameter must be non-null for Main Menu WML links to be displayed.

---

## Sample 9610data.txt File

```
##
## THE FOLLOWING "CON" SECTION IS
## THE DEFAULT 9610 "CONTACTS LIST"
## AND MAY BE POPULATED WITH REAL
## NAMES AND TELEPHONE NUMBERS
## OR EXTENSIONS FOR YOUR COMPANY.
## THE ITEMS WILL NOT APPEAR IN THE
## ORDER OF THE LABEL NUMBERS BUT
## RATHER, IN ASCII ALPHA ORDER. THE
## CONTACTS LIST MAY BE SELECTED
## USING THE 9610's RIGHT SIDE (BOOK)
## "CONTACTS" BUTTON. THE "CON"
## MENU WILL SCROLL IF MORE THAN 6
## LABEL GROUPS ARE CONFIGURED.
## NOTE: "+" BELOW INDICATES NON WORKING
## TELEPHONE NUMBERS.
##
CONLABEL001=c: Security+
CONDATA001=12345
CONLABEL002=b: Building Svc+
CONDATA002=9155555555555
CONLABEL003=d: Help+
CONDATA003=9155555555555
CONLABEL004=a: Audix+
CONDATA004=12345
CONLABEL005=9610-DEMO-ONLY+
CONDATA005=DUMMY
CONLABEL006=+NOT WORKING#'s
CONDATA006=DUMMY

##
## THE FOLLOWING "MM" SECTION IS
## THE DEFAULT "MAIN MENU" AND
```



```

## NORMALLY APPEARS FOLLOWING
## A 9610 REBOOT OR POWER UP.
## THE "MM" GROUPS MAY BE
## REPLACED WITH WML LINKS OR
## TELEPHONE NUMBERS APPROPRIATE
## TO YOUR INSTALLATION, INCLUDING
## THE IP ADDRESS OF YOUR FILE
## SERVER AND WML PATH. NOTE THAT
## WMLSMALL MUST BE A VALID URL FOR
## WML LINKS TO DISPLAY IN THIS MENU.
## THE "MM" MENU WILL SCROLL IF MORE
## THAN 6 LABEL GROUPS ARE CONFIGURED.
##
MMLBL01=ABOUT-9610
MMTYPE01=1
MMDATA01=http://135.8.60.18/WML/about.wml
MMLBL02=MyCo Today
MMTYPE02=1
MMDATA02=http://135.8.60.18/WML/index.wml
MMLBL03=MyCo Directory
MMTYPE03=4
MMDATA03=Directory
MMLBL04=Visitor Info
MMTYPE04=1
MMDATA04=http://135.8.60.18/WML/visit_lz.wml
MMLBL05=Printer Trouble
MMTYPE05=1
MMDATA05=http://135.8.60.18/WML/printer-rooms.wml
MMLBL06=Call Jack+
MMTYPE06=2
MMDATA06=32099

```

Note that the information entered into the backup/restore file is what controls the 9610 Main Menu. The references within the files are to ".wml" files, which are text Web pages and an example is provided for illustration only. **The content of these files must be customized for specific phones/sites.** The wml files can be placed at the root level or buried in a lower level directory if desired. Modify the Backup/Restore and 46xxsettings file references accordingly.

## Sample idle.wml File

```
<?xml version="1.0"?>
<!DOCTYPE wml PUBLIC "-//WAPFORUM//DTD WML 1.3//EN" "http://
www.wapforum.org/DTD/wml13.dtd">
<wml>
    <card id="splash" title=" ">
        <p align="center">
            
        </p>
    </card>
</wml>
```

---

## Sample hotel.wml File

```
<?xml version="1.0"?>
<!DOCTYPE wml PUBLIC "-//WAPFORUM//DTD WML 1.3//EN"
"http://www.wapforum.org/DTD/wml13.dtd">
<wml>
    <card id="hotel" title="Hotels">
        <p><a href="hotels/marriott_courtyard.wml">Marriott Courtyard</a></p>
        <p><a href="hotels/extended_stay.wml">Extended Stay</a></p>
        <p><a href="hotels/molly_pitcher.wml">Molly Pitcher</a></p>
        <p><a href="hotels/oyster_point.wml">Oyster Point</a></p>
        <p><a href="hotels/holiday_inn.wml">Holiday Inn</a></p>
        <do type="prev" label="Back"><prev/></do>
    </card>
</wml>
```

## Appendix A: Glossary of Terms

<b>802.1D</b> <b>802.1Q</b>	802.1Q defines a layer 2 frame structure that supports VLAN identification and a QoS mechanism usually referred to as 802.1D.
<b>802.1X</b>	Authentication method for a protocol requiring a network device to authenticate with a back-end Authentication Server before gaining network access. Applicable 9600 Series IP telephones support IEEE 802.1X for pass-through and for Supplicant operation with the EAP-MD5 authentication method.
<b>ARP</b>	Address Resolution Protocol, used, for example, to verify that the IP Address provided by the DHCP server is not in use by another IP telephone.
<b>CELP</b>	Code-excited linear-predictive. Voice compression requiring only 16 kbps of bandwidth.
<b>CLAN</b>	Control LAN, type of Gatekeeper circuit pack.
<b>CNA</b>	Converged Network Analyzer, an Avaya product to test and analyze network performance.
<b>DHCP</b>	Dynamic Host Configuration Protocol, an IETF protocol used to automate IP Address allocation and management.
<b>DiffServ</b>	Differentiated Services, an IP-based QoS mechanism.
<b>DNS</b>	Domain Name System, an IETF standard for ASCII strings to represent IP Addresses. The Domain Name System (DNS) is a distributed Internet directory service. DNS is used mostly to translate between domain names and IP Addresses. Avaya 9600 Series IP Telephones can use DNS to resolve names into IP Addresses. In DHCP, TFTP, and HTTP files, DNS names can be used wherever IP Addresses were available as long as a valid DNS server is identified first.
<b>Gatekeeper</b>	H.323 application that performs essential control, administrative, and managerial functions in the media server. Sometimes called CLAN in Avaya documents.
<b>H.323</b>	A TCP/IP-based protocol for VoIP signaling.
<b>HTTP</b>	Hypertext Transfer Protocol, used to request and transmit pages on the World Wide Web.
<b>HTTPS</b>	A secure version of HTTP.
<b>IETF</b>	Internet Engineering Task Force, the organization that produces standards for communications on the internet.
<b>LAN</b>	Local Area Network.

## Glossary of Terms

<b>LLDP</b>	Link Layer Discovery Protocol. All IP telephones with an Ethernet interface support the transmission and reception of LLDP frames on the Ethernet line interface in accordance with IEEE standard 802.1AB.
<b>MAC</b>	Media Access Control, ID of an endpoint.
<b>Media Channel Encryption</b>	Encryption of the audio information exchanged between the IP telephone and the call server or far end telephone.
<b>NAPT</b>	Network Address Port Translation.
<b>NAT</b>	Network Address Translation.
<b>OPS</b>	Off-PBX Station.
<b>PHP</b>	Hypertext Preprocessor, software used to assist in the format and display of Web pages.
<b>PSTN</b>	Public Switched Telephone Network, the network used for traditional telephony.
<b>QoS</b>	Quality of Service, used to refer to several mechanisms intended to improve audio quality over packet-based networks.
<b>RSVP</b>	Resource ReSerVation Protocol, used by hosts to request resource reservations throughout a network.
<b>RTCP</b>	RTP Control Protocol, monitors quality of the RTP services and can provide real-time information to users of an RTP service.
<b>RTP</b>	Real-time Transport Protocol. Provides end-to-end services for real-time data such as voice over IP.
<b>SDP</b>	Session Description Protocol. A well-defined format for conveying sufficient information to discover and participate in a multimedia session.
<b>Signaling Channel Encryption</b>	Encryption of the signaling protocol exchanged between the IP telephone and the call server. Signaling channel encryption provides additional security to the security provided by media channel encryption.
<b>SIP</b>	Session Initiation Protocol. An alternative to H.323 for VoIP signaling. This protocol is not applicable to 9600 Series IP Telephones.
<b>SNTP</b>	Simple Network Time Protocol. An adaptation of the Network Time Protocol used to synchronize computer clocks in the internet.
<b>SRTCP</b>	Secure Real-time Transport Control Protocol.
<b>SRTP</b>	Secure Real-time Transport Protocol.
<b>TCP/IP</b>	Transmission Control Protocol/Internet Protocol, a network-layer protocol used on LANs and internets.

<b>TFTP</b>	Trivial File Transfer Protocol, used to provide downloading of upgrade scripts and application files to certain IP telephones.
<b>TLS</b>	Transport Layer Security, an enhancement of Secure Sockets Layer (SSL). TLS is compatible with SSL 3.0 and allows for privacy and data integrity between two communicating applications.
<b>TLV</b>	Type-Length-Value elements transmitted and received as part of Link Layer Discovery Protocol (LLDP).
<b>UDP</b>	User Datagram Protocol, a connectionless transport-layer protocol.
<b>Unnamed Registration</b>	Registration with Avaya Communication Manager by an IP telephone with no extension. Allows limited outgoing calling.
<b>URI &amp; URL</b>	Uniform Resource Identifier and Uniform Resource Locator. Names for the strings used to reference resources on the Internet (for example, HTTP://....). URI is the newer term.
<b>VLAN</b>	Virtual LAN.
<b>VoIP</b>	Voice over IP, a class of technology for sending audio data and signaling over LANs.
<b>WML</b>	Wireless Markup Language, used by the 9600 Series IP Telephone Web Browser to communicate with WML servers.



# Appendix B: Related Documentation

---

## IETF Documents

IETF documents provide standards relevant to IP Telephony and are available for free from the IETF Web site: <http://www.ietf.org/rfc.html>.

---

## ITU Documents

Access the ITU Web site for more information about ITU guidelines and documents, available for a fee from the ITU Web site: <http://www.itu.int>.

---

## ISO/IEC, ANSI/IEEE Documents

Access the ISO/IEC standards Web site for more information about IP Telephony standards, guidelines, and published documents: <http://www.iec.ch>.

## **Related Documentation**



# Appendix C: Sample Administration Forms

Use the sample screens that follow as guidelines for telephone setup.

Figure 9: Station Form - Basic Telephone Information

**Avaya Site Administration - [Lincroft Gray GED1]**

File Edit View System Action Tools Window Help

display station 22301 send (return) help (F5) cancel (esc) enter (F3) schedule (F6) next (F7) previous (F8)

1 2 3 4 5

**STATION**

Extension: 22301 Lock Messages? n BCC: 0  
Type: 9630 Security Code: 22301 TN: 1  
Port: S39347 Coverage Path 1: 98 COR: 1  
Name: Chriss, Bill Coverage Path 2: COS: 1  
Hunt-to Station:

**STATION OPTIONS**

Loss Group: 19 Time of Day Lock Table:  
Speakerphone: 2-way Personalized Ringing Pattern: 1  
Display Language: english Message Lamp Ext: 22301  
Survivable GK Node Name: Mute Button Enabled? y  
Survivable COR: internal Button Modules: 0  
Survivable Trunk Dest? y Media Complex Ext:  
IP SoftPhone? y  
IP Video SoftPhone? n  
Customizable Labels? y

**General**

- Start GED1
- Add User
- Change User Extension
- Change User
- Remove User
- Add Bridged Appearance
- Browse Dial Ranges
- Browse Stations
- Browse Unused Ports
- Find Unused Extension
- Print Button Labels
- Swap Stations

**Advanced**

Fault & Performance

Tasks Tree

Severity	Date/Time	System	Description
Info	10/18/2006 2:41:0...	Lincroft Gray	change station 30746
Info	10/18/2006 2:24:4...	Lincroft Gray	duplicate station 30765
Info	10/13/2006 11:54:...	Lincroft Gray	change station 32263
Info	10/11/2006 6:10:3...	Lincroft Gray	change station 30962
Info	10/11/2006 5:26:0...	Lincroft Gray	change station 22055

Ready NUM

Figure 10: Station Form - Feature Options

Avaya Site Administration - [Lincroft sray GED1]

File Edit View System Action Tools Window Help

display station 22301 send (return) help (F5) cancel (esc) enter (F3) schedule (F6) next (F7) previous (F8)

1 2 3 4 5

STATION

FEATURE OPTIONS

LVC Reception: spe Auto Select Any Idle Appearance? n  
LVC Activation? y Coverage Msg Retrieval? y  
LVC Log External Calls? n Auto Answer: none  
CDR Privacy? n Data Restriction? n  
Redirect Notification? y Idle Appearance Preference? n  
Per Button Ring Control? n Bridged Idle Line Preference? n  
Bridged Call Alerting? y Restrict Last Appearance? y  
Active Station Ringing: single EMU Login Allowed? n  
H.320 Conversion? n Per Station CPN - Send Calling Number?  
Service Link Mode: as-needed Audible Message Waiting? n  
Multimedia Mode: enhanced Display Client Redirection? n  
MWI Served User Type: qsig-mwi Select Last Used Appearance? n  
IP Hoteling? n Coverage After Forwarding? s  
Multimedia Early Answer? n  
Remote Softphone Emergency Calls: as-on-local Direct IP-IP Audio Connections? y  
Emergency Location Ext: 22301 Always Use? n IP Audio Hairpinning? y

General

Start GED1

Add User

Change User Extension

Change User

Remove User

Add Bridged Appearance

Browse Dial Ranges

Browse Stations

Browse Unused Ports

Find Unused Extension

Print Button Labels

Swap Stations

Advanced

Fault & Performance

Tasks Tree

Severity	Date/Time	System	Description
Info	10/18/2006 2:41:0...	Lincroft sray	change station 30746
Info	10/18/2006 2:24:4...	Lincroft sray	duplicate station 30765
Info	10/13/2006 11:54:...	Lincroft sray	change station 32263
Info	10/11/2006 6:10:3...	Lincroft sray	change station 30962
Info	10/11/2006 5:26:0...	Lincroft sray	change station 22055

History Schedule Connection Status

Ready

**Figure 11: Station Form - IP Phone Group ID, Bridged Calls, and Enhanced Call Forwarding**

Avaya Site Administration - [Lincroft stray GED]

File Edit View System Action Tools Window Help

display station 22301 send (return) help (F5) cancel (esc) enter (F3) schedule (F9) next (F7) previous (F8)

1 2 3 4 5

**STATION**

Conf/Trans on Primary Appearance? n  
 Bridged Appearance Origination Restriction? n  
 Call Appearance Display Format: disp-param-default  
 IP Phone Group ID:

**ENHANCED CALL FORWARDING**

Forwarded Destination	Active
Unconditional For Internal Calls To:	n
External Calls To:	n
Busy For Internal Calls To:	n
External Calls To:	n
No Reply For Internal Calls To:	n
External Calls To:	n

General  
 Stan GED  
 Add User  
 Change User Extension  
 Change User  
 Remove User  
 Add Bridged Appearance  
 Browse Dial Ranges  
 Browse Stations  
 Browse Unused Ports  
 Find Unused Extension  
 Print Button Labels  
 Swap Stations

Advanced  
 Fault & Performance

Tasks Tree

Severity	Date/Time	System	Description
Info	10/18/2006 2:41:0...	Lincroft stray	change station 30746
Info	10/18/2006 2:24:4...	Lincroft stray	duplicate station 30765
Info	10/13/2006 11:54:...	Lincroft stray	change station 32263
Info	10/11/2006 6:10:3...	Lincroft stray	change station 30962
Info	10/11/2006 5:26:0...	Lincroft stray	change station 22055

History Schedule Connection Status

Ready NUM

Figure 12: Station Form - Site Data, Abbreviated Dial, and Button Assignments

Avaya Site Administration - [Lincroft gray GEDI]

File Edit View System Action Tools Window Help

display station 22301 send (return) help (F5) cancel (esc) enter (F3) schedule (F6) next (F7) previous (F8)

1 2 3 4 5

**STATION**

**SITE DATA**

Room: Headset? n  
Jack: Speaker? n  
Cable: Mounting: d  
Floor: Cord Length: 0  
Building: Set Color:

**ABBREVIATED DIALING**

List1: personal 1 List2: List3: system

**BUTTON ASSIGNMENTS**

1: call-app 5: ec500 Timer? n  
2: call-app 6: extnd-call  
3: call-app 7: conf-dsp  
4: abru-dial List: 1 DC: 01 8: fe-mute

voice-mail Number:

General

Start GEDI  
Add User  
Change User Extension  
Change User  
Remove User  
Add Bridged Appearance  
Browse Dial Ranges  
Browse Stations  
Browse Unused Ports  
Find Unused Extension  
Print Button Labels  
Swap Stations

Advanced  
Fault & Performance

Tasks Tree

Severity	Date/Time	System	Description
Info	10/18/2006 2:41:0...	Lincroft gray	change station 30746
Info	10/18/2006 2:24:4...	Lincroft gray	duplicate station 30765
Info	10/13/2006 11:54:...	Lincroft gray	change station 32263
Info	10/11/2006 6:10:3...	Lincroft gray	change station 30962
Info	10/11/2006 5:26:0...	Lincroft gray	change station 22055

History Schedule Connection Status

Ready NUM

Figure 13: Feature-Related System Parameters Form

Avaya Site Administration - [Lincroft gray GED1]

File Edit View System Action Tools Window Help

change system-parameters feature send (return) help (F5) cancel (esc) enter (F3) schedule (F9) next (F7) previous (F8)

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18

**FEATURE-RELATED SYSTEM PARAMETERS**

**AUTOMATIC EXCLUSION PARAMETERS**

Automatic Exclusion by COS?   
 Automatic Exclusion Coverage/Hold?   
 Automatic Exclusion with Whisper Page?   
 Recall Rotary Digit:   
 Duration of Call Timer Display (seconds):

**WIRELESS PARAMETERS**

Radio Controllers with Download Server Permission (enter board location)  
 1:  2:  3:  4:  5:

**IP PARAMETERS**

Direct IP-IP Audio Connections?   
 IP Audio Hairpinning?

**RUSSIAN MULTI-FREQUENCY PACKET SIGNALING**

Re-try?   
 T2 (Backward Signal) Activation Timer (secs):

Advanced  
 Fault & Performance

T... Tree Right-click in a field to see a list of valid entries or help text

Severity	Date/Time	System	Description
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012

History Schedule Connection Status /

Ready NUM

Figure 14: IP Address Mapping Form

Avaya Site Administration - [Lincroft gray GED]

File Edit View System Action Tools Window Help

display ip-network-map send (return) help (F5) cancel (esc) enter (F3) schedule (F9) next (F7) previous (F6)

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32

**IP ADDRESS MAPPING**

From IP Address	To IP Address	Subnet or Mask	Region	ULAN	Emergency Location Extension
135.8 .0 .0	135.8 .4 .7		1	n	
135.8 .60 .41	135.8 .60 .41		6	n	
135.8 .62 .0	135.8 .62 .32		3	n	
135.8 .62 .33	135.8 .62 .33		1	n	
135.8 .62 .34	135.8 .62 .34		3	n	
135.8 .62 .35	135.8 .62 .35		1	n	
135.8 .62 .36	135.8 .62 .98		3	n	
135.8 .62 .99	135.8 .62 .99		3	n	
135.8 .62 .100	135.8 .62 .145		3	n	
135.8 .62 .147	135.8 .62 .147		1	n	
135.8 .62 .148	135.8 .62 .166		3	n	
135.8 .62 .168	135.8 .62 .172		3	n	
135.8 .62 .182	135.8 .62 .182		9	n	
135.8 .62 .183	135.8 .62 .191		3	n	
135.8 .62 .192	135.8 .62 .192		1	n	
135.8 .62 .193	135.8 .65 .242		3	n	

General

- Start GED
- Add User
- Change User Extension
- Change User
- Remove User
- Add Bridged Appearance
- Browse Dial Range
- Browse Stations
- Browse Unused P
- Find Unused Extension
- Print Button Labels
- Swap Stations

Advanced

Fault & Performance

T... Tree

Severity	Date/Time	System	Description
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012

History Schedule Connection Status

Ready

NUM

**Figure 15: IP Codec Set Form**

**Avaya Site Administration - [Lincroft sray GED1]**

File Edit View System Action Tools Window Help

display ip-codec-set 1 send (return) help (f5) cancel (esc) enter (f3) schedule (f3) next (f7) previous (f6)

1 2

### IP Codec Set

**Codec Set: 1**

Audio Codec	Silence Suppression	Frames Per Pkt	Packet Size(ms)
1: G.722-64K	n	2	20
2: G.711MU	n	2	20
3: G.726A-32K	n	2	20
4: G.729	n	2	20
5: G.723-6.3K	n	1	30
6: G.729A	n	2	20
7: SIREN14-S96K		1	20

**Media Encryption**

1: none  
2:  
3:

Advanced  
Fault & Performance

T... Tree

Severity	Date/Time	System	Description
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012

History Schedule Connection Status

Ready NUM



Figure 16: Inter-Network Region Connection Management Form

Avaya Site Administration - [Lincroft sray GEDI]

display ip-network-region 1 send (return) help (F5) cancel (esc) enter (F3) schedule (F3) next (F7) previous (F6)

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19

Inter Network Region Connection Management

src rgn	dst rgn	set	direct	WAN	WAN-BW-limits	Video	Intervening-regions	Dyn	CAC	IGAR
1	1	1								
1	2	2	y		:NoLimit	:NoLimit				n
1	3	1	y		:NoLimit	:NoLimit				n
1	4	4	y		:NoLimit	:NoLimit				n
1	5	1	y		:NoLimit	:NoLimit				n
1	6	1	y		:NoLimit	:NoLimit				n
1	7	1	y		:NoLimit	:NoLimit				n
1	8	5	y		:NoLimit	:NoLimit				n
1	9	1	y		:NoLimit	:NoLimit				n
1	10									
1	11									
1	12									
1	13									
1	14	2	y		4:Calls	0:Kbits				n
1	15	2	y		:NoLimit	:NoLimit				n

Advanced  
Fault & Performance

Severity Date/Time System Description

Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012

History Schedule Connection Status

Ready NUM

The entries on the IP Address network map shown in [Figure 14](#) might redirect endpoints into a particular network region. That region could be different from what is administered on the previous forms.



Figure 17: IP Network Region Form

The screenshot shows the Avaya Site Administration interface for Lincroft sray GED1. The main window displays the 'IP NETWORK REGION' configuration for Region 1. The interface includes a menu bar (File, Edit, View, System, Action, Tools, Window, Help), a toolbar, and a left-hand navigation pane with options like 'Start GED1', 'Add User', 'Change User Extension', etc. The main area contains the following configuration details:

**Region: 1**  
**Location:** Authoritative Domain: avaya.com  
**Name:**

**MEDIA PARAMETERS**  
 Codec Set: 1  
 UDP Port Min: 2048  
 UDP Port Max: 65535

**DIFFSERV/TOS PARAMETERS**  
 Call Control PHB Value: 34  
 Audio PHB Value: 46  
 Video PHB Value: 26

**802.1P/Q PARAMETERS**  
 Call Control 802.1p Priority: 7  
 Audio 802.1p Priority: 6  
 Video 802.1p Priority: 5

**H.323 IP ENDPOINTS**  
 H.323 Link Bounce Recovery? y  
 Idle Traffic Interval (sec): 20  
 Keep-Alive Interval (sec): 5  
 Keep-Alive Count: 5

**RTCP MONITOR SERVER PARAMETERS**  
 RTCP Reporting Enabled? y  
 Use Default Server Parameters? n  
 Server IP Address: 135.9 .49 .15  
 Server Port: 5005  
 RTCP Report Period(secs): 15

**AUDIO RESOURCE RESERVATION PARAMETERS**  
 RSUP Enabled? n

At the bottom, there is a 'History' tab showing a log of events:

Severity	Date/Time	System	Description
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012
Info	5/15/2006 10:...	Lincroft s...	change station 22012

The status bar at the bottom indicates 'Ready' and 'NUM'.

Figure 18: IP-Options System Parameters Form

**Avaya Site Administration - [Lincroft say GEDI]**

File Edit View System Action Tools Window Help

display system-parameters g-opt send (return) help (F5) cancel (esc) enter (F3) schedule (F6) next (F7) previous (F8)

**General**

- Start GEDI
- Add User
- Change User Extension
- Change User
- Remove User
- Add Bridged Appearance
- Browse Dial Ranges
- Browse Stations
- Browse Unused Ports
- Find Unused Extension
- Print Button Labels
- Swap Stations

Advanced  
Fault & Performance

Tasks Tree

**IP-OPTIONS SYSTEM PARAMETERS**

**SNMP PARAMETERS:**  
Download Flag? n  
Community String:  
Source Addresses:

1.	4.
2.	5.
3.	6.

**SERVICES DIAL PAD PARAMETERS:**  
Download Flag? n  
Password: 27238

Severity	Date/Time	System	Description
Info	10/18/2006 2:41:0...	Lincroft say	change station 30746
Info	10/18/2006 2:24:4...	Lincroft say	duplicate station 30765
Info	10/13/2006 11:54:...	Lincroft say	change station 32263
Info	10/11/2006 6:10:3...	Lincroft say	change station 30962
Info	10/11/2006 5:26:0...	Lincroft say	change station 22055

History Schedule Connection Status

Ready NUM

# Index

## Numerical

802.1X . . . . .	<a href="#">96</a>
9600 Series IP Telephones	
Administering Options for . . . . .	<a href="#">83</a>
Administration Alternatives and Options . . . . .	<a href="#">16</a>
Customizable System Parameters . . . . .	<a href="#">84</a>
Customizing Applications and Options . . . . .	<a href="#">113</a>
General . . . . .	<a href="#">15</a>
Initialization Process . . . . .	<a href="#">20</a>
Network Audio Quality Display . . . . .	<a href="#">28</a>
Scripts and Application Files . . . . .	<a href="#">78</a>
9610 Craft Procedures . . . . .	<a href="#">135</a>
9610 File Retrieval, General Processing . . . . .	<a href="#">111</a>
9610 IP Telephone . . . . .	<a href="#">46</a>
9610 IP Telephone, Special Administration for . . . . .	<a href="#">119</a>
9610 IP Telephone, Troubleshooting . . . . .	<a href="#">135</a>
9610 Key Administration Concepts . . . . .	<a href="#">130</a>
9610 Restore File . . . . .	<a href="#">110</a>
9610 Retrieval Procedures . . . . .	<a href="#">111</a>
9620 IP Telephone . . . . .	<a href="#">47</a>
9620, 9630/9630G, 9640/9640G, and 9650, Timer Operation . . . . .	<a href="#">127</a>
9630, 9640, and 9650 IP Telephones . . . . .	<a href="#">47</a>
9630/9630G, 9640/9640G, and 9650 Button Module (SBM24) . . . . .	<a href="#">48</a>
9650 IP Telephone, Special Considerations . . . . .	<a href="#">49</a>

## A

About This Guide . . . . .	<a href="#">9</a>
Ad-Hoc Conferences . . . . .	<a href="#">49</a>
Administering Applications and Options . . . . .	<a href="#">113</a> , <a href="#">129</a>
Administering Avaya Communication Manager . . . . .	<a href="#">35</a>
Administering Features . . . . .	<a href="#">45</a>
Administering Telephone Options . . . . .	<a href="#">83</a>
Administration Alternatives and Options for 9600 Series IP Telephones . . . . .	<a href="#">16</a>
Administration Forms . . . . .	<a href="#">145</a>
Administration Forms, Samples . . . . .	<a href="#">145</a>
Administration Overview and Requirements . . . . .	<a href="#">15</a>
Administration, for Avaya Communication Manager . . . . .	<a href="#">35</a>
Administration, for Telephones on media server . . . . .	<a href="#">42</a>
Administrative Checklist . . . . .	<a href="#">19</a>
Administrative Options, Local . . . . .	<a href="#">102</a>
Administrative Process, The . . . . .	<a href="#">18</a>
Aliasing . . . . .	<a href="#">35</a>
Aliasing 9600 Series IP Telephones . . . . .	<a href="#">45</a>

Alternatives, Administration . . . . .	<a href="#">16</a>
ANSI/IEEE Documents . . . . .	<a href="#">143</a>
Apache Web Servers, Configuring for Backup/Restore . . . . .	<a href="#">72</a>
Apache Web Servers, configuring for Backup/Restore . . . . .	<a href="#">72</a>
Application File and Upgrade Script, Choosing . . . . .	<a href="#">78</a>
Application Files and Telephone Software . . . . .	<a href="#">77</a>
Application Files, and Scripts for 9600 Series IP Telephones . . . . .	<a href="#">78</a>
Application Status Flag (APPSTAT) . . . . .	<a href="#">117</a>
Application Status Flags and Their Meaning . . . . .	<a href="#">118</a>
Applications and Options, Administering . . . . .	<a href="#">113</a> , <a href="#">129</a>
Applications Diagram . . . . .	<a href="#">32</a>
Applications, Customizing . . . . .	<a href="#">113</a>
Application-specific parameters, administering . . . . .	<a href="#">17</a>
APPSTAT . . . . .	<a href="#">117</a>
Assessment, of Network . . . . .	<a href="#">23</a>
Auto Hold administration . . . . .	<a href="#">42</a>
Auto select any idle appearance administration . . . . .	<a href="#">46</a>
Avaya "A" Menu Administration . . . . .	<a href="#">119</a>
Avaya Menu Administration . . . . .	<a href="#">124</a>
Avaya Menu Administration File Template . . . . .	<a href="#">125</a>
Avaya Menu with WML Applications . . . . .	<a href="#">120</a>

## B

Backup . . . . .	<a href="#">107</a>
Backup File Format, for the 9610 . . . . .	<a href="#">130</a>
Backup File Formats . . . . .	<a href="#">107</a>
Backup, Options and Non-Password Parameters Saved . . . . .	<a href="#">108</a>
Backup/Restore . . . . .	<a href="#">106</a>
Backup/Restore HTTP/HTTPS Configuration . . . . .	<a href="#">65</a>
Backup/Restore, Configuring IIS Web Servers . . . . .	<a href="#">65</a>
Button Module(s) (SBM24) . . . . .	<a href="#">48</a>

## C

Call Appearances and Feature Buttons . . . . .	<a href="#">46</a>
Call Forward administration . . . . .	<a href="#">45</a>
Call Server Requirements . . . . .	<a href="#">35</a>
Call Transfer Considerations . . . . .	<a href="#">40</a>
Checklist, Administrative . . . . .	<a href="#">19</a>
Class of Restriction (COR) Form, Sample . . . . .	<a href="#">44</a>
Codecs, Wide Band . . . . .	<a href="#">50</a>
Communication Manager Administration . . . . .	<a href="#">35</a>
Conference/Transfer on Primary Appearance administration . . . . .	<a href="#">46</a>
Conferencing Call Considerations . . . . .	<a href="#">41</a>

## Index

Contacts Application Administration, for the 9610 . . .	<a href="#">133</a>
Contents of the Settings File . . . . .	<a href="#">80</a>
Coverage Path administration . . . . .	<a href="#">43</a> , <a href="#">46</a>
Customizable System Parameters . . . . .	<a href="#">84</a>
Customizing 9600 Series IP Telephone Applications and Options . . . . .	<a href="#">113</a>

## D

DHCP and File Servers . . . . .	<a href="#">51</a>
DHCP Generic Setup . . . . .	<a href="#">54</a>
DHCP options . . . . .	<a href="#">54</a>
DHCP Parameters Set by . . . . .	<a href="#">53</a>
DHCP Server . . . . .	<a href="#">24</a>
DHCP Server Administration . . . . .	<a href="#">52</a>
DHCP Server Setup . . . . .	<a href="#">52</a>
DHCP Server to Telephone initialization . . . . .	<a href="#">21</a>
DHCP Server, Windows 2000 Setup . . . . .	<a href="#">61</a>
DHCP Server, Windows NT 4.0 Setup. . . . .	<a href="#">57</a>
DHCP, Configuring for 9600 Series IP Telephones. . . . .	<a href="#">52</a>
Dialing, Enhanced, Requirements. . . . .	<a href="#">105</a>
DIFFSERV . . . . .	<a href="#">38</a>
Directory Features administration . . . . .	<a href="#">46</a>
DNS Addressing. . . . .	<a href="#">95</a>
Document Organization . . . . .	<a href="#">13</a>
Documentation, Related . . . . .	<a href="#">14</a> , <a href="#">143</a>

## E

EC500 administration . . . . .	<a href="#">43</a>
Enhanced Conference Features administration . . . . .	<a href="#">43</a> , <a href="#">45</a>
Enhanced Dialing Procedures . . . . .	<a href="#">104</a>
Enhanced Local Dialing . . . . .	<a href="#">104</a>
Enhanced Local Dialing Requirements . . . . .	<a href="#">105</a>
Error Conditions . . . . .	<a href="#">22</a>

## F

Far End Mute administration . . . . .	<a href="#">45</a>
Feature Administration for Avaya Communication Manager . . . . .	<a href="#">42</a>
Feature Buttons and Call Appearances . . . . .	<a href="#">46</a>
Feature-Related System Parameters Form . . . . .	<a href="#">149</a>
Feature-Related System Parameters, administering on CM . . . . .	<a href="#">42</a>
Features, Administering . . . . .	<a href="#">45</a>
File download Choosing the Right Application and Upgrade Script File. . . . .	<a href="#">78</a>
Download File Content . . . . .	<a href="#">78</a>

## G

General Download Process . . . . .	<a href="#">77</a>
Generic Setup, for DHCP . . . . .	<a href="#">54</a>
Gigabit Ethernet Adapter . . . . .	<a href="#">104</a>
Glossary of Terms . . . . .	<a href="#">139</a>
GROUP System Value . . . . .	<a href="#">81</a>

## H

Hardware Requirements . . . . .	<a href="#">23</a>
HTTP/HTTPS Configuration for Backup/Restore . . . . .	<a href="#">65</a>
HTTP/HTTPS Server . . . . .	<a href="#">24</a>

## I

Idle Application . . . . .	<a href="#">133</a>
IEC/ISO Documents . . . . .	<a href="#">143</a>
IEEE 802.1D and 802.1Q . . . . .	<a href="#">27</a> , <a href="#">38</a>
IEEE 802.1D/Q QoS parameters . . . . .	<a href="#">38</a>
IEEE/ANSI Documents . . . . .	<a href="#">143</a>
IIS Web Servers, configuring for Backup/Restore . . . . .	<a href="#">65</a>
Initialization and Address Resolution Diagram . . . . .	<a href="#">31</a>
Initialization Process, for 9600 Series IP Telephones . . . . .	<a href="#">20</a>
Installation, Network Information Required before installing . . . . .	<a href="#">25</a>
Interface, administering the . . . . .	<a href="#">17</a>
Inter-Network Region Connection Management Form . . . . .	<a href="#">152</a>
IP Address Lists and Station Number Portability . . . . .	<a href="#">28</a>
IP Address Mapping Form . . . . .	<a href="#">150</a>
IP Addresses, administering. . . . .	<a href="#">16</a>
IP Codec Set Form . . . . .	<a href="#">151</a>
IP Interface and Addresses, for media servers . . . . .	<a href="#">37</a>
IP-Options System Parameters Form . . . . .	<a href="#">154</a>
ISO/IEC, ANSI/IEEE Documents . . . . .	<a href="#">143</a>
ITU Documents. . . . .	<a href="#">143</a>

## L

Language Selection . . . . .	<a href="#">102</a>
Link Layer Discovery Protocol (LLDP) . . . . .	<a href="#">98</a>
LLDP Data Units Transmitted . . . . .	<a href="#">99</a>
Local Administrative Options . . . . .	<a href="#">102</a>

## M

Main Menu – No WML Applications . . . . .	<a href="#">123</a>
Main Menu (MM) Administration, for the 9610 . . . . .	<a href="#">131</a>
Main Menu without WML Applications . . . . .	<a href="#">123</a>
Media Server (Switch) Administration . . . . .	<a href="#">36</a>
Media Server Administration, Other Considerations. . . . .	<a href="#">39</a>
Media Server Field Names and Corresponding Script File Parameter Names . . . . .	<a href="#">73</a>

**N**

NAT . . . . .	<a href="#">38</a>
Network Assessment . . . . .	<a href="#">23</a>
Network Audio Quality Display . . . . .	<a href="#">28</a>
Network Considerations, Other . . . . .	<a href="#">26</a>
Network Information, Required . . . . .	<a href="#">25</a>
Network Region Form . . . . .	<a href="#">153</a>
Network Requirements . . . . .	<a href="#">23</a>

**O**

On-Hook Dialing administration . . . . .	<a href="#">42</a>
Options and Applications, Administering . . . . .	<a href="#">113</a>
Options, Administering . . . . .	<a href="#">83</a>
Options, Customizing . . . . .	<a href="#">113</a>
Options, entering using the Telephone Dialpad . . . . .	<a href="#">102</a>
Options, for 9600 Series IP Telephone Administration . . . . .	<a href="#">16</a>
Other Considerations, for media server administration . . . . .	<a href="#">39</a>
Other Network Considerations . . . . .	<a href="#">26</a>

**P**

Parameter Data Precedence . . . . .	<a href="#">18</a>
Parameters in Real-Time . . . . .	<a href="#">28</a>
Parameters Saved During Backup . . . . .	<a href="#">108</a>
Parameters, Customizable . . . . .	<a href="#">84</a> , <a href="#">114</a>
Pass-Through and Proxy Logoff, 802.1X . . . . .	<a href="#">96</a>
Port Utilization . . . . .	
Selection . . . . .	<a href="#">37</a>
TCP/UDP . . . . .	<a href="#">29</a>
Processing, General, for 9610 Restore . . . . .	<a href="#">111</a>
Proxy Logoff and Pass-Through, 802.1X . . . . .	<a href="#">96</a>

**Q**

QoS . . . . .	<a href="#">27</a> , <a href="#">37</a>
Administrative Parameters . . . . .	<a href="#">17</a>
IEEE 802.1D and 802.1Q . . . . .	<a href="#">38</a>

**R**

Registration and Authentication . . . . .	<a href="#">33</a>
Related Documentation . . . . .	<a href="#">143</a>
Reliability and Performance . . . . .	<a href="#">27</a>
Requirements . . . . .	<a href="#">15</a>
Call Server . . . . .	<a href="#">35</a>
Hardware . . . . .	<a href="#">23</a>
Network . . . . .	<a href="#">23</a>
Server . . . . .	<a href="#">24</a>

Restore . . . . .	<a href="#">109</a>
Restore File, for 9610 . . . . .	<a href="#">110</a>
Restore/Backup . . . . .	<a href="#">106</a>
Restrict Last Call Appearance administration . . . . .	<a href="#">46</a>
Retrieval Procedures, for 9610 . . . . .	<a href="#">111</a>
RSVP and RTCP . . . . .	<a href="#">37</a>
RTCP and RSVP . . . . .	<a href="#">37</a>

**S**

Sample Administration Forms . . . . .	<a href="#">145</a>
Script File Parameter Names and Corresponding Media Server Field Names . . . . .	<a href="#">73</a>
Scripts and Application Files, for 9600 Series IP Telephones . . . . .	<a href="#">78</a>
Security . . . . .	<a href="#">32</a>
Send All Calls (SAC) administration . . . . .	<a href="#">46</a>
Server Administration . . . . .	<a href="#">51</a>
Server Administration, DHCP . . . . .	<a href="#">52</a>
Server Requirements . . . . .	<a href="#">24</a>
Settings File . . . . .	<a href="#">79</a>
Settings File, Contents . . . . .	<a href="#">80</a>
Shuffling Administration . . . . .	<a href="#">50</a>
SNMP . . . . .	<a href="#">26</a>
Software . . . . .	<a href="#">77</a>
Software Checklist . . . . .	<a href="#">51</a>
Software, Telephone . . . . .	<a href="#">77</a>
Station Form . . . . .	
Basic Telephone Information . . . . .	<a href="#">145</a>
Feature Options . . . . .	<a href="#">146</a>
IP Phone Group ID, Bridged Calls & Enhanced Call Forwarding . . . . .	<a href="#">147</a>
Site Data, Abbreviated Dialing, & Button Assignments . . . . .	<a href="#">148</a>
Station Form - Basic Telephone Information . . . . .	<a href="#">145</a>
Station Form - Feature Options . . . . .	<a href="#">146</a>
Station Form Administration Results Chart . . . . .	<a href="#">47</a>
Station Number Portability and IP Address Lists . . . . .	<a href="#">28</a>
Supplicant Operation, 802.1X . . . . .	<a href="#">97</a>
Switch Administration . . . . .	<a href="#">36</a>
Switch Compatibility and Aliasing IP Telephones . . . . .	<a href="#">35</a>
System Parameter Values, Impact of TLVs on . . . . .	<a href="#">101</a>
System Parameters . . . . .	<a href="#">42</a>
System Parameters, Customizable . . . . .	<a href="#">84</a> , <a href="#">114</a>
System-Wide CM Administration . . . . .	<a href="#">42</a>

**T**

Tagging and VLAN, administering . . . . .	<a href="#">16</a>
TCP/UDP Port Utilization . . . . .	<a href="#">29</a>
Telephone Administration . . . . .	<a href="#">16</a> , <a href="#">42</a>
Telephone and Call Server initialization . . . . .	<a href="#">21</a>
Telephone and File Server initialization . . . . .	<a href="#">21</a>
Telephone Initialization Process . . . . .	<a href="#">20</a>
Telephone Options, Administering . . . . .	<a href="#">83</a>

## Index

Telephone Software and Application Files . . . . .	<a href="#">77</a>
Telephone to Network initialization . . . . .	<a href="#">20</a>
Terms, Glossary of. . . . .	<a href="#">139</a>
Timer Operation . . . . .	<a href="#">127</a>
Time-to-Service (TTS) . . . . .	<a href="#">33</a>
TLVs, Impact on System Parameter Values . . . . .	<a href="#">101</a>
Troubleshooting a 9610 IP Telephone. . . . .	<a href="#">135</a>

## U

UDP Port Selection . . . . .	<a href="#">37</a>
UDP/TCP Port Utilization . . . . .	<a href="#">29</a>
Unnamed Registration . . . . .	<a href="#">22</a>
Upgrade Script and Application File, Choosing the Right. . . . .	<a href="#">78</a>
Upgrade Script File . . . . .	<a href="#">78</a>
Upgrade Script, contents of. . . . .	<a href="#">80</a>

## V

VLAN Considerations . . . . .	<a href="#">91</a>
VLAN Default Value . . . . .	<a href="#">93</a>
VLAN Detection . . . . .	<a href="#">92</a>
VLAN Separation . . . . .	<a href="#">93</a>
VLAN Separation Rules. . . . .	<a href="#">94</a>
VLAN Tagging . . . . .	<a href="#">92</a>
Voice Mail Integration. . . . .	<a href="#">39</a>

## W

Web Configuration Tool . . . . .	<a href="#">73</a>
Web Server . . . . .	<a href="#">24</a>
What's New . . . . .	<a href="#">12</a>
Wide Band Codecs . . . . .	<a href="#">50</a>
Wideband Audio administration . . . . .	<a href="#">43</a>