

7316E button mapping



Read Me First

The 7316E button number assignment depends on the software version of the Norstar ICS or Business Communications Manager system.


The 7316E button number assignment is important when:

- Programming User Preferences in Norstar Configuration.
- Programming the Business Communications Manager from your web browser.


The 7316E button number assignment type is shown below based on system/software versions.

System	Software version	Button assignment type
Norstar ICS	6.1 or higher	Standard
Norstar ICS	6.0 or lower	Legacy
Business Communications Manager	3.5 or higher	Standard
Business Communications Manager	3.0 or lower	Legacy

Standard button assignment

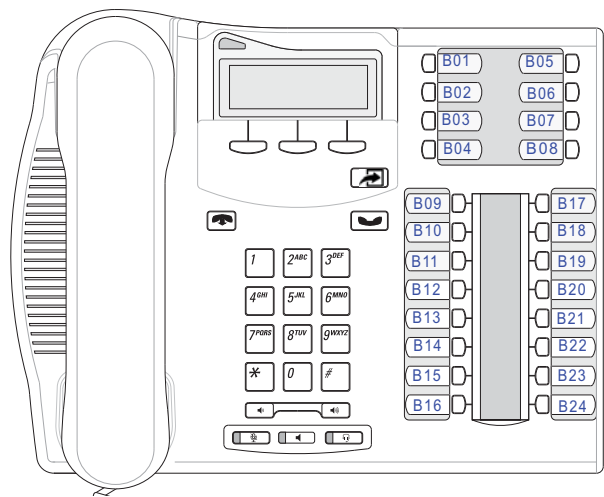

Legacy button assignment

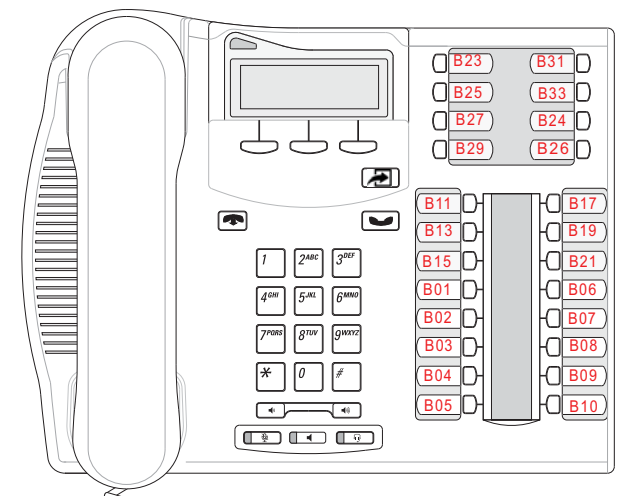

Norstar programming

A programming overlay is provided in your documentation kit. Place it on the 7316E telephone to label the four buttons used for Norstar programming.

Note: The four buttons used for Norstar programming will appear on the top or middle sections of the programming overlay depending on the 7316E button number assignment.

7316E telephone with programming overlay

