

SCOPIA XT5000 Quick Setup Guide

CAUTION: Make sure all units are switched off whenever connecting or disconnecting devices.

A System Installation and Activation

1. Connect all cables to the SCOPIA XT5000 Codec Unit (see overleaf). Power supply must be connected after all other connections have been established.
2. Turn on the TV monitors. Monitor on HDMI1 is mandatory, monitor HDMI2 is optional.
3. Make sure the remote control has batteries installed.
4. Verify that the LED on the front panel of the Codec Unit is turned on.
5. If the codec unit does not turn on automatically, press the  button on the remote control.
6. The graphical menu appears on the monitors.

B Product Registration

1. Open the envelope that came with the XT5000.
2. Locate the serial number and product key.
3. On a computer, open a browser and navigate to <http://licensing.radvision.com>.
4. Complete the online registration form and enter the serial number and product key. The web registration form returns a license key.
5. Write down the license key and keep it in a safe place for future use.

C Country and Language of Interface

1. System Name field displays the name of this Codec Unit as displayed in a video conference, for example:
 - Hong Kong, or
 - 9th Floor Conf Rm
2. Use the remote control keypad to type the name. Press OK to toggle letters or numbers and lower/upper case.
3. Select the Country and preferred Language.
4. Then select Next.



D Graphics and Image Setup

If all the sides of the triangles 1 and 2 are visible on your monitor, select next.



1. Otherwise, press 1 to adjust the position of the top left corner.
2. Use the arrow keys to move the selected triangle until it is fully visible on your monitor. Press OK when done.
3. Press 2 to adjust the position of the bottom right corner.
4. Repeat the procedure using the arrows.
5. Press OK and Next when done.



E Network Settings

1. Enter your network settings. For questions about this information, consult your system administrator.
2. Then select Next.



F Gatekeeper Settings

1. Enter your Gatekeeper settings and your E.164 number. For questions about this information, consult your system administrator.
2. Then select Done.



G Moving the Camera

1. On the general screen, navigate to Control Camera using the arrow keys and press OK.
2. Use the arrow keys to move the camera to the preferred position.
3. Repeat the procedure if you have a second camera installed.
4. Press Back when done.



Package Content:

- SCOPIA XT5000 Codec Unit
- SCOPIA XT Premium Camera
- SCOPIA XT 3-ways Microphone POD
- SCOPIA XT Remote Control Unit
- Base Camera kit: 2.5m triple camera cable, including power, VISCA and DVI-D/HDMI
- DVI-I to VGA converter
- Cable LAN 4mt
- Cable HDMI M/M, 2.5M
- Power Supply and power cable
- 3-ways Microphone POD cable
- Remote Control Batteries



SCOPIA XT5000 Quick Hardware Setup

Package Content:


- 1 Codec Unit
- 2 SCOPIA XT Premium Camera
- 3 3-way Microphone POD
- 4 Remote Control Unit and Batteries
- 5 Codec Unit Camera Cable
- 6 HDMI Cable
- 7 3-way Microphone POD cable
- 8 Ethernet Cable for LAN, 4m
- 9 Power Supply and Power Cable
- 10 DVI-I to VGA converter for PCs with VGA output only

RADVISION Optional – Not Included Accessories

- 11 DVI to DVI Cable
- 12 Audio Cable. Both sockets on the unit are dual purpose. They accept either an analog 3.5mm MiniJack cable or an optical Toslink cable with a Toslink mini-plug adapter. Optical digital audio format is S/PDIF
- 13 Optional Premium Camera to be connected to DVI input
- 14 Optional 2nd 3-way microphone POD

Non-RADVISION

- 15 HDMI Cable for Mon2
- 16 Ethernet Cable for LAN
- 17 VGA cable

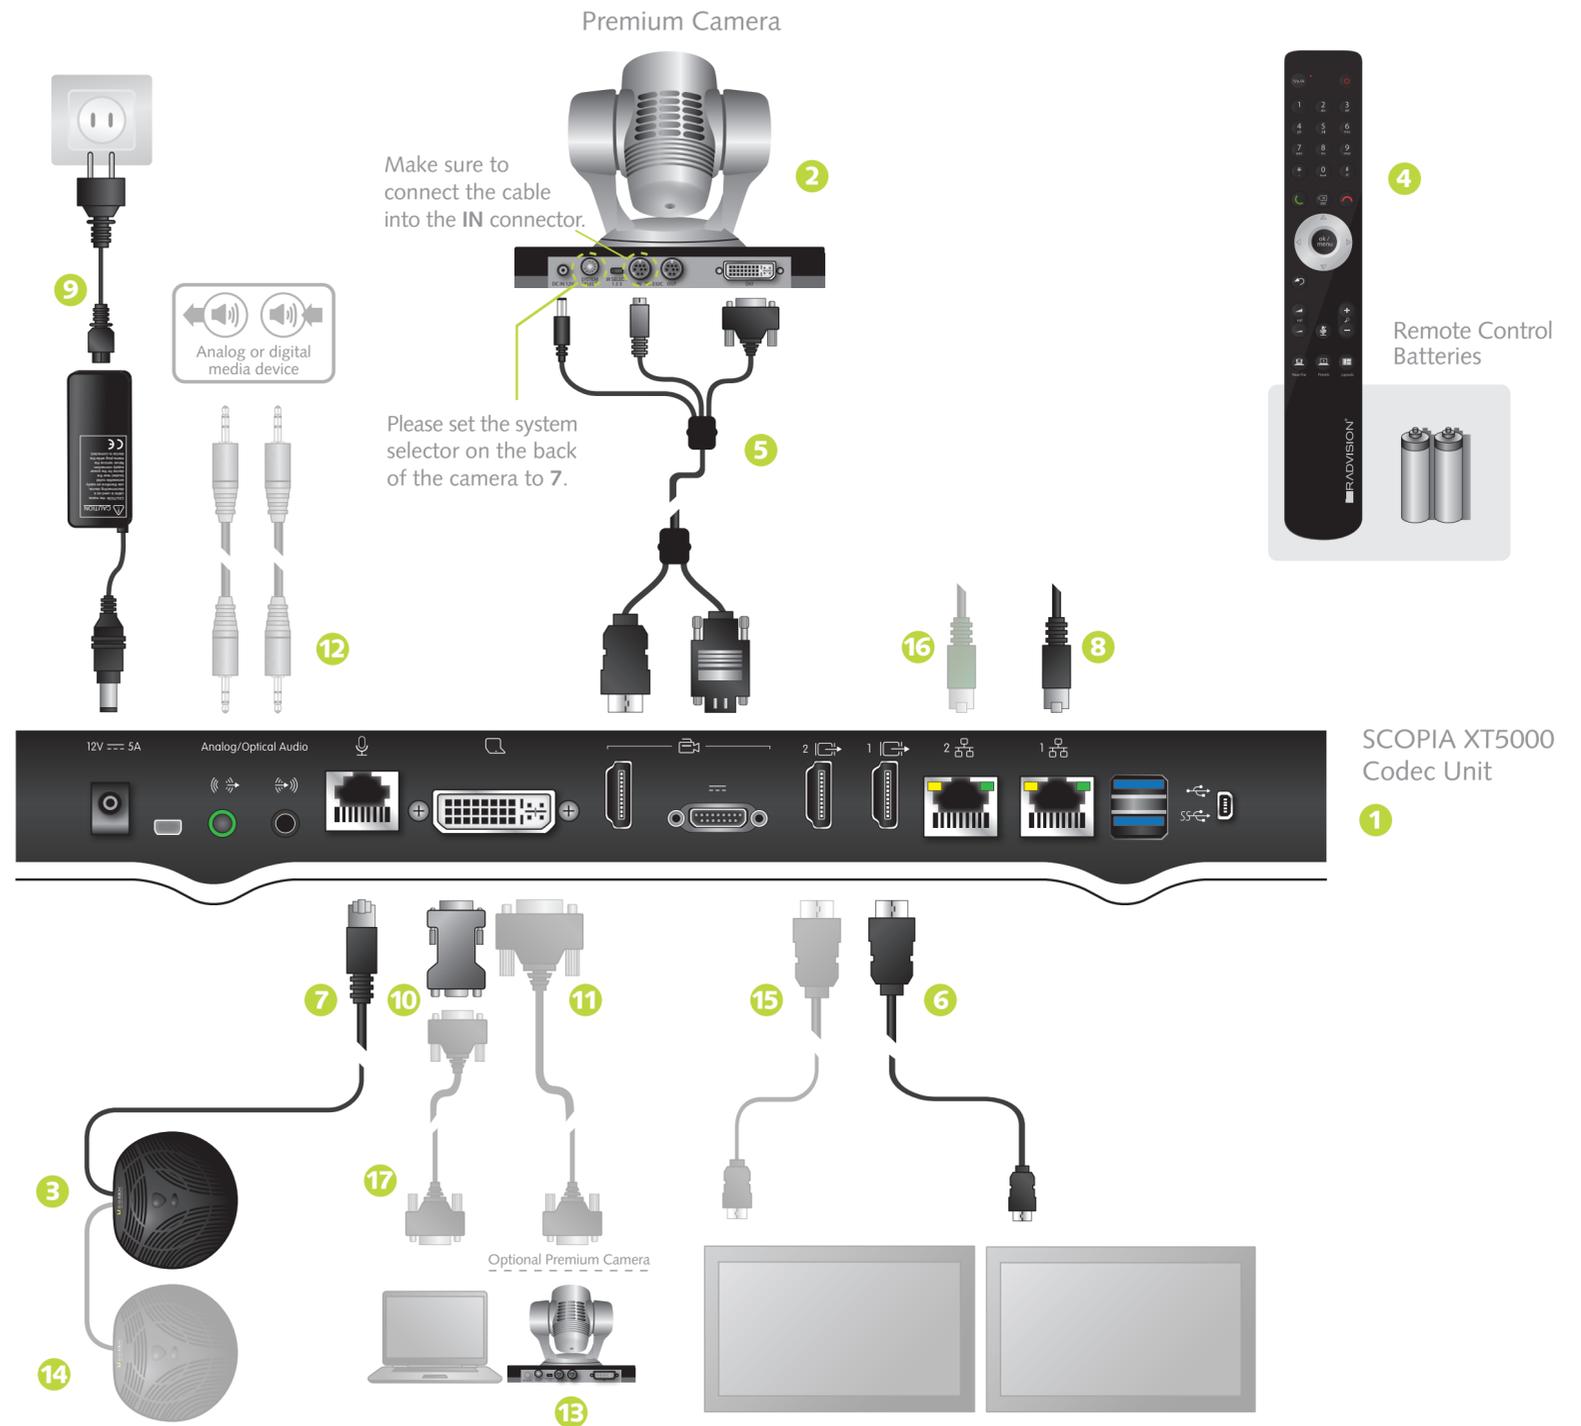

CAUTION: Make sure all units are switched off whenever connecting or disconnecting devices.