



Remote Access Module 3

User's Guide


Contents

Contents.....	2
Introduction	3
Overview.....	3
Security	3
Installation.....	4
Location Requirements.....	4
Equipment Supplied & Required.....	5
Attaching the Mounting Brackets.....	5
Installing the Remote Access Module.....	6
Installing for Use With INDeX IVM/CCM.....	7
Using With INDeX CCM Client/IVM	8
Restoring INDeX Remote Access Module Defaults	9

Introduction

Overview

The Remote Access Module kit is used to provide remote maintenance access to INDeX telephone systems. This guide covers installation and use with the INDeX telephone system

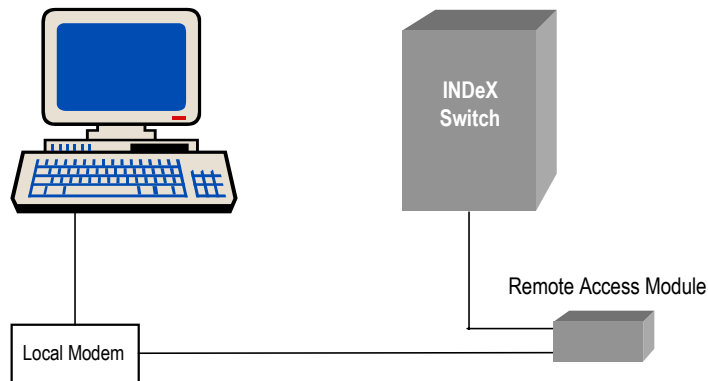

The Remote Access Module is factory pre-set to match the default baud rate of the INDeX system (currently 9600 bps).

- **Previous Remote Access Module Kits**

This manual covers Remote Access Module kits based around the ActionTec modem. For kits based around any other modem refer to the previous issue of this guide.

Security

The Remote Access Module is a useful tool. It allows remote diagnostics of faults and often remote correction without the need for a site visit.

However it also allows a direct route into system programming and administration that could be abused. You must take measures to guard this route.


You must :

- Keep the direct telephone number of Remote Access Module links secure. This also applies to the INDeX system passwords.
- Keep the INDeX system passwords secure.

Installation

Location Requirements

The Remote Access Module is designed for wall mounting near the INDeX cabinet containing the CPU Cassette. It requires the following:

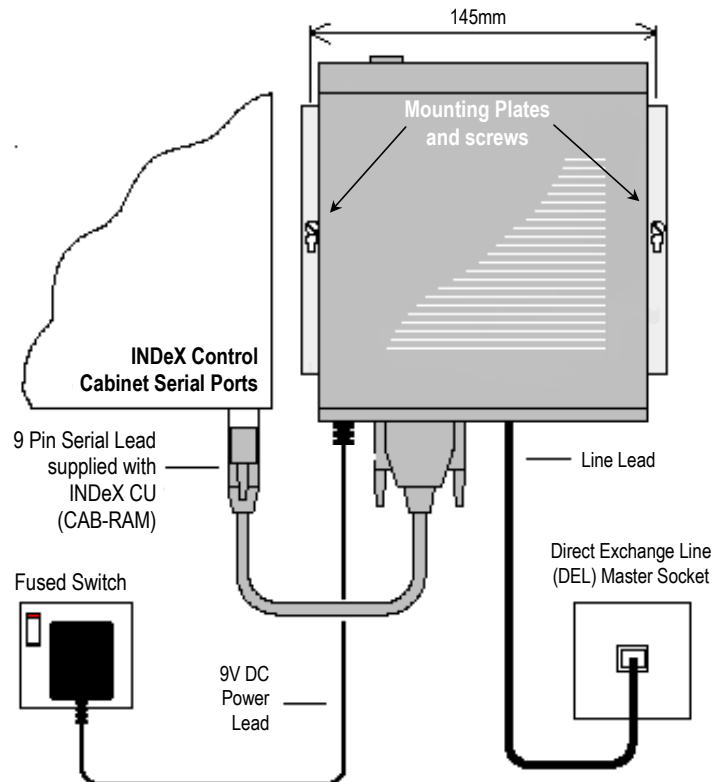

1. A switched and fused mains power socket.
2. A standard direct exchange line master socket (this allows the Remote Access Module to operate independent of the INDeX system's state).
3. A position which leaves the LED indicator lights on the module's front panel clearly visible.

Rack Systems

Some INDeX systems are installed in a rack. In this case, the Remote Access Module can be placed in the base of the rack (directly below the Control Cabinet).

Equipment Supplied & Required

Before installing, check that you have all the parts and tools required.

Remote Access Module Kit

- The Remote Access Module.
- Wall brackets (two) plus screws (four).
- Plug top 9v DC power supply
- Telephone line lead (2.5m).
- Serial Lead (0.5m) (for PC connection only – see page 9).
- This Remote Access Module Short Guide.
- Other item may be included at Avayas' discretion.

Tools & part Required

- Two No. 6 Pan or Round head screws plus suitable wall plug fixings.
- Drill, drill bits and screw drivers for the fitting of the above items.
- Narrow cross-head screwdriver.
- For on-site programming, a PC with comms/terminal package and 9-pin serial port.
- Serial Lead (CAB-RAM) supplied with the INDeX CU (for INDeX system programming).
- Floppy disk labelled *PACE 56 Modem Drivers & Utilities 1.03*

Optional:


- The Remote Access Module provides a socket for a standard telephone. This can then use the direct exchange line when the modem is not active.

Attaching the Mounting Brackets

1. Looking at the base of the unit, there are four fixing screws (beneath the four stick-on pads).
Note: **Do not** remove all of these screws at the same time.
2. Remove two of the pads one one side only, undo and remove the fixing screws. Use two of the longer supplied screws to attach one of the mounting brackets such that the slotted central wall fixing holes are seen from outside the unit. See the illustration on page 4.
3. Repeat step 2 for the other side of the unit for the remaining mounting bracket.

Installing the Remote Access Module

1. Hold the unit against the wall in its intended position. Using the mounting brackets as a template, mark the position of the fixing hole on each side. These are approximately 145mm apart horizontally.
2. Drill and insert two wall plugs and then mount the Remote Access Module on the wall.

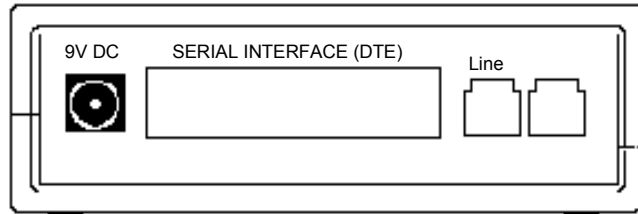

3. Connect the serial cable (CAB-RAM) from the unit's **SERIAL INTERFACE (DTE)** socket (25-pin D-type) to one of the INDeX cabinet's serial ports (9-pin D-types).
 - To use the modem link for remote database up and downloads, you **must** connect the serial cable to the first INDeX serial port.
4. Connect the line lead from the unit's **LINE** socket to the direct exchange line master socket.
 - A dedicated direct exchange line **must** be used to allow the unit to operate independent of the INDeX system.
5. Plug the output lead of the Plug Top 9V Power Supply into the female socket and then connect the plug top into a suitable mains power outlet. When power is applied, press the Power Switch on the front of the unit and the **MR** light on the unit will illuminate.

Installing for Use With INDeX IVM/CCM

The following paragraphs provide the details for instruction details for installation of IND-RAM3 for use with INDeX IVM/CCM. (For details of Network Support Manager and/or KSM Cable, etc. refer to the IVM/CCM Installation Manuals).

IVM Server Cassette Installation

To install the IND-RAM3 on the IVM Server Cassette (SVRC) perform the following.

1. Insert the floppy labelled *PACE 56 Modem Drivers & Utilities 1.03* in the floppy disk drive of the Client PC.
2. Using either the NSM (Net Support Manager) or the KSM Cable connection, connect to the IVM Server Cassette (SVRC) via the LAN or cable.
3. From the IVM Server Cassette (SVRC), right click on **Network Neighborhood** and select **Map Network Drive**.
4. Browse to network and double click on the ' A:\ ' floppy disk drive of the Client PC to map the drive.
5. Go to **Control Panel** and double click on **Modems**.
6. At the **Install New Modem** window, tick the box *Do not detect my modem* and then click on **Next**.
7. At the **Install New Modem** window click on *Have disk*.
8. At the **Install From disk** window, in the *Copy from manufacturers files from box*, type in the route of the mapped floppy disk drive A:\. Click on **OK**.
9. At the **Install New Modem** window, from the **Manufacturers** list select *Pace (PMC Consumer Electronics Ltd.)* and from **Models** list select *Pace 56 Voice Modem*. Click on **Next**.
10. Select the available COM port (e.g. COM1) from the **Install New Modem** window and click **Next**.
11. When the message *You will need to restart your machine* is displayed, click on **OK** then **Finish**.
12. Close the **Modem Properties** window. At the message *Dial-up Networking need to be configured* select **NO**.
13. Restart the PC and shut down the SVRC manually (by pressing the red button on the front of the cassette). Restart the SVRC cassette.

IVM/CCM Client Installation

To install the IND-RAM3 on the IVM and INDeX CCM Client perform the following.

1. Insert the floppy labelled *PACE 56 Modem Drivers & Utilities 1.03* in the floppy disk drive of the Client PC.
2. Go to **Control Panel** and double click on **Modems**.
3. At the **Install New Modem** window, tick the box *Do not detect my modem* and then click on **Next**.
4. At the **Install New Modem** window click on *Have disk*.
5. At the **Install From disk** window, in the *Copy from manufacturers files from* box, type in the route of the mapped floppy disk drive A:\. Click on **OK**.
6. At the **Install New Modem** window, from the **Manufacturers** list select *Pace (PMC Consumer Electronics Ltd.)* and from **Models** list select *Pace 56 Voice Modem*. Click on **Next**.
7. Select the available COM port (e.g. COM1) from the **Install New Modem** window and click **Next**.
8. When the message *You will need to restart your machine* is displayed, click on **OK** then **Finish**.
9. Close the **Modem Properties** window. At the message *Dial-up Networking need to be configured* select **NO**.
10. Restart the PC.

Using With INDeX CCM Client/IVM

To use the Remote Access Module with the INDeX CCM Client or to access the INDeX Server Cassette remotely, perform the following:

1. Using the serial cable (0.5m) supplied with the kit, connect the Remote Access Module to your PC.
2. Ensure that your PC's terminal emulation package (e.g. HyperTerminal) is set to 9600bps, 8 bits, no parity and 1 stop bit.
3. Enter the AT string: AT&F0
This restores the default setting for the module.
4. Disconnect the serial cable from the PC and Remote Access Module. For connection to the CCM, use the serial cable (0.5m) supplied with the kit. For connection to the Server Cassette, use the cable supplied with the Server cassette.

Restoring INDeX Remote Access Module Defaults

The Remote Access Module is supplied pre-set for operation with an INDeX system at 9600bps.

To Locally Restore the Remote Access Module Settings:

1. Using the serial cable (0.5m) supplied with the kit, connect the Remote Access Module to your PC.
2. Ensure that your PC's terminal emulation package (e.g. HyperTerminal) is set to 9600bps, 8 bits, no parity and 1 stop bit.
3. Enter the AT string:

AT&F&D0&K0Q1E0TS0=1 (where 0 = zero).

This sets and stores the preferred settings for INDeX operation as module Profile 0.

The string can be broken down as follows:

&F Restore factory defaults.

&D0 Ignore DTR.

&K0 Disable DTE flow control.

Q1 Disables results code.

E0 Echo disabled.

T Tone dialling.

S0=1 Answer after first ring.

4. When finished with the local PC connection, enter the AT command **ATE0Q1** to switch off command echo and modem responses.
5. Disconnect the serial cable from the PC and Remote Access Module. Reconnect the serial cable (CAB-RAM) from the INDeX cabinet to the Remote Access Module.

Performance figures and data quoted in this document are typical, and must be specifically confirmed in writing by Avaya before they become applicable to any particular order or contract. The company reserves the right to make alterations or amendments to the detailed specifications at its discretion. The publication of information in this document does not imply freedom from patent or other protective rights of Avaya, or others.

Intellectual property related to this product (including trademarks) and registered to Lucent Technologies has been transferred or licensed to Avaya.

This confidential document is the property of Avaya and without its prior written consent may not be disclosed to a third party nor copied.

Copyright 2001 Avaya

Sterling Court
15 - 21 Mundells
Welwyn Garden City
Hertfordshire AL7 1LZ
United Kingdom

Tel: +44 (0) 1707 392200

Fax: +44 (0) 1707 376933

Email: globalsme@avaya.com

Web: <http://www.avaya.com>.