



Avaya Site Administration Reference

14-300610
Issue 5
June 2008

Table of Contents

Using Avaya Site Administration	1
What's New in this Release	1
Overview of the main screen.....	7
Overview of wizards.....	8
Setting up this product	11
Saving changes to Avaya Site Administration properties.....	11
Adding a voice system	12
Connecting to a voice system via SSH through an ASG Guard II.....	13
Adding a messaging system	15
Adding a Modular Messaging system	16
Deleting a voice system or messaging system.....	17
Deleting a voice system or messaging system.....	18
Renaming a voice or messaging system.....	19
Viewing or changing a system's properties	20
Creating command shortcuts	21
Creating a shared system file.....	22
Using a shared system file.....	23
Setting Avaya Site Administration to reconnect to a voice system automatically	24
Scheduling tasks.....	25
Scheduling a task to run	25
Prerequisites	25
Access	25
Use	25
Using the Schedule tab.....	27
Running, Scheduling, Aborting, Changing properties, or Deleting a task	27
Understanding the columns.....	27
Understanding the State column	28
Checking status	29
Using the Status pane.....	29
Controlling the Status pane	29
Using the Status pane.....	29
Using the Schedule tab.....	30
Running, Scheduling, Aborting, Changing properties, or Deleting a task	30
Understanding the columns.....	30
Understanding the State column	32
Using the Connection Status tab.....	33
Disconnecting from a System.....	33
Understanding the columns.....	33
Using the History tab	34
Exporting, Printing, or Deleting the History Log	34
Understanding the columns.....	34
Managing performance.....	35
Improving Grade of Service	35
Synchronizing the voice system and PC time.....	36
Plotting Processor Occupancy or Call Traffic data	37
Viewing voice system hardware configuration.....	38
Viewing system capacity using Avaya Site Administration	39

Table of Contents

Administering voice systems.....	41
Starting GEDI	41
Starting GEDI from the Task tab.....	41
Starting GEDI from the Tree tab.....	41
Starting Terminal Emulation.....	42
Disconnecting from a voice or messaging system.....	43
New Administrator's Guide Book.....	44
Voice system components.....	44
Role of the administrator.....	45
Simplifying end-user management.....	47
Create a system to stay abreast of employee changes.....	47
Require end-user training.....	47
Standardize telephone feature configurations.....	47
Involve end-users in planning for new system and departmental changes.....	48
Daily administrator tasks.....	49
Weekly administrator tasks.....	51
Monthly administrator tasks.....	52
Other tasks.....	53
Command language and syntax.....	54
Command components.....	54
Command types.....	54
Command abbreviations.....	55
Working with end users.....	56
Assessing end-user training needs.....	57
Preparing end-user training.....	58
Delivering end-user training.....	60
Communicating with end users.....	62
Establish standard communication procedures.....	62
Identify important information and distribute it to company employees.....	62
Planning your Communication Manager system.....	64
Voice system components.....	64
System add ons.....	65
Understanding the dial plan.....	66
Displaying your dial plan.....	68
Modifying your dial plan.....	69
Adding extension ranges.....	70
Adding feature access codes.....	71
Changing feature access codes.....	72
Setting up phones.....	73
Adding new phones.....	73
Adding a phone and messaging subscriber.....	74
Entering Native Names.....	75
Using station templates to add phones.....	77
Adding feature buttons to a phone.....	78
Adding feature buttons to a new phone.....	78
Adding feature buttons to an existing phone.....	78
Adding a fax or modem.....	79
Adding an extension without hardware.....	80
Adding the extension.....	80

Setting Up a Voice Mailbox	80
Changing a phone user's information.....	81
Changing a phone user's information.....	82
Using an alias.....	83
Customizing your phone	84
Upgrading phones	85
Swapping phones using a wizard.....	86
Removing a phone or subscriber	87
Understanding attendant consoles.....	88
Changing attendant consoles	88
Changing COR values	89
Changing COS values	90
Managing phone features	91
Changing feature parameters	91
Creating pickup groups	92
Creating coverage paths.....	93
Setting up bridged call appearances	95
Routing outgoing calls.....	97
World class routing	97
Adding a new area code or prefix.....	98
Using ARS to restrict outgoing calls	100
Overriding call restrictions.....	101
ARS Partitioning	102
Advanced voice system administration	103
Globally changing voice system data	103
Entering Native Names	104
Trunks	106
Understanding trunks.....	106
Preparing to add a trunk	107
Adding trunk groups.....	109
Night Service	111
Setting up night service.....	111
How do night service types interact?.....	112
Announcements.....	113
What is an announcement?	113
Adding announcements	114
Voice Announcement over LAN (VAL).....	114
Recording announcements	116
Professional or computer recordings	116
Recording new announcements at a computer.....	117
Deleting announcements	118
Backing up your announcements	119
Hunt groups	120
What are hunt groups?	120
Setting up hunt groups.....	121
Setting up a queue.....	123
Adding hunt group announcements	124
Call distribution methods.....	125
Vectors and Vector Directory Numbers (VDNs)	126

Table of Contents

What are vectors?.....	126
Writing vectors.....	127
Allowing callers to leave a message	128
Example.....	128
Inserting a step into a vector.....	129
Entering a variable to a vector	130
Deleting a step from a vector	131
Diagnosing a vector problem	132
Voice system reports	133
Using report scheduler.....	133
Analyzing report data.....	134
Using attendant reports.....	135
Using trunk group reports	136
Measuring call center performance.....	137
What should I measure?	137
How many people can use voice system reports?	137
Viewing Hunt Group Measurements reports.....	138
Viewing Hunt Group Performance reports.....	139
Call centers.....	140
What is a call center?.....	140
Planning a call center.....	141
Setting up the call flow	142
Testing the system.....	143
Monitoring your call center.....	144
Viewing system capacity.....	145
Understanding Automatic Call Distribution	146
Enhancing an ACD system	147
Selecting a Call Management System.....	148
Where to get more information	149
Printing button labels	150
Understanding the Button Label text template.....	150
What the \$ signs mean.....	150
How Avaya Site Administration creates button labels	151
Printing button labels	152
Frequently Asked Question	152
Creating, changing, or viewing button label text	153
Importing and exporting voice system data	154
Setting the import and export defaults.....	154
Exporting data from a voice system	155
Exporting Call Accounting data into a file.....	156
Exporting unused port data.....	157
Exporting data to an LDAP directory	158
Exporting Native Names	161
Importing data into a voice system.....	162
Importing Native Names	163
Administering messaging systems.....	165
Adding a phone and messaging subscriber.....	165
All other voice mail administration.....	166
Security	167

ASG..... 167

Assigning and changing administrators..... 168

Top 11 tips to help prevent toll fraud 169

Using Call Detail Recording reports to detect problems 171

Using Security Violations Notification to detect problems 172

About system security..... 173

Using Native Names 175

Using Native Name..... 175

Using the Avaya Bulk Import Tool (ABIT)..... 176

 Requirement 176

 Getting ABIT 176

 Starting ABIT..... 176

 Importing Data..... 176

 Editing Data 176

 Saving Station Data..... 176

Entering Native Names 177

Importing Native Names 179

Exporting Native Names 180

Troubleshooting..... 181

Contacting Us..... 245

Index 249

Using Avaya Site Administration

What's New in this Release

Avaya Site Administration Release 5.0 Service Pack 1 introduces the following enhancements:

- Support for Avaya Communication Manager Release 5.1.
- Support for the S8510 server.
- Support for the S8400B server.
- Support for the new G350 media gateway CPU.
- Support for the cos-group object in the Import and Export wizards.

Release 5.0

Avaya Site Administration Release 5.0 introduced the following enhancements:

- Support for Avaya Communication Manager Release 5.0.
- Support for the S8300D server.
- Support for the G450 media gateway.
- Support for the following routers with the IG550 Integrated Gateway:
 - J2320
 - J2350
 - J4350
 - J6350
- Support for the following media modules on the IG550 Integrated Gateway:
 - TIM508 (8-port FXS Analog Telephony Interface Module)
 - TIM510 (DS1 Telephony Interface Module)
 - TIM514 (4+4-port Analog Telephony Interface Module)
 - TIM516 (16-port FXS Analog Telephony Interface Module)
 - TIM518 (8+8-port FXS/FXO Analog Telephony Interface Module)
 - TIM521 (4-port BRI Telephony Interface Module)
- Support for the Samsung Ubigate iBG Router.
- Support for the following new set types in the Browse Station, Import, Export, Templates, Find and Replace, Add User, and Change User wizards:
 - 9630G IP Telephone
 - 9640G IP Telephone
 - 4620SIPCC Telephone
- Added the following two fields in the Trunk-Group object in Templates and Import/Export:
 - Service Provider Network Call Redirection?
 - Send Transferring Party Information?

- The ability to set Avaya Site Administration to remove any links to an extension when you remove that extension. Avaya Site Administration uses the "list usage" command to find any links to the extension, and then removes those links before removing the extension. You specify this setting on the General tab in the Options screen (**Tools>Options**).
- The ability to set Avaya Site Administration to use a fallback mechanism when it is unable to connect using the SSH algorithm set. You specify this setting on the General tab in the Options screen (**Tools>Options**).
- Display the banner text and password aging warning when Auto Login is used. Avaya Site Administration captures the text from Avaya Communication Manager between the login request and the terminal type definition (that is, the banner and the password aging warning) when Automatic Login is enabled. Avaya Site Administration displays this text when a connection is established to an Avaya Communication Manager system for the first time in a given session.
- The ability to change your password during Auto Login if your password has expired. During Auto Login, if Avaya Site Administration determines that your password has expired due to password aging, you will be prompted to change your password.
- The ability to set Avaya Site Administration to clear the Name or Native Name field on the voice system if these fields are left blank when using the MultiLingual wizard. You enable this feature using the Clear Switch Records check box in the MultiLingual Wizard Task – Select Object dialog box. Avaya Site Administration will clear the Name and Native Name fields on the voice system if the Clear Switch Records check box is enabled and the Name1 and Native Name fields are empty in the row of the grid.

Release 4.0

Avaya Site Administration Release 4.0 introduced the following enhancements:

- Support for the following media servers:
 - S8300C
 - S8500C
 - S8720XL
- Support for the following new set types:
 - 9610
 - 9620
 - 9630
 - 9640
 - 9650
- Disable FTP and telnet services by default for secure connectivity. In Avaya Communication Manager Release 4.0, FTP and Telnet are disabled by default.
- Support for external authentication servers when logging into a voice system:
 - Incorporation of a SecurID client into the Avaya Site Administration automatic login for token generation if you use a SecurID authentication server.

- Incorporation of a SafeWord client into the Avaya Site Administration automatic login for token generation if you use a SafeWord authentication server.
- Improvements to Avaya Communication Manager logging. All OSSI connections to voice systems running Avaya Communication Manager Release 4.0 in the following situations will be identified as "asa" in the secondary user name in the syslog:
 - Task execution (automatic login)
 - GEDI (automatic login)
 - Terminal emulation (automatic login)
 - Task execution (manual login)
 - GEDI (manual login)

This feature will enable you to determine which commands came from Avaya Site Administration.

- Support for 13-digit dial plan in Avaya Communication Manager Release 4.0.
- Support for increased trunks from 8000 to 12000.
- Support for the Call Forwarding Enhanced feature.
- Support for the Team feature button.
- Support for Erase User Data from DCP telephones.
- Support for Bridged Appearance COR Calling Restriction.
- J24 Support for Kanji displays.
- Support for the E911 Public Safety Answering Point feature.
- Support for EC500 New SMODE, DMODE RTUs, and Application Types.
- Support for the Mask CLI/Station Name and Number for internal calls.
- Support for Activation of Station Lock by Time Day.
- Support for the Limit Number of Concurrent Calls (Limit-Call) feature button.
- Support for the Auto Callback feature.
- Improved support for complex private numbering plans.
- ISO 8859-1 encoding compatibility
- Support for the Call Center Release 4.0 features:
 - Office Hours Table Routing
 - Multiple Observers with Service Observing
 - Forced Agent Logout by Clock Time
 - Call Vectoring enhancements
- Added the Provide Ringback field in the Hunt-Group object.
- Added the following fields in the Trunk-Group object:
 - Diversion by Reroute field
 - Path Replacement field

- Display Forwarding Party Name field
- Prepend '+' to Calling Number field
- Send EMU Visitor CPN field
- Added the IP Video Softphone field in the Station Object.
- Templates for the following stations:
 - 2410 Digital telephone
 - 2420 Digital telephone
 - 4610 IP telephone
 - 4620 IP telephone
 - Softphone (4620)

You can edit these templates. Avaya Site Administration keeps a copy of the original templates so that you can return to the default settings. To restore the default settings for a template, right-click on that template.

- The ability to administer a Next feature button on the Station object.
- The ability to access the Avaya Communication Manager Administration guide from Avaya Site Administration.
- The ability to sort items in the tree alphabetically. To sort the items in the tree, right-click in the tree and select **Sort Contents**.
- Enhancements requested by the INAAU:
 - The ability to set Avaya Site Administration to re-establish the connection to a voice system automatically when you abort a task from the Schedule tab. (If you logged into the system manually, you will be prompted to enter your login and password.) You specify this setting on the Reconnect tab in the Options screen (**Tools>Options**).
 - The ability to configure the default format for the date that is appended to exports and reports. You specify this setting on the Export tab in the Options screen (**Tools>Options**).
 - The ability to create custom labels for DID ranges. The label can consist of up to 15 characters. These labels are displayed in the Find Unused Extensions report.
 - The first letter of the default label text in the Button Properties screen is now in upper case for every feature.
 - The ability to save a task in the tree after you performed that task. To use this feature, click the **Save information in tree** check box in the task properties screen (for example, on the Schedule tab in the Export Data screen).

Release 3.1

Avaya Site Administration Release 3.1 introduced the following enhancements:


- Support for the following media servers:
 - S8400
 - S8720
- Support for the following media modules and boards:

- G250-DCP media module
 - G250-DS1 media module
 - HDMM 40-port Power over Ethernet media module
- Enhanced integration with Modular Messaging
- Support for the following new set types:
 - 4601+
 - 4602+
- Support for increased Class of Restriction from 96 to 996.
- Support for increased IP trunks for signaling
- Support for increased text fields for feature buttons
- Support for the Call Center feature Forced Agent Logout
- Support for additional fields in the VDN object in the Import wizard and Export wizard
- Support for multi-instance fids objects in the Import wizard and Export wizard for the following objects:
 - Feature buttons, softkey buttons, and expansion module buttons and their associated data subfields for stations
 - Vector steps and their associated data subfields for vectors
- Ability to enter a user-specified vector variable in the Edit Vector screen of the GEDI.
- Ability to bulk import and export NAME1 and NAME2 fields for stations
- MultiLingual Name Wizard that enables you to enter a Name and Native Name in Unicode for the following objects:
 - Hunt Group
 - Trunk Group
 - Station
 - VDN
- Support for the following new objects in the Import wizard and Export wizard:
 - Public-Unknown-Numbering
 - Incoming-Call-Handling-Treatment
- Enhancements requested by the INAAU:
 - The ability to resize the Port Usage dialog box
 - The ability to export the port usage data
 - The ability to print the port usage data
 - The ability to resize the Unused Port dialog box
 - The ability to minimize the Unused Port dialog box and keep it open while you perform other tasks.

- The ability to define the default delimiters that will be used in the Import wizard and the Export wizard. You specify these default delimiters in the Options screen.
- The ability to define the default directory that will be used by the Import wizard, the Export wizard, and other import and export tasks such as export from GEDI and export from the Browse Unused Port wizard.
- ASA prints the required date range that is specified in the Trunk Analyzer wizard at the top of the page when you generate the report
- ASA displays system names that consist of up to 50 characters.
- The ability to restore the column order in the import grid to the original default order.
- Updated hardware descriptions for the Hardware Manager

Overview of the main screen

Click an area of the Avaya Site Administration screen to learn more about it.

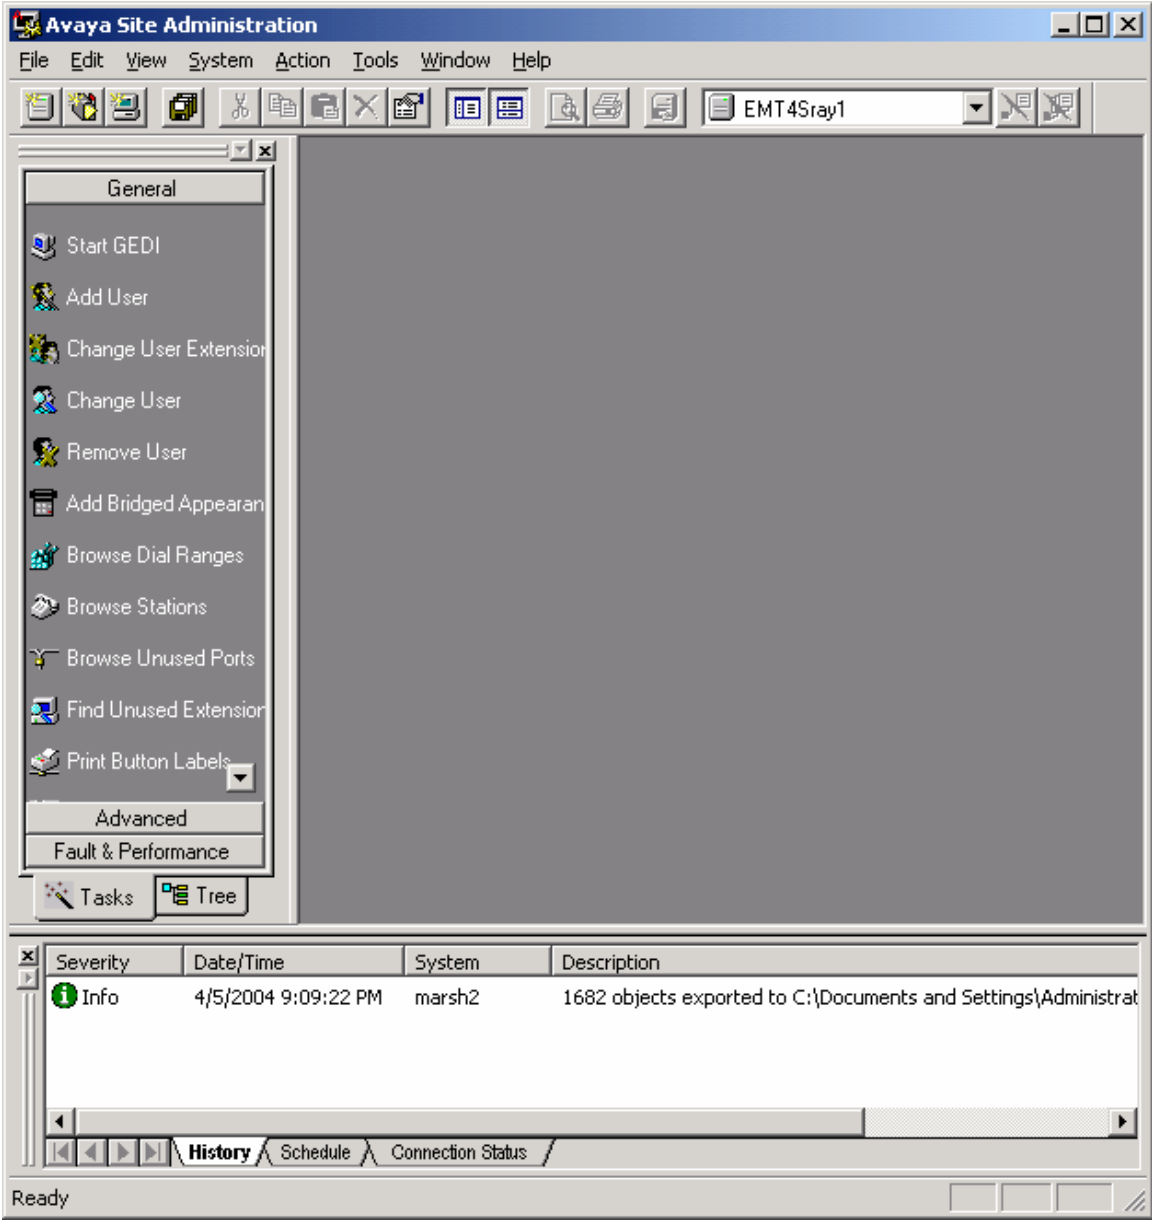




 

 



Overview of wizards

Avaya Site Administration offers several wizards to help simplify day-to-day voice system administration tasks. All Avaya Site Administration wizards apply to the voice system that has been selected in the Target System list on the toolbar. If you can't find a wizard for the task you want to perform, you can access your voice system, by clicking **Start GEDI** or **Start Emulation**.

Three of the wizards also affect messaging systems: **Add User**, **Change User Name**, and **Remove User**. The messaging system that is affected by these wizards is the one that you select on the first page of the wizard.

This topic describes what each wizard is for. To learn how to use a wizard, see [Using wizards](#).

General

 Start GEDI	This opens a GEDI (Graphically Enhanced DEFINITY Interface) window. Click this icon when you want to administer your voice system and can't find a wizard to help you.
 Add User	This helps you create a new extension on your voice system, or a new mailbox on your messaging system.
 Change User	This lets you change information associated with a particular extension on your voice system (or mailbox on your messaging system).
 Remove User	This helps you delete a person from your voice system and messaging system. It automates the process of removing that person from all the groups they may be a part of.
 Add Bridged Appearance	This automates the process of adding a bridged appearance to a phone. You might want to add a bridged appearance so someone can pick up calls that are going to a different phone, with the press of a button.
 Browse Dial Ranges	This enables you to see the dial ranges that have been set up in the dial plan for the selected voice system. You might want to use this wizard before adding an object to the voice system, so you don't accidentally assign the new object an extension that has been saved for a different use.
 Browse Stations	This displays a list of the stations that have been defined on your voice system, based on the selection criteria (extension range and/or set type) that you specify.
 Browse Unused Ports	This finds the next unused port. You need this information before you can add certain objects (like new phones) to your voice system.
 Find Unused Extension(s)	This finds the next unused extension, once you give it the extension range you want to look in. You might want to use this wizard before adding an object to the voice system, so you don't accidentally assign the new object an extension that has already been used.



This enables you to print labels for the buttons on your phones, using a button label template that you set up beforehand.



This lets you "swap stations," or move a station to the other station's port and vice versa.

Advanced



This enables you to create template copies from the most common objects that you add to your voice system (like phones, hunt groups, and so on). Templates save you from entering the same information in many places, and can help increase the consistency of settings from one object to another.



This enables you to use the templates you created with the "Create New Template" wizard to add new objects to your voice system.



 
This enables you to export data from your voice system to a file that your call accounting software can use.



This enables you to generate and schedule a DEFINTY command report that can be printed, exported, or e-mailed.



This enables you to export data from your voice system to a file that other software applications (like spreadsheets or databases) can use.



This enables you to import data from a spreadsheet or database application into your voice system.



This enables you to search your voice system for certain settings or information and optionally replace the old information with new information.



This enables you to start a terminal emulation session to your voice system. Terminal emulation gives you access to screens you can use to administer your system.

Fault & Performance



This displays a screen that shows a schedule and status of all data polling tasks for a particular voice system. From that screen you can set up polling tasks.



This enables you to set up Avaya Site Administration to automatically notify you of any unresolved alarms on the system.



This enables you to set Avaya Site Administration up to automatically check for trunks that are out of service and notify you when it finds one.



This enables you to gather trunk data, from which you can create a report that gives recommendations on achieving a specified grade of service



This enables you to measure and assess the performance of your voice system over a period of time under different loads. After the data is collected,



Call Traffic

you can then plot that data on a graph

This enables you to monitor the volume, type, and distribution of call traffic in order to measure how a voice system is performing. After the data is collected, you can then plot that data on a graph



System Capacity

This enables you to view the maximum capacities of your system and your current level of usage.



Audits

This enables you to look for redundant or unused data on your voice system. It can help you clean up your voice system quickly without having to manually look through a large number of screens



Time Synchronization

This enables you to set up the voice system time to match the clock on your PC, or set an offset between the voice system time and your PC time in the event they are in different time zones




Hardware Manager

This enables you to see a representation of your voice system configuration in a tabular and carrier layout. Included in this representation are all of the voice system's boards and carriers, and any alarms or errors for that hardware.

Setting up this product

Saving changes to Avaya Site Administration properties


If you have been making configuration changes to Avaya Site Administration, such as creating command shortcuts, creating folders, changing system properties, etc., your changes are not saved until you do one of the following:

- Shut down (exit) Avaya Site Administration.
- Click  on the toolbar.
- Select **File>Save Configuration** from the menu bar.

It is recommended that you save your configuration after making any such changes, so that any changes are not lost unexpectedly due to a power outage, system crash, etc.

Adding a voice system

To set up Avaya Site Administration so it has the information it needs to connect to a voice system, complete the following steps:


- 1 From the toolbar at the top of the screen, click  , or select **File>New>Voice System**.
- 2 Complete the wizard screens. If you need help with a wizard screen, click **Help** on that screen.
- 3 You can confirm that the voice system was added by clicking the **Tree** tab and seeing that it appears in the Tree.

You can add as many systems as you want. Doing so provides Avaya Site Administration with setup information only. If you add several systems, it doesn't necessarily mean you can connect to them all simultaneously. The number of simultaneous connections you can have depends on your hardware configuration. For example, if you are connecting to systems using serial ports, you can connect to as many voice systems at once as you have COM ports.

Connecting to a voice system via SSH through an ASG Guard II

This procedure describes how to configure Avaya Site Administration to establish an SSH connection to a Linux-based media server (such as an S8700) through an ASG Guard II.


Complete the following steps:

- 1 From the toolbar at the top of the screen, click , or select **File>New>Voice System**.
The Add Voice System dialog box appears.
- 2 In the Voice System Name box, enter a name for the media server to which you want to connect.
- 3 Click the **Next** button.
The next Add Voice System dialog box appears.
- 4 Specify how you will connect to this media server.
- 5 Click the **Connect via ASG Guard** check box.
- 6 Click the **Next** button.
The Connect via an ASG Guard dialog box appears.
- 7 In the FQDN or IP address box, enter either the fully-qualified domain name or the IP address of the ASG Guard.
- 8 Click the **Next** button.
The next Connect via an ASG Guard dialog box appears.
- 9 Make sure the **SSH** option button is selected.
- 10 Click the **Next** button.
The next Connect via an ASG Guard dialog box appears.
- 11 In the Host Name box, enter the host name for the media server that is configured on the ASG Guard.
- 12 Click the **Next** button.
The next Connect via an ASG Guard dialog box appears.
- 13 In the Timeout for establishing connection box, enter the maximum number of seconds that Avaya Site Administration will try to connect to the media server. .
- 14 In the Timeout for sustaining an idle connection box, enter a value other than 0 to make sure the connection to the media server is not active permanently.
- 15 Click the **Next** button.
- 16 Specify whether you want to log into the media server automatically or manually.
- 17 Click the **Next** button.
- 18 Perform one of the following steps:
 - If you are logging into the media server automatically:
 - a. From the Authentication Methods drop-down list box, select whether ASG Key or a password is the authentication method for your login on the ASG Guard.
 - b. In the Login box, enter your Avaya user ID.
 - c. Perform one of the following steps:
 - If you selected **Password** in Step A, enter your password for the ASG Guard in both Password boxes.

- o If you selected **ASG Key** in Step A, enter your 20-digit, secret ASG key in the Secret Key box. Avaya Site Administration will encrypt your key using 3DES encryption and store this encrypted key on the PC.
 - d. From the Use Bulk Cipher drop-down list box, select the encryption algorithm you want to use when transferring data between Avaya Site Administration and the media server when using SSH.
 - e. From the Compression drop-down list box, select the compression level you want to use when transferring data between Avaya Site Administration and the media server when using SSH. Available choices are 1 to 9 (1 for lowest compression and 9 for highest compression). If you do not want to use compression, set this parameter to 0. A compression level of 6 is recommended for optimum performance.
 - f. Go to Step 19.
 - If you are logging into the media server manually:
 - a. From the Authentication Methods drop-down list box, select whether ASG Key or a password is the authentication method for your login on the ASG Guard.
 - b. From the Use Bulk Cipher drop-down list box, select the encryption algorithm you want to use when transferring data between Avaya Site Administration and the media server when using SSH.
 - c. From the Compression drop-down list box, select the compression level you want to use when transferring data between Avaya Site Administration and the media server when using SSH. Available choices are 1 to 9 (1 for lowest compression and 9 for highest compression). If you do not want to use compression, set this parameter to 0. A compression level of 6 is recommended for optimum performance.
 - d. Go to Step 21.
- 19 Click the **Next** button.
- 20 In the Login ID box, enter the media server login ID that the ASG Guard will use to log into the media server. The credentials for this login are configured on the ASG Guard.
- 21 Click the **Next** button.
- 22 Click the **Next** button.
- 23 Click the **Finish** button.

Adding a messaging system

To set up Avaya Site Administration so it has the information it needs to connect to a messaging system, complete the following steps:


- 1 From the toolbar at the top of the screen, click  , or select **File>New>Messaging System**.
- 2 Complete the wizard screens. If you need help with a wizard screen, click **Help** on that screen.
- 3 You can confirm that the new messaging system was added by clicking the **Tree** tab and seeing that it appears in the Tree.

You can add as many systems as you want. Doing so provides Avaya Site Administration with setup information only. If you add several systems, it doesn't necessarily mean you can connect to them all simultaneously. The number of simultaneous connections you can have depends on your hardware configuration. For example, if you are connecting to systems using serial ports, you can connect to as many voice systems at once as you have COM ports. If you are connecting to systems over a network, you can connect to as many systems as you need to at once.

Adding a Modular Messaging system

This procedure describes how to configure Avaya Site Administration to connect to a Modular Messaging system. Before you can connect to a Modular Messaging system via Avaya Site Administration, you must administer the Modular Messaging system.

To configure Avaya Site Administration to connect to a Modular Messaging system, complete the following steps:

- 1 From the toolbar at the top of the screen, click  , or select **File>New>Messaging System**.

The Add Messaging System dialog box appears.

- 2 In the Messaging System Name box, enter a name for this connection.
- 3 Click the **Modular Messaging System** check box.
- 4 In the Shared Systems area, specify whether this Modular Messaging system is a local system or a shared system.
- 5 Click the **Next** button.

The next Add Messaging System dialog box appears.

- 6 Click the **Next** button.
- 7 Enter either the fully-qualified domain name of the Modular Messaging system or the IP address of the Modular Messaging system.
- 8 Click the **Next** button.

The TCP/IP Port Number box displays the default setting (389).

- 9 Click the **Next** button.
- 10 In the Timeout for sustaining an idle connection box, enter a value other than 0 to make sure the connection to the Modular Messaging system is not active permanently.
- 11 Click the **Next** button.
- 12 Click the **Next** button.
- 13 In the Login ID box, enter the trusted-server name you configured in Modular Messaging.
- 14 In the Base DN box, enter the Base DN for all subscriber entries.
- 15 Click the **Next** button.
- 16 In the Password box, enter the password you configured for the trusted server in Modular Messaging.
- 17 In the Password (again) box, re-enter the password you configured for the trusted server in Modular Messaging.
- 18 Click the **Next** button.
- 19 Click the **Finish** button.


Deleting a voice system or messaging system

You cannot delete a folder, voice system, or messaging system if there are any tasks listed in the Schedule for that system. Be sure that you have moved any items you want to keep elsewhere before you remove folders, voice systems or messaging systems from the Tree tab.

To delete a voice system or messaging system:

- 1 Click the **Connection Status** tab.
- 2 Confirm that Avaya Site Administration is not currently connected to the voice system or messaging system you want to delete.

If Avaya Site Administration is connected to the voice system you want to delete:

- a) Select the voice system you want to delete in the Target System list.
 - b) Click  to close the GEDI or terminal emulation window for that voice system.
 - c) Disconnect from the voice system.
- 3 Confirm that there are no tasks in the schedule that refer to the voice system or messaging system, as follows:
 - a) Click the **Schedule** tab.
 - b) In the Schedule Tab window, click the **System** column heading.
This will group all of the tasks together by system.
 - c) Scroll down to the system you want to delete.
 - d) Delete all of the tasks for the system you want to delete, even those tasks that are complete or failed, by right-clicking on each task to be deleted and selecting **Delete**, or by clicking on the task and pressing the DELETE key on your keyboard.
 - 4 On the browser pane, click the **Tree** tab.
 - 5 Right-click the voice system or messaging system that you want to delete.
 - 6 Select **Delete**.
Note that the Delete option only appears if all tasks are deleted from the Schedule tab.
 - 7 Click **Yes** to confirm the deletion.


Deleting a voice system or messaging system

You cannot delete a folder, voice system, or messaging system if there are any tasks listed in the Schedule for that system. Be sure that you have moved any items you want to keep elsewhere before you remove folders, voice systems or messaging systems from the Tree tab.

To delete a voice system or messaging system:

- 1 Click the **Connection Status** tab.
- 2 Confirm that Avaya Site Administration is not currently connected to the voice system or messaging system you want to delete.

If Avaya Site Administration is connected to the voice system you want to delete:

- a) Select the voice system you want to delete in the Target System list.
 - b) Click  to close the GEDI or terminal emulation window for that voice system.
 - c) Disconnect from the voice system.
- 3 Confirm that there are no tasks in the schedule that refer to the voice system or messaging system, as follows:
 - a) Click the **Schedule** tab.
 - b) In the Schedule Tab window, click the **System** column heading.
This will group all of the tasks together by system.
 - c) Scroll down to the system you want to delete.
 - d) Delete all of the tasks for the system you want to delete, even those tasks that are complete or failed, by right-clicking on each task to be deleted and selecting **Delete**, or by clicking on the task and pressing the DELETE key on your keyboard.
 - 4 On the browser pane, click the **Tree** tab.
 - 5 Right-click the voice system or messaging system that you want to delete.
 - 6 Select **Delete**.
Note that the Delete option only appears if all tasks are deleted from the Schedule tab.
 - 7 Click **Yes** to confirm the deletion.

Renaming a voice or messaging system

Renaming a voice system or messaging system will not change the name of the system referred to by the tasks scheduled for that system until the task is run.

- 1 On the browser pane, click the **Tree** tab.
- 2 Right-click the voice system or messaging system that you want to rename and select **Rename**.
- 3 Edit the name or type the new name over the old one.
- 4 Press the **ENTER** key.

Viewing or changing a system's properties

- 1 On the browser pane, click the **Tree** tab.
- 2 Right-click on the voice system or messaging system you want to view or change.
- 3 Select **Properties**.
- 4 On the System Properties screen, change any fields you want.
 - To change the name of the voice system or messaging system that appears in Avaya Site Administration screens, type a new name in the System Name field.
 - To change the default terminal emulation type, click the down arrow in the Default Emulator field and select the one you want.
 - To make Avaya Site Administration log into the system manually, select the **Log in manually** check box.
 - To make Avaya Site Administration log in to the system automatically, make sure the **Log in manually** check box is clear, and complete the Password or Secret Key fields.
 - To add a connection, click **Add** and fill out the subsequent screens.
 - To view or change a connection, select the connection and click **Properties**.
 - To remove a connection, select the connection and click **Remove**.
 - If you added multiple connections for a voice system, you can set the order in which Avaya Site Administration will use these connections. When you select **Connect**, Avaya Site Administration will try to connect to the voice system via the connection to which you assigned the highest priority (that is, the connection to which you assigned the lowest number, such as **1**, in the Default Connection Id box). If Avaya Site Administration is unable to establish a connection, it will use the next connection in your list (for example, the connection you specify as **2** in the Default Connection Id box.)

To set the default connection order for your connections, select a connection and enter its connection ID in the Default Connection Id box. For example, if you want the selected connection to be the connection that Avaya Site Administration uses by default when you select **Connect**, enter **1** in the Default Connection Id box. Repeat this step for each connection. (Be sure to assign a unique connection ID to each connection.)
- 5 Click **OK** when you are finished.

Creating command shortcuts





Use command shortcuts to go directly to the appropriate GEDI screen for common voice system administration tasks. To create new command shortcuts:


- 1 On the browser pane, click the **Tree** tab.
- 2 Double-click the voice system you want to administer.
- 3 Right-click on the folder where you want to put the new command shortcut, or on the voice system if you want to put the shortcut in the level underneath the voice system (you can always drag it somewhere else later).
- 4 Select **General>Create New Shortcut**.
- 5 Complete the Command Shortcut Properties screen, using the online help as needed.

Creating a shared system file

A shared system file enables you to define all of the connection information for multiple voice systems and messaging systems in a single file. Other PCs in your company that are running Avaya Site Administration can then use this file to connect to the defined systems. A shared system file eliminates the need for you to define connectivity information for every device in every installation of Avaya Site Administration in your company.

To create a shared system file, perform the following steps:

- 1 From the Tools menu, select **Options**.
The Options dialog box appears.
- 2 In the Shared Systems area on the General tab, make sure the **Share System File** check box is enabled.
- 3 In the File box, enter the name of the shared system file you want to create. Click  to specify the location for this file. Be sure to save this file to a location that other Avaya Site Administration users can access.
- 4 Click **OK** to save your changes and close the Options dialog box.
- 5 Perform one of the following steps:
 - If you want to add a new voice system, click  on the toolbar, or select **File>New>Voice System**.
 - If you want to add a new messaging system, click  on the toolbar, or select **File>New>Messaging System**.
 - If you want to add a new generic device, click  on the toolbar, or select **File>New>Generic Device**.
The Add System dialog box appears.
- 6 In the System Name box, enter the name for this system.
- 7 In the Shared Systems area, click the **Shared System** option button.
- 8 Complete this dialog box, and then click **Next**.
- 9 Complete the subsequent wizard dialog boxes to add the device information to the shared system file. If you need help with a dialog box, click **Help** on that dialog box.

When you are finished adding the device information to the shared system file, the shared device appears in the Tree tab and the Target System drop-down list box with a sharing hand icon (for example, .

NOTE:

The shared system file can contain the connection information for multiple devices. If you want to add other devices to the shared system file, repeat steps 5 through 9.


Using a shared system file


Use this procedure to access an existing shared system file. Before performing this procedure, you must know the location and name of the shared system file you want use.

To use a shared system file, perform the following steps:

- 1 From the Tools menu, select **Options**.


The Options dialog box appears.

- 2 In the Shared Systems area on the General tab, make sure the **Share System File** check box is enabled.
- 3 In the File box, enter the location and name of the shared system file you want to use. Click  to find this file.
- 4 Click **OK** to save your changes and close the Options dialog box.

The shared devices configured in that shared system file appear in the Tree tab and the Target System drop-down list box with a sharing hand icon (for example, .

NOTE:

Keep in mind the following information:

- If anyone updates the shared system file with new information, the other users can load this updated file by clicking  on the toolbar or restarting Avaya Site Administration.
- If you unselect the **Share System File** check box in the Options dialog box, a message box appears, warning you that all of the shared devices in the shared system file will be removed from Avaya Site Administration.

Setting Avaya Site Administration to reconnect to a voice system automatically

Use this procedure to configure Avaya Site Administration to re-establish the connection to a voice system automatically when you abort a task from the Schedule tab. If you logged into the system manually, you will be prompted to enter your login and password.

To configure Avaya Site Administration to reconnect to a voice system automatically, perform the following steps:

- 1 From the Tools menu, select **Options**.

The Options dialog box appears.

- 2 Click the **Reconnect** tab.
- 3 Click the **Re-establish connection after aborted/cancelled task** option button.
- 4 Click **OK** to save your changes and close the Options dialog box.

Scheduling tasks

Scheduling a task to run

Prerequisites

You can schedule tasks to run on a voice system if you set up Avaya Site Administration to log in automatically on that voice system. If you set up Avaya Site Administration to log in manually, then it will not be able to execute the tasks at the scheduled time because it does not have the login and security information it needs to access the voice system.

Therefore, if you want to schedule tasks, be sure you set up Avaya Site Administration to log in automatically. If you are unable to set up an automatic login, you can manually log in to Avaya Site Administration in order to establish a connection so that a scheduled task can run at the designated time.

In addition, be aware that if you schedule the job, any open Terminal Emulation windows can delay the job or cause it to fail.

Access

You can access the scheduler in several ways:

- By clicking the Schedule option in a task wizard.
- By clicking **Schedule** on the GEDI window.

If clicking **Schedule** doesn't display the Schedule pane, it's because GEDI is still waiting for some required information. Generally, the cursor will blink in the field that must be completed. Look at the bottom of the GEDI window for help.

- By right-clicking the task in the **Tree** tab and selecting **Schedule**.
- By right-clicking the task in the Schedule pane or the Data Polling Schedule screen and selecting **Schedule**.

Use

- 1 In the scheduler's Date field, type the day, month, and year you want the task to run for the first time, or click the down arrow and, on the calendar that appears, click on the date you want the task to run.
- 2 In the Time field, type the time that you want the task to run for the first time, or select the hour, minutes, or seconds and click the up and down arrows.
- 3 In the Recurrence Pattern box, select the frequency at which you want the task to run.

Pattern	Description
Once	To run the task once, as specified in the Date and Time fields.
Frequent	To run the task at the date and time specified, and to repeat running the task as specified in the hours and minutes fields.
Weekly	To run the task on the specified days of the week, starting from the specified date and time above.
Monthly	To run the task on the specified day of the month. Note that if you specify more days than days that are in that month, the task will run on the last day of

the month.

- 4 Specify whether you want Avaya Site Administration to disconnect from the voice system when it has finished running the task.

Note


If you are scheduling a task that will run on the voice system and messaging system, and if both systems are using the same modem or COM port, make sure that you select "Disconnect from system." If you do not do this, the voice system will remain connected after running the task on the voice system, and Avaya Site Administration will not be able to connect to and run the task on the messaging system.

- 5 Click **OK**.

Using the Schedule tab

The Schedule tab displays tasks that have run, are running, or are scheduled to run in the future. It also shows whether a task succeeded or failed. If the task failed, the Schedule tab displays the error message. The Schedule tab is dynamic, meaning that as a task passes through different stages of execution (such as from "Connecting" to "Running"), that change is immediately shown on this tab.

You can run, reschedule, view and change task properties, and abort scheduled tasks from this location.

If you do not see the Schedule tab on your screen, click  on the toolbar. You can move and resize the Status pane (which contains the Schedule tab). To learn how, see Using the Status Pane.

Running, Scheduling, Aborting, Changing properties, or Deleting a task

To...	Do this...
View or change task properties	Right-click the task and select Properties .
Run a task	Right-click the task in the Schedule tab and select Run now. If you run the task now and it has a recurrence schedule as shown in the Recurrence column, the task will run now and still retain the schedule.
Schedule or reschedule a task	Right-click and select Schedule .
Stop the task	Right-click and select Abort .
Delete the task from the schedule	Right-click and select Delete .

The options available when you right-click a task depend upon the value displayed in the State column.

Understanding the columns

Column	Description
State	This column tells you whether the task is waiting to run, running, or complete.
Date/Time	This column tells you when the task is (or was) scheduled to run.
System	This column tells you which system the task will occur (or has occurred) on.
Type	This column tells you the type of task.
Name	This column tells you the name you gave the task when you created it.
Status	This column tells you whether the task ran successfully or failed. If the task failed, the Status column gives a brief explanation of why.
Recurrence	This column tells you the frequency at which the task is scheduled to run.

Understanding the State column

State	Description
Aborted	A task is aborted if you have stopped it from running or from waiting to run by right-clicking it and selecting Abort.
Blocked	A task is blocked if it cannot access the voice system because another task or window (such as GEDI or the terminal emulator) is already using the connection. The task will start running when the other window or task frees the connection.
Connecting or Running	A task is connecting when it tries to start a connection to a voice system. It is running when it is performing the task.
Failed	The task could not complete due to errors.
Retry	The task has been unable to run and the system is retrying the task. The task will run again when the retry delay has expired as defined in the Options screen.
Complete	A task is complete when it has finished running.
Waiting	A task is waiting if it has been scheduled to run at a certain time, but not has yet reached the scheduled time.

Checking status

Using the Status pane

The status pane allows you to view the status of the tasks you create in Avaya Site Administration, feedback from Communication Manager software and messaging systems, and the status of your connections to Communication Manager software and messaging systems.

Controlling the Status pane

To...	Do this...
Hide or display the browser	Click {bmc status.bmp} on the toolbar, or select View>Status .
Resize the browser pane	Move your cursor over the edge of the pane until your cursor turns into a double-sided arrow. Hold down your left mouse button, and pull the edge of the window to the desired size.
Move the browser	Click the top border of the pane, hold down your left mouse button, and drag the entire pane window to another location on the screen. If you hold down the Shift key while moving the pane, the pane will float above the main window instead of attaching to it. You can also right-click in the gray border of the pane and select Undock to move the pane to any previous custom location you may have set.


Using the Status pane

To...	Do this...
View a history of tasks	Click the History tab.
Check the status of a task	Click the Schedule tab.
Check the status of a connection	Click the Connection Status tab.

Using the Schedule tab

The Schedule tab displays tasks that have run, are running, or are scheduled to run in the future. It also shows whether a task succeeded or failed. If the task failed, the Schedule tab displays the error message. The Schedule tab is dynamic, meaning that as a task passes through different stages of execution (such as from "Connecting" to "Running"), that change is immediately shown on this tab.

You can run, reschedule, view and change task properties, and abort scheduled tasks from this location.

If you do not see the Schedule tab on your screen, click  on the toolbar. You can move and resize the Status pane (which contains the Schedule tab). To learn how, see Using the Status Pane.

Running, Scheduling, Aborting, Changing properties, or Deleting a task

To...	Do this...
View or change task properties	Right-click the task and select Properties .
Run a task	Right-click the task in the Schedule tab and select Run now. If you run the task now and it has a recurrence schedule as shown in the Recurrence column, the task will run now and still retain the schedule.
Schedule or reschedule a task	Right-click and select Schedule .
Stop the task	Right-click and select Abort .
Delete the task from the schedule	Right-click and select Delete .

The options available when you right-click a task depend upon the value displayed in the State column.

Understanding the columns

Column	Description
State	This column tells you whether the task is waiting to run, running, or complete.
Date/Time	This column tells you when the task is (or was) scheduled to run.
System	This column tells you which system the task will occur (or has occurred) on.
Type	This column tells you the type of task.
Name	This column tells you the name you gave the task when you created it.
Status	This column tells you whether the task ran successfully or failed. If the task failed, the Status column gives a brief explanation of why.
Recurrence	This column tells you the frequency at which the task is scheduled to run.

Understanding the State column


State	Description
Aborted	A task is aborted if you have stopped it from running or from waiting to run by right-clicking it and selecting Abort.
Blocked	A task is blocked if it cannot access the voice system because another task or window (such as GEDI or the terminal emulator) is already using the connection. The task will start running when the other window or task frees the connection.
Connecting or Running	A task is connecting when it tries to start a connection to a voice system. It is running when it is performing the task.
Failed	The task could not complete due to errors.
Retry	The task has been unable to run and the system is retrying the task. The task will run again when the retry delay has expired as defined in the Options screen.
Complete	A task is complete when it has finished running.
Waiting	A task is waiting if it has been scheduled to run at a certain time, but not has yet reached the scheduled time.

Using the Connection Status tab

The Connection Status tab shows the status of connections between Avaya Site Administration and voice system and messaging systems.

Note

While you may have set up connections to multiple systems, the Connection Status tab shows only those connections that are currently active.

If you do not see the Connection Status tab on your screen, click  on the toolbar. You can move and resize the Status pane (which contains the History tab). To learn how, see Using the Status Pane.

Disconnecting from a System


To end your connection to a voice system or messaging system, right-click on the connection and select **Disconnect**. If any GEDI or Emulation connections exist, or scheduled tasks are running, a warning message box will appear.

Understanding the columns

Column	Description
Status	This column tells you if a connection is busy or idle, or if Avaya Site Administration is attempting to connect. A busy connection means that Avaya Site Administration is connected and is currently sending data to the voice system, messaging system, generic device, or a GEDI or emulation window is open. An idle connection means Avaya Site Administration is connected, but no data is being sent to or from the voice system or messaging system.
System	This column tells you which system Avaya Site Administration is connected to.
Type	This column tells you whether Avaya Site Administration is connecting to the system via a direct hardware connection, over a network, or with a serial modem.
Dial String/Host	This column tells you the dial string (for a modem) or host name (for a network connection) that Avaya Site Administration uses to connect to the system.
Port	This column tells which communication port Avaya Site Administration is using to maintain the connection.
Release	This column tells you what type of system (voice or messaging) Avaya Site Administration is connected to.
Version	This column tells you the version number of your voice system or messaging system.
Date/Time	This column shows the time that the connection was established.
Serial Device	This column shows the connection device type used when a voice system is being accessed. Examples include an analog modem or data module.

Using the History tab

The History tab displays feedback from a system about tasks that Avaya Site Administration has run, or has attempted to run. It essentially shows a log of past occurrences (a history of events). Entries on the History tab are static; that is, as the system status changes, new entries are added to the History tab, but existing entries on the tab do not change.

If you do not see the History tab on your screen, click  on the toolbar. You can move and resize the Status pane (which contains the History tab). To learn how, see Using the Status Pane.

Exporting, Printing, or Deleting the History Log

To...	Do this...
Delete all events on the History tab	Right-click the entry and select Clear History.
Export the log to a file	Right-click the entry and select Export History.
Print the log	Right-click the entry and select Print.
Preview the log printout	Right-click the entry and select Print Preview.

Understanding the columns

Column	Description
Severity	This column tells you whether an event is routine or an error. Tasks that run without error result in an "Info" event in this column. Tasks that fail result in an "Error" in this column.
Date/Time	This column tells you when the task ran, or attempted to run.
System	This column tells you which system the task ran on.
Description	This column summarizes the task, and if applicable, the error that occurred.

You can control the number of events displayed on the History tab by changing the number in the Maximum History size field.

Managing performance

Improving Grade of Service

By using the Trunk Analyzer and gathering trunk data, you can create a report that gives recommendations on achieving a specified grade of service.

To improve the grade of service, complete the following steps:

- 1 Collect trunk data for a particular voice system.
- 2 Run the Trunk Analyzer Report.
- 3 Look in the Recommendation column on the far right of the report and see the recommendations based on your desired grade of service.
- 4 Make the suggested changes to your voice system.

Synchronizing the voice system and PC time

There may be times when you need to adjust the time on your voice system (and voice systems in a multi-site configuration) in relation to your PC. For example: when the voice system's built-in clock drifts over time and can not be maintained via manual setting of the clock. This is particularly useful in a multi-site Call Center configuration when the voice systems are in different time zones than your PC.

Note

Time Synchronization using this wizard can only be applied to legacy DEFINITY voice systems (CSI, SI or R). The S8700, S8300 and S8100 servers accomplish time synchronization through the voice system operating system.

Using the Time Synchronization wizard, you can correct these situations. You can either set up the voice system time to match the clock on your PC, or you can set an offset between the voice system time and your PC time in the event they are in different time zones. The PC can then be synchronized to a standard time source using a dial-up or LAN-based SNTP client obtained locally or available with the PC Operating System. See <http://www.ntp.org/software/index.html>, <http://www.ubr.com/clocks/timesw/timesw.html>, or <http://tycho.usno.navy.mil/> for details.

Note

Changing the date or time may affect BCMS, CDR, scheduled events and measurements. There are other limitations to be aware of before you use this screen.

To synchronize or adjust the time for legacy DEFINITY voice systems (CSI, SI or R), complete the following steps:

- 1 In the Target System box on the toolbar, select the voice system you want to administer.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **Fault and Performance**.
- 4 Click **Time Synchronization**.
- 5 Complete the Time Synchronization Properties screen.
If you need help with the screen, click **Help** on that screen.
If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Plotting Processor Occupancy or Call Traffic data

To plot processor occupancy or call traffic data on a graph:

- 1 In the Target System box on the toolbar, select the voice system you want to measure.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **Fault and Performance**.
- 4 Click **Processor Occupancy**.
- 5 Do one of the following:
 - If data has not been collected for the voice system yet, you will be prompted to set up the polling task. Click **Yes** at the "set up task" prompt and complete the wizard screens.
 - If data has been collected, complete the Graph Properties screen to set up and run the report. If you need help with the Graph Properties screen, click **Help** on that screen.

Viewing voice system hardware configuration

The Hardware Manager feature provides a representation of voice system configuration in a tabular and carrier layout. Included in this representation are all of the voice system's boards and carriers, and any alarms or errors for that hardware. You can also drill down to view the properties (board type, circuit, etc.) for a specific board, and you can show port usage.

To display the voice system hardware, complete the following steps:

- 1 In the Target System box on the toolbar, select the voice system you want to administer.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **Fault and Performance**.
- 4 Click **Hardware Manager**.
The Hardware Manager window appears.

Viewing system capacity using Avaya Site Administration

The capacities of your system depend on the type of voice system you have, the software you're using, and your contract with Avaya, if you have one. Use the System Capacity feature to view the maximum capacities of your system and your current level of usage. Remember, however, that the capacities you've purchased from Avaya may be lower than the maximums shown on the voice system.

This feature provides the same information, although in a tabular format, as using GEDI and performing the "display capacity" command. The information is displayed in an easy-to-read format. You can sort and classify capacities in percentages to easily determine the level of usage for various features on the voice system

To view system capacity, complete the following steps:


- 1 In the Target System box on the toolbar, select the voice system you want to report on.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **Fault and Performance**.
- 4 Click **System Capacity**.
- 5 To close the report, click in the "X" in the upper right corner of the report.

Administering voice systems


Starting GEDI

GEDI stands for Graphically Enhanced DEFINITY Interface. GEDI is an interface that you can use to administer the voice system. If there is an administration activity that you cannot do with one of Avaya Site Administration's wizards or shortcuts, you can generally do it with GEDI.

Starting GEDI from the Task tab

- 1 In the **Target Voice System** box on the toolbar, select the voice system you want to administer.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **General**.
- 4 Click **Start GEDI**.
Once GEDI is open, you can enter the desired commands. For a list of available voice system commands, click **Help** at the bottom of the GEDI screen. For instructions on how to perform a specific activity, select **Contents** from the **Help** menu at the top of the GEDI screen.
- 5 After you make changes to a GEDI screen, you can submit the changes to the voice system immediately or later, as follows:
 - Click **Enter** to run the task now
 - Click **Schedule** to schedule the task to run later, if the GEDI screen allows it. If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.
- 6 To exit, click  in the upper right corner of the GEDI screen.


Starting GEDI from the Tree tab

- 1 Click the **Tree** tab.
- 2 Navigate to the voice system that you want to access.
- 3 Right-click the voice system and **General>Start GEDI** from the pop-up menu.
- 4 Use the GEDI screens in the same way that you use a terminal emulator (via terminal emulation) or SAT terminal.
Once GEDI is open, you can enter the desired commands. For a list of available voice system commands, click the **Help** button at the top of the GEDI screen, or Press F5. For instructions on how to perform a specific activity, select **Contents** from the **Help** menu on the menu bar.
- 5 To exit, click  in the upper right corner of the GEDI screen.

Starting Terminal Emulation

You can use terminal emulation (cut-thru) to administer a device that is not supported by GEDI. When you use terminal emulation, you are making changes directly to the device. Remember that open Terminal Emulation windows can delay scheduled jobs or cause them to fail.

To use terminal emulation:

- 1 In the **Tree** tab, right-click the device you want to administer and select **Advanced>Emulation**.
- 2 Enter your login name and password to access this device.
- 3 Press **Enter**.
- 4 To close terminal cut-thru, click  in the upper-right corner of the window.

Disconnecting from a voice or messaging system

- 1 Close any GEDI, wizard, or emulation windows that are connected to the voice system or messaging system.
- 2 Disconnect in any of the following ways:
 - Click the **Disconnect** button in the toolbar.
 - On the **Tree** tab, right-click the voice system you want to disconnect and select **Disconnect**.
 - On the **Connection Status** tab, right-click the voice system you want to disconnect and select **Disconnect**.

New Administrator's Guide Book

Voice system components

It is important that you be able to identify the different components of a Communication Manager system. Below are the basic components with which all administrators should be familiar. Click on each component label to learn more about that component.

Role of the administrator

Your role as a system administrator is directly related to the success of your organization. When employees, vendors and customers are able to communicate quickly and easily, it helps the organization increase productivity and performance by keeping costs down and ensuring customer satisfaction.

As an administrator, you have three basic responsibilities:

- Making sure the employees in your organization have the phones and features they need and helping them make the best possible use of the telephone system.
- Managing and administering access to private and public, local and long-distance services. In other words, maintaining the connections between your organization and the outside world.
- Monitoring the security and performance of the telephone system. As a system administrator, you are responsible for preventing toll fraud by seeing that hackers and thieves cannot penetrate your telephone system and steal services for which your organization will have to pay. You are also responsible for keeping both electronic and paper records of your system configuration so you are prepared in the event of a disaster.

Of course, the role of an administrator is much more than just being the "phone person" or simply making changes to the telephone system. An important part of the role is to solve communication problems and reinforce business policies related to telecommunications that keep your organization running at peak efficiency.

As the administrator, you can help your organization gain a competitive edge if you understand your phone users' needs. When you understand your phone users' communication needs, you can apply the appropriate technology and create effective solutions. So, build relationships with your phone users to encourage clear communication about their needs and problems.

When you build relationships within your organization, you are able to work with others to solve problems and create better solutions. It is essential that you work with management and department heads within your organization to improve business performance and support the goals, needs and strategies of your organization. Work closely with upper management and others to learn about your organization's future directions. This is critical for long-range planning, equipment purchases, wiring, and upgrades.

- Develop strategies to increase the efficient use of your Communication Manager system/
- Publicize your role.
- Meet regularly with management and department heads to find out how they work.
- Establish a system to educate new users and provide refresher training for others.
- Set up a communications channel, such as e-mail, messaging system mailbox, or a web site for employees to make suggestions, ask questions, or make requests. Keep your end-users well-trained and up-to-date to ensure that the system is being used effectively and efficiently.

To provide your organization with appropriate communication solutions, it is important to know your Communication Manager system. Because there are a variety of system configurations, you should know the capabilities and limitations of your system. This is critical in order to be prepared for any contingency. In the event of a disaster, you will need to know exactly what configuration you have, so that it can be restored properly. You will also want to know if your system has the capacity for growth (cables, ports, wiring, etc.), so that you can be proactive in planning for your organization's business

needs. One of the best ways to maintain your knowledge is to keep printed records related to all elements of your organization's communication system and services.

You should also build relationships with your telecommunication vendors. This will keep you up to date on new products and current offerings from your vendors. For example, if you discover that a number of trunks are not being used by your organization, you can work with your vendors to analyze your situation and come up with a more effective trunking plan.

Another reason to build relationships with your vendors is to keep them familiar with your system. If you frequently experience a particular problem with a piece of equipment or a service, your vendor will be aware of the problem and better able to help you find a solution.

Simplifying end-user management

As a system administrator you have myriad responsibilities and multiple constituencies to whom you must answer, so it's important for you to streamline your job however you can. There are several proven methods for doing this:

Create a system to stay abreast of employee changes

Employee-related changes are one of the greatest challenges that you will face as a system administrator. Existing employees depart or change departments or positions, and new employees are hired. All of these changes have implications for you as a system administrator.

Keeping track of employee information is too big a job for a Communication Manager software administrator alone. You need to establish a partnership with the Human Resources department. In concert with HR, you should work out a system to keep abreast of these changes.

Require end-user training

To ensure that end-users acquire a common body of information about the voice system, you may want to require end-user training in some instances. In the long run it is easier and more efficient for you to train groups of employees than to respond to individual requests for assistance with Communication Manager features. To guarantee employee follow-through, many organizations make end-users' voicemail access contingent on completion of training. Of course, instituting such a policy requires Management's approval.

Standardize telephone feature configurations

- Use standard button configurations for initial phone set up
While the Communication Manager software allows easy customization of buttons to satisfy individuals' needs, starting from a common base can simplify end-user training and troubleshooting. Also, having a standard button configuration means that employees will feel more comfortable using phones other than their own.
- Set up consistent abbreviated dial lists on each station
Any way that you can standardize procedures or features on end-users' phones will ease your workload. One way to standardize is to set up consistent abbreviated dial lists on each station. Consider assigning the lists as follows:
List 1: primary personal list
List 2: group list or secondary personal list
List 3: system list

Consistent lists will make administering the Abbreviated Dialing feature much easier for you.

- Establish station templates for different types of end-users
Station templates are lists of features designed to accommodate the needs of particular categories of end-users. The templates should match end-users' work tasks, and be consistent for all end-users within a given category. Such templates help you establish consistency in phone use and set-up in your organization, and save you time. Templates help you troubleshoot problems and manage change in your voice system.

Involve end-users in planning for new system and departmental changes

No one has more experience with your phone system than the end-users themselves. They can be an invaluable resource when you are contemplating Communication Manager software upgrades or other phone system changes. Involving end-users in the planning process will promote their loyalty and make your job easier in the long run.

Daily administrator tasks

- Verify that the nightly unattended backup was successful.
 - Use **list configuration software-versions**, and check the date that the last translation was saved to ensure backup was successful. If the date is not for last night, the backup was NOT successful.
- Change the nightly backup tape/disk memory or flash memory card.
- Monitor system alarms and take corrective action.
 - Use **display alarms** to view errors that exceed thresholds for alarming.
 - Use **display errors** to view low frequency errors that do not exceed thresholds for alarming.
- Communicate with other administrators in your organization.
 - Consider maintaining a log of system changes to keep all staff aware of changes made to the system. This log will also be helpful in identifying a system change that may correspond to an increase in system problems.
 - Consider using display bulletin-board to leave messages for other administrators.
 - Use **list history** to determine if other login id's have made changes to the system, as well as the date and time the changes were made. The report shows the last 500 changes made to the system and who made them.
- Check security violation reports for login, remote access and ACA violations.
 - Use **list measurements security-violations summary** to get a snapshot view of all security violations.
 - If the summary report reveals potential problems, use **list measurements security-violations detail** to see if there were invalid attempts to enter barrier codes, station security codes, authorization codes or logins.
- Respond to end-user requests or Help Desk activities. For example, you may need to add and move phones, troubleshoot phone problems, or change the system to accommodate a new business need. See Communicating with end users.
- Run daily and hourly traffic reports.

Note

These reports only contain 1 day's worth of data. If you do not run these reports daily, you will miss data.

You can schedule reports so you do not have to run them every day. Here are some of the reports you may want to access:

- **list measurements attendant** (followed by **group** or **position**)—shows speed of answer and total number of calls answered during the measured hour.
- **list measurements outage-trunk** (followed by **yesterday**, **today**, or **last-hour** and optionally followed by **schedule**)—shows the trunk group number and the trunk group member along with the number of outages it had. If a trunk has a questionable number of outages, use the **status trunk x** (where x is the trunk group number) command to show the service state of the trunk members. Use this report for troubleshooting when you think you have a trunking issue.
- **list measurements blockage pn** (followed by **yesterday-peak**, **today-peak**, or **last-hour** and optionally followed by **schedule**)—shows where service is degraded, resulting in no dial tone and incomplete calls. This report helps the administrator monitor trends in time-slot usage. When blockage begins to occur they can take steps to load balance the system and alleviate a potential problem. This is particularly useful for companies with several port networks (cabinets).

- **list measurements trunk-group summary** (followed by **yesterday-peak**, **today-peak**, or **last-hour** and optionally followed by **schedule**)—shows if outgoing calls are blocked. It may be necessary to run hourly reports for the periods of time showing blockage. For example, you might pull hourly reports to determine peak usage times. This report has one line for each trunk group translated in the voice system.

Key fields

- %ATB (all trunks busy)—the total percent of time in the measured hour that all trunks in a trunk group were busy.
- GRP OVFL (group overflow)—how many calls possibly overflowed to another trunk if the measured hours ATB was 100%.
- GRP DIR (group direction)—if outgoing trunks have 100 % blockage, investigate the following:
 - Ensure Automatic Route Selection (ARS) is set-up to manage overflow so that 100% ATB for one trunk automatically sends calls to another trunk. ARS overflow selection can be viewed on the route-pattern screen using display route-pattern x.
 - Check Out Srv field on the Trunk Outage Report.
 - Check if there is a trunk maintenance problem using the Blockage Study Report.
 - If an incoming trunk has 100% ATB, contact the network provider to determine how many calls are being blocked at the Central Office (CO) (incoming calls that are not reaching the voice system because your company does not have enough incoming trunks - lines). For example, 5 trunks with 10 incoming calls = 5 busy trunks and 5 blocked or missed calls. The voice system will not see the blockage because the calls never reach the voice system, but the CO can do a traffic study and recommend adding additional trunks.

If you cannot locate the problem using these methods, you may need to add additional trunks or add more trunks to the group.

Weekly administrator tasks

- Check system capacity levels and number of ports in service. Use the **display capacity command**.
- Archive backup tapes or flash memory cards and rotate out the tape/flash memory card for the week.

Monthly administrator tasks

- Make a system backup. Schedule a time when you can be present for the entire backup to ensure successful completion.
- Store backup tapes off-site.

Other tasks

Here are some other important administrator tasks.

- Purchase and format new backup tapes.
- Add, remove, and move employee phones.
- Set up features on phones.
- Record and save new system announcements when changes are made.
- Save changes made to the system.
- Clean fan filters.
- Update the system time/date for daylight savings.
- Update paper records and store documents securely.

Command language and syntax

Commands are the language you use to communicate with the voice system. Commands are used to make changes to the voice system, to monitor voice system performance, and to perform troubleshooting. As an example, let's look at the command, **change station 4444**.

Command components

Communication Manager software commands can require up to three components for the system to understand what you want to do. These three components are:

- **Action**—The first word in a command is always the action. It specifies the operation you want to perform. In the example, **change station 4444**, "change" is the action.
- **Object**—The second word in a command is the object. It indicates the specific object to be operated on. In the example, **change station 4444**, "station" is the object.
- **Qualifier**—The third word in a command is the qualifier. A qualifier is one or more words or numbers used to further identify the object. In the example, **change station 4444**, "4444" is the qualifier which indicates the extension number of the station being changed.

Tip:

If you are uncertain about what action, object, or qualifier terms you should use to perform a specific operation, use <HELP> or F5 to determine the word the voice system requires.

Command types

Commands can be classified into types. Each command type has a purpose that you should understand. Using the wrong command type at the wrong time can cause a change in the system that you do not want.

Commands that modify settings (a.k.a. translations) are used when you have decided that a setting in the system needs to be changed. These commands require all three components—Action, Object and Qualifier.

For example, **add station next**, **change station 4444**, and **remove report-scheduler x** (where x can be any number from 1 - 50)

- **Add**—lets you enter new information about a single object.
- **Change**—lets you make changes to an existing screen.
- **Remove**—lets you remove objects such as stations and trunks from the system.

Note:

It is important that you use the appropriate command for what you are trying to accomplish. For example if you only want to view the settings on a screen and make no changes, use a command for viewing information like a display command. This prevents you from accidentally making changes to the screen without knowing it. Only use the change command after you have decided that a specific change should be made.

Commands that show settings are used to see what settings have been administered and to gather information. These commands require two components—Action and Object, but can be made more specific with an optional qualifier such as a range of objects.

For example, **list station 4444 count 200, display dialplan, status station 4444, monitor system view1**

- List—lets you view information about multiple objects.
- Display—lets you view information about a single object.
- Status—lets you view static (snapshot) information about a object.
- Monitor—lets you view dynamic reports which automatically refresh as the system processes calls.

In the example, **list station 4444 count 200**, the "count 200" is a qualifier. When this command is entered, the list command would execute starting with extension 4444 and list the next 200 administered station numbers.

Command abbreviations

It is not necessary to type the entire command. You need to type only as many characters as are required to make the command unique. For example, you can type **disp** instead of **display**.

If you use too short of an abbreviation, (like **dis**), the system responds with the error message *"dis is an ambiguous entry"* and displays as suggestion like *"Please choose from one of the following 'disable' or 'display'."* Once the correct abbreviated command is entered, the screen displays the entire command in the upper left corner and the page number in the upper right corner.

Working with end users

As the system administrator, you are like a legislator with a "constituency" to satisfy. Your constituency is your end-users and your job is to support them in using your Avaya voice systems and messaging systems. With adequate support, end-users will find the phone system a powerful tool for carrying out their organizational responsibilities. In turn, the end-users have constituents to whom they must answer: the organization's clients. Clients' first contact with your organization is often through the telephone. Employees' facility with your voice system can directly affect clients' first impressions of your organization, and perhaps their subsequent loyalty.

Of course, employees have many other responsibilities besides customer service. Administrative tasks are an important component of many workers' jobs; one which entails considerable reliance on the phone system. Here again, the impact of employee facility with the phone system is clear.

This help system contains topics to help you support end-users and, ultimately make your own job easier. Choose from the following topics:

Simplifying end-user management

Communicating with end-users

Assessing end-user training needs

Preparing end-user training

Delivering end-user training

Note

For help in creating telephone instruction booklets for end-users, try Guide Builder™ Software for Avaya Communication Manager Telephones. For help in creating telephone instruction booklets for end-users, try Guide Builder™ Software for AUDIX® Systems.

Assessing end-user training needs

The phone system is a critical communications device in your organization. Telephone contacts provide lasting impressions of the organization to the outside world, and allow for important internal exchanges of information. Training end-users is an important element in your organization's success and employees' job satisfaction.

Before training end-users it's important to ascertain the areas in which they need support. As you assess training needs and formulate plans, be sure to keep Management . The success of any training regimen depends on "buy-in" from top Management.

Preventing future training problems

Training end-users requires a considerable commitment of time and organizational resources. You want to ensure that end-users retain the content of their training over the long term. Two effective methods for doing this are:

- providing job aids and station end-user guides where appropriate

You may want to consider job aids in the following areas:

- using the messaging system
- Feature Access Codes
- how to report problems with stations
- providing sources for information on upgrades, new features, and Best Practices

Ways to disseminate such information may include:

- publishing a regular newsletter or informational e-mail
- referring administrators to an internal Communication Manager software users' web site

Preparing end-user training

Advance organization and preparation are key to effective training. Adequate preparation will enhance your effectiveness as an instructor and enhance end-users' skills and satisfaction. Follow these guidelines when preparing for a training session:

1. Gather information.

It is important to know your end-users and the particulars of their voice system. Thus, you should collect some data prior to the training session. Collect data that will help you answer such questions as:

- What training will help end-users to do their jobs most effectively?
- On what features do end-users need training? (You should only train end-users on features programmed on their phones.)
- In the case of a system upgrade, what new features should be covered in training? What features should be reviewed?
- Can end-users be grouped according to common training needs?
- What information should you provide—or not provide—to ease your administration of the voice system?

2. Prepare an outline.

An outline can serve as a "roadmap" for your training session. The structure an outline provides can enhance your students', and your own, confidence in the training. While there are many elements that you might choose to include in an outline, key elements to include are:

- introduction: How will you introduce the training topic?
- objectives: What are your goals for this training session?
- Communication Manager software features to review
- items to demonstrate and/or provide for student practice: Examples of business problems that end-users may confront are often effective for this purpose.
- handouts to distribute
- security and policy information to review
- courtesy training
- question and answer period
- training evaluation: How and when will students evaluate the success of the training session?

3. Prepare notes to refer to during training.

When used to supplement an outline, notes can focus your presentation. Notes are especially helpful when you are dealing with content that is particularly complex or unfamiliar to you.

4. Practice your presentation.

Like an actor in a play, an instructor is "on stage" working to hold an "audience's" attention. However, as an instructor, your responsibility is even greater than the actor's, for you are presenting content which may be critical to the end-users' job performance. The more practiced your presentation is, the more polished your "act" will be.

5. Practice using the features on which you'll train end-users.

Knowing their lines is but one key to actors' success; they must also be comfortable using the props that punctuate the lines. Similarly, as an instructor, you must be proficient with the Avaya products which serve as your "props." Be sure you are thoroughly familiar with the features on which you'll be training end-users.

6. Choose an appropriate training environment.

Selecting an appropriate training environment is nearly as important as organizing the content of the training. You should train end-users away from their "normal" work area to highlight the importance of the training, and to prevent interruption. Be sure to choose a comfortable training room that is large enough to accommodate the participants, well-ventilated, and appropriately equipped. Select a training room where sample phone types are available, if possible.

7. Prepare the training venue.

Much as you have organized the instructional content for your training session, you must also prepare the training venue. Be sure to consider the following aspects of this preparation:

- arrange the layout of the room so that everyone can participate
- provide appropriate training materials
- gather writing materials
- obtain projection equipment
- gather flip charts and white boards
- duplicate system reference material
- obtain phones for demonstration and/or practice: Be sure to get phone types that correspond with types that end-users are used to working with.
- test all equipment for proper functionality

8. Meet with the Avaya instructor, if applicable.

If Avaya will be providing end-user training, you should meet with the Avaya instructor prior to the week of the training to discuss how the training should be customized to meet the needs of the end-users. Your discussions with the Avaya instructor should encompass the following issues:

- choice of training content
- special needs of different groups of end-users
- strategies for facilitating the transition from using older phone models and features to the new ones
- key security issues
- particulars of the "Help Desk" plan: What information should be given out about it?

Delivering end-user training

Once you have prepared for training, the next step is to conduct the training. Effective training is high interest, systematic, and appropriately paced. When conducting a training session you must consider the range of experience, skill levels, and learning styles which your students represent. Follow these proven steps for conducting a productive training session:

1. Gain the attention of the class and promote interest.

It is important to gain—and hold—participants' attention from the outset of the training. To this end, you should maximize students' participation. Consider beginning the training with a "go-around" to allow participants to introduce themselves, and share concerns they may have with the phone system. This will pique participants' interest, set the stage for cooperative learning, and help you tailor the training to the participants' needs.

2. Share the objectives for the session with the class.

Be explicit about the purpose of the session and its goals. You may want to give examples of how the information that you'll present will help them do their jobs more effectively. Ask if there are any additional topics or features that participants would like to cover.

3. Review past training.

If appropriate, briefly review the last training session. Get feedback on any trouble that participants are having with material they learned in previous sessions.

4. Introduce the new concept.

Briefly explain the feature or outline the procedure you are presenting. Provide step by step visual aids to reinforce the concept.

5. Demonstrate the proper performance.

Set up a representative number of phones for various set-types. Demonstrate the steps participants are learning with the phone set up in the classroom. Involve participants in role plays to demonstrate proper phone etiquette.

6. Divide end-users into smaller groups.

Large groups of students can be unwieldy for interactive activities. Divide training participants into smaller groups according to some commonality such as their departments, phone types, or common training needs.

7. Allow end-users to practice.

If possible, have end-users practice the tasks and procedures discussed. If the class size is too unwieldy for all participants to practice, or time is limited, select a representative subgroup to do so.

8. Provide feedback.

Give appropriate praise and helpful suggestions. Encourage participants to do the same for one and other.

9. Provide post-training reinforcement.

Without a means of reinforcing their learning, end-users will not retain training concepts. It's important to provide handouts and job aids to which participants may refer after returning to their jobs. Wallet-size guides work well for this purpose. Ideally, these handouts should be customized to cover only the features that are on the end-users' phones.

Communicating with end users

Efficient communication is key to the success of your organization, and the phone system may be the single most important communications vehicle. Effective communication with end-users has two main components:

Establish standard communication procedures

Standardized communication procedures can save employees and system administrators time and effort. Use standard screens for end-users to report problems and change requests. Use preprinted or commonly accessible electronic screens to the extent possible.

Provide end-users with a checklist of information that is required to complete the different types of request and report screens.

You should also set up a communication channel (for example, e-mail, a network connection, Help Line, messaging system mailbox, or document sharing) to handle end-user questions and problems. Follow these guidelines when setting up a Help Line or messaging system mailbox:

- make the number easy to remember
- publicize the number
- determine staffing required
- provide suitable coverage, if applicable
- predict and track the volume of traffic
- regularly evaluate service success

Identify important information and distribute it to company employees

Well-informed employees are more productive and efficient. Therefore it is important to keep your employees informed about organizational news and policies. The information of which employees should be apprised includes:

- organizational policy regarding personal phone use
- efficient ways to make outside calls
- identity of the system administrator
- instructions for requesting help and reporting problems
- security reminders
- emergency instructions in case of fire or bomb threat

Job aids and tip sheets can provide quick and easy training to end-users and eliminate some of the future support that they will need. Common topics for these handouts include:

- instructions for using the messaging system
- instructions for using feature access codes
- a list of all assigned feature access codes that end users might need (for example, DO NOT publish the facility test access code)
- the procedure for reporting problems with one's station
- security information

Individual or group terminal operating guides (end-user instructions) are also useful communication tools. You can create such guides using Guide Builder™ Software for Avaya Communication Manager Telephones and Guide Builder™ Software for AUDIX®.

For security reasons, you should mark all handouts "COMPANY CONFIDENTIAL" and provide employees with guidelines for their proper disposal.


Planning your Communication Manager system

Voice system components

It is important that you be able to identify the different components of a Communication Manager system. Below are the basic components with which all administrators should be familiar. Click on each component label to learn more about that component.

System add ons

Click on each system add-on to see more information.

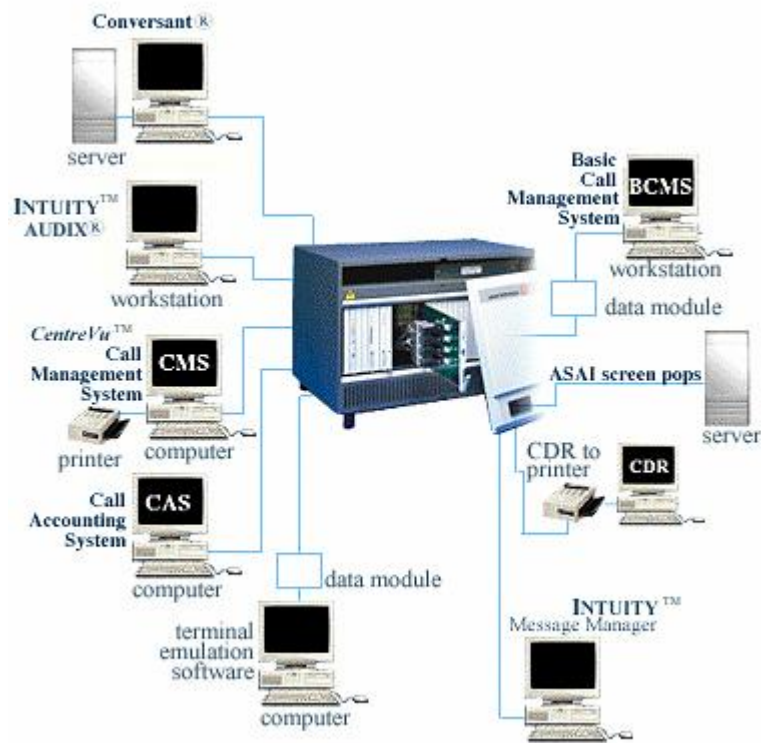

Understanding the dial plan

Your dial plan tells your system how to interpret dialed digits. For example, if you dial 9 on your system to access an outside line, it is actually the dial plan that tells the system to find an external trunk when a dialed string begins with a 9.

The dial plan also tells the system how many digits to expect for certain calls. For example, the dial plan may indicate that all internal extensions are 4-digit numbers that start with 1 or 2.

Communication Manager dial plans

The Communication Manager system allows you to create your dial plan using from three to seven digits. If you have a MultiVantage R10 or earlier system, see R10 or earlier dial plans.

The set of three columns on your dialplan indicate how long the dialed string will be for each type of call. For example, when users dial a 7-digit number that starts with 4, they are dialing an extension.

The third column may have any of the following codes:

- Attendant (attd) — Defines how users call an attendant. Attd access numbers can be any number from 0 to 9 and contain 1 or more digits.
- Dial access codes (dac) — Allows you to use trunk access codes (tac) and feature access codes (fac) in the same range. For example, you could define the group 100–199 for dacs, which would allow both facs and tacs in that range. Dial access codes can start with any number from 1 to 9 and contain up to 4 digits. In recent releases, * and # also can be the first digit.
- Extensions (ext) — Defines extension ranges that can be used on your system.
- Feature access codes (fac) only — facs can be any number from 1 to 9 and contain up to 4 digits. You can use * or #, but only as a first digit. In our example, this company can use *21 to activate a feature and use #21 to deactivate the same feature.

R10 or earlier dial plans

If you display your dialplan and look at the lower half of the Dial Plan Record screen, you see the First Digit Table. This table defines the dialing plan for your system.

The rows in the First Digit Table indicate what the system does when the row's first digit is dialed. The columns indicate how long the dialed string will be for each type of call. For example, when users dial a 4-digit number that starts with 2, they are dialing an extension.

The first digit table may have any of the following codes:


- Attendant (attd) — Defines how users call an attendant. Attd access numbers can be any number from 0 to 9 and contain 1 or more digits.
- Dial access codes (dac) — Allows you to use trunk access codes (tac) and feature access codes (fac) in the same range. For example, you could define the group 300–399 for dacs, which would allow both facs and tacs in that range. Dial access codes can start with any number from 1 to 9 and contain up to 4 digits. In recent releases, * and # also can be the first digit.
- Extensions (ext) — Defines extension ranges that can be used on your system.
- Feature access codes (fac) only — facs can be any number from 1 to 9 and contain up to 4 digits. You can use * or #, but only as a first digit. In our example, this company can use *21 to activate a feature and use #21 to deactivate the same feature.

- Miscellaneous code (misc) — these codes are used if you want to have more than one kind of code start with the same digit and be the same length. Using a misc code requires that you also define a second digit table. Refer to the *Administrator's Guide for Avaya Communication Manager Software* for information about the second digit table.

Displaying your dial plan


Displaying your dial plan

To display your system's dial plan:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **display dialplan analysis** and press the ENTER key.
- 3 Click  to close the GEDI window.

Displaying your MultiVantage R10 or earlier dial plan


To display your system's dial plan:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **display dialplan** and press the ENTER key.
- 3 Click  to close the GEDI window.

Modifying your dial plan


Modifying your dial plan

It is easy to make changes to your dial plan. For example, let's add a new range of dial access codes to the dial plan. We want to be able to assign both facs and tacs in the 700–799 range.

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change dialplan analysis** and press the ENTER key.
The Dial Plan Analysis Table screen appears.
- 3 Move the cursor to the next available row.
For a description of fields in this table, go to Dial Plan Record Fields.
- 4 Type **7** in the first column.
- 5 Type **3** in the second column.
- 6 Type **dac** in the third column.
- 7 Click the **Enter** button in the GEDI window to save your changes.
- 8 Click  to close the GEDI window.

Modifying your R10 or earlier dial plan

It is easy to make changes to your dial plan. For example, let's add a new range of dial access codes to the dial plan. We want to be able to assign both facs and tacs in the 700–799 range.


- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change dialplan** and press the ENTER key.
The Dial Plan Record screen appears.
- 3 Move the cursor to the appropriate field in the First Digit table.
For example, if you want to change how the voice system interprets dial strings that start with a 1 and have four digits, move the cursor to the first row in the table, fourth column.
- 4 For a description of fields in this table, go to Dial Plan Record Fields.
- 5 Type the abbreviation that indicates how the voice system should interpret dial strings of this type.
For example, type **attd**, **dac**, **ext**, **fac**, or **misc**.
- 6 Click the **Enter** button in the GEDI window to save your changes.
- 7 Click  to close the GEDI window.

Adding extension ranges

Adding extension ranges to your dial plan

You may find that as your needs grow you want a new set of extensions. Before you can assign a station to an extension, the extension must belong to a range that is defined in the dial plan. For example, let's add a new set of extensions that start with 8 and are 6 digits long (3000–3999).


To add this set of extensions to the dial plan:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change dialplan analysis** and press the ENTER key.
The Dial Plan Analysis Table screen appears.
- 3 Move the cursor to the next available row.
- 4 Type **8** in the first column.
- 5 Type **6** in the second column.
- 6 Type **ext** in the third column.
- 7 Click the **Enter** button in the GEDI window to save your changes.
- 8 Click  to close the GEDI window.

Adding extension ranges to your R10 or earlier dial plan

You may find that as your needs grow you want a new set of extensions. Before you can assign a station to an extension, the extension must belong to a range that is defined in the dial plan. For example, let's add a new set of extensions that start with 3 and are 4 digits long (3000–3999).

To add this set of extensions to the dial plan:


- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change dialplan** and press the ENTER key.
The Dial Plan Record screen appears.
- 3 Move the cursor to the 3rd row in the 4th column.
- 4 Type **ext** in the selected field.
- 5 Click the **Enter** button in the GEDI window to save your changes.
- 6 Click  to close the GEDI window.

Adding feature access codes

Adding feature access codes to your dial plan


Feature access codes (FAC) allow users to activate and deactivate features from their phones. As your needs change, you may want to add a new set of feature access codes for your system. Before you can assign a fac on the Feature Access Code screen, it must conform to your dial plan.

For example, if you want to assign a feature access code of 33 to Last Number Dialed, first you need to add a new fac range to the dial plan. To add a fac range from 30–39:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change dialplan analysis** and press the ENTER key.
The Dial Plan Analysis Table screen appears.
- 3 Move the cursor to the next available row.
- 4 Type **3** in the first column.
- 5 Type **2** in the second column.
- 6 Type **fac** in the third column.
- 7 Click the **Enter** button in the GEDI window to save your changes.
- 8 Click  to close the GEDI window.

Adding feature access codes to your R10 or earlier systems

If you want to assign a feature access code of 33 to Last Number Dialed, first you need to add a new fac range to the dial plan. To add a fac range from 30–39:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change dialplan** and press the ENTER key.
The Dial Plan Record screen appears.
- 3 Move the cursor to the 3rd row and the 2nd column.
- 4 Type **fac** in the selected field.
- 5 Click the **Enter** button in the GEDI window to save your changes.
- 6 Click  to close the GEDI window.


Changing feature access codes

Changing feature access codes for R10 and earlier systems

Feature access codes (FAC) allow users to activate and deactivate features from their phones. A user who knows the fac for a feature does not need a programmed button to use the feature. For example, if you tell your users that the fac for the Last Number Dialed is *33, then users can redial a phone number by entering the fac, rather than requiring a Last Number Dialed button.

Many features already have factory-set feature access codes. You can use these default codes or you can change them to codes that make more sense to you. However, every fac must conform to your dial plan and must be unique. For more information about the dial plan, refer to “Understanding the dial plan” on page 11.

For example, if you want to change the feature access code for Call Park to *72:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change feature-access-codes** and press the ENTER key.
The feature access code (fac) screen appears.
- 3 Move the cursor to the Call Park Access Code field.
- 4 Type ***72** in the access code field over the old code.
- 5 Click the **Enter** button in the GEDI window to save your changes.
If you try to enter a code that is assigned to a feature, the system warns you of the duplicate code and does not allow you to proceed until you change one of them.
- 6 Click  to close the GEDI window.

Tip:

To remove any feature access code, delete the existing fac and leave the field blank.

Setting up phones

Adding new phones

When you are asked to add a new phone to the phone system, what do you do first? To connect a new phone you need to do three things:

- find an available port
- wire the port to the cross-connect field or termination closet
- tell the telephone system what you're doing

Before you can determine which port to use for the new phone, you need to determine what type of phone you are installing, what ports are available, and where you want to install the phone.

Adding a phone and messaging subscriber

Use the Add User wizard to add a new phone, add a new messaging account, or add a new phone and new messaging account, all at the same time. As an option, you can also use a GEDI window to add a new phone or use terminal emulation to add a new messaging account to the messaging system.

- 1 In the Target System box on the toolbar, select the voice system you want to add the new phone to.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **General**.
- 4 Click **Add User**.
- 5 Complete the wizard screens.

If you need help with a wizard screen, click **Help** on that screen.

If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Note

If you are adding both a phone and messaging account at once, and if both systems are using the same modem or COM port, make sure that you select "Disconnect from system" on the Scheduler screen that appears when you use the Add User task wizard. If you do not do this, the voice system will remain connected after adding the new phone, and Avaya Site Administration will not be able to connect to the messaging system to add the new messaging account. If a connection requires a COM port and the connection using that port is idle, Avaya Site Administration will disconnect the idle connection to free up the port.

Confirming that the phone and mailbox were added

- 1 To confirm that the new phone was added, complete the following steps:
 - a) On the browser pane, click the **Tasks** tab.
 - b) On the Tasks tab, click **General**.
 - c) Click **Browse Stations**.
 - d) In the From extension and To extension fields, enter the extension number that you created when you added the phone to the voice system.
 - e) Click **OK**.
 - f) Confirm that the new phone user appears in the list.
- 2 To confirm that the new messaging account was added, complete the following steps:
 - a) On the browser pane, click the **Tree** tab.
 - b) Open a terminal emulation window for the messaging system you added the account to by right-clicking on the messaging system name, selecting **Advanced>Emulation**, and logging into the system. If you log into an INTUITY AUDIX system as sa, select AUDIX Administration from the INTUITY main menu to access the administration screens.
 - c) At the command prompt, type **list subscriber**.
 - d) Confirm that the new messaging account appears in the list.

Entering Native Names

Use this procedure to add or edit the name of a system object in native language. You can specify the native name for the following system objects:

- Station
- Hunt Group
- Trunk Group
- VDN

NOTE:

The object must exist already on the voice system. You cannot add a new object to the voice system via this procedure.

To add or edit the name of a system object in native language:

- 1 In the Target System box on the toolbar, select the appropriate voice system.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **General**.
- 4 Click **MultiLingual Name Wizard**.

The MultiLingual Wizard Task – Select Object dialog box appears.

- 5 From the drop-down list box, select the appropriate system object.
- 6 From the Specify Max Rows for this Object box, select the number of entries you want to add or change for this object.
- 7 Click **Next**.

The Display Grid dialog box appears.

- 8 Perform one of the following steps:
 - If you selected **hunt-group**, perform one of the following steps:
 - Enter the number in the group number box, enter the name in the Group Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the hunt group(s) you want to change from the Hunt-Group Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.
 - If you selected **station**, perform one of the following steps:
 - Enter the name in the Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the station(s) you want to change from the Hunt Group Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.
 - If you selected **trunk-group**, perform one of the following steps:
 - Enter the number in the group number box, enter the name in the Group Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the trunk group(s) you want to change from the Trunk-Group Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.


- If you selected **vdn**, perform one of the following steps:
 - Enter the name in the Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the VDN(s) you want to change from the VDN Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.
- 9 When finished, click **Next**.
- The MultiLingual Wizard Task – Schedule dialog box appears.
- 10 In the Name box, enter a short description of this task.
- 11 Perform one of the following steps:
- If you want to run this task now, click the **Run Now** check box. If you also want to save this task so you can modify it and/or run it later, click the **Save information in tree** check box.
 - If you want to schedule this task to run later, click the **Schedule this task to run** check box, and either accept the default run time and date, or click **Schedule** and set the appropriate date, time, and frequency.
 - If you want to save this task so you can modify it and/or run it later, click the **Save information in tree** check box.
- 12 Click **Next**.
- The MultiLingual Wizard Task – Summary dialog box appears.
- 13 Click **Finish**.

Using station templates to add phones

A quick way to add phones in GEDI is to copy the information from an existing phone and modify it for each new phone. For example, you can configure one phone as a template for an entire work group. Then, you merely duplicate the template station screen to add all the other extensions in the group.

Note that only phones of the same model can be duplicated. The duplicate command copies all the feature settings from the template phone to the new phones.

To duplicate an existing phone:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **display station *nnnn*** where *nnnn* is the extension you want to use as a template. Then press the ENTER key.
Verify that this extension is the one you want to duplicate.
- 3 Click **Cancel** to return to the command prompt.
- 4 Type **duplicate station *nnnn*** where *nnnn* is the extension you want to duplicate. Then press the ENTER key.
The system displays a blank Duplicate Station screen.
- 5 Type in the extension field, port field and phone name for each new phone you want to add.
The rest of the fields are optional. You can complete them at any time.
- 6 Click the **Enter** button on the GEDI window to save your changes to system memory.
- 7 Click  to close the GEDI window.

To make changes to these phones, such as assigning coverage paths or feature buttons, type **change station *nnnn*** where *nnnn* is the extension of the phone that you want to modify. Then press the ENTER key.

Adding feature buttons to a phone

You can decide which features you want to assign to each button on a phone. The process is slightly different if you are adding buttons to a new phone (using the Add User wizard) or to an existing phone (using GEDI).

Adding feature buttons to a new phone

To add feature buttons to a new phone, start the Add User wizard. Then complete the following steps:

- 1 In the Add User wizard – Station Information screen, click **Buttons**.
Avaya Site Administration displays a picture of the phone, based on the model number you entered in the Set Type field of the wizard.
- 2 On the picture of the phone, click the button you want to assign a feature to.
- 3 Click the down arrow and select the feature you want to assign to that button.
- 4 Complete any feature-related fields that appear on the Button Properties screen.
- 5 Repeat Steps 2-4 until you are finished assigning buttons.
- 6 Click **OK**.

Then complete the remainder of the wizard as you would normally. If you need help with a wizard screen, click **Help** on that screen. If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Adding feature buttons to an existing phone

Once you have added a phone, you must use GEDI to make any additions or changes to the feature buttons.

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change station nnnn** and press the ENTER key, where *nnnn* is the extension for the phone you want to modify.
- 3 Click the tabs on the screen until you locate the Feature Button Assignment fields.
- 4 Right-click the field that corresponds to the button you want to assign the feature to.
- 5 Select the feature you want to assign.
- 6 Complete any feature-related fields that appear next to the button field.
- 7 Repeat Steps 4-6 until you are finished assigning buttons.
- 8 When you are finished, do one of the following:
 - To submit the change immediately, click **Enter (F3)** on the GEDI window.
 - To schedule the change, click **Schedule (F9)** on the GEDI window.
 - If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Adding a fax or modem

A fax machine or modem is set up similarly to any other station with a few important exceptions that you will need to consider.

Follow these steps to add a fax or modem:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **add station *nnnn*** and press the ENTER key, where *nnnn* is the extension you want to give to the modem.
- 3 In the Type field, type **2500** (the generic analog phone type) or, if you have created an alias called Fax and/or Modem, enter the alias name (for help, see Using an alias).
- 4 In the Port field, type the port address.
- 5 In the Name field, type a name to associate with this phone.
- 6 Click the second tab on the GEDI screen.
- 7 In the Data Restriction field, type **y** to prevent all calls from being interrupted by tone signals (like a call waiting tone).
- 8 Click the **Enter** button on the GEDI window to save the changes to system memory.

Adding an extension without hardware

You may want to set up phone extensions that are not connected to actual telephone hardware. For example, you may have employees that work off-site so they need a messaging system mailbox but not a phone at work.

Adding the extension

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **add station *nnnn*** and press the ENTER key, where *nnnn* is the extension you want to view.
- 3 Next to Port, enter **X** (to indicate that there is no port associated with this station).
- 4 Click the **Enter** button on the GEDI window to save the changes to system memory.

Setting Up a Voice Mailbox

To set up a messaging subscriber mailbox for an employee that does not need a phone (that is someone that works off-site):

- 1 Set up extension number using AWOH.
- 2 Change the station coverage path to go to the voice messaging hunt group.

Note

Voice messaging is always set up in a hunt group. Use **list hunt-group** to locate the hunt group used for the messaging system.

Changing a phone user's information

You can make changes to an existing phone, such as change the set type, location, or assign coverage paths or feature buttons, by following this procedure.

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change station *nnnn*** where *nnnn* is the extension of the new phone. Then press the ENTER key.
- 3 Make changes to the GEDI screen.

Remember that you can right-click on a field to see options for that field.

- 4 When you are finished, do one of the following:
 - To submit the change immediately, click **Enter (F3)** on the GEDI window.
 - To schedule the change, click **Schedule (F9)** on the GEDI window.
- If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Changing a phone user's information

You can make changes to an existing phone, such as change the set type, location, or assign coverage paths or feature buttons, by following this procedure.

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change station *nnnn*** where *nnnn* is the extension of the new phone. Then press the ENTER key.
- 3 Make changes to the GEDI screen.
Remember that you can right-click on a field to see options for that field.
- 4 When you are finished, do one of the following:
 - To submit the change immediately, click **Enter (F3)** on the GEDI window.
 - To schedule the change, click **Schedule (F9)** on the GEDI window.If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Using an alias

Not every phone model has a unique station screen in the system. You might have to use an available model number as an "alias" for another. If you need to enter a phone type that the system does not recognize or support, use an alias.

For example, you may purchase a phone model that is newer than your system. In this case, you can use an available model type that best matches the features of your new phone. You can refer to your phone's manual to determine which alias to use. If your manual does not have this information, you can contact the Avaya helpline for an appropriate alias.

For example, let's use an alias to add a new 8403B phone to a DEFINITY G3V2 or earlier system.

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Refer to your new phone's manual to find the correct alias.

In our example, we find that the 8403B is administered on a G3V2 or earlier system as a 7405D phone.

- 3 Type **change alias station** and press the ENTER key.


The Alias Station screen appears.

- 4 Enter **8403B** in the Alias Set Type field.

Enter the model of the unsupported phone in this field.

- 5 Enter **7405D** in the Supported Set Type field.

Enter the alias (supported model) in this field.

- 6 Click the **Enter** button on the GEDI window to save your changes.
- 7 Click  to close the GEDI window.

Now follow the instructions for adding a new phone. Your voice system now recognizes the new type you enter in the Type field.

Be sure to refer to your phone's manual for instructions on how to set feature buttons and call appearance buttons. Note that if you need to use an alias for a phone, you may not be able to take advantage of all the features of the new phone.

Customizing your phone

This section provides recommendations for setting up or enhancing your personal phone. You need a phone that is powerful enough to allow you to use all the features you may give to other employees. You may want to add feature buttons that allow you to monitor or test the system, so that you can troubleshoot the system from your phone.

It will be much easier to monitor and test your system if you have a phone with:

- a large multi-button display (such as 8434D or 8410D)
- a class of service (COS) that has console permissions
- the following feature buttons
 - ACA and Security Violations (assign to lamp buttons)
 - Busy verify
 - Cover message retrieval button
 - Major/minor alarm buttons
 - Trunk ID buttons
 - Verify button

Once you select a phone, you'll want to determine if you want to place this phone at your desk or in the voice system room. If the phone is in the voice system room (near the system administration terminal), you can quickly add or remove feature buttons to test features and facilities. You may decide that you want a phone at both your desk and in the voice system room — it's up to you.

You may also find it handy to set up multiple phones for testing applications and features before you provide them to users. You may want to have a phone that mimics each type of user phone in your organization. For example, if you have four basic phone templates, one for executives, one for marketing, one for technicians, and one for other employees, you may want to have examples of each of these phones so you can test new features or options. Once you are satisfied that a change works on the test phone, you can make the change for all the users in that group.

Upgrading phones

If you want to change phone types for a user and do not need to change locations, you can just access the station screen for that extension and enter the new model number.

Tip:

This method can be used only if the new phone type matches the existing port type (such as digital phone with a digital port).


For example, if a user at extension 4556 currently has a 7410+ phone and you want to replace it with a new 8411D phone:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change station 4556** and press the ENTER key.

The station screen for 4556 appears.

- 3 Overwrite 7410+ with **8411D** in the Type field.

Now you can access the functions and feature buttons that correspond to an 8411D phone.

- 4 Click  to close the GEDI window.

Swapping phones using a wizard

Avaya Site Administration Release 1.10 introduced a new wizard for swapping phones. To swap phones using the new wizard, complete the following steps:

- 1 In the Target System box on the toolbar, select the voice system that contains the phones that you want to swap.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **General**.
- 4 Click **Swap Stations**.
Avaya Site Administration displays the Swap Stations wizard - Choose Stations screen.
- 5 Complete the wizard screens.
If you need help with a wizard screen, click **Help** on that screen.
- 6 Click **Finish**.
If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Removing a phone or subscriber

Use the Remove User wizard to remove an existing phone on a voice system, to remove an existing account from a messaging system, or to remove both at the same time.

- 1 In the Target System box on the toolbar, select the voice system you want to remove the phone from.
- 2 On the browser pane, click the **Tasks** tab.
- 3 Click **General**.
- 4 Click **Remove User**.
- 5 Complete the wizard screens.

If you need help with a wizard screen, click **Help** on that screen.

If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Understanding attendant consoles

The attendant console is the main answering position for your organization. The console operator is responsible for answering incoming calls and for efficiently directing or "extending" calls to the appropriate phone.

The attendant console can also allow the operator to monitor:

- system problems
- toll fraud abuse
- traffic patterns

Attendant consoles are generally programmed for you at cutover. However, you may find that it is necessary to change or move the existing consoles, or even add additional consoles.

Changing attendant consoles

As a Communication Manager software administrator, you should be aware of how to display and change key console settings. When you are making changes to your consoles, keep these in mind.

- Some settings are system-wide and apply to *all* consoles in your organization; these are specified on the Console Parameters screen. To view the screen, type **display console-parameters**.
- Other settings apply to *individual* consoles and are specified on the Attendant screen. To view the screen, type **display attendant x**. Some of the settings on this screen override system-wide settings.


The number of consoles you can have in your organization varies depending on your voice system. Your *System Description Pocket Reference*, 555-230-211, gives more details about your specific system capacity.

Note:


The system does not allow you to duplicate a console. You should print a copy of all console screens and retain them in your archives. When adding a new console, choose the console you want to duplicate and set up the feature buttons, display buttons, and alarm settings as shown in the print-out.

To print a console screen (in this example, for attendant console 1): Follow the instructions in the topic *Scheduling and Printing Reports* and use the command **display attendant 1 print**.

Changing COR values

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change cor *n*** where *n* is the COR you want to change (for example, type **change cor 3**).
- 3 Click **Send** on the GEDI window.
- 4 Change any COR values you want to.
To add a description to the COR, complete the COR description field.
- 5 When you are finished, do one of the following:
 - To submit the change immediately, click **Enter (F3)** on the GEDI window.
 - To schedule the change, click **Schedule (F9)** on the GEDI window.
If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.
- 6 Click  in the upper right corner of the gray GEDI window to close the GEDI window.
Do not click the X in the title bar at the top of the screen or you will close Avaya Site Administration.

Changing COS values

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change cos**.
- 3 Click **Send** on the GEDI window.
- 4 Change any COS values you want to.
To add a description to the COS, complete the COS description field.
- 5 When you are finished, do one of the following:
 - To submit the change immediately, click **Enter (F3)** on the GEDI window.
 - To schedule the change, click **Schedule (F9)** on the GEDI window.
If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.
- 6 Click  in the upper right corner of the gray GEDI window to close the GEDI window.

Do not click the X in the title bar at the top of the screen or you will close Avaya Site Administration.

Managing phone features

Changing feature parameters


You can modify the system parameters that are associated with some of the system features. For example, you can use the system parameters to allow music to play if callers are on hold or to allow trunk-to-trunk transfers on the system.

Note

You can find most of the system-wide parameters on the Feature-Related System Parameters screen. However, if you have DEFINITY ECS R6.3.1 or later, some parameters have moved to new screens, such as the System Parameters Call Coverage/Call Forwarding screen.

Generally, Avaya sets your system parameters when your system is installed. However, you can change these parameters as your organization's needs change. For example, let's say that your company uses call park, where a call can be put on hold and picked up from any other telephone within the system. You need to change the time limit for parked calls from 10 to 5 minutes.

To change the time limit for parked calls:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change system-parameters features** and press the ENTER key. The Feature-Related System Parameters screen appears.
- 3 Type **5** in the Call Park Timeout Interval field and click the **Enter** button on the GEDI window to save the change.
If a parked call is not answered within 5 minutes, the call returns to an attendant or to the user who put the call in park.
- 4 Click  to close the GEDI window.

Refer to the *Administrator's Guide for Avaya Communication Manager Software* for details about changing other feature-related system parameters.

Creating pickup groups

A pickup group is a list of phones where each member of the group can answer another member's calls. For example, if you want everyone in the payroll department to be able to answer calls to any payroll extension (in case someone is away from their desk), create a pickup group that contains all of the payroll extensions. Members of a pickup group should be located in the same area so that they can hear when the other extensions in the group ring.

Note that each extension may belong to only one pickup group. Also, the maximum number of pickup groups may be limited by your system configuration.

To create a pickup group:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **add pickup-group next** and press the ENTER key.


The Pickup Group screen appears. The system selects the next Group Number for the new pickup group.

- 3 Enter the extension of each group member.

Up to 50 extensions can belong to one group.

- 4 Click the **Enter** button on the GEDI window to save your new group list.

The system automatically completes the name field when you click the Enter button to save your changes.

- 5 Click  to close the GEDI window.

Once you define a pickup group, you can assign call-pickup buttons for each phone in the group or you can give each member the call-pickup feature-access code. Use the Station screen to assign call-pickup buttons.

To allow users to answer calls that are not in their pickup group, you may be able to use Directed Call Pickup. To allow members of one pickup group to answer calls directed to another pickup group, you may be able to add an extended pickup group. For information, refer to the *Administrator's Guide for Avaya Communication Manager Software*.

Creating coverage paths

This topic explains how to administer various types of call coverage. In general, call coverage refers to what happens to incoming calls. You can administer paths to cover all incoming calls, or define paths for certain types of calls, such as calls to busy phones. You can define where incoming calls go if they are not answered and in what order they reroute to other locations. For example, you can define coverage to ring the called phone, then move to a receptionist if the call is not answered, and finally access a voice mailbox if the receptionist is not available.

With call coverage, the system redirects a call to alternate answering extensions when no one answers at the first extension. An extension can have up to 6 alternate answering points. (If you have an older system, you may have only 3 answering positions.) The system checks each extension in sequence until the call connects. This sequence of alternate extensions is called a coverage path.

The system redirects calls based on certain criteria. For example, you can have a call redirect to coverage without ever ringing on the principal set, or after a certain number of rings, or when one or all call appearances (lines) are busy. You can set coverage differently for internal (inside) and external (outside) calls, and you can define coverage individually for different criteria. For example, you can decide that external calls to busy phones can use the same coverage as internal calls to phones with Do Not Disturb active.

To create a coverage path:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **add coverage path next** and press the ENTER key.

The system displays the next undefined coverage path in the sequence of coverage paths. Our example shows coverage path number

- 3 Type a coverage path number in the Next Path Number field.

The next path is optional. It is the coverage path to which calls are redirected if the current path's coverage criteria does not match the call status. If the next path's criteria matches the call status, it is used to redirect the call; no other path is searched.

- 4 Fill in the Coverage Criteria fields.

You can see that the default sets identical criteria for inside and outside calls. The system sets coverage to take place for a busy phone, if there is no answer after a certain number of rings, or if the DND (do not disturb), SAC (send all calls), or Go to Cover buttons are pressed or feature-access codes are dialed.

- 5 Fill in the Point fields with the extensions you want for coverage points.

Each coverage point can be an extension, hunt group, coverage answer group, remote number, vdn, or attendant.

- 6 Click the **Enter** button on the GEDI window to save your changes.


Now assign the new coverage path to a user. For example, let's assign this new coverage path to extension 2054:

- 1 Type **change station 2054** and press the ENTER key.

The station screen for extension 2054 appears.

- 2 Type **2** in the Coverage Path 1 field.

To give extension 2054 another coverage path, you can type a coverage path number in the Coverage Path 2 field.

- 3 Click the **Enter** button on the GEDI window to save your changes.
- 4 Click  to close the GEDI window.

Tip:

If you want to see which extensions or groups use a specific coverage path, type **display coverage sender group n** , where n is the coverage path number. For example, you should determine which extensions use a coverage path before you make any changes to it.

Setting up bridged call appearances

The easiest way to set up a bridged appearance is with the Add Bridged Appearance wizard. The following steps tell how to add a bridged appearance to the system using GEDI.

Bridged call appearances have to be assigned to phones with double-lamp buttons, or lights. The phone types do not need to match, but as much consistency as possible is recommended for all phones in a bridged group. When a call comes in on bridged phones, the buttons assigned to the bridged appearances flash. You can assign as many bridged appearances as there are line appearances on the primary phone, and you can assign ringing (alerting) to one or more of the phones.

To create a bridged call appearance:

- 1 Note the extension of the primary phone.

A call to this phone lights the button and, if activated, rings at the bridged-to appearance on the secondary phone.

- 2 If you want to use a new phone for the bridged-to extension, duplicate a station.
- 3 Open a GEDI window for the voice system you want to administer.
- 4 Type **change station** and the bridged-to extension and press the ENTER key.

The station screen appears.

- 5 Click the numbered screen tabs until Per Button Ring Control appears (digital sets only).
- 6 If you want to assign ringing separately to each bridged appearance, type **y**.
- 7 If you want all bridged appearances to either ring or not ring, leave the default **n**.
- 8 Move to Bridge Call Alerting.

If you want the bridged appearance to ring when a call arrives at the primary phone, type **y**. Otherwise, leave the default **n**.

- 9 Complete the appropriate field for your phone type.

If...	Then...
your primary phone is analog	move to the Line Appearance field and enter abrdg-appr
your primary phone is digital	move to the Button Assignments field and enter brdg-appr

- 10 Press the ENTER key.

Btn and Ext fields appear. If Per Button Ring Control is set to **y** on the digital screen, Btn, Ext, and Ring fields appear.

- 11 Enter the primary phone's button number that you want to assign as the bridged call appearance.


This button flashes when a call arrives at the primary phone.

- 12 Enter the primary phone extension.

13 If the Ring field appears:

- If you want the bridged appearance to ring when a call arrives at the primary phone, type **y**.
- If you do not want the bridged appearance to ring, leave the default **n**.

14 Click the **Enter** button on the GEDI window to save your changes.

15 Click  to close the GEDI window.

To see if an extension has any bridged call appearances assigned, type **list bridge** and the extension, and press the ENTER key.

Routing outgoing calls

World class routing

Your system uses world class routing to direct an outgoing call. There are two types of routing:

- Automatic Alternate Routing (AAR) is used for calls within your company over your own private network.
- Automatic Route Selection (ARS) is used for calls that go outside your company over public networks. ARS is also used to route calls to remote company locations if you do not have a private network.

Adding a new area code or prefix

A common task for system administrators is to configure their system to recognize new area codes or prefixes.

Tip:

If your local area code is changing or splitting, call the Avaya helpline and have them walk you through all the changes needed to have your system recognize the new area code.

When you want to add a new area code or prefix, you look up the settings for the old area code or prefix and enter the same information for the new one.

Let's add a new area code. When the California area code, 415, splits and portions change to 650, you'll need to add this new area code to your system.

Tip:

If you do not need to use 1 for area code calls, omit the **1** in Steps 2, 4, and 6 in our example. Also, enter **10** in the Total Min and Total Max fields (instead of 11) in Step 8.

To add this non-local area code:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **list ars route-chosen 14152223333** and press the ENTER key.

You can use any 7-digit number after 1 and the old area code (415). We used 222-3333.

The ARS Route Chosen Report screen appears.

- 3 Write down the Total Min, Total Max, Route Pat, Call Type, and Node number from this screen.

In this example, the Total Min is 11, Total Max is 11, Route pattern is 30, and the Call Type is fnpa.

- 4 Type **change ars analysis 1650** and press the ENTER key.

Enter 1 and the new area code (650). The ARS Digit Analysis Table screen appears.

- 5 Use the arrow keys to move to a blank Dialed String field.

If the dialed string is already defined in your system, the cursor appears in the appropriate Dialed String field, where you can make changes.

- 6 Enter **1650** in the Dialed String field.
- 7 Enter the minimum and maximum values from Step 3 in the Total Mn and Total Mx fields.


In our example, enter **11** in each field.

- 8 Enter the route pattern from Step 3 in the Rte Pat field.

In our example, enter **30**.

- 9 Enter **fnpa** in the Call Type field.
- 10 Enter the node number from Step 3 in the Nd Num field.

For our example, you would leave the node number blank.

- 11 Click the **Enter** button on the GEDI window to save your changes.
- 12 Click  to close the GEDI window.

To add a new prefix, follow the same directions, except use a shorter dial string (such as **list ars route-chosen 2223333**, where **222** is the old prefix) and a dial type of **hnpa**.

Using ARS to restrict outgoing calls

ARS allows you to block outgoing calls to specific dialed strings. For example, administrators in the United States may want to restrict users from making calls to 900 and 976 pay-per-call numbers or calls to countries where they do not do business.

SECURITY ALERT!

To prevent toll fraud, deny calls to countries where you do not do business. The following countries are currently concerns for fraudulent calling.

Country	Code
Colombia	57
Ivory Coast	225
Mali	23
Nigeria	234
Pakistan	92
Peru	51
Senegal	221
Yemen	967


To prevent callers from placing calls to Colombia (57):

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change ars analysis 01157** and press the ENTER key.

You enter 011 (international access) and the country code (57). The ARS Digit Analysis Table screen appears.

- 3 Use the arrow keys to move to a blank Dialed String field on the right of the screen.

If the dialed string is already defined in your system, the cursor appears in the appropriate Dialed String field. Skip to Step 5 to deny calls to this dialed string.

- 4 Enter **01157** in the Dialed String field.
- 5 Enter **10** in the Total Mn and 23 in Total Mx fields.
- 6 Enter **den** (denied) in the Rte Pat field.
- 7 Enter **intl** in the Call Type field.
- 8 Click the **Enter** button on the GEDI window to save your changes.
- 9 Click  to close the GEDI window.

Overriding call restrictions

You can use authorization codes to enable callers to override a station's calling privileges. For example, you can give a supervisor an authorization code so they can make calls from a phone that is usually restricted for these calls. Since each authorization code has its own COR, the system uses the COR assigned to the authorization code (and FRL assigned to the COR) to override the privileges associated with the employee's phone.

Note that authorization codes do not override route patterns that are denied. For example, if your ARS tables restrict users from placing calls to Columbia, a caller cannot override the restriction with an authorization code.

Tip:

Authorization codes are optional. To see if authorization codes are enabled on your system, use **display system-parameters customer-options**.


Security Alert:

You should make authorization codes as long as possible to increase the level of security. Set the length of authorization codes on the Feature-Related System Parameters screen.

Let's create an authorization code 4395721 with a COR of 2.

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change authorization-code 4395721** and press the ENTER key.

The Authorization Code - COR Mapping screen appears.

- 3 In the AC field, type **4395721**.
- 4 In the COR field, enter **2**.
- 5 Click the **Enter** button on the GEDI window to save your changes.
- 6 Click  to close the GEDI window.

ARS Partitioning

Most companies want all their users to be able to make the same calls and follow the same route patterns. However, you may find it helpful to provide special calling permissions or restrictions to a group of users or to particular phones.

ARS partitioning allows you to provide different call routing for a group of users or for specific phones.

Note:

If you used partitioning on a release prior to R7 and you want to continue to use partitioning, please read this section carefully. The process for setting up partitioning has changed significantly.

Tip:

Partitioning is an optional feature. Use **display system-parameters customer-options** to see if Partitioning is set to y and Time of Day Routing is set to n. If Time of Day Routing is y on System Parameters Customer Options, you specify the partition group number (PGN) on the Time of Day Routing Plan screen. Refer to the *Administrator's Guide for Avaya Communication Manager Software* for more information.

You can use ARS partitioning to change the call routing plan for up to 8 different user groups within a single voice system. You assign a partition group number (pgn) to each user group and identify different call routing treatments for each pgn.

Advanced voice system administration

Globally changing voice system data

- 1 In the Target System box on the toolbar, select the voice system on which you want to globally change data.
 - 2 On the browser pane, click the **Tasks** tab.
 - 3 On the Tasks tab, click **Advanced**.
 - 4 Click **Find and Replace**.
 - 5 Complete the wizard screens.
- If you need help with a wizard screen, click **Help** on that screen.
If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Entering Native Names

Use this procedure to add or edit the name of a system object in native language. You can specify the native name for the following system objects:

- Station
- Hunt Group
- Trunk Group
- VDN

NOTE:

The object must exist already on the voice system. You cannot add a new object to the voice system via this procedure.

To add or edit the name of a system object in native language:

- 1 In the Target System box on the toolbar, select the appropriate voice system.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **General**.
- 4 Click **MultiLingual Name Wizard**.

The MultiLingual Wizard Task – Select Object dialog box appears.

- 5 From the drop-down list box, select the appropriate system object.
- 6 From the Specify Max Rows for this Object box, select the number of entries you want to add or change for this object.
- 7 Click **Next**.

The Display Grid dialog box appears.

- 8 Perform one of the following steps:
 - If you selected **hunt-group**, perform one of the following steps:
 - Enter the number in the group number box, enter the name in the Group Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the hunt group(s) you want to change from the Hunt-Group Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.
 - If you selected **station**, perform one of the following steps:
 - Enter the name in the Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the station(s) you want to change from the Hunt Group Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.
 - If you selected **trunk-group**, perform one of the following steps:
 - Enter the number in the group number box, enter the name in the Group Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the trunk group(s) you want to change from the Trunk-Group Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.

- If you selected **vdn**, perform one of the following steps:
 - Enter the name in the Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the VDN(s) you want to change from the VDN Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.
- 9 When finished, click **Next**.
- The MultiLingual Wizard Task – Schedule dialog box appears.
- 10 In the Name box, enter a short description of this task.
- 11 Perform one of the following steps:
- If you want to run this task now, click the **Run Now** check box. If you also want to save this task so you can modify it and/or run it later, click the **Save information in tree** check box.
 - If you want to schedule this task to run later, click the **Schedule this task to run** check box, and either accept the default run time and date, or click **Schedule** and set the appropriate date, time, and frequency.
 - If you want to save this task so you can modify it and/or run it later, click the **Save information in tree** check box.
- 12 Click **Next**.
- The MultiLingual Wizard Task – Summary dialog box appears.
- 13 Click **Finish**.

Trunks

Understanding trunks

Trunks are communication lines that carry voice or data transmissions between two communications systems or central offices. There are a variety of trunk types, each with different capabilities.

Trunks can be characterized by:

- Signal type (analog or digital)
- Transmission media or wiring type (copper or fiber optic)
- Direction (one-way in, one-way out, or two-way)
- Connection type:
 - Central Office to voice system (Public Access Trunks)
 - Switch to voice system (Tie Trunks)
 - Switch to long distance provider (Public Access Trunks)

Preparing to add a trunk

When installing a new trunk, provide the vendor with the following information:

- The type of trunk you want to install (for a table with a list of trunk types see the Trunk Classification Table.)
 - For a Central Office (CO) trunk, provide the following information:
 - Quantity (number of trunks)
 - Trunk direction (1-way in, 1-way out, two-way)
 - Signaling method (ground start or loop)

Tip

Given a choice, always use ground start trunks. Ground start trunks send a signal to the Central Office that clears the line before you make a call. This prevents outside calls from coming in on the trunk you are using to dial out, also known as glaring.

- For a Direct Inward Dial (DID) trunk, provide the following information:
 - The extension number range that is currently established on the dial plan. Advise your vendor which extension ranges you want to be called via the DID service.
 - Quantity (number of trunks)
 - Signaling method (DID, wink, or immediate - we recommend wink)
- For a tie trunk, provide the following information:
 - Quantity (number of trunks or channels)
 - Trunk direction (2-way, 1-way in, or 1-way out)
 - Signaling method (wink, immediate, delay dial, or auto)

Note

Regardless of what type of signaling method is assigned, the voice system and network vendor must match.

- Service Codes such as:
 - Registration Number of the voice system
 - Facility Interface Code (FIC). A FIC is a five character code (for the USA only) that provides the technical information needed to order a specific port circuit pack. These codes are dependent on the type of trunks you are ordering. Click the following links for the facility interface codes for these lines types:
 - Analog private lines
 - Digital lines
 - MTS lines and WATS lines

If you are adding an individual trunk to an existing trunk group that you already have, follow these steps to gather information to provide to the vendor:

- 1 Type **list trunk-group** to view the Trunk Groups screen.
- 2 Find the trunk group you are going to add more trunks to.
- 3 Type **display trunk-group xxx** where xxx is the trunk group number, to view the Trunk Group screen.
- 4 You can locate necessary information here such as the type of trunk group, signaling type and direction.

Adding trunk groups

Occasionally, your company's phone requirements change and you need to add new trunk groups to your system. For example, maybe your company is expanding and you must have additional two-way access between your voice system and your local phone company or central office (CO). After doing some research, you decide that you need to add another CO trunk.

Once you decide that you want to add a new trunk, contact your vendor. Depending on the type of trunk you want to add, the vendor may be your local phone company, a long distance provider, or some other service provider.

When you talk to your vendor, they'll want to know what kind of service you want to add.

The vendor should confirm the type of signal you want and provide you with a circuit-identification number for the new trunk. Be sure to record any vendor-specific ID numbers or specifications in case you ever have any problems with this trunk.

Tip:

Remember to keep records of any changes you make to the system for future reference.

Once you've ordered your new service and have gathered all the information associated with the new trunk, you need to configure the system to recognize the new trunk group.

To add a new trunk-group:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **add trunk-group next** and press the ENTER key.

The Trunk Group screen appears.

- 3 In the Group Type field, enter the type of trunk you want to add.

If you select a different trunk type, such as DID, the system changes the screen to show only those fields that apply to the type of trunk-group you are adding.

- 4 Type a name to identify this trunk group in the Group Name field.
- 5 In the TAC field, type the code you want to use to access the new trunk group.
- 6 In the Direction field, indicate the call-flow direction.

If you want to direct calls to a night extension, type the extension number in the Night Service field.

- 7 In the Comm Type field, enter the type of communication that you want the new trunk to use.
- 8 In the Trunk Type field, type **loop start**.

This field tells the system how the calls on this trunk will be sent or received. Your vendor should know what trunk type you can use to complete this field.


- 9 Use NEXT PAGE to go to the Group Member Assignments page.

Different fields appear on this screen depending on the configuration of your voice system.

- 10 In the Port field, type the port number of the physical connection for each member you are adding to the trunk group.

- 11 In the Name field, type the circuit ID or telephone number for each member.

This information is very helpful for tracking your system or troubleshooting problems, but the fields need to be updated whenever the information changes.

- 12 Click the **Enter** button on the GEDI window to save your changes.
- 13 Click  to close the GEDI window.

Night Service

Setting up night service

You can use night service to direct calls to an alternate location when the primary answering group is not available. For example, you can administer night service so that anyone in your marketing department can answer incoming calls when the attendant is at lunch or has left for the day.

Once you administer night service to route calls, your end-users merely press a button on the console or a feature button on their phones to toggle between normal coverage and night service.

There are five types of night service:

- Hunt group night service — directs hunt group calls to a night service destination
- Night station night service — directs all incoming trunk calls to a night service destination
- Night console night service — directs all attendant calls to a Night or Day/Night console
- Trunk group night service — directs incoming calls to individual trunk groups to a night service destination
- Trunk answer from any station (TAAS) — directs incoming attendant calls and signals a bell or buzzer to alert other employees that they can answer the calls

How do night service types interact?

Let's look at an example of how several types of night service might be used in one company.

Assume that you already administered the following night service settings:

- night station night service redirects to extension 3000 and DID-LDN only to LDN Night Ext is set to n
- EXT Alert Port (TAAS) field is not defined
- Trunk group 4 redirects to extension 2000

Let's look at how calls for this company are directed after hours:

Call type	Directs to
An LDN call on a DID trunk	extension 3000
A call on trunk group 4	extension 2000
An internal call to '0'	extension 3000
A call that redirects to the attendant through a coverage path.	the attendant queue

Announcements

What is an announcement?

An announcement is the recorded message a caller hears while the call is in a queue. An announcement is often used in conjunction with music. Announcements are recorded on special circuit packs (TN750, TN750B, TN750C, or TN2501AP) on your Communication Manager system.

Three types of announcements are:

- delay announcement — explains the reason for the delay and encourages the caller to wait
- forced announcement — explains an emergency or service problem. Use when you anticipate a large number of calls about a specific issue
- information announcement — gives the caller instructions on how to proceed, information about the number called, or information that the caller wants

Announcements are most effective when they are:

- short, courteous, and to-the-point
- spaced close together when a caller on hold hears silence
- spaced farther apart when music or ringing is played on hold
- played for calls waiting in queue

Magic on Hold is a package of professionally-recorded music available from Avaya. Contact your Avaya representative for more information.

Adding announcements

You need to tell the voice system you want an announcement before you can record it on a special announcement circuit pack. You assign an extension for the announcement so the voice system can identify the announcement. This extension cannot be in use and must conform to your dial plan.

Tip:

Use **change announcement** to administer an announcement extension. See the *Administrator's Guide for Avaya Communication Manager Software* for more information.

Voice Announcement over LAN (VAL)

You can record announcements on a downloadable Voice Announcement over LAN (VAL) circuit pack (TN2501AP), which allows you to share, backup, and restore announcement files over your local area network.

You can also use TN750, TN750B, and TN750C announcement circuit packs to record announcements on your voice system. You can have only one TN750 or TN750B per system, but you can use one TN750B with many TN750C and/or TN2501AP (VAL) circuit packs. The TN750Cs each have built-in memory. This means you don't have to save from the TN750C to backup tape or system memory, but you can copy the announcements to another circuit pack.

Let's say we have calls coming into unassigned DID extensions. Let's record a general message to tell these callers to dial the company's main number. We'll assign the announcement to extension 1234, and use the integrated announcement circuit pack located on 01B18.

Tip:

Use **display integrated-annc-boards** to find the cabinet, carrier, and slot addresses of your announcement circuit packs. The Integrated Announcement Board screen lists the location and the type, as well as showing the number of recordings and number of seconds (at the administered rate) left on each circuit pack.

Our example explains how to add an integrated announcement, but other types of announcements are available. See the *Administrator's Guide for Avaya Communication Manager Software* for more information about other announcement types.

To add an announcement extension 1234:


- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change announcements** and press the ENTER key.

The Announcements/Audio Sources screen appears.

- 3 In the Ext field, type **1234**.
- 4 In the Type field, type **integrated**.
- 5 In the Name field, type **unassigned DID**.
- 6 In the Pro (protected) field, type **n**.

If you enter **n**, users with console permissions can change the announcement. If you enter **y**, the announcement cannot be changed.

- 7 In the Rate field, type **32** for TN750 circuit packs, or **64** for TN2501AP circuit packs.

- 8 In the Port field, type **01B18**.
- 9 Click the **Enter** button on the GEDI window to save your work.
- 10 Click  to close the GEDI window.

Recording announcements

You can record announcements using any phone or console whose COS (class of service) provides console permissions. You can use **display cos** to review COS permissions.

You also need the announcement feature access code for your system. Use **display feature-access-codes** to find the announcement access code.

The announcement extension must be set up before you record. Use **list station data-module** to determine the announcement extension.

In our example, use your 8410D phone to record the announcement for the unassigned DIDs to extension 1234. Our announcement access code is *56.


To record the announcement:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Dial the announcement access code.

For example, dial ***56**. You hear dial tone.

- 3 Dial the announcement extension.

For example, we'll dial **1234**. You hear dial tone.

- 4 Dial **1** to begin recording.
- 5 Record the message.
- 6 Hang up the phone to end recording.
- 7 Click  to close the GEDI window.

Tip:

The announcement records the sound of the receiver returning to the phone. Hang up gently, press the drop button, or press the switch hook with your finger.

You have to wait 15 seconds before you can dial the extension 1234 to listen to your announcement.

If you record an announcement and later you want to re-record your announcement, you have to first delete the original message.

Professional or computer recordings

If you are using the VAL (TN2501AP) announcement circuit pack, you can record announcements at a computer, rather than at a system phone. You can also record announcements at an off-site location and transfer them to the board using VAL Manager or File Transfer Protocol (FTP).

To be compatible with the TN2501AP circuit pack and the voice system, announcement recordings must have the following parameters:

- CCITT A-Law or CCITT μ -Law companding format (do not use PCM)
- 8KHz sample rate
- 8-bit resolution (bits per sample)
- Mono (channels = 1)

Recording new announcements at a computer

To record an announcement at a computer:

- 1 At the computer, open the application that you use to record .wav files.
- 2 Set the recording parameters.
- 3 Record the announcement by speaking into a microphone connected to the computer.
- 4 Play the announcement back at the computer before transferring the file to the VAL (TN2501AP) circuit pack.

Deleting announcements

Let's delete the unassigned DID announcement assigned to extension 1234.

We know that the announcement access code is *56. Use any console or phone with console permissions to delete the announcement from the announcement circuit pack.


To delete the announcement, use a phone with console permissions to complete the following steps:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Dial the announcement access code.

In our example, we'll dial ***56**. You hear dial tone.

- 3 Dial the announcement extension.


In our example, we'll dial **1234**. You hear dial tone.

- 4 Dial **3** to delete the announcement from the circuit pack.
- 5 Hang up the phone.
- 6 Click  to close the GEDI window.

You also need to remove the information from the system. To remove the information, use your system administration terminal to complete the following steps:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change announcements** and press the ENTER key.

The Announcements/Audio Sources form appears.

- 3 Delete the information in the Ext and Type fields.
- 4 Click the **Enter** button on the GEDI window to save your work.
- 5 Click  to close the GEDI window.

If you use a TN750C circuit pack, the announcement remains on the circuit pack until you re-record.

Backing up your announcements

Note:


To back up announcements from a TN2501AP circuit pack, you need to use either FTP or VAL Manager. See the *Administrator's Guide for Avaya Communication Manager Software* or your Avaya representative for more information about these tools.

Make sure you back up your announcements recorded on TN750 and TN750B circuit packs. The system loses announcements stored on these circuit packs if power is shut down or the circuit pack is removed.

The TN750C circuit pack has on-board FLASH memory so you do not have to back it up. However, you may want to back up the TN750C to another TN750C circuit pack or tape for extra security. You need to administer the data module that is built into the TN750 circuit pack before you save your announcements. See the *Administrator's Guide for Avaya Communication Manager Software* for more information.

<pre>{bmc CAUTION1.BMP} CAUTION!</pre>	<p>Do not copy, save, or restore announcements from a TN750C to a TN750 or TN750B. It may corrupt the announcement.</p>
---	---

To backup announcements on TN750 or TN750B circuit packs:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **save announcements** and press the ENTER key to save the changes.
If you have both TN750B and TN750C circuit packs, save the announcements from the TN750B slot.
- 3 Click  to close the GEDI window.

The save announcement process can take up to 40 minutes. You cannot administer your system while it is saving announcements.

Hunt groups

What are hunt groups?

A hunt group is a group of extensions that receive calls according to the call distribution method you choose. When a call is made to a certain phone number, the system connects the call to an extension in the group.

Use hunt groups when you want more than one person to be able to answer calls to the same number. For example, set up a hunt group for:

- a benefits department within your company
- a travel reservations service

Setting up hunt groups

Let's set up a hunt group for an internal helpline. Before making changes to the voice system, we'll decide:

- the phone number for the hunt group
- the number of people answering calls
- the way calls are answered

Our dial plan allows 4-digit internal numbers that begin with 1. The number 1200 is not in use. So, we'll set up a helpline hunt group so anyone within the company can call extension 1200 for help with a phone.

We will assign 3 people (agents) and their extensions to our helpline. We want calls to go to the first available person.

To set up our helpline hunt group:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **add hunt-group next** and press the ENTER key.

The Hunt Group screen appears. The Group Number field is automatically filled in with the next hunt group number.

- 3 In the Group Name field, type the name of the group.

In our example, type **internal helpline**.

- 4 In the Group Extension field, type the phone number.

We'll type **1200**.

- 5 In the Group Type field, type the code for the call distribution method you choose.


We'll type **ucd-loa** so a call goes to the agent with the lowest percentage of work time since login.

Note: The COS for all hunt groups defaults to 1. Therefore, any changes to COS 1 on the Class of Service screen changes the COS for all your hunt groups. A COS field does not appear on the Hunt Group screen.

- 6 Press NEXT PAGE to find the Group Member Assignments page.
- 7 In the Ext field, type the extensions of the agents you want in the hunt group. We'll type **1011**, **1012**, and **1013**.


Tip:

For a ddc group type (also known as "hot seat" selection), the call is sent to the extension listed in the first Ext field. The system uses this form to determine the hunting sequence. See Call distribution methods for more information.

- 8 Click the **Enter** button on the GEDI window to save your work.
- 9 Click  to close the GEDI window.

The Name fields are display-only and do not appear until the next time you access this hunt group.

To make changes to a hunt group:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change hunt-group *n*** and press the ENTER key, where *n* is the number of the hunt group.
- 3 Change the necessary fields.
- 4 Click the **Enter** button on the GEDI window to save your changes.
- 5 Click  to close the GEDI window.

Tip:

Type **list member hunt group** to see a list of logged-in members of a hunt group by group number. For splits and skills, the login ID, name, and different fields for EAS and Advocate appear on the list.

Setting up a queue

You can tell your voice system how to handle a hunt-group call when it cannot be answered right away. The call waits in a "queue."

Let's tell the voice system that up to 10 calls can wait in the queue, but that you want to be notified if a call waits for more than 30 seconds.

You also want the voice system to send a warning when 5 or more calls are waiting in the queue. This warning flashes queue-status buttons on phones that have a status button for this hunt group. When the buttons flash, everyone answering these calls can see that the helpline calls need more attention.

To set up our helpline queue:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change hunt-group *n*** and press the ENTER key, where *n* is the number of the hunt group to change.

In our example, type **change hunt-group 5**.

The Hunt Group form appears.

- 3 In the Queue field, type **y**.
- 4 In the Queue Length field, type the maximum number of calls that you want to wait in the queue.


In our example, type **10**.

- 5 In the Calls Warning Threshold field, type the maximum number of calls that can be in the queue before the system flashes the queue status buttons.

In our example, type **5**.

- 6 In the Time Warning Threshold fields, type the maximum number of seconds you want a call to wait in the queue before the system flashes the queue status buttons.

In our example, type **30**.

- 7 Click the **Enter** button on the GEDI window to save your changes.
- 8 Click  to close the GEDI window.

Adding hunt group announcements

You can add recorded announcements to your hunt group queue. Use announcements to encourage callers to stay on the line or to provide callers with information. You can define how long a call remains in the queue before the caller hears an announcement.

See recording announcements for information on how to record an announcement.

Let's add an announcement to our internal helpline. We want the caller to hear an announcement after 20 seconds in the queue, after approximately 4 or 5 rings. Our announcement is already recorded and assigned to extension 1234.

Tip:

You can use display announcements to find the extensions of your recorded announcements.

To add an announcement to our helpline queue:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change hunt-group *n*** and press the ENTER key, where *n* is the number of the hunt group to change.

In our example, type **change hunt-group 5**.

The Hunt Group form appears.


- 3 Press NEXT PAGE to find the First Announcement Extension field.
- 4 In the First Announcement Extension field, type the extension of the announcement you want callers to hear.

In our example, type **1234**.

- 5 In the First Announcement Delay (sec) field, type the number of seconds you want the caller to wait before hearing the first announcement.

In our example, type **20**.

Tip: If you set the delay announcement interval to 0, calls automatically connect to the announcement before they are queued, follow coverage, or connect to an available agent. This is called a "forced first announcement."

- 6 Click the **Enter** button on the GEDI window to save your work.
- 7 Click  to close the GEDI window.

You can use the same announcement for more than one hunt group. See the *Administrator's Guide for Avaya Communication Manager Software* for more information on announcements and hunt groups.

Call distribution methods

You have more call distribution choices if your company acquires ACD (Automatic Call Distribution) or EAS (Expert Agent Selection).

ACD and EAS allow you to distribute calls according to the work loads and skill levels of your agents in each hunt group. You can track call handling and monitor the efficiency of your agents. When you assign ACD to a hunt group, the group is called a "split." When you assign EAS, the group is called a "skill."

The following table shows 6 types of call distribution methods and the software required for each method.

Method	The system hunts for...	I need...
Direct Department Calling- (DDC)	the first agent administered in the hunt group. If the first agent is busy, it goes to the second agent, and so forth. This "hot seat" method puts a heavy call load on the first few agents.	no extra software (you cannot use this method if you have EAS enabled)
Circular (circ)	the next available agent in a chain	no extra software
Uniform Call Distribution- Most Idle Agent (UCD-MIA)	the available agent who has been idle the longest since their last call.	no extra software
Uniform Call Distribution- Least Occupied Agent (UCD-LOA)	the available agent with the lowest percentage of work time since login.	ACD, EAS, and CentreVu Advocate
Expert Agent Distribution- Most Idle Agent (EAD-MIA)	the available agent with the highest skill level who has been idle the longest since their last call.	EAS
Expert Agent Distribution- Least Occupied Agent (EAD-LOA)	the available agent with the highest skill level and the lowest percentage of work time since login.	EAS and CentreVu Advocate

Vectors and Vector Directory Numbers (VDNs)

What are vectors?

A vector is a series of commands that you design to tell the system how to handle incoming calls. A vector can contain up to 32 steps and allows customized and personalized call routing and treatment. Use call vectoring to:

- play multiple announcements
- route calls to internal and external destinations
- collect and respond to dialed information

Tip:

The vector follows the commands in each step in order. The vector "reads" the step and follows the command if the conditions are correct. If the command cannot be followed, the vector skips the step and reads the next step.

Your system can handle calls based on a number of conditions, including the number of calls in a queue, how long a call has been waiting, the time of day, day of the week, and changes in call traffic or staffing conditions.

WARNING:

Vector fraud is one of the most common types of toll fraud because vectors route calls based on the class of restriction (COR) assigned to the VDN. Refer to the *Avaya Security Handbook*, 555-025-600, or your Avaya representative, for more information.

Writing vectors

Writing vectors is easy, but we recommend that you set up and test your vectors before you use them across the system.

In the steps below, we'll write a vector to handle calls to our main number. It is the first vector so we'll use number 1.

Tip:

Type **list vector** to see a list of existing vectors. Type **list usage vector** to see where each vector is used throughout the voice system. Type **list usage digit string** to see all the vectors, vector tables and Best Service Routing (BSR) plans that use a specific dial string.

To write a vector:

- 1 Start terminal emulation for the voice system you want to administer.
- 2 Type **change vector 1** and press the ENTER key.

The Call Vector screen appears.

The vector number field on the left side of the screen is filled in automatically.

- 3 Type a description for the vector in the Name field.

In our example, type **main number calls**.

The information in the heading of the Call Vector screen is display only. Use display **system-parameters customer-options** to see the features that are turned on in your voice system.

- 4 Type your vector steps in the numbered column on the left of the screen.

Tip: When you type in your vector steps, the voice system automatically completes some of the vector step information for you. For example, if you type "q" in a vector step field, the voice system fills in "queue-to." Also, additional fields appear when you complete a field and press TAB. This makes it very easy to type in your vector steps.

- 5 Click  to close the window.

Once you set up a vector, you can add vector steps to tell the voice system how to handle calls.

Allowing callers to leave a message

You can write a vector that allows callers to leave messages. This type of vector uses a hunt group called a messaging split. For this example, we send after-hours calls to the voice mailbox at extension 2000 and use messaging split 99. Once the vector routes a call to the mailbox, the caller hears a greeting (that was recorded with the voice mail for mailbox 2000) that tells them they can leave a message.

To let callers leave messages, write this vector (Step 7):

(Note: Several of the steps in the following vector were created as part of other examples. If you do not understand the non-bold steps in this vector, you may want to read the following help topics. In the example, Putting a call in a queue, we created step 2. In the example, Playing an announcement, we created steps 3-5. In the example, Routing based on time of day, we created steps 1 and 6. In the example, Allowing callers to leave a message, we created step 7.)


Example

- 1 goto step 7 if time-of-day is all 17:00 to all 8:00
- 2 queue-to main split 47 pri 1
- 3 announcement 4001 (All agents are busy, please wait...)
- 4 wait-time 60 secs hearing music
- 5 goto step 2 if unconditionally
- 6 stop
- 7 messaging split 99 for extension 2000

Inserting a step into a vector

It is easy to add a vector step and not have to retype the entire vector. This example adds announcement 4005 between Step 3 and Step 4 in vector 20.

To insert a new vector step in vector 20:

- 1 Start GEDI for the voice system you want to administer.
- 2 Type **change vector 20** and press the ENTER key.
The call vector screen appears.
- 3 Press F6 on your keyboard.
- 4 Click the **Insert before** option button, and type the number of the line before which you want to add the new line.
- 5 Click **OK**.
- 6 Type the new vector step.
We'll type **announcement 4005 (Please wait...)**.
- 7 Press **Enter**.
- 8 Click  to close the window.


Tip:

When you insert a new vector step, the system automatically renumbers the rest of the vector steps and all references to the vector steps. The voice system inserts a "*" when the numbering needs more attention.

Entering a variable to a vector


Use this procedure to enter a variable to a vector.

To enter a variable to a vector:

- 1 Start GEDI for the voice system you want to administer.
- 2 Type **change vector xx** (where xx is the vector you want to change), and press the ENTER key.
The call vector screen appears.
- 3 Press F6 on your keyboard.
- 4 Click the **Variable** option button, and enter the variable you want to add.
- 5 Click **OK**.
- 6 Press **Enter**.
- 7 Click  to close the window.

Deleting a step from a vector

It is easy to delete a vector step and not have to retype the entire vector. For example, let's delete vector Step 5 from vector 20:

- 1 Start GEDI for the voice system you want to administer.
- 2 Type **change vector 20** and press the ENTER key.
The call vector screen appears.
- 3 Place the cursor on the line that you want to delete.
- 4 Press F6 on your keyboard.
- 5 Click the **Delete line** option button, and type the number of the line before which you want to add the new line.
- 6 Click **OK**.
- 7 Press **Enter**.
- 8 Click  to close the window.

Tip:

When you delete a vector step, the system automatically renumbers the rest of the vector steps and all references to the vector steps. The voice system inserts a * when the numbering needs more attention.

Diagnosing a vector problem

If there is a problem with a vector, the voice system records the error as a vector event. Vector events occur for a number of reasons including problems with a trunk, full queue slots, or the vector reaching the maximum 1000 steps allowed.

Use **display events** to access the Event Report screen and see the event record. Use the event record to see why the vector failed.

To view the Event Report:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **display events** and press the ENTER key.

The Event Report screen appears.

- 3 To see all current vector events, press the ENTER key


OR

Indicate the events that you want to see by completing the Report Period and Search Option fields.

- 4 Press the ENTER key to view the report.

The Event Report (detail) screen appears.

Look at the information in the Event Data field to diagnose the vector event.

- 5 Click  to close the GEDI window.

Voice system reports

Using report scheduler

Note

This feature is distinct and separate from the scheduling feature offered in Avaya Site Administration. You cannot access the Communication Manager Report Scheduler using GEDI. You can access it only by starting terminal emulation.

The report scheduler is a feature of your voice system that you can use to print certain reports automatically. When you print reports using the voice system's report scheduler, the voice system sends the report to a system printer (which is connected to the voice system). Generating and printing the report uses significant voice system processor resources. For this reason, it is a good idea to print reports during off-peak hours.

Analyzing report data

Most of the information displayed by the report scheduler is measured in CCS (centum call seconds). CCS equals the amount of call traffic it takes to keep one piece of traffic-sensitive equipment busy for 0.6 minutes. To convert CCS to minutes, use the following equation:

minutes = the number of CCS/0.6

For more information, refer to *Avaya Communication Manager Reports*, 555-230-511.

Using attendant reports

Attendant group reports enable you to assess the quality of service provided to anyone who calls your attendant. Monitor these reports to ensure that attendant groups are adequately staffed. There are three attendant reports:

Attendant group measurements report — measures attendant group traffic

Attendant positions report — measures individual attendant performance

Attendant group performance report — measures attendant group performance

The system automatically gathers the information for these reports, so you can use them to view attendant information at any time.

Using trunk group reports

Trunk Group Reports can help you detect traffic flow problems such as out-of-service trunks, load balance, or peak-hour blocking.

Tip:

If a trunk appears to have intermittent service, use **list testcalls summary** to determine whether a specific trunk member is not functioning.

If you suspect a trunk is having problems, use Automatic Circuit Assurance (ACA) to monitor the trunk group.

Measuring call center performance

Standard voice system reports on Avaya Communication Manager provide valuable data about your center's operation.

What should I measure?

Focus on three things:

- How many calls are answered?
- How fast are calls answered?
- How cost-effective is the system?

Avaya Communication Manager has three hunt group reports that give you information about agents, hunt groups, trunks, and trunk groups to help you answer these questions. The reports are:

- Hunt Group Measurements
- Hunt Group Performance
- Hunt Group Status

The table below shows you how to monitor the performance of your call center by using these reports. To use the table, pick what you want to measure from the column headings. As you read down the column, each row shows the fields on a particular hunt group report — if any — that measure that aspect of call center performance.

Reports	How many calls are answered?	How fast?	Cost-effective?
Hunt Group Measurements	Calls Ans/Aban.	Speed Ans (sec)	Total Usage Time Available
Hunt Group Performance		Speed Ans (sec)	
Hunt Group Status		LCIQ	

For detailed information on these reports, see *Avaya Communication Manager Reports*, 555-230-511.

How many people can use voice system reports?

The number of voice system administrators and super-users who can log in simultaneously to view voice system reports varies with the type of voice system you have

vs	csi	s	si	si+m	r
1	1	3	3	5	7


A scheduled report counts as a login. Therefore, you should schedule reports to print during off-hours.

Viewing Hunt Group Measurements reports

The Hunt Group Measurements report displays call data for each hunt group in your system. You can print this report for yesterday's peak, today's peak, or the last hour.

A peak hour is the hour during which the greatest usage of agent time occurred. Use this report to determine the time of day with the most traffic or to measure traffic during the previous hour.


For example, let's print the Hunt Group Measurements report for today's peak:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type list measurements hunt-group today-peak and press the ENTER key.
- 3 To print the report, choose File>Print.
- 4 Click  to close the GEDI window.

Viewing Hunt Group Performance reports

The Hunt Group Performance report gives both the slowest hourly average speed of answer for each hunt group and the daily average. You can run the report for today or yesterday. This report can help you quickly find times during the day when your staffing is too low.

To display a Hunt Group Performance report for yesterday:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type list performance hunt-group yesterday and press the ENTER key.
- 3 To print the report, choose File>Print.
- 4 Click  to close the GEDI window.

Call centers

What is a call center?

A call center is a way of organizing people and equipment to achieve particular business goals. For example, you can use a call center to make several people accessible through one number or to handle multiple calls simultaneously. Call centers work by organizing staff (called *agents*) with specific functions or expertise into hunt groups.

Call centers use some of the features covered in other chapters of this book: hunt groups, announcements, vectors, and VDNs. In this section, we'll show you how these features work together in a call center.

Planning a call center

Good planning is crucial to setting up an effective call center. Before you administer any part of your call center on Avaya Communication Manager, you should have a plan that is thorough and specific. Your call center plan should identify:

- the purpose of the call center — what the call center has to do to be successful
- expected call volume — the number of calls you expect per day, per week, and per month
- type of calls — whether the call center should answer internal or external calls or both
- agent functions — the major agent functions
- necessary resources — the resources you must add to the system, such as trunk groups and phones

Once you develop a plan for the call center, organize agents according to their functions. These agent groups will be your hunt groups.

Setting up the call flow

One step in setting up a call center is deciding how you want your system to handle calls and what you want callers to experience. You may find it helpful to list the possible situations a call may encounter. Set up the call flow by adding hunt groups, setting up queues, adding announcements, and writing vectors. Refer to earlier sections of this book for details on completing these tasks.

Let's set up an example call flow. We'll set up a hunt group so that the work load is evenly distributed and up to 2 calls wait in a queue.

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **add hunt-group next** and press the ENTER key.

The Hunt Group screen appears. In our example, the next available hunt group is number 2.

- 3 In the Group Type field, type **ucd-mia**.

This directs the call to the most idle agent — the agent who has waited the longest since handling a call to the hunt group.

- 4 In the Queue field, type **y**.
- 5 In the Queue Length field, type **2**.
- 6 In the Vector field, type **y**.
- 7 Complete the rest of the Hunt Group screen.
- 8 Click the **Enter** button on the GEDI window to save your changes.

Now that we've created a hunt group, let's write a simple vector that plays announcement 2340. This announcement asks callers to stay on the line. If a call isn't answered in 1 minute, the vector sends the call to voice mail (extension 2000).

- 1 queue-to split 2 pri m
- 2 announcement 2340 ("You have reached...")
- 3 wait-time 60 sec hearing music
- 4 messaging split 99 for extension 2000

Tip:

Vectors are an optional feature. To see if your company has vectoring, use **display system-parameters customer-options**.

To make this vector work correctly, you need to create the announcement at extension 2340 and assign a voice mailbox to extension 2000.

Testing the system

Before your new call center goes live, test the system to make sure it works the way you expect it to work.

With agents available, call each outside number you've created for the call center. Does an agent in the appropriate hunt group answer?

With only one agent available in a hunt group, make several calls at once to that hunt group. Now that several calls are in queue, call again and listen to the treatment your call receives in queue. If you've administered an announcement, do you hear it? Does it play when it's supposed to? If there's a music source, does it play when it's supposed to? Do queue warning lamps flash when they're supposed to?

With all agents in Aux Work, call the hunt group. Does the call follow the intended path?

Monitoring your call center

Monitoring your call center never ends. Monitor your call center's performance regularly so you can solve problems quickly and adjust to changing conditions.

It's critical that you monitor a new call center *very* closely for the first month. Use hunt group reports and trunk reports to track your system. If you underestimated call volume and trunk capacity, or overestimated agent productivity, you need to change your system immediately.

In addition, perform a traffic analysis when your call center begins operation. Work with your Avaya representative and your local network provider. A traffic analysis gives you a comprehensive picture of the demands on your system and how well the system is performing.

For example, trunk reports tell you how often your trunks reach 100% occupancy. Your network provider may be able to tell you how many callers are getting a busy signal from the CO when all of your incoming trunks are in use. You need both pieces of information to determine the total demand that your system needs to meet.

If your business is growing, regular traffic analysis is crucial. Use traffic analysis to project future demands on your system and plan expansions accordingly.

Viewing system capacity

The capacities of your system depend on the type of voice system you have, the software you're using, and your contract with Avaya. Use the System Capacity screen to view the maximum capacities of your system and your current level of usage. Remember, however, that the capacities you've purchased from Avaya may be lower than the maximums shown on the voice system.


For example, to find out how many hunt groups your Avaya Communication Manager can support:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **display capacity** and press the ENTER key.

The System Capacity screen appears.

- 3 Go to the page that shows capacities for Hunt Groups, Splits, or Skills.

This screen shows the system limits for hunt groups and how much of this capacity is currently used.

- 4 Click  to close the GEDI window.

Understanding Automatic Call Distribution

Automatic Call Distribution (ACD) is an Avaya Communication Manager feature used in many call centers. ACD gives you greater flexibility to control call flow and to measure the performance of agents.

ACD systems operate differently from non-ACD systems, and they can be much more complex. ACD systems can also be more powerful because they allow you to use features and products that are not available in non-ACD systems.

Enhancing an ACD system

All call center management systems (such as Avaya's Basic Call Management System (BCMS), BCMS Vu, and the sophisticated CentreVu[®] Call Management System) require ACD. These management systems give you the ability to measure more aspects of your center's operation, and in more detail, than is possible with standard Avaya Communication Manager reports. For a comparison of these systems, see selecting a call management system.

Call vectoring greatly enhances the flexibility of a call center, and most vectoring functions require ACD. Vectoring is a simple programming language that allows you to custom design every aspect of call processing.

Together, ACD and vectoring allow you to use Expert Agent Selection (EAS). For a variety of reasons, you may want certain agents to handle specific types of calls. For example, you may want only your most experienced agents to handle your most important customers. You may have multilingual agents who can serve callers in a variety of languages.

EAS allows you to classify agents according to their specific skills and then to rank them by ability or experience within each skill. Avaya Communication Manager uses these classifications to match each call with the best available agent.

Selecting a Call Management System

Avaya provides management systems for the call centers that need more detailed and flexible reporting. These applications are optional. Contact your Avaya representative for more information.

Basic Call Management System (BCMS)	BCMS runs on the voice system. With BCMS, you can print reports to a printer connected to your terminal, or schedule reports to print on the system printer.
BCMS Vu	BCMS Vu software runs on a PC with Windows 95 or Windows NT. BCMS Vu takes BCMS data and stores it on a PC. Users can run real-time and historical reports and export data to other applications such as spreadsheets.
VuStats	VuStats runs on the voice system. An administrator, split supervisor, or agent uses VuStats to view BCMS data on a display telephone.
CentreVu CMS	CentreVu CMS is a large, multi-faceted reporting system that runs on a Sun SPARC server or Sun Enterprise workstation. CentreVu CMS can measure more aspects of voice system performance and produce a greater variety of reports than any of the other 3 products. CMS also allows streamlined ACD administration.

Use the following criteria to help you choose a call management system.

How many people need to monitor splits simultaneously?	more than 3	use CentreVu CMS, VuStats, or BCMS Vu
	3 or fewer	use standard voice system reports or BCMS
How long do you need to store report data?	more than 7 days	use CentreVu CMS or BCMS Vu
	7 days	use BCMS (summary report)
	1 day	use standard voice system reports (up to 24 hours), VuStats, or BCMS (24-hour detail)

What ACD elements do you need to monitor?	work code or stroke count data, individual trunks, vectors	use CentreVu CMS
	agents, trunk groups, splits/skills, VDNs	use CentreVu CMS, BCMS Vu, BCMS, or VuStats
	trunk group or hunt group data only	use standard voice system reports

Use the following criteria to help you choose a reporting system. If the following scenarios do not describe your needs, standard voice system reports or BCMS are probably adequate.

Do small inefficiencies or lapses in service cause big loss of profits?	Use CentreVu CMS or BCMS Vu. Both systems have exception alerting to notify you of problems immediately.
---	--

Do you frequently generate special reports for clients or senior management?	Use CentreVu CMS or BCMS Vu. Both systems allow custom report development, though CentreVu CMS allows maximum flexibility in those reports. In addition, CentreVu CMS allows you to create forecasts of call volume and needed staffing.
--	--

Do you need an electronic wallboard to display status for your center?	Use CentreVu CMS or BCMS Vu. Both systems allow wallboard display of report data.
--	---

Where to get more information

The *Administrator's Guide for Avaya Communication Manager Software* has more details about BCMS, BCMS Vu, VuStats, and CentreVu CMS. For more complete information, see the following manuals:

Avaya Communication Manager Basic Call Management System Operations, 555-230-706

BCMS Vu Software User Guide, 585-217-100

CentreVu Call Management System Administration

for R3V4: 585-215-800

for R3V5: 585-215-820

for R3V6: 585-215-850

Printing button labels

Understanding the Button Label text template

To understand the Button Label text template, it will help to open a Button Label text file and view it as you read this topic.

Button Label text files have two columns:

Column Name	Contents
Button Feature	This column lists the code name for each feature that you can assign to a phone button. Avaya Site Administration uses this column to match any button features you selected (when you added feature buttons to a phone) to the text that you want on the label.
Label Text	This column contains the text that you want to appear on the button label. Some of the information in this column will print exactly as it appears in this column. However, \$ signs are replaced by data that you entered into the specified field number when you assigned feature buttons for the given phone. For example, \$2 will be replaced by whatever data you entered into the second field that the voice system displayed when you assigned the given feature button to the phone.

What the \$ signs mean

When you assign certain feature buttons, the voice system requests additional information. The information you specify in these additional, feature-related fields gets substituted for the \$ codes when you print the labels. For example, if you chose the "abrv-dial" code name (for the Abbreviated Dial feature) when you assigned a feature button to a phone, the voice system asked for two more pieces of information: List and Dialcode. The first field (corresponding to \$1) is "abrv-dial". The second field (corresponding to \$2) is List. The third field (corresponding to \$3) is Dialcode.

Code:	What Avaya Site Administration substitutes:
EXT	Extension of the station
\$1	The first button data field, which is the code-name for the feature button. For example, abrv-dial.
\$2	The second button data field. For the abrv-dial example, this correlates to the List field.
\$3	The third button data field. For the abrv-dial example, this correlates to the Dialcode field.

For example, assume the Button Label text file contains the following entries:

Button Feature	Label Text
call-appr	9079-\$EXT
abrv-dial	AD \$2 \$3
abrv-dial 1 998	Login
abrv-dial 1 999	Logoff

Avaya Site Administration would print the following button labels:

For a call-appr button on station 1000, Avaya Site Administration would print a label of **9079-1000**.

For an abrv-dial button with List=2 and Dialcode=123, Avaya Site Administration would print a label of **AD 2 123**, since "abrv-dial 2 123" does not match any of the entries.

For an abrv-dial button with list=1 and Dialcode=999, Avaya Site Administration would print a label of **Logoff**, since that matches the entry of "abrv-dial 1 999" in the Button Feature column.


How Avaya Site Administration creates button labels

Once you assign feature buttons to your phone, create a Button Label text file, tell Avaya Site Administration which phones you want to print button labels for and which Button Label text file to use, set up the button label layout, and click **Print**, then Avaya Site Administration merges information from the voice system into the format that you specified in the Button Label text file, and prints the labels.

To merge the information, Avaya Site Administration uses roughly the following procedure. For the purpose of illustration, we explain the process for only one feature button (the "abrv-dial" button, with List=1 and Dialcode=998), but Avaya Site Administration performs this operation for all buttons assigned to a given phone.

- 1 Avaya Site Administration looks in the Button Feature column for an entry that matches all of the button fields, concatenated as a single string and separated by spaces.
- 2 When Avaya Site Administration finds the appropriate entry in the Button Feature column, it looks in the Label Text column and if it sees any of the following codes, it substitutes the feature-related data for them.
 - In the above example, Avaya Site Administration would first look for **abrv-dial 1 998**. If it finds this entry, it will use the Label Text that is specified in the right column of that row. For example, **Login**.
 - If it doesn't find **abrv-dial 1 998**, it will search for **abrv-dial**. If this entry exists, Avaya Site Administration uses the entry specified in the right column of that row, substituting data for \$ signs. For example, **AD 1 998**.
 - If it doesn't find **abrv-dial**, Avaya Site Administration will use the value in the Button Feature column as the label text. For example, **abrv-dial 1 998**.

Printing button labels

- 1 In the Target System box on the toolbar, select the voice system from which you want to print button labels.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **General**.
- 4 Click **Print Button Labels**.
- 5 If you have not created any button labels yet, the system will ask you if you want to create a button label text file. To do so, complete the following steps:
 - a) Click **Yes**.
 - b) Change the text in of the button labels as needed.
 - c) When finished, click  to close the button label text file.
 - d) At the Save changes prompt, click **Yes**.
 - e) Click **Print Button Labels** again.
- 6 In the Print Button Labels screen, specify:
 - which set type you want to print button labels for.
 - which range of extensions you want to print labels for.

Avaya Site Administration will search the selected voice system for all extensions in the range you specified that match the set type you specified, and then present the results in the Button Label Printing screen.
- 7 Test print and adjust a sample label before attempting to print a large number of labels.

Note

Button labels print on the default printer configured for your computer, not a printer connected to the voice system.

- 8 After you have aligned the printing of one label correctly, print the rest of the button labels as described by clicking **Help** (F1) on the Button Label Printing screen.

Frequently Asked Question

- Q. I want to print button labels for a phone that has a "spare" button label at the top. I can't see a way to enter text for this "spare" label.
- A. Correct. Some phones (like the 6400 series) have a button label at the top that, when you generate labels using information from the voice system, is reserved for the extension number of that phone. Some customers occasionally use button label templates without pulling information from the voice system, manually entering text for the labels. However, it is not possible to specify other content for the label that is reserved for the extension number.


Creating, changing, or viewing button label text

Avaya Site Administration uses button label text files to decide what text to print on button labels for a given phone. By default, button label text files are stored in the Button Labels folder on the Tree tab.


You can use the default button label text file without modification, or you can change it to suit your needs. You may need to create several different button label text files; for example, one for each type of phone in your company, or one for each group in your company.

To create button labels


(If you click **Print Button Labels** in the Tasks tab, and you have not yet created a button label text file, Avaya Site Administration asks if you want to create one. After that, you can create additional button label text files as follows.)

- 1 On the browser pane, click the **Tree** tab.
- 2 Right-click the Button Labels folder.
- 3 Select **New>Label Text**, or double click on an existing text template you want to copy.
- 4 Change the text in any of the label columns as needed.
- 5 Select **File>Save**.
- 6 Click  to close the Label Text window.

To change button labels

- 1 On the browser pane, click the **Tree** tab.
- 2 Right-click the Button Labels folder.
- 3 Double-click the Button Label text file you want to modify.
- 4 Change the text in any of the label columns as needed.
- 5 Select **File>Save**.
- 6 Click  to close the Label Text window.

To view button labels

- 1 On the browser pane, click the **Tree** tab.
- 2 Right-click the Button Labels folder.
- 3 Double-click the Button Label text file you want to view.
- 4 Click  to close the Label Text window.

Importing and exporting voice system data

Setting the import and export defaults


Use this procedure to set the default settings for the following import/export settings:

- the default delimiters for the Import wizard and the Export wizard
- the default directory for the Import wizard, the Export wizard, and other import and export tasks such as export from GEDI and export from the Browse Unused Port wizard
- the default format for the date that is appended to exports and reports

Note

If you are exporting to a Microsoft® Excel spreadsheet or similar spreadsheet, statistical or database application, you'll get the best results by using commas as separators, double-quote delimiters, and to name the export file with a .csv extension when defining the format of the exported file.

To set the default settings for importing and exporting, perform the following steps:

- 1 From the Tools menu, select **Options**.
The Options dialog box appears.
- 2 Click the **Export** tab.
- 3 From the Field Delimiter box, select the default delimiter you want the Import wizard and the Export wizard to use for fields. Choices are comma (,), semi-colon (;), space, and tab.
- 4 From the Text Qualifier box, select the default qualifier you want the Import wizard and the Export wizard to use for text. Choices are double quote ("), single quotes ('), and none.
- 5 In the Default Directory box, enter the default directory for importing and exporting. This directory will be the default directory for the Import wizard, the Export wizard, and other import and export tasks such as export from GEDI and export from the Browse Unused Port wizard. Click  to select the appropriate directory.
- 6 From the Date Separator box, select the separator you want to use between the Date fields. Choices are dash (-) and period (.). The Date Sample box shows the separator you selected.
- 7 From the Date Format box, select the format in which you want the date displayed. The Date Sample box shows the format you selected.
- 8 Click **OK** to save your changes and close the Options dialog box.

Exporting data from a voice system

You can retrieve data from a voice system and save it to a file to be exported to another application, such as a spreadsheet.

Note

If you are exporting to a Microsoft® Excel spreadsheet or similar spreadsheet, statistical or database application, you'll get the best results by using commas as separators, double-quote delimiters, and to name the export file with a .csv extension when defining the format of the exported file.

- 1 In the Target System box on the toolbar, select the voice system from which you want to retrieve data.
- 2 On the browser pane, click the **Tasks** tab.
- 3 Click **Advanced**.
- 4 Click **Export Data**.
- 5 Complete the wizard screens.
If you need help with a wizard screen, click **Help** on that screen.
If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.
- 6 When finished, click the **History tab** or **Schedule tab** at the bottom of your screen to see the status of the task.
- 7 Open the file from the location that you specified, using a standard text editor.

Exporting Call Accounting data into a file

You can export data from selected objects into a file.

- 1 In the Target System box on the toolbar, select the voice system whose data you want to export.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **Advanced**.
- 4 Click **Generate Call Accounting**.
- 5 Complete the wizard screens.

If you need help with a wizard screen, click **Help** on that screen.

If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

- 6 When finished, open up the file on your desktop using a text editor.

Exporting unused port data

You can create a file listing unused ports, and that file can be exported to another application, such as a spreadsheet program.

- 1 From the Unused Ports screen, click **Export**.
- 2 Specify the export settings:

For this value	Do this
Export File	View the path and name of the exported file. To change it, click {bmc three dot.bmp} and complete the browse screens to specify the path. If you want to export your file to a spreadsheet like Microsoft® Excel, then name the file with a ".csv" extension. This indicates that the file contains comma-separated values.
Field delimiter	Click the down arrow and select a delimiter from the list. This is a symbol used in the file to indicate separation between different fields. If you are exporting for Microsoft® Excel, and the fields contain the comma character, then use a comma character as the Field Delimiter and double-quote characters as the Text Qualifier.
Text qualifier	Click the down arrow and select a qualifier from the list. This symbol surrounds each field so that when you open the file in a spreadsheet, the spreadsheet will know where a field starts and ends even if the field contains characters like commas.

- 3 Do you want to show the column titles of the data on the first row of the file?
 - If yes, click **Export column titles on first row** so there is a checkmark.
 - If no, leave the box unchecked.
- 4 Click **OK**.
- 5 At the confirmation screen, click **OK**.


Exporting data to an LDAP directory

The following example helps describe how to export data to an LDAP directory.

Suppose the following stations are present on a voice system:

Extension	Type	Port	Name	Room
3000	6408D+	X	Jim Gomes	A
3001	6408D+	X	William Jones	A
3101	6408D+	01A0301	Tom Peterson	C

You want to export these stations to an LDAP server. (The IP address of the LDAP server is 135.122.55.42.) The Directory Information Tree of this LDAP server has the following structure:

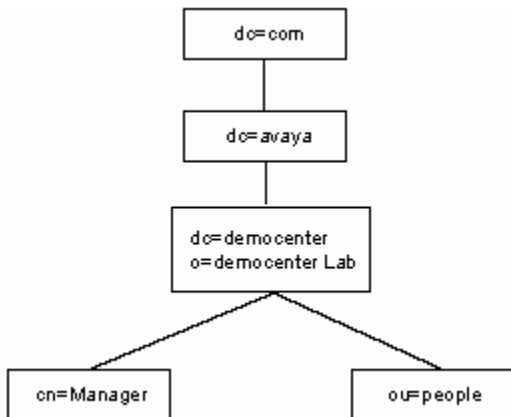

You must specify where you want to add the stations in this Directory Information Tree. Suppose you want to add the stations under "people" (that is, the bottom, right-most node in the Directory Information Tree). You must specify the DN for this node in the Base box in the Format tab of the Export Data screen. In this example, you would enter "ou=people,dc=democenter,dc=avaya,dc=com" in the Base box in the Format tab of the Export Data screen. The following sample screen shows this information in the Base box.

Export Data

Filter Fields Format Schedule

Host: 135.122.55.42 Port: 389

Login: cn=Manager,dc=democenter,dc=avaya,dc=com

Password: xxxxxx

Base: ou=people,dc=democenter,dc=avaya,dc=com

DN: cn=\$FIRSTNAME \$LASTNAME

Attribute	Values
telephoneNumber	\$EXTENSION
sn	\$LASTNAME
givenName	\$FIRSTNAME
objectClass	inetOrgPerson
cn	\$FIRSTNAME \$LASTNAME


Add... Edit... Delete

OK Cancel Apply Help


When you perform the export, all of the stations will be added under "ou=people,dc=democenter,dc=avaya,dc=com". However, you must enter a distinguishing name for each of these station entries. (This distinguishing name will uniquely identify each station entry.) You must enter this distinguishing name in the DN box in the Format tab of the Export Data screen. In the sample screen, the DN box contains "cn=\$FIRSTNAME \$LASTNAME", which will be used as the DN for the station entries.

You must specify the objectClass (that is, the schema) that has to be used when creating these entries in the Directory Information Tree. Each objectClass defines a set of attributes. In the sample screen, the objectClass "inetOrgPerson" is used.

Next, you must create a "mapping" between the attributes present in the specified objectClass and the station fields on the voice system. This mapping is done in the "Attribute-Values" table in the sample screen. The Attribute column represents the LDAP attribute, and the Values column represents the associated value of the voice system station field. For each station field you select in the Fields tab of the Export Data screen, there is a corresponding \$VALUE. So, in the following sample screen, \$EXTENSION maps to the Extension field. The only exceptions are \$FIRSTNAME and \$LASTNAME, which both map to the Name field. Since the Name field is composed of both a first name and a last name, \$FIRSTNAME maps to the first part of the name field (until the space), and \$LASTNAME maps to the second part of the name field.

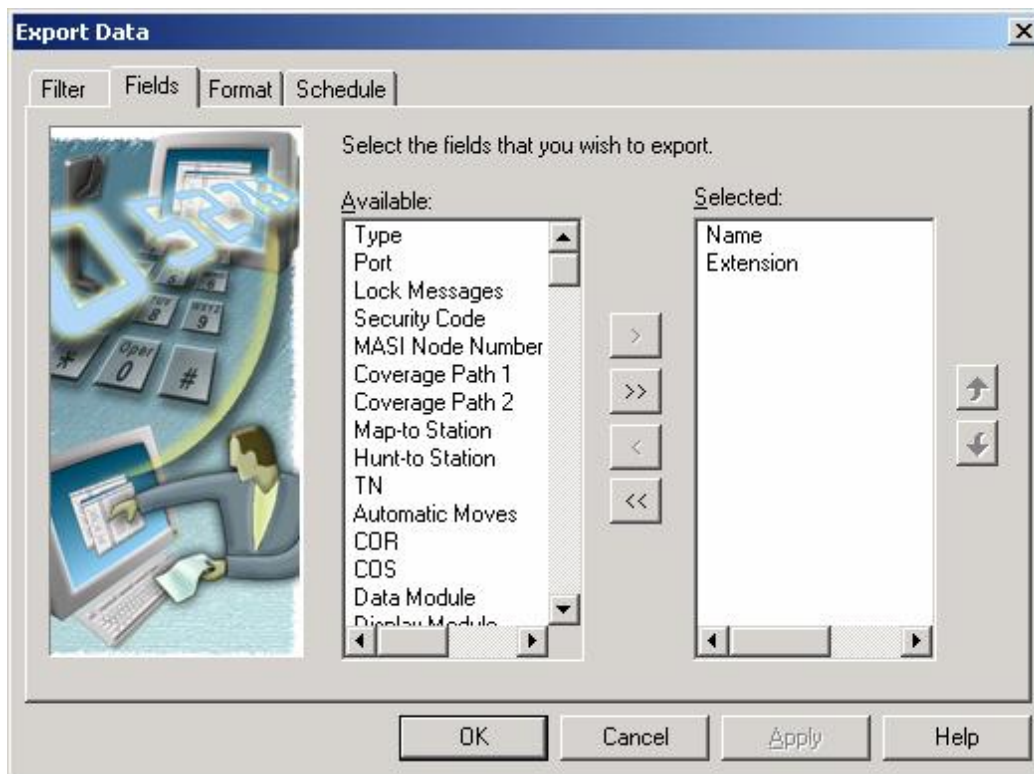

After you export the data to the LDAP directory, the Directory Information Tree will have the following structure:

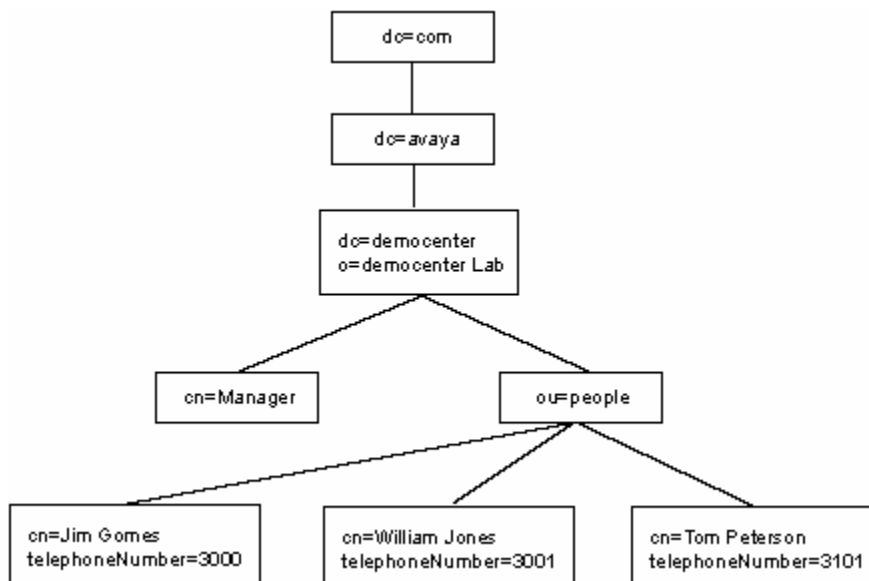

Exporting Native Names

Using the Export wizard, you can export Native Name (Name2) and script tag data for the following objects:

- stations
- hunt groups
- trunk groups
- VDNs

Native Name cannot exceed 27 UTF-8 encoded characters.

The script tag must be a binary value representing an OR of the scripts used.

NOTE:

You cannot **enter** or **view** Unicode characters in the Name field of the Export grid for the following objects:

- stations
- hunt groups
- trunk groups
- VDNs

To enter Unicode characters for these objects, you must use the MultiLingual Name wizard or the Avaya Bulk Import Tool (ABIT).

Importing data into a voice system

You can do bulk voice system administration by importing data (in spreadsheet-like fashion) from another application into Avaya Site Administration, and then sending that data to a voice system. For example, if you are adding a large number of phones at one time, you might want to enter the phone data into a spreadsheet such as Microsoft[®] Excel. Then, you can copy (import) that data from the Microsoft Excel spreadsheet into a station spreadsheet in Avaya Site Administration.

Importing data is particularly useful for duplicating a station from one voice system onto another. Simply save a template of the station you want to duplicate from the "source" voice system and then use the template to add new stations to the "destination" voice system. You can also move objects, like trunk groups, from one voice system to another using templates and the Import Data feature.

- 1 In the Target System box on the toolbar, select the voice system where you want to send data.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **Advanced**.
- 4 Click **Import Data**.
- 5 Complete the wizard screens.

If you need help with a wizard screen, click **Help** on that screen.

If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Importing Native Names

Using the Import wizard, you can import Native Name (Name2) and script tag data for the following objects:

- stations
- hunt groups
- trunk groups
- VDNs

Native Name cannot exceed 27 UTF-8 encoded characters.

The script tag must be a binary value representing an OR of the scripts used.

NOTE:

You cannot **enter** or **view** Unicode characters in the Native Name field and Name field of the Import grid for the following objects:

- stations
- hunt groups
- trunk groups
- VDNs

To enter Unicode characters for these objects, you must use the MultiLingual Name wizard or the Avaya Bulk Import Tool (ABIT).

Administering messaging systems

Adding a phone and messaging subscriber

Use the Add User wizard to add a new phone, add a new messaging account, or add a new phone and new messaging account, all at the same time. As an option, you can also use a GEDI window to add a new phone or use terminal emulation to add a new messaging account to the messaging system.

- 1 In the Target System box on the toolbar, select the voice system you want to add the new phone to.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **General**.
- 4 Click **Add User**.
- 5 Complete the wizard screens.

If you need help with a wizard screen, click **Help** on that screen.

If you schedule the job, remember that open Terminal Emulation windows can delay the job or cause it to fail.

Note

If you are adding both a phone and messaging account at once, and if both systems are using the same modem or COM port, make sure that you select "Disconnect from system" on the Scheduler screen that appears when you use the Add User task wizard. If you do not do this, the voice system will remain connected after adding the new phone, and Avaya Site Administration will not be able to connect to the messaging system to add the new messaging account. If a connection requires a COM port and the connection using that port is idle, Avaya Site Administration will disconnect the idle connection to free up the port.

Confirming that the phone and mailbox were added

- 1 To confirm that the new phone was added, complete the following steps:
 - a) On the browser pane, click the **Tasks** tab.
 - b) On the Tasks tab, click **General**.
 - c) Click **Browse Stations**.
 - d) In the From extension and To extension fields, enter the extension number that you created when you added the phone to the voice system.
 - e) Click **OK**.
 - f) Confirm that the new phone user appears in the list.
- 2 To confirm that the new messaging account was added, complete the following steps:
 - a) On the browser pane, click the **Tree** tab.
 - b) Open a terminal emulation window for the messaging system you added the account to by right-clicking on the messaging system name, selecting **Advanced>Emulation**, and logging into the system. If you log into an INTUITY AUDIX system as sa, select AUDIX Administration from the INTUITY main menu to access the administration screens.
 - c) At the command prompt, type **list subscriber**.
 - d) Confirm that the new messaging account appears in the list.

All other voice mail administration

For instructions on performing all other types of administration on your messaging system, please refer to the documentation that came with your messaging system, or visit www.avaya.com

Security

ASG

Access Security Gateway (ASG) is an optional security feature set up for certain users whereby they must complete a challenge and response sequence before they can access either a voice system or Avaya Site Administration. ASG security for specific logins to a voice system must first be set up on the voice system as described in the *Administrator's Guide for Communication Manager Software*. Then, those logins must be set up in Avaya Site Administration for voice system access using ASG.

The challenge and response sequence only occurs when you try to connect to a device (voice system or messaging system) that requires a manual login, or when ASG security is turned on for accessing Avaya Site Administration. In those situations, you must have an ASG Key or equivalent product. IF you set up Avaya Site Administration so it logs you into the voice system automatically, you will not see the challenge and response sequence. See you Avaya representative for more ASG information.

Note that the Avaya ASG Guard product is not the same as ASG described here. ASG Guard uses ASG technology to provide authentication services to legacy systems that do not support ASG inherently. Avaya Site Administration can automatically log in to most Avaya products protected by ASG, but not ASG Guard. You must log in manually to connect to a system through ASG Guard.

Assigning and changing administrators

The system allows you to add or change user logins as needed. When you want to add or change a login, remember the following system security requirements:

- a login must be 3 to 6 alphanumeric characters in length
- a password must be from 4 to 11 alphanumeric characters in length and contain at least one non-alphabetic character

Note that to create or change logins for G3V3 and later releases, you must login as a superuser with administrative permissions.

Top 11 tips to help prevent toll fraud

An important role for every administrator is to manage the security of their phone system. You need to make every effort to ensure that your phone system is not open to toll fraud. Toll fraud is the unauthorized use of telephone features and services and the theft of long distance service. When toll fraud occurs, your company is responsible for charges.

For more information

For more information on system security and preventing toll fraud, we recommend you obtain the *BCS Products Security Handbook* and use it often.

Security Alert:

If you are located in the USA and you suspect toll fraud, call the Toll Fraud Helpline at 1-800-643-2353.

Tip:

If your organization has not yet completed the Service Agreement Indemnity Enhancement Certification, we highly recommend that you call the Security Hotline at the World-class Customer Service Center (1 800 643-2353) and ask how to become certified. When you complete this certification and administer your Avaya Communication Manager system according to Avaya's fraud prevention requirements, Avaya will indemnify your organization for charges associated with toll fraud.

You can reduce your company's risk of toll fraud by following a few important guidelines.

- 1 Protect system administration from unauthorized access.

Make sure all system administration and maintenance logins are secure. Change your passwords frequently.

- 2 Deny unauthorized remote access.

If you do not use remote access, disable all its related features. If you use remote access, require barrier codes and set your authorization codes, if applicable, at the maximum length. Also, change these codes frequently.

- 3 Restrict individual ability to make international calls.

Set up class of restriction groups to allow only certain people to call international numbers required for your business.

- 4 Protect access to information stored in voice mail.

Require passwords for access to voice mailboxes. Use complicated passwords and change the passwords regularly.

- 5 Deny any transfer from a voice mail system to a dial tone.

Place restrictions on the ports that allow access to and from your voice mail system. Activate "secure transfer" features in voice mail systems.

- 6 Use system software to intelligently control call routing.

Set up your system to control how each call is handled or routed. If possible, use time-of-day routing to limit the use of your system during off hours.

- 7 Place protection on systems that ask callers to dial digits.

Restrict certain users' access to dial tone. Restrict the digit combinations dialed at prompts.

8 Monitor traffic and system activity for suspicious call patterns.

Use your traffic reports and call detail records to monitor call activity. Activate features that deny access to your system when unauthorized attempts are detected.

9 Provide physical security for telecommunications assets.

Restrict unauthorized access to equipment rooms and wire connection closets. Keep translation backups, system manuals, and reports in a safe place.

10 Educate system users to recognize toll fraud activity and react appropriately.

Train your users how to protect themselves from inadvertent compromises to system security.

11 Monitor call traffic over vectors.

Vector fraud is one of the most common types of toll fraud because vectors route calls based on the class of restriction (COR) assigned to the VDN. Refer to *BCS Products Security Handbook* or your Avaya representative for more information. If you do not have a copy, you can order one from the Publications Center.

Using Call Detail Recording reports to detect problems

Call Detail Recording (CDR) collects detailed information about calls handled by your system. This CDR information can be sent directly to a printer or into call accounting software. You can use the printed CDR output or call accounting reports to monitor calls on your system and look for possible toll fraud problems.

Review your call accounting reports or CDR output each day to help detect possible toll fraud. When reviewing these records, look for:

- unusual calling patterns
 - numerous calls to the same number
 - calls outside of normal business hours
 - long calls
- calls to suspicious destinations, including international calls not typical for your business
- patterns of authorization code usage (same code used simultaneously or high activity)
- high numbers of "ineffective call attempts" indicating attempts at entering invalid codes
- undefined account codes
- attempts to change the access code or to use an invalide access code when using conferencing feature

If you are unfamiliar with reading CDR printed output, you'll want to refer to the description of CDR in the *Administrator's Guide for Avaya Communication Manager Software*.

If your organization uses call accounting software to analyze your CDR output, you probably receive formatted reports that list the information you need to detect possible toll fraud. If you have questions about reading your call accounting reports, refer to your call accounting software manuals.

Using Security Violations Notification to detect problems

You can administer Security Violations Notification so that the system notifies you and provides reports when users enter invalid information. You want to know about the following types of violations, which may indicate an attempt to breach your security:

- login violations
- remote access barrier code violations
- authorization code violations
- station security code violations

For example, let's have the system notify us at extension 8000 when someone tries to enter more than 3 invalid authorization codes within a 1-minute time span.

To set up Security Violations Notification for our example:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change system-parameters security** and press the ENTER key.

The Security-Related System Parameters screen appears.

- 3 In the SVN Authorization Code Violation Notification Enabled field, type **y** and press the ENTER key.

Additional fields now display on the screen.

- 4 In the Originating Extension field, type the extension you want the system to use to originate the call.

Use the extension of an unused non-dial station.

- 5 Enter **8000** in the Referral Destination field.


Use the extension you want the system to notify.

- 6 If the referral destination is on a different system or is a non-display phone, fill in the Announcement Extension field.
- 7 Enter **3** in the Authorization Code Threshold field.

Enter the maximum number of invalid entry attempts you want to allow.

- 8 Enter **0:01** (1 minute) in the Time Interval field.

Use an hour:minute format for the amount of time you want the system to use for the monitor interval.

- 9 Click the **Enter** button on the GEDI window to save your changes.
- 10 Click  to close the GEDI window.

About system security

Customers are solely responsible for the security of their system, network, and access to hardware and software.

Avaya strongly recommends that customers use passwords to prohibit access to their systems and to routinely change those passwords to maintain security.

Customers should always change passwords immediately after external vendors have completed installation, maintenance, troubleshooting, or other tasks on their system.

Using Native Names

Using Native Name

To enter the native name, you must use the Input Method Editor (IME) application. The IME application provides the ability to enter Japanese, Korean, and Chinese characters without requiring a special keyboard. However, you must enable the IME application manually. Otherwise, the keyboard input will remain in the default language.

The IME icon appears in the Windows system tray and indicates the language you are currently using. For example, if you are using English, the IME icon in the system tray will display **EN**. If you are using French, the IME icon in the system tray will display **FR**.

To enter the native name, perform the following steps:

- 1 Click on the IME icon in the Windows system tray.
A menu appears displaying the languages installed on your PC.
- 2 Select the language you want to use.
- 3 Type the native name in Avaya Site Administration.

Using the Avaya Bulk Import Tool (ABIT)

The Avaya Bulk Import Tool (ABIT) enables you to edit station administration data via a user-friendly interface and prepare a formatted text file. You can then import this file into Avaya Communication Manager via Avaya Site Administration. ABIT provides the platform for editing the station data that might use Avaya Eurofont/Optrex (Kanafont) in Name1 or Native Name (Unicode). ABIT then converts Avaya Eurofont/Optrex or Native Name to the format required by Avaya Communication Manager.

With ABIT, you can directly enter Name1 and Name2 names associated with an extension. For Name1, ABIT uses Avaya Eurofont/Optrex. For Name2, ABIT uses Unicode.

Requirement

ABIT uses Microsoft Excel 2000 or later.

Getting ABIT

You can download ABIT from <http://avaya.com/support>.

Starting ABIT

To start ABIT, open the ABIT file. You must enable macros in order to use ABIT.

Importing Data

You can import a formatted text file into ABIT. During the import, you are prompted to enter:

- the place in ABIT where you want to put the data
- the import file name
- the delimiter

It is highly recommended that you perform a backup before you import the file. An import is irreversible. All existing data in ABIT is overwritten.

Editing Data

You may directly enter or change data in ABIT. ABIT will verify data accuracy in the extension, Name1, and Native Name. For example, an extension should be one to 10 digits in length. The Name1 and Name2 values must be less than 27 characters. ABIT checks the characters in a Name1 value to verify that those characters are in the Avaya Eurofont or Optrex (Kanafont) character set.

When using extended ASCII in a Name1 value, you may be unable to use all 27 characters because of data conversion. The Name2 value can include any characters supported by the Windows platform, but a user may not "mix" any two distinct writing scripts. (ASCII is excluded.) For example, you cannot include Hebrew and Japanese characters in a Name2 value.

Saving Station Data

After entering all the data in ABIT, you may save the file by clicking on the Save Station Data button. The Name1 and Name2 data are saved in the appropriate character sets. Because Name1 uses the Avaya Eurofont/Optrex character set, the Name1 data, together with the Name2 data, will not display properly in any other editor.

Entering Native Names

Use this procedure to add or edit the name of a system object in native language. You can specify the native name for the following system objects:

- Station
- Hunt Group
- Trunk Group
- VDN

NOTE:

The object must exist already on the voice system. You cannot add a new object to the voice system via this procedure.

To add or edit the name of a system object in native language:

- 1 In the Target System box on the toolbar, select the appropriate voice system.
- 2 On the browser pane, click the **Tasks** tab.
- 3 On the Tasks tab, click **General**.
- 4 Click **MultiLingual Name Wizard**.

The MultiLingual Wizard Task – Select Object dialog box appears.

- 5 From the drop-down list box, select the appropriate system object.
- 6 From the Specify Max Rows for this Object box, select the number of entries you want to add or change for this object.
- 7 Click **Next**.

The Display Grid dialog box appears.

- 8 Perform one of the following steps:
 - If you selected **hunt-group**, perform one of the following steps:
 - Enter the number in the group number box, enter the name in the Group Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the hunt group(s) you want to change from the Hunt-Group Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.
 - If you selected **station**, perform one of the following steps:
 - Enter the name in the Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the station(s) you want to change from the Hunt Group Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.
 - If you selected **trunk-group**, perform one of the following steps:
 - Enter the number in the group number box, enter the name in the Group Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the trunk group(s) you want to change from the Trunk-Group Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.

- If you selected **vdn**, perform one of the following steps:
 - Enter the name in the Name box, and then enter the native language name in the Native Name box.
 - Click View Available Objects, select the VDN(s) you want to change from the VDN Browser dialog box, click **OK**, and then enter the native language name in the Native Name box.
- 9 When finished, click **Next**.
- The MultiLingual Wizard Task – Schedule dialog box appears.
- 10 In the Name box, enter a short description of this task.
- 11 Perform one of the following steps:
- If you want to run this task now, click the **Run Now** check box. If you also want to save this task so you can modify it and/or run it later, click the **Save information in tree** check box.
 - If you want to schedule this task to run later, click the **Schedule this task to run** check box, and either accept the default run time and date, or click **Schedule** and set the appropriate date, time, and frequency.
 - If you want to save this task so you can modify it and/or run it later, click the **Save information in tree** check box.
- 12 Click **Next**.
- The MultiLingual Wizard Task – Summary dialog box appears.
- 13 Click **Finish**.

Importing Native Names

Using the Import wizard, you can import Native Name (Name2) and script tag data for the following objects:

- stations
- hunt groups
- trunk groups
- VDNs

Native Name cannot exceed 27 UTF-8 encoded characters.

The script tag must be a binary value representing an OR of the scripts used.

NOTE:

You cannot **enter** or **view** Unicode characters in the Native Name field and Name field of the Import grid for the following objects:

- stations
- hunt groups
- trunk groups
- VDNs

To enter Unicode characters for these objects, you must use the MultiLingual Name wizard or the Avaya Bulk Import Tool (ABIT).

Exporting Native Names

Using the Export wizard, you can export Native Name (Name2) and script tag data for the following objects:

- stations
- hunt groups
- trunk groups
- VDNs

Native Name cannot exceed 27 UTF-8 encoded characters.

The script tag must be a binary value representing an OR of the scripts used.

NOTE:

You cannot **enter** or **view** Unicode characters in the Name field of the Export grid for the following objects:

- stations
- hunt groups
- trunk groups
- VDNs

To enter Unicode characters for these objects, you must use the MultiLingual Name wizard or the Avaya Bulk Import Tool (ABIT).

Troubleshooting

ASA connection errors

Access denied

The voice system or messaging system you are trying to reach has denied you access. Check the login name and password or secret key for this connection, or use the manual connect feature.

For security reasons, the system that you are trying to connect to has not given a specific reason why your access has been denied. If you are sure that your login and password (or login and ASG Secret Key) are correct, then you should contact the administrator of the system you are connecting to for help.

ASG is enabled

The voice system or messaging system indicates that ASG not enabled for this login, but you have specified in the System Properties screen that it is not enabled.

Check the login parameters that you set in the System Properties screen.

Avaya Site Administration will display this error message if, in the System Properties screen, you entered a login name that has ASG enabled and then incorrectly specified that Avaya Site Administration should supply the system with a password. To fix the problem, either:

- Specify a login that does not use ASG, or
- Leave the login name as is, and check the ASG option instead of the password option. Then enter the appropriate 20-digit octal key for that system and login.

ASG is not enabled

The voice system or messaging system indicates that ASG is not enabled for this login, but you have specified in the System Properties screen that it is enabled.

Check the login parameters that you set in the System Properties screen.

Avaya Site Administration will display this error message if, in the System Properties screen, you entered a login name that does not have ASG enabled and then incorrectly specified that ASG was enabled for this login. To fix the problem, either:

- Specify a login that uses ASG, or
- Leave the login name as is, and check the Password option instead of the ASG option. Then enter the appropriate password.

Busy

Your modem or data module has received a busy signal for the number you are dialing.

- 1 Confirm that you are dialing the correct number, as follows:
 - a) Verify the number that Avaya Site Administration is having the modem dial, by looking in the Connection Properties screen for that connection.
 - b) Write down the phone number and try calling it yourself, using a regular phone.
If the phone number is incorrect, fix it in the Connection Properties screen.
- 2 If the phone number is busy:
 - If you are dialing a voice system via netcon channels:
 - ◆ The netcon hunt group may be fully occupied.
 - ◆ The voice system may not be properly configured with netcon channels. This is unlikely, however.
 - If you are dialing a voice system via the INADS port:
 - ◆ The INADS port is probably in use by someone else. You may want to call the people most likely to be using it, or if you are certain that no one else is using it, reset the INADS modem. Do not consider this option lightly! Your system uses the INADS port to send out trouble reports!
 - If you are dialing a voice system that is set up with a modem pool:
 - ◆ The modem pool may be fully occupied with calls.

Cannot initialize serial port

Avaya Site Administration experienced a problem initializing your serial port.

Avaya Site Administration encountered a problem while setting parameters that control the serial port connection.

- 1 Try rebooting your computer.
- 2 If the problem persists, see if you can access the serial port using Hyperterminal.
- 3 If you can't access the serial port using Hyperterminal, consult your system administrator and diagnose the computer for hardware problems.

Cannot open serial port

Avaya Site Administration experienced a problem opening your serial port.

- 1 Try rebooting your computer.
- 2 If the problem persists, see if you can access the serial port using Hyperterminal.
- 3 If you can't access the serial port using Hyperterminal, consult your system administrator and diagnose the computer for hardware problems.

Command Timed Out

Avaya Site Administration did not receive an expected response from the system within the timeout period specified in the Connection Properties screen.

- 1 Are you trying to connect to a system using a manual login?
 - If yes,
 - ◆ You may be making a common manual login mistake.
 - ◆ If you are starting terminal emulation on the messaging system, after you click Continue or press F7 on the manual login screen, does the terminal emulation window display a prompt (for example, a percent sign (%))? If yes, Avaya Site Administration will not work. Have your messaging system administrator assign you a "vm" or "sa" login, and use only those logins when you access the messaging system using Avaya Site Administration.
 - If no, see the questions below.
- 2 Are you trying to connect to a system using a modem or data module? If yes,
 - Have you successfully used this modem (or data module) to connect to this voice system or messaging system in the past?
 - ◆ If yes, then either someone has changed the setup of your modem (or data module) or something has changed on the remote end.
 - Determine whether any connection settings have changed in Avaya Site Administration by accessing the Connection Properties screen for that connection.
 - Ask the people in charge of the modem (or data module) on the remote end if anything has changed.
 - ◆ If you have not successfully used this modem (or data module) to connect to this voice system or messaging system in the past, see the questions below.
 - Can you use the modem (or data module) to dial other locations?
 - ◆ If yes, the modem (or data module) is working, and so is the serial cable and the phone cord. However,
 - Something may be wrong in your connection setup to the voice system or messaging system. The problem could be with any of the following:
 - ♣ an incorrect phone number
 - ♣ an incorrect Login timeout
 - ≡ If you are dialing long distance, you may have to increase the Login timeout substantially to allow for the delays inherent in connecting long distance. To increase the timeout value, access the connection properties screen.
 - ≡ (For data modules only:) If you are accessing a Prologix voice system, you may need to increase the Login timeout value to 3000 milliseconds (3 seconds) because Prologix voice systems require slightly more time to respond than other devices. To increase the timeout value, access the Connection Properties screen.
 - ♣ an incorrect COM port
 - ♣ an incorrect initialization string
 - You may be experiencing line noise.
 - Line noise can corrupt the messages being sent from the voice system or messaging system. Because Avaya Site Administration will not connect to a

system until it hears the correct response, if line noise is corrupting the responses, then Avaya Site Administration may wait for the correct response until the Login timeout value is exceeded.

- If you suspect you are experiencing line noise, try placing the call again to get a different line. If the problem continues, you may want to talk to your telecommunications manager or the telephone company about line quality.
 - If your modem (or data module) and the remote modem (or data module) both support error correction (a feature that is designed to mitigate line noise), then make sure it is turned on. (See Choosing the correct initialization string.)
 - ◆ If you can't use the modem (or data module) to dial other locations, or if you don't know, see the questions below.
 - (For data modules only:)
 - ◆ Is the data module a 7400A? If yes, troubleshoot here.
 - ◆ Is the data module a 7400B Plus? If yes, troubleshoot here.
 - ◆ Is the data module an 8400B Plus? If yes, troubleshoot here.
 - Can you connect to the modem (or data module) using Hyperterminal?
 - To find out, start a Hyperterminal session, using the same COM port as you specified in the Connection Properties screen.
 - ◆ If you can't connect to modem (or data module) using Hyperterminal, the problem could be any of the following:
 - The modem (or data module) is not powered on.
 - The serial cable connecting the computer to the modem (or data module) is not plugged in securely.
 - You are using the wrong COM port.
 - The serial cable is defective
 - The COM port is defective.
 - If possible, try moving the modem (or data module) to another COM port, choose the new COM port from the Connection Properties screen, and retest the connection.
 - The modem (or data module) is defective.
 - You can try replacing the modem (or data module) with another one, but because these peripherals are generally reliable, and because setting up a new modem or data module is time-consuming and may require significant troubleshooting and configuration effort, you may want to resort to this only as a last measure.
 - ◆ If you can connect to the modem (or data module) using Hyperterminal, and it responds, but you were not able to place calls using it, see the questions below.
 - Is your phone cord faulty? (This connects the modem or data module to the phone jack.)
 - To find out, replace the current phone cord with another one that you know works, and then retest the connection. For analog modems only, you might want to try connecting an analog phone to the cord and listening for dial tone.
- 3 Are you trying to connect to a system using a direct serial cable connection?
- If you don't know, view the Connection Properties screen for the problematic connection.
- If yes, is the serial cable connected correctly?
 - If no, see the questions below.

4 Are you trying to connect to a system over a computer network?

If you don't know, view the Connection Properties screen for the problematic connection.

- If yes, the problem could be any of the following:
 - ◆ The FQDN or IP Address may be incorrect.
 - ◆ To find out, ping the computer using the FQDN or IP Address you specified in the Connection Properties screen.
 - ◆ The IP Port Number may be incorrect.
 - ◆ The computer network may be set up incorrectly.
 - ◆ If you are connecting through a terminal server, the terminal server may be set up incorrectly.

5 Is your voice system or messaging system overloaded or responding slowly? (Check last because not common.)

Log into the system manually to get an idea of how slow the login process is and whether the system appears to be behaving normally.

- If yes, If the system is slow to respond, increase the Login timeout option by accessing the Connection Properties screen.
- If system response times are normal, the problem must be in one of the items mentioned earlier in this topic.

Connection lost

Your modem or data modules indicates that the connection was unexpectedly broken.

Connections can be lost due to line noise (static on the line, crossed lines, telephone receiver lifted on the same line, call waiting etc.) or due to a physical connection break (cables, sockets & plugs).

- 1 Restart the connection. The problem may only be temporary.
- 2 If that doesn't fix the problem, make sure that the cables and phone cords to and from your modem or data module are plugged in securely.
- 3 Confirm that the modem or data module you are dialing is still working. To do so, manually dial the phone number that is listed in the Connection Properties screen for this connection.
- 4 Confirm that the phone cord is functioning by replacing it with one that you know works.
- 5 Confirm that the serial cable is functioning properly.
- 6 If your modem or data module is using a phone line that you can administer, check the status of the analog or digital port that it is connected to.
- 7 Confirm that your modem or data module and the device you are connecting to are both set up with complete configurations. This message often occurs if your modem negotiates a slower connection than the other modem (or vice versa); the modems will drop the connection rather than sustain a slow connection.

Corrupt data received

Avaya Site Administration has received data that is corrupt or unexpected.

This error occurs when noise is experienced on a connection. To avoid this problem, consider using an error-resistant connection such as a data module or network connection. If you are connecting to a system with an external modem that is capable of error correction, consider turning error correction on, on both your modem and the remote one. To do so, consult the documentation that came with your modem to design and insert a new initialization string that has the desired effect. (You may have to work with someone at the remote location to reconfigure the remote modem.)

Data is locked

Avaya Site Administration can not perform the requested action because someone else is performing an activity that takes exclusive control of resources on the voice system or messaging system that you are connected to.

Wait for the command that is holding the resource to complete.

Device does not exist

Avaya Site Administration could not find the information it needs in order to communicate with the COM port on your computer. This may have happened because someone deleted a COM port from the Ports screen, which Avaya Site Administration had been using for this connection. (To check, you can access the Ports screen by choosing Ports from the Tools menu.) To fix the problem, answer the following questions:

1 Is the correct COM port selected in the Connection Properties screen?

To find out, determine which COM port you are using and see if it matches the COM Port setting specified in the Connection Properties screen.

- If the COM Port you are using **doesn't** match the setting in the Connection Properties screen, then change the setting.
- If the COM Port **does** match the setting in the Connection Properties screen, read the next question.

2 Is the COM Port set up in the Ports screen?

Just because you specify a COM port in the Connection Properties screen doesn't mean it is actually set up for use. The Ports screen shows what COM Ports have been set up. By default, Avaya Site Administration sets up only COM1 and COM2 for use. If you are using a different COM port, or if your settings need to be different than the defaults that Avaya Site Administration provides for COM1 and COM2, you need to use the Ports screen.

To find out if the COM port has been set up, access the Ports screen (choose Ports from the Tools menu) and see if the COM Port you are using is listed there.

- If the COM Port you are using **is not** listed, you can either:
 - ◆ Add a COM Port
 - ◆ Use one of the COM Ports that **are** listed in this screen, making sure you change the setting in the Connection Properties screen and that you physically reconnect the peripheral to the COM Port you choose (consult your computer's manual and the peripheral's manual for details on how to do this).
- If the COM Port you are using **is** listed, check to see that the settings are correct.

General communications error

A communications-related error has been detected and reported by your computer.

An unrecoverable error has occurred. The message displayed has been reported by the operating System or Avaya Site Administration.

Incorrect device

Avaya Site Administration has determined that the system you are trying to reach has probably been configured in Avaya Site Administration as a voice system, when it is a messaging system, or vice versa.

For example, this error occurs if you have accidentally configured a voice system as an Intuity™ AUDIX or vice versa.

To correct the problem, check the information in the System Properties screen or the Connection Properties screen for this system. Ensure that it matches the type of the device you have configured.

Incorrect login

The voice system or messaging system you are contacting indicates that the login ID you have specified is not recognized.

You may want to:

- Check the spelling of the login ID you are using. If Avaya Site Administration is logging you in automatically, you can find the login ID in the System Properties screen.
- Check that your login exists and is enabled on the system you want to connect to.
 - To do so, log in with a different login ID and password (if you know one) that has permission to view the login information.

Invalid password

The voice system or messaging system has informed Avaya Site Administration that the password you supplied is invalid.

If you are logging in manually, check the spelling of your password. Re-enter the password for the system and try again.

If Avaya Site Administration is logging you in automatically, check the spelling of the password you entered on the System Properties screen.

Modem initialization error

Your modem or data module has reported an error pertaining to the phone number or initialization string that Avaya Site Administration is sending it.

- 1 Have you successfully used this modem (or data module) to connect to this voice system or messaging system in the past?
 - If yes, then someone or something has changed the setup of your modem (or data module).
 - ◆ Determine whether any connection settings have changed in Avaya Site Administration by accessing the Connection Properties screen for that connection.
 - If you have not successfully used this modem (or data module) to connect to this voice system or messaging system in the past, see the questions below.
- 2 Can you use the modem (or data module) to dial other locations?
 - If yes, the modem (or data module) is working, and so is the serial cable and the phone cord. However,
 - ◆ Something may be wrong in your connection setup to the voice system or messaging system. The problem could be with any of the following:
 - An incorrect phone number
 - An incorrect initialization string.

Network connection failed

Avaya Site Administration has encountered a problem initiating a network connection to the voice system or messaging system. Avaya Site Administration cannot reach the system, or can not find the system with the details you have provided in the Connection Properties screen.

- 1 You may want to re-try the connection. There may be a temporary problem with your computer network.
- 2 If Windows Networking is set up on you computer, do you have access to your normal network services (like e-mail or the web)?
If you do, and they are working as you expect them to, then your Windows Networking is probably OK. If you do not have access, then you may want to troubleshoot your Windows Networking setup.
- 3 Check that the host system you are trying to connect to exists on your network and is operating.
 - Check the spelling of the host and port number in the Connection Properties screen for the system you are trying to connect to.
 - Check that the system you are trying to connect to can be reached from your computer by pinging it. If the system does not respond to the ping, then:
 - ◆ that the system you are trying to connect to is working. Check its power and use the manufacturer's instructions to check the health of the system.
 - ◆ If the system is okay, check your network cable.
 - ◆ If the network cable is okay, try to ping another well-known system (like your department server). If the system does not respond, then troubleshoot your Windows Networking setup.
 - If you are operating in an environment without a Domain Name Server (DNS) or in an environment where your DNS is untrustworthy, then you should use the IP address of the system you wish to connect to instead of the host name in the Connection Properties screen (i.e. Use 123.192.10.17 instead of mysystem or mysystem.mycompanyname.com).
- 4 Check that the port number you are using is correct in the Connection Properties screen for the system you are trying to connect to.
Check with your system administrator or the system's manual to determine what the correct port number is. A common port number is 23. 23 is the "well-known" port number for telnet, a network text terminal utility and is also the standard port number for INTUITY™ AUDIX.®
If you are connecting through a terminal server, then the port number is configured through the terminal server. Ask your administrator, or use your terminal server documentation to determine what the correct port number is.
- 5 Check how many network connections the system that you are trying to reach supports.

The system you are connecting to may only support a limited number of network connections. If the system has reached the maximum number of connections, then it will refuse connections and display this error message. The documentation for the system you are connecting to will indicate the connection limitations of that system. In this situation, you will be able to connect if another user disconnects.

If you have defined several network connections to the same system, then **you** may be the person who is holding a connection open. If a system only supports one network connection, and you define two network connections, your second connection will fail.

Check Avaya Site Administration's Connection Status tab to see if you already have a connection open to this system.

No carrier

Your modem or data module was not able to make a connection with the remote modem or data module.

Possible causes:

- Your modem may not have had enough time to make the connection. To fix the problem:
 - 1 Give your modem more time to make a connection with the remote modem by increasing your modem's timeout value (see Designing new initialization strings or refer to the documentation that came with your modem or data module). If you do, then also:
 - 2 Give Avaya Site Administration more time to make the initial connection with the remote voice system or messaging system, by increasing the Login timeout value in the Connection Properties screen.
- Your modem settings may be incompatible with those of the remote modem (the modems could not negotiate a common protocol to communicate with). To fix the problem, make sure you are using the correct initialization string.
- You may be experiencing line noise.
 - Line noise can corrupt the messages being sent from the voice system or messaging system. Because Avaya Site Administration will not connect to a system until it hears the correct response, if line noise is corrupting the responses, then Avaya Site Administration may wait for the correct response until the Login timeout value is exceeded.
 - If you suspect you are experiencing line noise, try placing the call again to get a different line. If the problem continues, you may want to talk to your telecommunications manager or the telephone company about line quality.
 - If your modem (or data module) and the remote modem (or data module) both support error correction (a feature that is designed to mitigate line noise), then make sure it is turned on. (See Choosing the correct initialization string.)

No dial tone

Before attempting to dial, your modem or data module checked for dial tone and found none.

- Check your phone cable. To do so, replace it with one that you know works.
- Confirm that the extension number that the modem (or data module) is dialing from is properly configured on your voice system (if the extension number is part of the public telephone system, then work with your telephone company).
- Does your modem have a setup option for detecting different types of dial tone or ignoring dial tone? Check the documentation that came with your modem or data module.
- Have you inserted a *wait for dial tone* character (such as "W") in your dial string? If yes, make sure you are using this character correctly by checking the documentation that came with your modem or data module.

No Ports available

No ports are available on the selected voice system or messaging system.

Consult the system's administration and maintenance guides.

Password has expired

The password for the account you are using has expired.

You may want to:

- Log in manually and respond to the change-password prompts. When you have entered your new password, and the system prompts you for the terminal type – press the continue (F7) button on the manual login box, and then go to Avaya Site Administration's System Properties screen and change the password to the one you just created.
- Alternately, ask your administrator to change your password. After you get the new password, make sure that you enter the new one in Avaya Site Administration's System Properties screen.

Serial port does not exist

Avaya Site Administration could not find the COM Port that you have selected (in the Connection Properties screen) to use for this connection. To fix the problem, answer the following questions:

- 1 Is the correct COM port selected in the Connection Properties screen?

To find out, determine which COM port you are using and see if it matches the COM Port setting specified in the Connection Properties screen.

- If the COM Port you are using **doesn't** match the setting in the Connection Properties screen, then change the setting.
- If the COM Port **does** match the setting in the Connection Properties screen, read the next question.

- 2 Is the COM Port set up in the Ports screen?

Just because you specify a COM port in the Connection Properties screen doesn't mean it is actually set up for use. The Ports screen shows what COM Ports have been set up. By default, Avaya Site Administration sets up only COM1 and COM2 for use. If you are using a different COM port, or if your settings need to be different than the defaults that Avaya Site Administration provides for COM1 and COM2, you need to use the Ports screen.

To find out if the COM port has been set up, access the Ports screen (choose Ports from the Tools menu) and see if the COM Port you are using is listed there.

- If the COM Port you are using **is not** listed, you can either:
 - ◆ Add a COM Port
 - ◆ Use one of the COM Ports that **are** listed in this screen, making sure you change the setting in the Connection Properties screen and that you physically reconnect the peripheral to the COM Port you choose (consult your computer's manual and the peripheral's manual for details on how to do this).
- If the COM Port you are using **is** listed, check to see that the settings are correct.

Remote reset

Avaya Site Administration has been unexpectedly disconnected by the remote system. This is generally a TCP/IP communications problem in which some component of the computer network, or the voice system (or messaging system), loses power or malfunctions.

- 1 Try re-connecting to the system. The problem may be temporary.
- 2 If you can, check that the voice system or messaging system is powered up and functioning properly.
- 3 Check that your computer network is functioning properly by pinging the voice system or messaging system using ping.
 - a) If the voice system or messaging system responds to the ping, you might want to retry the connection.
 - b) If the system does not respond, or the ping requests time out, then either:
 - ◆ make sure your cable connection to the computer network is secure and is functioning properly.
 - ◆ contact the person responsible for your computer network.
- 4 In the worst case, you may have to reset the system you are connecting to.

Use the manufacturer's instructions to find out how to diagnose system health. If you are connecting through a terminal server, then you may have to reset the terminal server (and not the system you are trying to connect to).

Serial port error

Avaya Site Administration has encountered an error with the serial port on your computer. Data has been lost due to a serial port performance problem or error.

Increasing COM port reliability

If you are getting persistent tx or rx problems, then you should consider changing your COM port settings.

From the Tools menu, select the Ports option. Ensure that the COM port has the correct speed and data settings for the type of peripheral (modem, data module, and so on) or system you are connecting to. Incorrect speed settings will often cause this error.

Decreasing maximum modem connect speed

Sometimes a modem will connect at a higher speed than your computer is capable of keeping up with. On most modems you can change the initialization string of your modem to control the maximum rate that it will connect with. You might consider dropping modem connection speeds back to 9600bps or less to determine the level at which problems occur. On a US robotics Sportster modem, the command to set your modem to a maximum connect speed of 9600bps is `AT&N6`. Check your modem manual before setting your maximum connect speed.

Serial port is in use

Another application on your computer is using the serial port you are trying to use.

To resolve the problem, you may want to:

- Identify the competing application and close it down.
- Connect your modem (or data module) to another serial port (consult your computer's manual and your peripheral's manual for details on how to do this). Then fix the COM Port setting in the Connection Properties screen to reflect the new port, and (if necessary) configure the new COM Port settings using the Ports screen. (To access the Ports screen, choose Ports from the Tools menu.)
- Reboot your computer.

Some Windows applications do not clean up effectively when they are shut down. This can make your Windows operating system lock a serial port needlessly until you reboot your computer. In addition, on some computers, power-saving options (if you turn them on) can cause serial ports to appear to be in use.
- If you are using Windows NT, it may give you a message when it starts (after rebooting, for example) indicating a conflict with the serial port. Use the Windows NT online help system to resolve these types of conflict.
- If you are using Windows 95 and 98 (not NT), there is a Device Manager in the Control Panel that may show a conflict with a serial device. To use it, complete the following steps:
 - 1 From the Windows Start menu, choose Settings->Control Panel.
 - 2 In the Control Panel screen, double-click the System icon.
 - 3 Click the tab called "Device Manager."
 - 4 In the tree, right-click the "Ports (COM and LPT)" to view the properties of each of the COM ports.

Windows 95 or 98 will determine if the COM ports are functioning correctly. If they are not, the screen will display potential solutions.

Serial port settings could not be found

Avaya Site Administration could not find the information it needs in order to communicate with the COM port on your computer. To fix the problem, answer the following questions:

- 1 Is the correct COM port selected in the Connection Properties screen?

To find out, determine which COM port you are using and see if it matches the COM Port setting specified in the Connection Properties screen.

- If the COM Port you are using **doesn't** match the setting in the Connection Properties screen, then change the setting.
- If the COM Port **does** match the setting in the Connection Properties screen, read the next question.

- 2 Is the COM Port set up in the Ports screen?

Just because you specify a COM port in the Connection Properties screen doesn't mean it is actually set up for use. The Ports screen shows what COM Ports have been set up. By default, Avaya Site Administration sets up only COM1 and COM2 for use. If you are using a different COM port, or if your settings need to be different than the defaults that Avaya Site Administration provides for COM1 and COM2, you need to use the Ports screen.

To find out if the COM port has been set up, access the Ports screen (choose Ports from the Tools menu) and see if the COM Port you are using is listed there.

- If the COM Port you are using **is not** listed, you can either:
 - ◆ Add a COM Port
 - ◆ Use one of the COM Ports that **are** listed in this screen, making sure you change the setting in the Connection Properties screen and that you physically reconnect the peripheral to the COM Port you choose (consult your computer's manual and the peripheral's manual for details on how to do this).
- If the COM Port you are using **is** listed, check to see that the settings are correct.

Too many users logged in

There is a restriction on the number of administrators that can be logged in to the system you are trying to reach and this limit has been reached. Avaya Site Administration has received a message from the system indicating that the limit was reached prior to your login attempt.

You may want to:

- Ask other administrators to drop their connection to the system that you want to connect to.
- (For voice systems:) Consult the system's administration and maintenance guides for help with clearing administrator connections.
- (For messaging systems:) If all else fails, have your administrator reset your messaging system.

Unexpected response from device

When logging into a system, Avaya Site Administration encountered a response that it was not expecting.

Try logging in manually to diagnose the login problem. It may be that you are connecting to the wrong system, or the system you are connecting to is behaving strangely.

Unknown response from device

After your modem or data module dialed your voice system or messaging system, your modem or data module sent Avaya Site Administration a response that Avaya Site Administration does not understand.

Avaya Site Administration expects your modem to respond with a message such as "ERROR", "CONNECT", "BUSY" or "NO DIALTONE". Your modem or data module may not be configured to generate text error messages. Read the documentation that came with your modem or data module to find out what commands you should use in the initialization string to make the device generate text error messages. Then, design a new initialization string (or, if you already designed a custom initialization string, modify it) that uses the appropriate commands.

Keeping baseline information

Baseline information consists of:

- the original voice system configuration
- any upgrades and changes
- voice system capabilities (for example, if your company uses a call center or telecommuting)

The very best set of records starts with information on the original set up of your voice system. Most companies keep at least one paper copy of baseline information, with duplicate paper or electronic copies kept off site. Update this information any time you make changes to your voice system.

Use baseline information to help you diagnose problems with your phone system. Also, this information is crucial in the event you need to reconstruct the information on your voice system, such as in a disaster recovery.

Note:

Avaya Warranty and Service Agreement customers are automatically enrolled in the Emergency Service Plan. The plan provides coverage for disasters such as fire, flood, and storms. Under this plan, Avaya restores basic telephone service on a priority basis. We can also lease an Avaya Communication Manager system to Warranty and Service Agreement customers or can ship a replacement Communication Manager system, if necessary.

Retrieving baseline information

You can retrieve much of the hardware and configuration information you need right from the Avaya Site Administration GEDI screens.

- Use **display** commands to see individual records.
- Use **list** commands to view a group of records.
- After **display** or **list** commands, choose **File>Print** to create paper copies of the records.

Keep track of the equipment and settings listed in the following table. Use the commands in this table to access the appropriate screens.

voice system component	information	group records	individual records
voice system configuration	the features your company purchased	di spl ay syst em par amet er s cust omer	
voice system capacity	capacities enabled on your voice system	di spl ay capaci ty	
cabinets and carriers	number of cabinets and carriers	l i st cabi net	
circuit packs	board type and vintage	l i st conf i gur at i on al l	di spl ay ci rcui t - packs
trunks	type of service	l i st trunk - group	di spl ay trunk - group n
phones	model number, extension number, name, location, cable, and jack	l i st st at i on l i st ext ensi on - t ype	di spl ay st at i on n di spl ay ext ensi on n
Class of restriction (COR)	calling privileges	l i st cor	di spl ay cor n
Class of service (COS)		di spl ay cos	
feature access codes		di spl ay feat ur e - access - codes	
feature parameters		di spl ay syst em par amet er s feat ur es	
dial plan		di spl ay di al pl an	
coverage paths		l i st cover age pat h	di spl ay cover age pat h n

announcements	extension, type, name, port	display announcements	
vectors	Vector Directory Number (VDN), vector number	list vectors list VDN	display vector n display VDN n
hunt groups		list hunt - group	display hunt - group n

Backing up voice system data

Backup your system regularly to keep your records up to date.

- Use **save translations** to backup changes to your voice system.
- Use **save announcements** to backup changes to announcements.


To verify that a backup was successful, review the Command Completion Status field.

- If the status field says Success, then the backup of the translations or the announcements was successful.
- If the status field does not say Success, record the Error Code and use the following list to determine what happened:
 - 1 = unable to save to active-spe device
 - 2 = unable to save to standby-spe device

Viewing the system status

Use system status screens to monitor various parts of your system. To be prepared for problems, you'll want to become familiar with what these reports look like when your system is operating well.


To view a list of the types of status reports you can run:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **status** and click the **Help** button.
The Help screen appears.
- 3 After the word **status**, type the item from the help screen that you want to check the status of.
For example, to check the status of a station, type **status station nnnn**, where *nnnn* is the station you want to check.
- 4 Click  to close the GEDI window.

Viewing general system operations

Use the status health screen to determine whether everything is operating smoothly and to see a summary of your system status. You can use this report to look at alarms, see if anything is busied out, or check for any major problems.

To view the status health screen:


- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **status health** and press the ENTER key.
- 3 Click  to close GEDI.

Viewing the status of a station

Use **status station** to view the setup of each individual station. This command is often the first place to gather information when a user reports a problem with a phone.

For example, if a user tells you that the phone rings a short ring and the call goes directly to coverage, use **status station** to see if SAC is activated on the user's extension.


To view the status of extension 7236:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **status station 7236** and press the ENTER key.
- 3 Click  to close GEDI.

Viewing the status of your cabinets

Use the system status cabinet screen to become familiar with the service state of your individual cabinets. This screen also reports any alarms against your cabinets.

To view the status of your system cabinets:


- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **status system all-cabinets** and press the ENTER key.
- 3 Click  to close GEDI.

Viewing changes to the system (history report)

Use the history report to see what kind of changes have been made to your system. For example, if users report that the coverage on their phones is not working, check the history report to see if any changes have been made to a coverage path.

The history report lists the date, time, port, login, action taken, and the screen for any change to your system. The history report does not show you exactly what data or field was changed.

To view the history report and review the recent changes to your system:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **list history** and press the ENTER key.
- 3 Click  to close GEDI.

Learning to think like a voice system

"Thinking like a voice system" means that you use your knowledge of how call routing works to generate an overview of the problem situation. When trying to troubleshoot a problem, identify the beginning and ending points of the attempted connection and trace the route that the call should follow to isolate where the call is breaking down.

When attempting to solve problems, try to "think like a voice system." This approach to problem solving:

- provides a starting point and a plan for troubleshooting
- makes isolating the location of the problem easier
- adds to the understanding of why a problem occurred, which may help prevent problems in the future
- helps establish relationships between related problems so that the problems can be solved together rather than separately

As an administrator, the most frequently reported trouble you're likely to receive from your end-users is "My phone is broken." Obviously, you need to gather more information to proceed with troubleshooting. By asking a few key questions you can start to "think like a voice system." Here are some examples:

End-User: "My phone is broken."

Administrator: "What number did you dial?"

End-User: "Someone was calling me."

Administrator: "What number did they call?"

End-User: "My number, 555-1212."

With these answers, you can begin to isolate the problem. You can begin to follow the call's path in the same manner that the voice system processes the call. In this example, the call was going to a station's DID number, so you know it originated from a DID trunk group. Given this information, you can check several possible sources of the trouble.

To effectively "think like a voice system," it helps to understand modern telecommunications, how one phone connects to another, and how calls are routed. The Voice system components and System add ons topics provide information on what parts of the system route and manage calls.

There are other things that you can do to help with troubleshooting. Here are some other suggestions to help you troubleshoot:

- Maintain up-to-date call flow documentation. Call flow documentation:

- provides data that is difficult to remember, therefore eliminating the need to access the system and gather that data repeatedly, especially for complicated features
- allows for easier isolation of problems
- provides documentation that is easy to pass from a former administrator to a new administrator
- Print out the original station, trunk or appropriate screen BEFORE making any programming changes. This allows you to reset the original settings should a problem result from the change.
- Document the steps taken to solve a problem. This is useful when you are talking to the Avaya Helpline or in the event that the problem occurs again.
- Be open to alternative solutions, rather than prematurely committing to any one solution to a problem.
 - Clues can be overlooked when they don't fit into the predetermined solution.
 - Better or long-term solutions may be overlooked for a short-term convenient solution.

Diagnosing a problem

As a system administrator, an important part of your job is to respond to trouble calls from users. You can identify some of the most common of these problems by following a few simple steps, asking the right questions, and trying to recreate the problem.

Use a set of questions to determine if:

- The equipment or process has worked before and is now broken, or if this is a new set-up that you need to correct
- The problem comes from your company's own equipment, or if the problem comes from your vendor
- The problem originates within your voice system, or if the source of the problem is outside of your own facility

Ask the following basic questions of yourself, your users, and other voice system administrators who work with you:

- Is this a new feature or piece of equipment, or did it work before but does not work now?
- Does the trouble arise when dialing outside the voice system, dialing into the voice system, or dialing inside the voice system?
- Can we duplicate the problem?

Solving common phone problems

If you have a problem with a phone, try the following:

- ask for the exact symptoms
- try to duplicate the problem or have the user show you the problem
- look at the phone
- find out if the phone was swapped out
- check the physical connections (for example, see if the phone is plugged in)
- check that the phone is where it is supposed to be
- try the phone at another location
- ask if the cord or handset was changed
- check **status station**
- use **display station** to look at the station forms page-by-page
- check the station screens for SAC, coverage paths
- look at printed voice system records for discrepancies
- check the alarms and errors logs
- clear any alarms and errors
- test the boards

Here are some common problems phone users report to their system administrators:

The user cannot dial out

Incoming calls ring but do not reach the user

The message lamp on the phone does not go out

Diagnosing general trunk problems

The following questions help you determine the cause of a problem with a trunk.

- Is the trouble on every call or is the trouble intermittent?
- Are you getting any sort of recordings when you try to dial out on this trunk?
- Can you identify the trunk in question?
Use a trunk access code (tac) to identify the trunk, especially if the console has a trunk ID button.
- Is there static on the call?
This is likely a problem with the trunk external to the voice system.
- Have you notified your vendor of this problem?

Diagnosing modem problems

The following questions help you determine the cause of a problem with a modem.

- What is the extension of the modem?
- Is the modem connected through the voice system?
- What is the modem connected to?
For example, computer, fax, or CMS?
- Have the setup options been changed or checked recently?
- What company manufactures the modem?
- What is the model number?

Diagnosing printer troubles

The following questions help you determine the cause of a problem with a printer.

- What is the problem with the printer?
- What is the printer used for?
For example, is it connected to the voice system, CMS, CAS, or maybe the messaging system?
- Who manufactures the printer?
- What is the model number?

Diagnosing password, login, and terminal access problems

If the problem is with remote dial-in access, ask:

- How do you dial in?
- What type of software or dialing program do you use?
- What error messages do you see when you try to dial in?

If your password expired, is not working, or is incorrect, call Avaya for assistance in getting the issue resolved.

Solving call center problems

Can't record an announcement on Integrated Announcement Boards

Callers don't hear announcement

A device in an Auto Answer hunt group doesn't respond

Too many abandoned calls

Customers complain they get a busy signal

Viewing error logs

The Avaya Communication Manager error log displays a detailed report of components that fail or perform at an unacceptable level. It is a good idea to run and inspect the Communication Manager error logs on a regular basis. You can view all active system errors on the error log. You can also specify a particular component of your system or a certain time period to be reported on the error log.

To view the error log:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **display errors** and press the ENTER key.
The Error Report screen appears.
- 3 To see all current errors, click the **Enter** button on the GEDI window.

OR

Indicate the errors that you want to see by entering the information requested in each field.

- 4 Select **File>Print** to print the report. Make special note of the information in these fields:
 - The Port field contains information in several formats:
 - circuit pack address (UUCSS)
 - port address (UUCSSs)
 - 2-digit signaling number
 - administered port number
 - Mtce Name (the name of the Maintenance Object)
 - Alt Name (the extension with the error)
In this example, Attd1 is the digital port with the errors.
 - Err Type (represents the error condition category)
 - Aux Data (represents a detail of the Error Type)
 - First Occur (indicates the date/time of the first occurrence)
 - Err Cnt (lists how many occurrences since the first one)

Error report field descriptions

The Error Report screen contains the following fields. See Viewing Error Logs for instructions on how to access this Avaya Communication Manager screen.

Field	What to enter
Error type	Error type
Error list	Active-alarms, errors, or cleared-errors
Interval	H(our), d(ay), w(eek), m(onth), a(II)
From/To	Time interval by date and time
Cabinet	Cabinet number (1-44)
Port Network	Port network number (1-44)
Board Number	5-character board number in UUCSS format: UU=cabinet, C=carrier (A-E), SS=slot (1-20)
Port	7-character port address in UUCSSss format: UU=cabinet, C=carrier (A-E), SS=slot (1-20), ss=circuit
Category	Category name (choose from the list below): adm-conn detecto r generat r mbus modem pncmai nt spe sys-prt trkcrk wireles s announ ce dup- spe inads- link memor y mssnet pnc- peer stabd tape trunks bri/asai environ infc misc pkt procr stacrk tdm vc crd exp-intf maint mmi pms- jrnl quick-st stations tone vsp data- mod ext-dev mass- st mnt- test pnc s-syn sys-link trkbd wideba nd
Extension	assigned extension, or blank
Trunk Group	group number between 1-666
Member	group member between 1-255, or blank

Clearing an error

If an important component in your Avaya Communication Manager system fails, the Avaya Communication Manager software records that "event" with code numbers in the error or alarm log. To interpret the error codes and clear the error:

- 1 Look up the Maintenance Object (MO) (for example, DIG-LINE or PI-LINK) in the Avaya Communication Manager Maintenance books for your voice system.
- 2 Find the error type in the Hardware Error Type table for that MO.

To display the Hardware Error Table, see Viewing error logs.

- 3 Find the note associated with that error type for an explanation of the conditions that generated the error.
- 4 Perform the recommended procedure to clear the error.

The recommended procedure may require you to test alarmed components. Be sure to have test permissions enabled.

If any tests fail or abort, you will get an error code for the test.

- 5 Look up the test error code by MO in your Avaya Communication Manager Maintenance books.
- 6 Find the numbered test listed in the test results.
- 7 Look for the correct combination of error code and test result in the numbered-test tables.

Alarm logs

Alarms are classified as major, minor, or warning, depending the degree of severity and the effect on the voice system.

warning level and description	reported in INADS?	reported to console?	take this action
major Critical service degradation	Y	Y (occurs after 4 attempts to call INADS)	Immediate attention
Minor Some service degradation, but system is operable, usually limited to a few trunks or stations or a single feature	Y	Y (occurs after 4 attempts to call INADS)	Check to see what service is affected
Warning Failure that causes no significant service degradation Note: DS1 off board faults (error type 138) generate warning alarms only, indicating a customer network problem. In this case, warning alarms can cause critical service degradation	N (INADS can receive some downgraded warning alarms)	N	Monitor the situation; check for service or equipment interruption or failure outside the voice system

Alarms are further classified as:


- *on-board* problems originate within the circuitry of the alarmed circuit pack
- *off-board* problems originate in a process or component that is external to the circuit pack

Reading the alarm log

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **display alarms** and press the ENTER key.
- 3 Indicate which alarms you want to view by entering **y** and ENTER after each alarm type.

Note:

Unless you can restrict the trouble to a particular time period, press the ENTER key to see all active alarms. If you choose **n** for major alarms and **y** for minor and warning alarms, you will not see the high-level information that you may need to determine what is wrong with your system.

- 4 Press ENTER to view the alarm report.
- 5 Click  to close GEDI.

Clearing alarm logs

- 1 Investigate or fix the first major alarm in the log.
- 2 See if other alarms are retired by fixing the most severe problem first.

Assigning alarm buttons

You can create feature button lamps on any phone to act as alarm indicators, similar to the alarm lamp on the attendant console. The following table describes the meaning of the green light associated with an alarm button.

status of light	meaning
flashing green	an alarm occurs
steady green	INADS notified and acknowledges alarm
light goes off	an alarm is resolved

Understanding common error types

This topic discusses frequently-encountered Avaya Communication Manager error types, explains why they occur, and what to do about them. For comprehensive lists of error types, see the maintenance manual for the Avaya Communication Manager system you have.

Error type 1 — circuit pack removed

Error Type 1 often indicates that an administered circuit pack has been removed.

To correct the problem and clear Error type 1:

- 1 Replace and latch the circuit pack in its administered slot.
The next time the system runs its routine maintenance program, it should be able to "see" the circuit pack and the error will not appear.

Error type 18 — busied out

Error type 18 is a reminder from the voice system that a component has been busied out. The busyout command is used to temporarily disable a component and is usually used before you test or replace a component.

Use the **release** command (permissions enabled) to restore a component to its normal operating mode.

For example, you receive a complaint that a phone does not work. As part of your diagnosis, you:

- use status station
- OR
- view the hardware error report for error 18

To view a hardware error report for error 18:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **display errors** and press the ENTER key.

The Hardware Error Report screen appears.

- 3 To view the report for error type 18, type **18** in the Error Type field and press the ENTER key.

The Hardware Error Report for error 18 appears. The log entry displays the busied-out line(s).

- 4 Click  to close GEDI.

Use the **release** command (permissions enabled) to remove the busyout status from the station. In our example:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **release port UUCSSss** where *UUCSSss* is the port address of the busied-out station, and press the ENTER key.

The station is no longer busied-out.

- 3 Click  to close GEDI.

Error type 513 — equipment "missing"

Error type 513 notifies you that equipment such as phones, data modules, or circuit packs, are administered but not physically connected to the voice system.


For example, view a hardware error report for error 513:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **display errors** and press the ENTER key.

The Hardware Error Report screen appears.

- 3 To view the report for error type 513, type 513 in the Error Type field and press the ENTER key.


The Hardware Error Report for error 513 appears. The log entry shows which equipment is not connected to the voice system.

- 4 Click  to close GEDI.

To fix error 513 for a phone:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Plug the phone into the jack assigned to the port in the log entry.
- 3 Type **test station nnnn** where *nnnn* is the station you just plugged in (permissions enabled) and press the ENTER key to test the phone.

The system will clear the error only after the system runs its administered checks and diagnostics.

- 4 Click  to close GEDI.

Preventing alarms and errors

This topic lists a few common causes of unnecessary Avaya Communication Manager alarms and how to prevent these alarms.

Turn off maintenance


The Remote Loop-Around Test sends a burst of current to activate a phone's ringer. If the ringer responds, the test detects the ENTER key. Data modules, fax machines and modems do not have ringers and do not respond to this test. This generates an error on that port.

You should turn off this test for data modules, fax machines and modems. Turning off the test does *not* affect the performance of any of these devices.

To turn off the maintenance test:

- 1 Open a GEDI window for the voice system you want to administer.
- 2 Type **change data-module nnnn** and press the ENTER key, where *nnnn* is the extension of the data module for which you want to turn off the Remote Loop-Around test.

The Data module screen appears.

- 3 Change the Remote Loop-Around Test field to **n**.
- 4 Press ENTER to save your changes.
- 5 Click  to close GEDI.

Remove unused circuit packs

Occasionally, a company upgrades phones from the 7000-series analog model to the 8400-series digital phones. The upgrade process is to:

- 1 Remove the analog line and trunk administration
- 2 Remove the old analog equipment
- 3 Rewire the workplace for the new digital phones and jacks
- 4 Administer the new digital phones and circuit packs

If the analog circuit packs remain physically plugged into the system and are *still administered as circuit packs* (even though the administration is removed in Step 1 above), the system generates errors. This stops when you remove the administration (**change circuit-pack UUCSS**) for this unused circuit pack.

DS1 administration

Depending on whether a DS1 circuit pack is present and whether its ports are assigned or not, the system reports faults according to the following table:

circuit pack present?	circuit pack administered?	ports administered?	alarm level	action
N	Y	N	warning	Replace and latch the board in its assigned slot. Remove the trunk and DS1 administration (change circuit-pack UUCSS), <i>leaving the circuit pack in</i>

<i>its assigned slot.</i>				
N	Y	Y	minor	Replace and latch the board in its assigned slot. Administer one or more ports (change circuit-pack UUCSS), <i>leaving the circuit pack in its assigned slot.</i>
Y	N	N	varies	Remove the circuit pack from the carrier.

Using features to troubleshoot

You can use some Avaya Communication Manager features to help you identify if your system is having problems or to help you diagnose problems you know are occurring. The table below shows you which features to use for various kinds of system problems. Click a feature to learn how to use it.

Feature	Problem area			
	Trunks	Phones	Hunt groups	Paging groups
Automatic Circuit Assurance	X			
Busy Verify	X	X	X	
Facility Busy Indication	X	X		X
Facility Test Calls	X	X		
Trunk Identification	X			

Using ACA to identify faulty trunks

You can use Automatic Circuit Assurance (ACA) to help identify faulty trunks. If activated (**change system-parameters features**), your system notifies you with a referral call when it detects unusual trunk usage like very short or very long calls. It needs to be turned on for each individual trunk group.

The referral call arrives on an idle call appearance. If you answer the call, your display shows:

- that the call is an ACA call
- the trunk-group access code
- the trunk-group member number
- the reason for the call (short or long holding time)

To use ACA on a G3V2 or older voice system

- 1 Assign an ACA button to your phone.
- 2 Press the ACA button to activate your phone for referrals.
- 3 When you receive an ACA referral call, answer the call.
- 4 Record the information listed on your display to use for further troubleshooting.

To use ACA on a G3V3 or newer voice system

- 1 Assign an ACA-Halt button to your phone.
- 2 Leave the ACA-Halt button OFF to keep your phone active for referrals.
- 3 When you receive an ACA referral call, answer the call.
- 4 Record the information listed on your display to use for further troubleshooting.

Busy Verify

You can use Busy Verify to place test calls to check the busy condition of trunks, phones, or hunt groups. This test helps you determine if the trunk, phone, or hunt group is busy because of heavy use or appears busy because of a problem.

To use Busy Verify, you should administer a Busy Verify button on your phone.

To busy-verify a phone

- 1 Press the Busy Verify button on your phone.

The busy verify light turns green.

- 2 Dial the extension of the phone you want to test. You hear a tone and see a display. The following table describes what the tone and display indicate and how to respond.

display	tone	frequency	pattern (seconds)	status of extension	next step
Invalid	intercept	440 Hz alternating 620 Hz	.25 on .25 on repeated	invalid number	cancel and try again
Terminated	ringback	combined 440 Hz + 480 Hz	1 on 3 off repeated	idle and ringing (working properly)	release the call
Bridged	none			bridged onto active call (working properly)	release the call
Out of service	reorder	combined 480 Hz + 620 Hz	.25 on .25 off repeated	trouble condition or station administered without hardware and no coverage path	cancel; use status station <i>nnnn</i> where <i>nnnn</i> is the extension number, for more information

To busy-verify a hunt group

- 1 Press the Busy Verify button on your phone.

The busy verify light turns green.

- 2 Dial the extension for the hunt group you want to test.

You hear a tone and see a display. The following table describes what the tone and display indicate and how to respond.

display	tone	frequency	pattern (seconds)	status of extension	next step
---------	------	-----------	-------------------	---------------------	-----------

Invalid	intercept	440 Hz alternating 620 Hz	.25 on .25 on repeated	invalid number	cancel and try again
Terminated	ringback	combined 440 Hz +480 Hz	1 on 3 off repeated	idle and ringing	release the call
All made busy	reorder	combined 480 Hz +620 Hz	.25 on .25 off repeated	made busy is active	release the call and try again later
Denied	reorder	combined 480 Hz + 620 Hz	.25 on .25 off repeated	active on a call	release the call and try again later
Out of service	reorder	combined 480 Hz + 620 Hz	.25 on .25 off repeated	trouble condition or station administered without hardware	cancel; report an out-of-service condition

To busy-verify a trunk

- 1 Press the Busy Verify button on your phone.

The busy verify light turns green.

- 2 Dial the trunk access code for the trunk you want to test.

Your display should be blank and you should hear dial tone. If your display shows "DENIED" and you hear intercept tone, repeat Steps 1 and 2.

If you have trunk group select buttons on your phone, you can also press the Busy Verify button and then press the Trunk Group Select button for the appropriate trunk.

- 3 Dial the trunk-group member number you want to verify.

You hear a tone and see a display. The following table describes what the tone and display indicate and how to respond.

display	tone	frequency	pattern (seconds)	status of extension	next step
Invalid	intercept	440 Hz alternating 620 Hz	.25 on .25 on repeated	invalid	cancel and try again
Verified	confirmation				release the call

none	ringback	combined 440 Hz +480 Hz	1 s on 3 s off repeated		release the call
none	Dial tone	combined 350 Hz +440 Hz	continuous	idle (working properly)	release the call
Bridged	none			Bridged onto active call (working properly)	release the call
Out of service	reorder	combined 480 Hz + 620 Hz	.25 on .25 off repeated	trouble condition	cancel; report an out-of-service condition

Facility Busy Indication

You can use Facility Busy Indication to display the idle or busy condition of phones, trunks, or paging zones.

To use this feature you need to add facility busy indication buttons to your phone. Label the facility busy buttons as "Busy" followed by the number or name of the facility being monitored.

If the green light associated with the Facility Busy Indication button stays lit for a long time, the facility may have a problem.

Facility Test Calls

You can use Facility Test Calls to place test calls to specific trunks or phones. Because this feature bypasses the regular system traffic, it is very helpful in finding noisy lines and other problems. However, this feature can be easily misused by outside parties. Disable this feature when you are not using it.

Security Alert:

Whenever you use this feature, enable the feature access code only for the tests you want to make. Be sure to immediately remove the access code when you are through testing because leaving this feature enabled can leave you open to security breaches.

To place a test call to a trunk or touch-tone phone:

- 1 Using GEDI, enable a feature access code for Facility Test Call.
- 2 At your phone, dial the feature access code for Facility Test Call. Listen for dial tone.
- 3 Dial the 6- or 7-digit port address.

Tip

If you have problems with this step, try dialing the port address without the first zero in the cabinet number.

You hear a tone and see a display. The following table describes what the tone and display indicate and how to respond.

tone	frequency	pattern (seconds)	status of extension	next step
dial	combined 350 Hz +440 Hz	continuous	connected	Go to Step 4
reorder	combined 480 Hz +620 Hz	.25 on .25 off repeated	busy	release the call
intercept	440 Hz alternating 620 Hz	.25 on .25 on repeated	No access	release the call

- 4 If you are testing a trunk, place the call.
Or
If you are testing a touch-tone receiver, dial the number.
If you receive a dial tone, the test passed.
Or
If you receive an intercept tone, the test failed.

Security Alert

At the system terminal, BE SURE to disable the Facility Test Call feature access code.

Trunk Identification

You can identify a faulty or noisy trunk with Trunk Identification. You can use Trunk Identification:

- on an active call
- while accessing a trunk

To identify the specific trunk used on a call:

- 1 Press the Trunk ID button.

Trunk access code and trunk group member number appears on the display.

If 2 trunks are used on the call, the identification of the last trunk added to the call displays. If more than 2 trunks are on a call, Trunk Identification is denied.

- 2 See if there are any *on-board* alarms against a trunk circuit pack.

If no, report the trunk problem to the appropriate vendor.

If yes, report the trunk problem and the identification information to Avaya.

Contacting Us

General Contact Information

For...	Contact...
Avaya's Home Page	www.avaya.com
Avaya products	www.avaya.com click Solutions & Products
Online product catalog	www.avayadirect.com
Security products and services	wwwdb.avaya.com/bcs/solutions.main?p_id=14&p_keyword="
International Alliance of Avaya Users	www.inaaau.org

Before you call

Before you call, please have the following information available:

- your name and number (in case we need to call you back)
- your installation location (IL) number
- your company's main phone number
- the type of your voice system
- the number of trunks on your system
- the number of stations on your system

Remember, if the problem is with equipment or service outside of your own equipment, you need to call your vendor or service provider. If you determine that the problem is with your own equipment, such as on your own stations, voice system, or trunks, give Avaya a call.

Be ready to talk about:

- the problem you want to solve
- a log of the steps you took and the information you gathered while performing your diagnosis of the problem.
- if the problem is with a new component or feature
- if something that used to work now does not work
- any numbers involved with the problem (for example, extensions or phone numbers, trunk group numbers, phone types, or report types)
- the contents of any recorded messages received
- error messages from the voice system
- type of ringback tones received on phones
- the names and numbers of your vendors
- any other pertinent information

Technical Support

Before you call, prepare the information that the helpline needs.

For customers located in the US:

For help with...	Contact this resource:	Contact Information
Avaya Site Administration	Avaya's National Customer Care Center	1 800 242 2121
Avaya Communication Manager software features and administration	Avaya's Communication Manager Helpline	1 800 225 7585
Avaya Communication Manager software maintenance and repair	Avaya's National Customer Care Center	1 800 242 2121
Messaging systems	Avaya National Customer Care Center	1 800 242 2121
Toll fraud	Avaya's National Customer Care Center (Toll Fraud Helpline)	1 800 643 2353
web-based technical support	Avaya's Customer Support web site	http://www.avaya.com/support

For customers located outside the US

Contact your local distributor or Avaya representative.

Index

A			
ABIT	176	phones	73, 74, 80, 165
aborting		prefix, new	98
aborting a task	27, 30	switches to Avaya Site Administration	12
blocking a task	27, 30	trunk groups	109
changing	27, 30	trunks	107
date or time of a scheduled task	27, 30	administering	
checking		messaging	166
Checking the status of a task	27, 30	administration	41
schedule	27, 30	administrator	51
viewing	27, 30	daily tasks	49
scheduling	27, 30	duties	45
tasks	27, 30	monthly tasks	52
tasks	27, 30	tasks	53
aborting	27, 30	weekly tasks	51
rescheduling	27, 30	administrators	168
running	27, 30	assigning and changing	168
viewing	27, 30	alarm	236
using	27, 30	logs	230, 231, 232, 233
Schedule tab	27, 30	alarms	38
viewing	27, 30	alias	83
schedule	27, 30	allow	
tasks	27, 30	allow callers to leave message	128
about	173	announcements	113, 213
about system security	173	adding	114
access	89	adding hunt group announcements	124
controlling	89	backing up	119
denied	181	deleting	118
accessing	41	printing	213
ACD	125, 146, 147	recording	116
defined	125	area codes	98
enhancing with vectors	147	adding	98
understanding	146	ARS	100, 102
action	54	ASG	167
adding		ASG is enabled	182
announcements	114, 124	ASG is not enabled	183
area code, new	98	defined	167
extension ranges	70	ASG Guard	167
extension without hardware	80	ASG Guard II	13
fax	79	ASG Key	167
feature access codes	71	attendant	135
feature buttons	78	attendant consoles	88
hunt group announcements	124	understanding	88
mailboxes	74, 165	AUDIX	15
messaging system	15	adding to Avaya Site Administration	15
modem	79	automatic	
new area code or prefix	98	Automatic Call Distribution	146
		Automatic Circuit Assurance	238

Avaya		connectivity info	11
placePlaceNameNational PlaceNameCustomer		COR values	89
PlaceNameCare PlaceTypeCenter	247	COS values	90
Toll Fraud Helpline	247	dial plan	69
Avaya Bulk Import Tool	176	feature access codes	72
AWOH	80	feature buttons	78
B		feature parameters	91
backup	52, 119, 215	messaging system properties in Avaya Site Administration	20
boards	38	phone user's information	81, 82
bulk import tool	176	vectors	127, 129, 131
busy	128, 184	voice system data globally	103
button labels	150, 152, 153	voice system properties in Avaya Site Administration	20
changing label text	153	choosing	
creating label text	153	a Call Management System	148
printing	152	circuit pack	213
text template, understanding	150	clearing	232
viewing label text	153	alarm logs	232
buttons	78	errors	229
adding to a phone	78	command	
assigning alarm buttons	233	language and syntax	54
changing	78	timed out	187
C		commands	21, 41, 54
cabinet	213	shortcuts	21
call	101	Communication Manager	21, 234
distribution methods	125	command shortcuts, creating	21
flow	142	errors	234
handling	125, 146	help line	247
restrictions, overriding	101	support	247
Call Accounting	156	components	44, 64
exporting data into a file	156	connections	20, 29, 33
call centers 137, 140, 141, 142, 143, 144, 146, 147, 227		viewing or changing properties in Avaya Site Administration	20
and ACD	146	viewing status of	29, 33
measuring performance	137	connectivity	11
planning	141	saving changes to	11
setting up call flow	142	consoles	88
using vectors and ACD in	147	understanding	88
Call Management System (CMS)	147, 148	COR	89, 213
calls	62, 89, 100, 137, 144, 226, 227	changing	89
answered/abandoned	137	COR printing	213
prohibiting	89	COS	90, 213
restricting outgoing	100	changing	90
capacity	39, 145	printing	213
viewing	39	coverage	111, 112
carriers	38	paths	213
CCS	134	creating	21, 153
changes	41	button label text	153
changing 11, 20, 62, 69, 78, 81, 82, 89, 90, 103, 127, 129, 131, 153, 168		command shortcuts	21
administrators	168		
button label text	153		

coverage paths	93	CAS	225
new button label	153	changing	224
pickup groups	92	CMS	224, 225
customizing	84	Diagnosing a problem	221
cut-thru	42	Diagnosing a vector problem	132
starting	42	Diagnosing general trunk problems	223
D		Diagnosing modem problems	224
daily	49	Diagnosing password login and terminal access problems	226
data	155, 156, 162	Diagnosing printer troubles	225
export	155	extensions	224
exporting for Call Accounting	156	help	224, 225
importing	162	modems	224
Data locked	192	printer	
date format	154	troubleshooting	225
export	154	problems	132, 221, 223, 224, 225
reports	154	with vectors	132
default date format	154	reports	
export	154	vector	132
reports	154	switches	224, 225
definitions	65, 66, 88, 97, 106, 113, 120, 125, 126, 140, 146, 167, 239, 242, 243	TAC	223
ACD	146	using to troubleshoot	223
ACD & EAS	125	troubleshooting	132, 221, 223, 224, 225
announcement	113	vector problems	132
ASG	167	trunks	223
attendant console	88	vectors	
Busy Verify	239	troubleshooting	132
call center	140	dial	202, 226
dial plan	66	no dial tone	202
Facility Busy Indication	242	Dial Plan	66, 69, 213
Facility Test Calls	243	modifying	69
hunt group	120	printing	213
trunk	106	understanding	66
vectors	126	Disconnected	190, 206
voice system add-ons	65	disconnecting	43
World Class Routing	97	from a messaging system	43
deleting	17, 18, 87, 118, 131	from a voice system	43
announcements	118	display	38
messaging subscribers	87	displaying	34
messaging system	17, 18	dial plan	68
phones	87	event history	34
vector steps	131	hardware configuration	38
voice system	17, 18	distribution	125
demonstrations	58	call distribution methods	125
device	193, 211, 212	E	
does not exist	193	EAS	125, 147
unexpected response from	211	defined	125
unknown response from	212	Employee-related changes	47
diagnosing		end users	47, 56, 57, 58, 60, 62
AUDIX	225		

end-user training	47, 57	format	154
error		date	154
alarm	234	fraud	126
clearing	229	G	
error log	222, 227, 229	GEDI	41
error type 1	234	starting	41
error type 18	234	globally changing voice system data	103
error type 513	234	grade	35
field descriptions	228	of service, improving	35
reports	227	groups	62, 109, 120, 142
types	234	hunt, defined	120
viewing	227	trunk	109
errors	193, 195, 196, 197, 199, 201, 202, 203, 204, 205, 207, 208, 210, 211, 212, 226, 231, 236	Guide Builder	56, 62
events	29, 34	H	
viewing history of	34	hardware	38
viewing status of	29	configuration, viewing	38
export	154	help line	62
date format	154	history	34
defaults	154	viewing Avaya Site Administration History	34
exporting	155, 156	Human Resources	47
Call Accounting data to a file	156	hunt groups	137, 142, 145, 213
data	155	announcements, adding	124
unused port data	157	defined	120
Exporting data to an LDAP directory	158	measurements	138
extension	70	setting up	121
ranges, adding	70	troubleshooting	237
F		I	
facility		import	154, 176
Facility Busy Indication	242	defaults	154
Facility Test Calls	243	importing	
fax	79	data into a voice system	162
adding	79	improving	35
feature		grade of service	35
printing feature access codes	213	Incorrect device	195
printing feature parameters	213	Incorrect login	196
feature access codes	71	INDUG	245
adding	71	information	47, 62
feature buttons	78	initializing	185
adding	78	inserting	129
changing	78	steps into vectors	129
features	1, 62, 97, 146, 147, 239, 242, 243	interactions	112
ACD	146	between night service types	112
adding to a phone	84	L	
Busy Verify	239	labels	44, 64, 150, 152, 153
call vectoring	147	creating, changing, viewing	153
changing	72, 84, 91	printing	152
Facility Busy Indication	242	understanding label templates	150
Facility Test Calls	243	languages	54
World Class Routing	97	LDAP	158

logged in	210	partitioning	102
too many users	210	password	226
login	226	passwords	197
troubleshooting	226	expired	204
M		phones	73, 78, 86, 87, 213, 237
mailbox	128	adding	73
maintenance	231, 232, 233, 236	adding buttons to	78
management	47	adding to voice system	74, 165
measuring	135, 137, 144, 145	deleting	87
call center performance	137	printing a list of	213
message	226	swapping using a wizard	86
messages	128	troubleshooting	222, 237
allowing callers to leave	128	upgrading	85
messaging	15, 20, 43, 74, 165	planning	141
adding subscribers	74, 165	call centers	141
administration	166	port	
connection properties, viewing or changing	20	data, exporting to a file	157
disconnecting from	43	ports	185, 186, 205, 207, 208
messaging system	17, 18	No Ports available	203
adding	15	prefixes	98
deleting	17, 18	adding	98
messaging systems	19	preventing	
renaming in Avaya Site Administration	19	toll fraud	169
modems		printing	
adding	79	button labels	152
initialization error	198	reports from the switch	133
Modular Messaging system	16	using Report Scheduler	133
monitoring	137, 144	problems	47, 210, 219, 226, 227, 230, 231, 232, 233, 246
call center	144	with vectors	132
MultiLingual Name Wizard	75, 104, 177	properties	20
N		connection, viewing or changing in Avaya Site Administration	20
native name	75, 104, 161, 163, 175, 177, 179, 180	Q	
Network connection failed	199	qualifier	54
night service	111, 112	queue	123, 128, 142
defined	111	defined	123
interactions	112	setting up a	123
setting up	111	R	
no carrier	201	recording	116
no dial tone	202	records	212, 213
O		Retrieving baseline information	213
object	54	remote	
overriding	101	Reset	206
call restrictions	101	removing	17, 18, 87
overview		messaging subscriber	87
of the main screen	7	messaging system	17, 18
of wizards	8	phone	87
P		voice system	17, 18
paging groups	237	renaming	19
troubleshooting	237		

a messaging system in Avaya Site Administration	19	SSH connection	13
a voice system in Avaya Site Administration	19	starting	41, 42
reports	37, 154, 171, 212	GEDI	41
analyzing	134	terminal emulation	42
attendant	135	stations	86
CDR and troubleshooting	171	change	81, 82
date format	154	swapping using a wizard	86
placePlaceNameCall PlaceTypeCenter	137, 144	status	33
printing from switch	133	of connections, viewing	33
Processor Occupancy / Call Traffic report	37	Status pane, using	29
scheduling	133	support	56, 57, 62, 245, 247
system capacity	145	swapping	86
responsibilities of voice system administrator	45, 47, 56, 57	phones using a wizard	86
restricting	100	switch	
outgoing calls	100	capacity, printing	213
restrictions	101	switches	20, 43, 44, 64, 155, 162, 219
overriding	101	accessing	41
routing	97, 111, 112	connection properties, viewing or changing	20
World Class Routing	97	disconnecting from	43
S		export data from	155
saving	11, 215	importing data into	162
changes to connectivity info	11	understanding	219
schedule	52	synchronizing	36
scheduling	25, 133	voice system and PC time	36
reports to print from switch	133	syntax	54
tasks	25	system	44, 45, 52, 64
screens	7, 36	add ons	65
main	7	administrator, role of	45
security	57, 62, 101, 126, 167, 173	components	65
about system security	173	systems	39, 173
ASG defined	167	about system security	173
serial ports	185, 186	viewing capacity	39
Serial port does not exist	205	T	
Serial port error	207	tasks	25, 29, 52
Serial port is in use	208	scheduling	25
Serial port settings could not be found	209	viewing status of	29
service	35	technical support	245, 247
improving Grade of	35	templates	47, 150
Setting ASA to Reconnect to a Voice System Automatically	24	button label	150
setting up	111, 121, 123, 142	terminal access	226
bridged call appearances	95	terminal emulation	42
call flow in a call center	142	starting	42
hunt groups	121	testing	143, 239
night service	111	the system	143
queue	123	time	36
shared system file	22, 23	synchronizing btn voice system and PC	36
shortcuts	21	toll fraud	169
creating	21	preventing	169
		tone	202

no dial tone	202	CDR reports to detect problems	171
traffic	37	Connection Status tab	33
Processor Occupancy / Call Traffic report	37	Facility Busy Indication to troubleshoot	237
training	57, 58, 60	features to troubleshoot	237
troubleshooting	171, 185, 186, 187, 191, 193, 194, 195, 196, 197, 198, 201, 202, 203, 204, 205, 207, 208, 210, 211, 212, 219, 222, 226, 227, 230, 234	Processor Occupancy report	37
command timed out	187	Report Scheduler	133
using DEFINITY features to	237	Security Violations Notification to detect problems	172
vector problems	132	Status pane	29
trunk	107	templates	77
adding	107	trunk group reports	136
help	136	Trunk Identification to troubleshoot	237
problems	136	V	
reports	136	VDN	126
Testcalls	136	vectors	130
troubleshooting	244	defined	126
Trunk Identification	244	deleting a step from	131
Trunk Identification feature	244	enhancing ACD with	147
trunk group		examples	128, 142
reports	136, 137	inserting a step into	129
trunk groups	109	listing	213
adding	109	printing	213
trunks	35, 106, 137, 213	troubleshooting	132
improving grade of service	35	writing	127
printing	213	viewing	20, 29, 33, 34, 38, 39, 145, 153
troubleshooting	237	alarm	216, 218
understanding	106	Avaya Site Administration History Log	34
U		button label text	153
understanding	146, 150, 219, 242, 243	cabinet	218
ACD	146	calls	138
attendant consoles	88	changes to the system (history report)	219
button label templates	150	connection properties	20
common DEFINITY errors	234	connection status	33
dial plan	66	data	138
Facility Busy Indication	242	error logs	227
Facility Test Calls	243	extensions	54, 217
switches	219	history	219
trunks	106	hunt group reports	138, 139
upgrading phones	85	message	80
users	74, 165, 210	phones	54, 217
adding to messaging	74, 165	ports	54
adding to voice system	74, 165	problems	216, 217
too many logged in	210	reports	138, 139, 216
using	33, 34, 37, 237	schedule	133
ACA to troubleshoot	237	security violations	172
alias	83	status	29, 215, 216, 217, 218
ARS to restrict outgoing calls	100	switches	216, 217, 218
attendant reports	135	system capacity	39, 145
Avaya Site Administration History tab	34	system operations	216
Busy Verify to troubleshoot	237		

system's properties	20	W	
trunk groups	54	wizards	8, 15, 36, 38, 39, 74, 86, 87, 103, 155, 156, 162, 165
trunks	54, 107	Add User wizard	74, 165
voice system hardware configuration	38	Add Voice Mail System wizard	15
voice system	12, 41, 44, 64, 168	Export Data wizard	155
add ons	65	Find and Replace wizard	103
adding	12	Generate Call Accounting wizard	156
administrators, assigning and changing	168	Hardware Manager wizard	38
components	44, 64	Import Data wizard	162
components	44	overview	8
components	64	Remove User wizard	87
deleting	17, 18	Swap Stations	86
export data from	155	System Capacity	39
importing data into	162	Time Synchronization wizard	36
voice systems	19, 103	World Class Routing	97
changing data globally	103	defined	97
hardware, viewing	38	writing	127
renaming in Avaya Site Administration	19	vectors	127
time	36		