

Using Avaya 9608/9608G/9611G IP Deskphones SIP

© 2019-2022, Avaya Inc. All Rights Reserved.

Note

Using a cell, mobile, or GSM phone, or a two-way radio in close proximity to an Avaya IP telephone might cause interference.

Documentation disclaimer

"Documentation" means information published in varying mediums which may include product information, operating instructions and performance specifications that are generally made available to users of products. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of Documentation unless such modifications, additions, or deletions were performed by or on the express behalf of Avaya. End User agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked websites referenced within this site or Documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on Avaya hardware and software. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product while under warranty is available to Avaya customers and other parties through the Avaya Support website: https://support.avaya.com/helpcenter/getGenericDetails?detailld=C20091120112456651010 under the link "Warranty & Product Lifecycle" or such successor site as designated by Avaya. Please note that if You acquired the product(s) from an authorized Avaya Channel Partner outside of the United States and Canada, the warranty is provided to You by said Avaya Channel Partner and not by Avaya.

"Hosted Service" means an Avaya hosted service subscription that You acquire from either Avaya or an authorized Avaya Channel Partner (as applicable) and which is described further in Hosted SAS or other service description documentation regarding the applicable hosted service. If You purchase a Hosted Service subscription, the foregoing limited warranty may not apply but You may be entitled to support services in connection with the Hosted Service as described further in your service description documents for the applicable Hosted Service. Contact Avaya or Avaya Channel Partner (as applicable) for more information.

Hosted Service

THE FOLLOWING APPLIES ONLY IF YOU PURCHASE AN AVAYA HOSTED SERVICE SUBSCRIPTION FROM AVAYA OR AN AVAYA CHANNEL PARTNER (AS APPLICABLE), THE TERMS OF USE FOR HOSTED SERVICES ARE AVAILABLE ON THE AVAYA WEBSITE, <u>HTTPS://SUPPORT.AVAYA.COM/LICENSEINFO</u> UNDER THE LINK "Avaya Terms of Use for Hosted Services" OR SUCH SUCCESSOR SITE AS DESIGNATED BY AVAYA, AND ARE APPLICABLE TO ANYONE WHO ACCESSES OR USES THE HOSTED SERVICE. BY ACCESSING OR USING THE HOSTED SERVICE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE DOING SO (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THE TERMS OF USE. IF YOU ARE ACCEPTING THE TERMS OF USE ON BEHALF A COMPANY OR OTHER LEGAL ENTITY, YOU REPRESENT THAT YOU HAVE THE AUTHORITY TO BIND SUCH ENTITY TO THESE TERMS OF USE. IF YOU DO NOT HAVE SUCH AUTHORITY, OR IF YOU DO NOT WISH TO ACCEPT THESE TERMS OF USE, YOU MUST NOT ACCESS OR USE THE HOSTED SERVICE OR AUTHORIZE ANYONE TO ACCESS OR USE THE HOSTED SERVICE.

Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, HTTPS://SUPPORT.AVAYA.COM/LICENSEINFO. UNDER THE LINK "AVAYA SOFTWARE LICENSE TERMS (Avaya Products)" OR SUCH SUCCESSOR SITE AS DESIGNATED BY AVAYA, ÁRE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AVAYA CHANNEL PARTNER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AVAYA CHANNEL PARTNER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA CHANNEL PARTNER; AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

Avaya grants You a license within the scope of the license types described below, with the exception of Heritage Nortel Software, for which the scope of the license is detailed below. Where the order documentation does not expressly identify a license type, the applicable license will be a Designated System License as set forth below in the Designated System(s) License (DS) section as applicable. The applicable number of licenses and units of capacity for which the license is granted will be one (1), unless a different number of licenses or units of capacity is specified in the documentation or other materials available to You. "Software" means computer programs in object code, provided by Avaya or an Avaya Channel Partner, whether as stand-alone products, pre-installed on hardware products, and any upgrades, updates, patches, bug fixes, or modified versions thereto. "Designated Processor" means a single stand-alone computing device. "Server" means a set of Designated Processors that hosts (physically or virtually) a software application to be accessed by multiple users. "Instance" means a single copy of the Software executing at a particular time: (i) on one physical machine; or (ii) on one deployed software virtual machine ("VM") or similar deployment.

License types

Designated System(s) License (DS). End User may install and use each copy or an Instance of the Software only: 1) on a number of Designated Processors up to the number indicated in the order; or 2) up to the number of Instances of the Software as indicated in the order, Documentation, or as authorized by Avaya in writing. Avaya may require the Designated Processor(s) to be identified in the order by type, serial number, feature key, Instance, location or other specific designation, or to be provided by End User to Avaya through electronic means established by Avaya specifically for this purpose.

Shrinkwrap License (SR). End User may install and use the Software in accordance with the terms and conditions of the applicable license agreements, such as "shrinkwrap" or "clickthrough" license accompanying or applicable to the Software ("Shrinkwrap License") as indicated in the order, Documentation, or as authorized by Avaya in writing.

Heritage Nortel Software

"Heritage Nortel Software" means the software that was acquired by Avaya as part of its purchase of the Nortel Enterprise Solutions Business in December 2009. The Heritage Nortel Software is the software contained within the list of Heritage Nortel Products located at https://support.avaya.com/LicenseInfo under the link "Heritage Nortel Products" or such successor site as designated by Avaya. For Heritage Nortel Software, Avaya grants Customer a license to use Heritage Nortel Software provided hereunder solely to the extent of the authorized activation or authorized usage level, solely for the purpose specified in the Documentation, and solely as embedded in, for execution on, or for communication with Avaya equipment. Charges for Heritage Nortel Software may be based on extent of activation or use authorized as specified in an order or invoice.

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, Hosted Service, or hardware provided by Avaya. All content on this site, the documentation, Hosted Service, and the product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Virtualization

The following applies if the product is deployed on a virtual machine. Each product has its own ordering code and license types. Unless otherwise stated, each Instance of a product must be separately licensed and ordered. For example, if the end user customer or Avaya Channel Partner would like to install two Instances of the same type of products, then two products of that type must be ordered.

Third Party Components

"Third Party Components" mean certain software programs or portions thereof included in the Software or Hosted Service may contain software (including open source software) distributed under third party agreements ("Third Party Components"), which contain terms regarding the rights to use certain portions of the Software ("Third Party Terms"). As required, information regarding distributed Linux OS source code (for those products that have distributed Linux OS source code) and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply is available in the products, Documentation or on Avaya's website at: https:// support.avaya.com/Copyright or such successor site as designated by Avaya. The open source software license terms provided as Third Party Terms are consistent with the license rights granted in these Software License Terms, and may contain additional rights benefiting You, such as modification and distribution of the open source software. The Third Party Terms shall take precedence over these Software License Terms, solely with respect to the applicable Third Party Components to the extent that these Software License Terms impose greater restrictions on You than the applicable Third Party

T9 Text Input and other products are covered by one or more of the following patents: U.S. Pat. Nos. 5,187,480,5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162,6,646,573, 6,970,599; Australia Pat. Nos. 727539, 746674, 747901; Austria Pat. Nos. AT225534, AT221222; Brazil P.I. No. 9609807-4; Canada Pat. Nos. 1,331,057, 2,227,904,2,278,549, 2,302,595; Japan Pat. Nos. 3532780, 3492981; United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK1010924; Republic of Singapore Pat. Nos. 51383, 66959, 71979; European Pat. Nos. 1 010 057 (98903671.0), 1 018 069 (98950708.2); Republic of Korea Pat. Nos. KR201211B1, KR226206B1, 402252; People's Republic of China Pat. No. ZL96196739.0; Mexico Pat. Nos. 208141, 216023, 218409; Russian Federation Pat. Nos. 2206118, 2214620, 2221268; additional patent applications are pending

The following applies only if the H.264 (AVC) codec is distributed with the product. THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE http://www.mpegla.com.

Service Provider

THE FOLLOWING APPLIES TO AVAYA CHANNEL PARTNER'S HOSTING OF AVAYA PRODUCTS OR SERVICES. THE PRODUCT OR HOSTED SERVICE MAY USE THIRD PARTY COMPONENTS

SUBJECT TO THIRD PARTY TERMS AND REQUIRE A SERVICE PROVIDER TO BE INDEPENDENTLY LICENSED DIRECTLY FROM THE THIRD PARTY SUPPLIER. AN AVAYA CHANNEL PARTNER'S HOSTING OF AVAYA PRODUCTS MUST BE AUTHORIZED IN WRITING BY AVAYA AND IF THOSE HOSTED PRODUCTS USE OR EMBED CERTAIN THIRD PARTY SOFTWARE, INCLUDING BUT NOT LIMITED TO MICROSOFT SOFTWARE OR CODECS, THE AVAYA CHANNEL PARTNER IS REQUIRED TO INDEPENDENTLY OBTAIN ANY APPLICABLE LICENSE AGREEMENTS, AT THE AVAYA CHANNEL PARTNER'S EXPENSE, DIRECTLY FROM THE APPLICABLE THIRD PARTY SUPPLIER.

WITH RESPECT TO CODECS, IF THE AVAYA CHANNEL PARTNER IS HOSTING ANY PRODUCTS THAT USE OR EMBED THE H.264 CODEC OR H.265 CODEC, THE AVAYA CHANNEL PARTNER ACKNOWLEDGES AND AGREES THE AVAYA CHANNEL PARTNER IS RESPONSIBLE FOR ANY AND ALL RELATED FEES AND/OR ROYALTIES. THE H.264 (AVC) CODEC IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO: (I) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (II) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION FOR H.264 (AVC) AND H.265 (HEVC) CODECS MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE HTTP:// WWW.MPEGLA.COM.

Compliance with Laws

You acknowledge and agree that it is Your responsibility for complying with any applicable laws and regulations, including, but not limited to laws and regulations related to call recording, data privacy, intellectual property, trade secret, fraud, and music performance rights, in the country or territory where the Avaya product is used.

Preventing Toll Fraud

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Toll Fraud intervention

If You suspect that You are being victimized by Toll Fraud and You need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support website: https://support.avaya.com or such successor site as designated by Avaya.

Security Vulnerabilities

Information about Avaya's security support policies can be found in the Security Policies and Support section of https://support.avaya.com/security.

Suspected Avaya product security vulnerabilities are handled per the Avaya Product Security Support Flow (https://support.avaya.com/css/P8/documents/100161515).

Downloading Documentation

For the most current versions of Documentation, see the Avaya Support website: https://support.avaya.com, or such successor site as designated by Avaya.

Contact Avaya Support

See the Avaya Support website: https://support.avaya.com for product or Hosted Service notices and articles, or to report a problem with your Avaya product or Hosted Service. For a list of support telephone numbers and contact addresses, go to the Avaya Support website: https://support.avaya.com (or such successor site as designated by Avaya), scroll to the bottom of the page, and select Contact Avaya Support.

Regulatory Statements

Australia Statements

Handset Magnets Statement:



Danger:

The handset receiver contains magnetic devices that can attract small metallic objects. Care should be taken to avoid personal injury.

Japan Statements

Class B Statement

This is a Class B product based on the standard of the VCCI Council. If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に 近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。 VCCI-B

Denan Power Cord Statement



Danger:

Please be careful of the following while installing the equipment:

- Please only use the connecting cables, power cord, and AC adapters shipped with the equipment or specified by Avaya to be used with the equipment. If you use any other equipment, it may cause failures, malfunctioning, or fire
- Power cords shipped with this equipment must not be used with any other equipment. In case the above guidelines are not followed, it may lead to death or severe injury.



警告

本製品を安全にご使用頂くため、以下のことにご注意ください。

- 接続ケーブル、電源コード、ACアダプタなどの部品は、必ず 製品に同梱されております添付品または指定品をご使用くだ さい。添付品指定品以外の部品をご使用になると故障や動作 不良、火災の原因となることがあります。
- 同梱されております付属の電源コードを他の機器には使用しないでください。上記注意事項を守らないと、死亡や大怪我など人身事故の原因となることがあります。

México Statement

The operation of this equipment is subject to the following two conditions:

- It is possible that this equipment or device may not cause harmful interference, and
- This equipment or device must accept any interference, including interference that may cause undesired operation.

La operación de este equipo está sujeta a las siguientes dos condiciones:

- Es posible que este equipo o dispositivo no cause interferencia perjudicial y
- Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Brazil Statement

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados

Power over Ethernet (PoE) Statement

This equipment must be connected to PoE networks without routing to the outside plant.

Taiwan Low Power Radio Waves Radiated Devices Statement

802.11b/802.11g/BT:

Article 12 — Without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to an approved low power radio-frequency devices.

Article 14 — The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications is operated in compliance with the Telecommunications Act. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機,非經許可,公司、商號 或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功 能

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。前項合法通信,指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

U.S. Federal Communications Commission (FCC) Statements

Compliance Statement

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating to conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- This device must accept any interference received, including interferences that may cause undesired operation.

When using IEEE 802.11a wireless LAN, this product is restricted to indoor use, due to its operation in the 5.15 to 5.25GHz frequency range. The FCC requires this product to be used indoors for the frequency range of 5.15 to 5.25GHz to reduce the potential for harmful interference to co channel mobile satellite systems. Highpower radar is allocated as the primary user of the 5.25 to 5.35GHz and 5.65 to 5.85GHz bands. These radar stations can cause interference with and/or damage to this device.

Class B Part 15 Statement

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designated to provide reasonable protection against harmful interferences in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interferences to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 8 in or 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

EU Countries

This device when installed complies with the essential requirements and other relevant provisions of the EMC Directive 2014/30/EU, Safety LV Directive 2014/35/EU, and Radio Equipment Directive 2014/53/EU. A copy of the Declaration may be obtained from https://support.avaya.com or Avaya Inc., 2605 Meridian Parkway Suite 200. Durham, NC 27713 USA.

General Safety Warning

 Use only the Avaya approved Limited Power Source power supplies specified for this product.

Trademarks

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation, Hosted Service(s), and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, its licensors, its suppliers, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation, Hosted Service(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya Inc.

All non-Avaya trademarks are the property of their respective owners.

Contents

Chapter 1: Introduction	
Purpose	
Change history	11
Chapter 2: Setting up Avaya 9608 9608G and 9611G IP Deskphones SIP	12
Introduction to 9608/9608G and 9611G SIP deskphones	12
Physical layout for 9600 IP Phones	13
Connection jacks for 9600 Series IP Deskphones	16
Deskphone stand	
Chapter 3: Getting started	17
Locking and unlocking your phone	
Logging in to your phone	17
Logging out of your deskphone	18
Locking and logging in to and logging out of your deskphone	18
Chapter 4: Navigation	19
Navigation tips	19
Icons on the deskphone	19
Call history icons for 9608/9608G deskphones	22
Call history icons for 9611G deskphones	22
Presence icons for 9608/9608G deskphones	23
Presence icons for 9611G deskphones	23
MLPP icons for 9608/9608G deskphones	24
MLPP icons for 9611G deskphones	
Avaya Menu	25
Network information	26
Administrative messages	27
Chapter 5: Handling incoming calls	28
Answering a call	
Answering an incoming precedence call	29
Ignoring an incoming call	29
Answering a call on a bridged line	29
Joining a call on a bridged line	
Answering an active call on a monitored extension	30
Picking up a call to another call pickup group	30
Picking up a call to another extension	31
Answering a call for a call pickup group member	31
Interrupting a call with a whisper page	31
Chapter 6: Handling outgoing calls	32
Making a call	
Making a priority call	32

F	Precedence call	33
N	Making a precedence call by using Priority softkey	33
N	Making a precedence call by using the Main menu	34
N	Making a precedence call by using dial plan configuration	34
N	Making an emergency call	34
F	Redialing a number	35
	Speed dialing a person	
P	Autodialing a pre-assigned number	36
	Making a call using edit dialing	
(Calling a person from the Contacts list	36
N	Making a call using URI dialing	37
N	Making a call using a Click to dial link	37
	Calling a person from the call history	
	Dialing an E.164 number	38
	Making an auto intercom call	
	Calling someone in your intercom group	
I	nitiating a group page	39
N	Making an outgoing call on a bridged line	40
5	Speed dialing to a monitored extension	40
Cha	pter 7: Handling call related operations	41
N	Muting a call	41
F	Putting a call on hold	41
N	Making an unattended transfer	42
N	Making an attended transfer	43
N	Making a blind transfer	44
E	Excluding others from bridging on to your call	45
I	ndependent alerting for each bridged call appearance	45
7	Fransferring a call to a monitored phone	46
	/iewing the status of monitored stations	
F	Parking a call	46
	Jnparking a call	
F	Handling calls and conferences using Multiple Device Access	47
	Recording a call	
l	Jsing the conference feature	
	Adding a person to an active call	
	Adding a person on hold to a conference call	
	Putting a conference call on hold and resuming a call	
	Dropping or Disconnecting the last participant from a conference call	
	Viewing the details of a conference	50
Cha	pter 8: Handling Contacts	51
ĺ	Jsing the contacts feature	51
P	Adding a new contact	
F	Editing a contact	52

Contents

	Searching for a contact	53
	Extended searching	53
	Viewing the contact details	54
	Assigning specific ring tone to a contact	54
	Deleting a contact	55
	Accessing Exchange contacts	55
	LDAP Directory	56
	Searching LDAP contacts	56
	Setting LDAP Directory as the contact search source	57
Ch	apter 9: Handling Call History	59
	Call History	
	Viewing the call history	60
	Viewing call history details	60
	Adding an entry from the call history to your contacts list	60
	Removing an entry from call history	61
	Clearing all call history entries	61
	Turning off call history	61
Ch	apter 10: Handling Presence	62
	Presence	
	Viewing contact presence status	62
	Changing the presence status	
	Enabling SAC when DND is active	63
	Enabling Away Timer	63
Ch	apter 11: Handling Calendar	65
	Using the Calendar	
	Reviewing your appointments	65
	Calendar appointment reminders	66
Ch	apter 12: Managing Features	67
	Features	
	Feature table	
	Accessing the Features screen	
	Using bridged call appearances	
	Busy Indicator	
	Busy Indicator icons and LED indication	
	Busy Indicator call operations	71
	Call Transfer to a monitored user	71
	Monitoring other extensions at a glance	
	SLA Mon TM	73
	Long-term acoustic exposure protection	74
	Configuring Long term acoustic exposure protection	74
	No Hold Conference	75
	Adding a participant to no hold conference	
	Assigning labels to auto-dial numbers	76

	Setting up automatic call back	76
	Blocking your extension from displaying during calls	77
	Displaying your extension on outgoing calls	77
	Setting mute alert	78
	Setting up enhanced call pickup alerting	78
	Tracing a malicious call	79
	Activating the LNCC feature	79
	Deactivating the LNCC feature	80
	Visual alert for an encrypted call	80
	Activating EC500 for simultaneous ringing on multiple phones	80
	Extending a call to your cell phone (EC500)	81
	Listening to your voicemail	81
	About Hotline	82
	Team Button	82
	Browser	83
	Using the WML browser	83
	Hunt Group Busy	84
	Using Hunt Group Busy	84
	Call forwarding	84
	Activating Send All Calls	
	Activating call forwarding	85
	Disabling call forwarding	
	Enabling call forwarding when your line is busy or you do not answer	
	Setting rules for enhanced call forwarding	
	Editing a rule	
	Turning off a rule	87
Ch	apter 13: Customization	89
	Customizing Settings	89
	Options & Settings	89
	Displaying the Phone screen on dialing	90
	Displaying the Phone screen on receiving a call	90
	Displaying call timers	90
	Setting redial options	91
	Configuring visual alerts	91
	Setting the audio path	91
	Setting dialing options	92
	Toggling name and number	92
	Setting up speed dialing	
	Setting up favorites	93
	Personalizing labels	93
	Adjusting the brightness or contrast of the display	94
	Setting the text size	94
	Setting a ring tone for incoming forwarded calls	95

Contents

Setting a ring tone for your phone	95
Setting a ring tone for Team Button	95
Assigning ring tone to a monitored station	96
Setting an alert for a call pickup group	96
Setting a ring tone for a call pickup group	96
Changing the background logo	97
Turning button click sounds on and off	97
Turning error tones on or off	97
Setting key repeat delay	98
Activating mute alerting	98
Enabling wireless headset bidirectional signaling	99
Setting the phone screen width	99
Turning Continuous Scrolling on or off	99
Changing the display language	100
Setting the time format	100
Setting headset profile	100
Turning automatic gain control on or off	100
Configuring Hearing Aid Compatibility	
Entering Microsoft [®] Exchange credentials for basic authentication	
Entering Microsoft [®] Exchange credentials for OAuth authentication	
Entering Microsoft [®] Exchange credentials for enabling Calendar and Contacts	102
Chapter 14: Troubleshooting	104
Limited access during failover	104
Chapter 15: Resources	106
Documentation	
Finding documents on the Avaya Support website	
Viewing Avaya Mentor videos	
Support	

Chapter 1: Introduction

Purpose

This document describes how to use 9600 Series IP Deskphones features.

This document is intended for people who want to learn how to use 9600 Series IP Deskphones features.

Change history

Date	Summary of changes	
01-08-2022	Updates added for bug fixes.	
22-02-2022	Updates added for SIP 7.1.15 release.	
01-09-2021	Restructuring the guide for SIP 7.1.14 release up-issue.	
06-07-2021	Updates added for SIP 7.1.14 release.	
13-04-2021	Updates added for SIP 7.1.13 release.	
5-10-2020	Updates added for SIP 7.1.11 release.	
30–6–2020	Updates added for SIP 7.1.10 release.	
06–03–2017	New chapter titles and component maps added for aligning with the latest CE template.	
	Updates added for SIP 7.1 release.	
18–03–2016	Updates for SIP 7.0.1 release.	
12–08–2015	2–08–2015 Updates for SIP 7.0 release.	
22-05-2014	-05–2014 Updates for SIP 6.4 release.	
06–10–2013	Updates for SIP 6.3 release.	
14-06-2013	Updates for SIP 6.3.2 release.	

Chapter 2: Setting up Avaya 9608 9608G and 9611G IP Deskphones SIP

Introduction to 9608/9608G and 9611G SIP deskphones

Your deskphone provides many features that include:

- · Viewing and managing your calls, call logs, and contacts list
- · Customizing your deskphone
- · Accessing your voice mail
- · Using integrated WML browser


You can also attach up to three button modules to your deskphone to expand the available number of call appearances and features. Multiple button modules must all be the same type and same model.

The letter G in a deskphone model name indicates the presence of a built-in Gigabit Ethernet adapter that increases the transmission speed of data.

The 9611G deskphone has a color display, while the 9608 and 9608G models have a black and white display. The 9611G deskphone has a smaller display area than the 9608G deskphone. Only the 9608G deskphone has a LAN Ethernet LED on the back panel of the phone. Unless specifically stated in this guide, the two models are essentially the same in terms of features and functionality.

Your administrator might not have configured all functions and features described in this user guide.

Physical layout for 9600 IP Phones

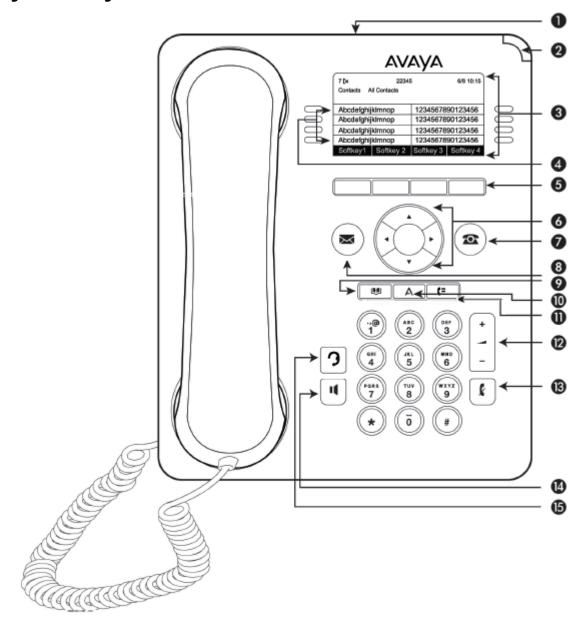

Note:

Your deskphone might have labeled buttons.


The following table provides descriptions of the deskphone buttons and features.

Callout Number	Name	Icon if applicable	Description
1	USB port	N/A	The USB port for 9611G models is disabled while the 9608 and 9608G models do not have a USB port.
2	Message waiting indicator	N/A	An illuminated red light in the upper-right corner of your deskphone indicates that you have a voice mail. If you enabled Visual Alerting on your phone, this light flashes when you receive an incoming call. In addition to the message waiting indicator, the deskphone lights the Message button when you have voice mail.
3	Phone display	N/A	The first line shows status information such as the time and date, primary extension, error indications, and missed calls. The second line, called the Status Line, provides information, such as when you can use the right or left navigation arrows to view other screens or menus. The Status Line also provides messages related to the current application or the actions that you must perform on a screen. Call appearances appear below the Status Line. The number of call appearances available to make or receive calls depend on how your administrator administers the system.
4	Features and call appearance lines	N/A	The line buttons with integrated LEDs show which lines are in use and correspond to the lines on the display. Press the line button to select that line. For an incoming call, the green LED blinks. While the deskphone is off-hook, both the red and the green LED glow. Lines also indicate if the system or system number has enabled or disabled a feature in the Feature or System Numbers view. The green LED glows to indicate that a feature is enabled. When you turn off the feature, the LED turns off.
			For multiple call appearance alerting, the phone highlights the call appearance with the most recent incoming call.
5	Softkeys	N/A	Use the softkeys to act on the highlighted line on the screen. The softkey labels show you the action that each key produces. The labels and the actions vary depending on the screen that the phone displays.

OK and navigation arrows Use the right and left navigation arrow one screen to another, or to move the input. Use the up and down navigation from one line to another. However, if y half-width mode, the up and down nav move one screen at a time, instead of The Phone button displays the Phone press the button. During a call, you can following options from the Phone screen. Hold Conference	vs to navigate from cursor during text n arrows to move you are using the vigation arrows f one line at a time.
The Phone button displays the Phone press the button. During a call, you cafollowing options from the Phone screen. Hold	cursor during text in arrows to move you are using the vigation arrows f one line at a time. e screen when you an gain access to the
press the button. During a call, you ca following options from the Phone scre • Hold	an gain access to the
Conference	I
• Transfer	
Drop call	
8 Message When you press Message , you are conjugate your voice mail system. The deskphort when you have voice mail messages your voice mail messages, ensure that administrator configures the voice mail	ne lights this button waiting. To listen to at the system
9 Contacts When you press Contacts , the Phone the entries in your contact list.	e screen displays
10 Home When you press Home , you gain accommendate Menu to configure options and setting browser or any applications available.	s, access the
History When you press History , the Phone shistory of your outgoing, incoming, an icon on the History the deskphone light you have missed calls. The top line should be call icon and the number of calls that	d missed calls. The this the button when nows the Missed
Volume If you press + or - on the Volume butted the phone increases or decreases the handset, headset, or speaker according not on an active call, pressing these bringer volume.	e volume of your ngly. When you are
Mute Press the Mute button to mute a call i a call off mute, press Mute again.	n progress. To take
14 Speaker Press the Speaker button to use the stake a call off speakerphone, lift the high Headset button.	
15 Headset 3	<u> </u>

Connection jacks for 9600 Series IP Deskphones

The following image illustrates the connection jacks that are present on the back panel of Avaya Deskphone 9608/9608G and 9611G models. The image schematically describes which device to connect in which jack.

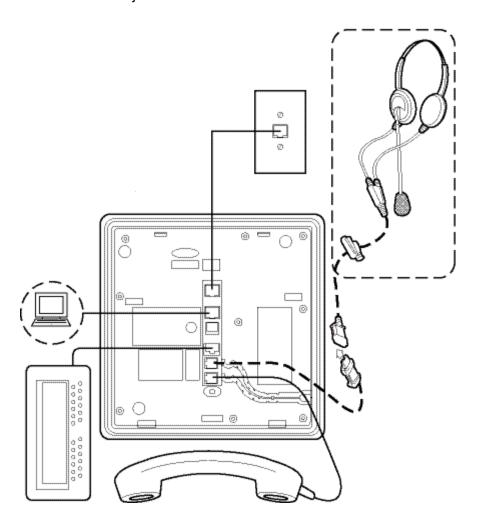

Deskphone stand

You can place the phone on the stand in a flat position or at an angle. To place the phone vertically for wall mounting, reverse the tab located under the switchhook in the top ear piece pocket and ensure that the handset is in the correct position. You need a small screwdriver to lift the tab and reinsert back the reversed tab.

Chapter 3: Getting started

Locking and unlocking your phone

About this task

Locking your phone when it is idle prevents it from being used to make a call, with the exception of an emergency call. When locked, a padlock symbol displays and the only actions you can take are to receive calls, make an emergency call, or unlock the phone. Locking your phone does not log it out; you are still logged in but must enter your login password when you unlock the phone. If you press a button that is not allowed on a locked phone, an error is displayed with a beep.

Note:

The phone cannot be locked while on an active call.

When you lock your phone, your presence status changes to Away.

Procedure

- 1. From the main screen, press **Phone Lock**.
- 2. Press **Lock** on the phone screen.
- 3. To unlock your phone, press **Unlock** and enter the password you use for phone login.

Logging in to your phone

About this task

Perform this task to log in to your phone.

The phone supports Multiple Device Access (MDA) with which you can register up to 10 SIP devices with your extension. If you register to multiple devices, you can perform functions, such as switching to another registered device during an active call or bridging on to calls at multiple registered devices.

- 1. Press Login.
- 2. Enter your extension.On the login screen, enter the extension number that your administrator assigned to you for login.
- 3. Press Enter or OK or #.

- 4. Enter the password that the administrator assigned to you.
- 5. Press Enter or OK or #.

Logging out of your deskphone

Procedure

- 1. Press Home.
- 2. Press Settings.
- 3. Press Log Out to choose Log Out.
- 4. Press **Yes** when the deskphone prompts for confirmation.

Locking and logging in to and logging out of your deskphone

Logging in and out maintains your preferences, call information, and options if you share a telephone with other users.



Note:

Depending on how your phone is administered, for example, whether Call Log History backup is enabled or not, Call history may be lost when you log out your extension.

Chapter 4: Navigation

Navigation tips

When navigating through the options and features on your deskphone display, use the navigation arrow buttons on your phone to select feature or options.

The deskphone displays navigation icons () on the phone display to indicate that you can scroll to more options or information.

Icons on the deskphone

The following table lists the icons used in the Avaya 9608 IP Deskphone and Avaya 9608G IP Deskphone.

Icon	Description	
(×	Missed call on your phone. A call was not answered or was forwarded to voice mail.	
→ [Incoming call; indicates you have answered this call.	
+(Outgoing call; indicates you have made this call.	
▶届	EC500 is activated.	
	Incoming call is alerting.	
C	Call is active.	
⊇	Call is on hold.	
CC	Conference is active.	
발	Conference is on hold.	
•	Use the Right or Left navigation arrow for additional pages/screens/options.	
•	Scroll left for other options.	
)	Scroll right for other options.	

Icon	Description	
‡	Scroll up or down when there is more information than can display in the application area.	
£	The call in progress is muted.	
&	Pressing - on the Volume button continuously causes the ringer volume to turn off. To reinstate volume, press + on the Volume button.	
A	Icon indicating the deskphone is not connected to its network and is operating in "failover" mode. Some features might not be available or work correctly. See the topic <i>Limited access during failover</i> for information.	
	If this icon displays in the appearance line, the icon indicates that the phone has encountered a failure and has preserved the media session until the near user hangs up.	
*	You have designated this contact or feature as a "favorite."	
C	Indicates that the Send All Calls feature is on.	
ED	Indicates that the call is using a wideband codec for excellent quality voice call.	
	Indicates a low network performance or presence of local network issues that might result in lower call quality.	
(5)	Indicates that the user enabled the LNCC feature. The LNCC feature changes the Multiple Call Appearance deskphone to a Single Call Appearance deskphone.	
a	Indicates that the SLA Mon™ agent has taken control of the deskphone.	
REC	Indicates that the call is being recorded for SLA Mon [™] .	
Δ	Indicates the Team button ringing state.	

The following table lists the icons used in Avaya 9611G IP Deskphone.

Icon	Description
€ _×	Microphone is muted.
*	Missed call on your phone.
v ·	Incoming call; indicates you have answered this call.
v.	Outgoing call; indicates you have made this call.
→届	The deskphone has activated the EC500 feature.
A	Incoming call is alerting.
•	Call is active.
<u>y</u>	Call is on hold.
(C	Conference is active.

Icon	Description
<u>></u>	Conference is on hold.
•	Use the Right or Left navigation arrow to see more pages/ screens/options.
•	Scroll left for other options.
>	Scroll right for other options.
‡	Scroll up or down when the application area has more information than it can display.
A _×	Pressing - on the Volume button continuously causes the volume to turn off. To reinstate volume, press + on the Volume button.
Ξ	Team icon indicating this team member is available.
Œ	Team icon indicating this team member is busy on a call and unavailable.
6	Team icon indicating this team member is not on a call, but is forwarding incoming calls.
O	Team icon indicating this team member is busy on a call and is forwarding incoming calls.
A	Indicates that the deskphone is not connected to the session manager and is operating in "failover" mode. Some features might not be available or work correctly. See the topic <i>Limited access during failover</i> for information.
	If the appearance line displays the icon, the icon indicates that the phone has encountered a failure and has preserved the media session until the near user hangs up. Icon also indicates non-AST mode.
*	You have designated this contact or feature as a "favorite."
-ৱ	The icon shown applies to the deskphones with color display. The EC500 feature is on.
(·)	The icon shown applies to the deskphones with color display. The Send All Calls feature is on.
TP .	Indicates that the call is using a wideband codec for excellent voice quality.
	Indicates a low network performance or presence of local network issues that might result in lower call quality.

Icon	Description
()	Indicates that the user enabled the LNCC feature.
	User can control the number of concurrent incoming calls by using the Limit Number of Concurrent Calls (LNCC) feature that changes the Multiple Call Appearance deskphone to a Single Call Appearance deskphone. If the user receives an incoming call when the LNCC feature is active and the user is already on a call, the caller gets the busy tone.
CTRL	Indicates that the SLA Mon [™] agent has taken control of the deskphone.
REC	Indicates that the call is being recorded for SLA Mon™.
â	Indicates that the end to end call is secured.

Call history icons for 9608/9608G deskphones on page 22

Call history icons for 9611G deskphones on page 22

Presence icons for 9608/9608G deskphones on page 23

Presence icons for 9611G deskphones on page 23

MLPP icons for 9608/9608G deskphones on page 24

MLPP icons for 9611G deskphones on page 24

Call history icons for 9608/9608G deskphones

The following table lists the call history icons for Avaya 9608 IP Deskphone and Avaya 9608G IP Deskphone.

Icon	Name	Description
C×	Missed call	Indicates that you did not answer the call or forwarded the call to your voice mail.
→ [Answered call	Indicates that you answered the call.
+(Outgoing call	Indicates that you made the call.
C=	Bridged call	Indicates the number of bridged calls.

Related links

Icons on the deskphone on page 19

Call history icons for 9611G deskphones

The following table lists the call history icons for Avaya 9611G IP Deskphone.

Icon	Description
· ·	Missed call; indicates you did not answer this call or had forwarded the call to voice mail.
· ·	Incoming call; indicates you have answered this call.
u	Outgoing call; indicates you have made this call.
C.	Indicates the number of bridged calls.

Icons on the deskphone on page 19

Presence icons for 9608/9608G deskphones

The following table lists the presence icons for Avaya 9608 IP Deskphone and Avaya 9608G IP Deskphone.

Icon	Name	Description
•	Available	User is available and can communicate.
•	On a call	User is on a call.
0	Busy	User is busy.
0	Away	User is away from the phone.
•	Do not Disturb	User does not want to communicate.
•	Out of Office/Offline	Out of Office: User is out of the office.
		Offline: User wants to appear invisible.
0	Unknown	The presence status of the user is unknown or the phone is not registered.

Related links

Icons on the deskphone on page 19

Presence icons for 9611G deskphones

The following table lists the presence icons for Avaya 9611G IP Deskphone.

Icon	Name	Description
②	Available	User is available and can communicate.
9	On a call	User is on a call.
0	Busy	User is busy.
C	Away	User is away from the phone.
	Do not Disturb	User does not want to communicate.
0	Out of Office/Offline	Out of Office: User is out from the office.
		Offline: User wants to appear invisible.
?	Unknown	The presence status of the user is unknown or the phone is not registered.

Icons on the deskphone on page 19

MLPP icons for 9608/9608G deskphones

The following table lists the MLPP icons used for Avaya 9608 IP Deskphone and Avaya 9608G IP Deskphone.

Icon	Name	Description
	Priority	Priority icon is for a priority call.
4	Immediate	Immediate icon is for a priority call with a higher precedence value than Priority.
	Flash	Flash icon is for a priority call with a higher precedence value than Immediate.
4	Flash Override	Flash override icon is for a priority call with the highest precedence.

Related links

Icons on the deskphone on page 19

MLPP icons for 9611G deskphones

The following table lists the MLPP icons used for Avaya 9611G IP Deskphone.

Icon	Name	Description
•	Priority	Priority icon for a priority call.
••	Immediate	Immediate icon for a priority call with a higher precedence value than Priority.
<u>.</u>	Flash	Flash icon for a priority call with a higher precedence value than Immediate.
	Flash Override	Flash override icon for a priority call with highest precedence.

Icons on the deskphone on page 19

Avaya Menu

You can use **Avaya Menu** to adjust and customize options and settings for your deskphone, access additional web-based applications, get information about your phone and network settings, log out, and use **Administration** menu.



The menus and submenus that appear depend on how the administrator has configured your extension. Some options or submenus might not be available. Contact your system administrator if you have any questions.

- Options & Settings
- Priority Call
- My Presence
- Browser
- Network Information
- Log Out
- Administration
- About Avaya

Options & Settings lets you change your call settings, personalize button labels, adjust brightness and contrast, select your ringing pattern, set up favorites, assign speed dial entries, and more.

Priority Call lets you make a precedence call.

My Presence lets you change your presence status to Available, Busy, Away, Do Not Disturb, Out of Office, or Offline. You can also set the selection to automatic.

Browser contains additional web-based applications. If your administrator did not configure the browser option for your deskphone, your deskphone does not display the browser option.

Network Information has a submenu with different viewing options: Audio parameters, RTCP-XR, IP (Internet Protocol) parameters, Quality of Service, Interfaces, 802.1X Parameters, Miscellaneous, and Diagnostics. Your administrator might ask you to use this option to check phone settings or network settings to investigate problems.

Log Out lets you sign off the phone, to protect your settings or to let another user to log in.

Administration provides access to the administrative settings of the phone.

About Avaya provides the release number of your phone software.

Network information

Your system administrator might ask you to check the phone or network settings to investigate problems. You can get network information from the Avaya Menu. The monochrome icons are valid for 9608G IP Deskphones SIP and the colored icons for Avaya 9611G IP Deskphones SIP model.

The Low Network Quality icon on the top line of the phone display indicates if an issue with the network might be affecting call quality. Navigate to the Network Information screen to view the related network information.

The Low Network Quality icon on the top line of the 9611 phone display indicates if an issue with the network might be affecting call quality. Navigate to the Network Information screen to view the related network information.

An HD Sound Quality icon on the top line of the phone display indicates that the call is using a wideband audio codec. Navigate to the Network Information screen to view the related network information.

An HD Sound Quality icon **D** on the top line of the phone display indicates that the call is using a good quality sound codec. Navigate to the Network Information screen to view the related network information.

Network Information has different screens for viewing the options: Audio parameters that include extended audio parameters for RTCP-XR, IP parameters, Quality of Service, Interfaces, 802.1X Parameters, Miscellaneous, and Diagnostics.

Contact your administrator for more information on the options related to network information and the settings that the system requires.

Administrative messages

Your administrator can send or push important messages such as notification of an early office shut down because of bad weather. The administrator can also send information about an imminent service interruption to your deskphone.

These types of messages can take any of the following forms:

- A text message streaming across the top display line, that also accompanies an audible alert.
- An audible alert broadcast through the Speaker or the headset if that device is active.
- An interrupt screen notifying you that you are receiving an audio alert.

While receiving an audible alert, you can change between the speaker, handset, and headset, can stop the transmission of pushed audio content by going on-hook, and can adjust the volume, as you normally do during a call.

Chapter 5: Handling incoming calls

Answering a call

About this task

When you receive an incoming call, the phone automatically selects the line appearance of the incoming call. However, if you are already on a call or if you receive more than one incoming call at a time, you might need to manually select the corresponding line appearance.

Note:

The procedure for answering a call might vary depending on how the administrator has configured your phone.

If you do not have the **Go to Phone Screen on Ringing** option enabled and if the phone does not display the Phone screen, incoming calls display on the top line of the screen. You can press the corresponding line button (LED) to answer the call.

Procedure

Answer an incoming call in one of the following ways:

- If you are not on another call, lift the handset or press the line button next to the incoming call, press **Speaker**, **OK**, or **Answer** to answer the call using the speakerphone, or press **Headset** to answer using the headset.
- If you are on another call, from the Phone screen, scroll to the line with the incoming call and press **Answer** or **OK**. The phone automatically answers the incoming call and puts the previous call on hold.

Note:

To automatically display the Phone screen when you receive an incoming call, set the **Phone Screen on Ringing** option to **Yes**.

Answering an incoming precedence call

About this task

Use this procedure to answer an incoming precedence call. An alerting tone is played and precedence level is displayed at the receiving end. The precedence levels are categorized as:

- FO: Flash Override. Precedence level is highest.
- FL: Flash. Precedence level is higher than IM.
- **IM**: Immediate. Precedence level is higher than **PR**.
- **PR**: Priority. Precedence level is higher than a routine call.

Procedure

Do one of the following:

- · Pick up the handset.
- Press Speaker or Headset button.

A Preempting Notification screen is displayed with a preempt tone if there are no available call appearance lines. You need to select **End Call** softkey to answer the precedence call.

Ignoring an incoming call

About this task

Use this procedure to turn off the ringer for an incoming call. The call continues alerting but with no sound.

Procedure

During an incoming call, press **Ignore** on the phone screen.

Answering a call on a bridged line

About this task

Answering a call on a bridged line is the same as answering the call on a primary line. For multiple call appearance alerting, the phone highlights the call appearance with the most recent incoming call. If the ringing line is selected, you can answer by picking up the handset or by pressing **Speaker** or **Headset** or **Answer** or **OK** button.

Procedure

1. Select the bridged call that you want to answer.

The ringing line is selected automatically. If you are on another call when a call comes in to a bridged line, you have to select the ringing line.

2. Press Answer.

Joining a call on a bridged line

About this task

Use this task to join an existing call on a bridged line.

Before you begin

Ensure that the feature is activated by the administrator.

Procedure

- 1. Select the bridged call in progress that you want to join.
- 2. Press the **Bridge** softkey or **OK** or press the corresponding line key.

Answering an active call on a monitored extension

Procedure

- 1. Press Main menu and scroll to Features.
- 2. Press Select.
- 3. Scroll to choose the monitored extension for which you want to answer the incoming call.
- 4. Press **Select**.

Picking up a call to another call pickup group

About this task

When your administrator has set up this feature, you can answer a call ringing at a phone in a call pickup group other than your own.

- 1. Scroll right from the Phone screen to access the Features screen.
- 2. If necessary, scroll down to Extended Call Pickup and press **OK** or just press the corresponding line button.
- 3. Answer the call using the pickup number and then press **Enter** or **OK**.

Picking up a call to another extension

About this task

When your administrator has set up this feature, you can answer a call ringing at another extension without having to be a member of a Pickup group.

Procedure

- 1. Scroll right from the Phone screen to gain access to the Features screen.
- 2. If necessary, scroll down to Directed Call Pickup and press **OK** or just press the corresponding line button.
- 3. Answer the call using the extension number and then press **Enter** or **OK**.

Answering a call for a call pickup group member

Procedure

- 1. From the Phone screen, gain access to the Features screen.
- 2. Scroll to Call Pickup and press Select or the corresponding line button.

Interrupting a call with a whisper page

About this task

Use the Whisper Page feature to interrupt or "barge in" on another user's call and make an announcement. This feature is unique because only the person on the paged extension can hear the page. Other parties on the call cannot hear the page, and the person who makes the page cannot hear anyone on the call. If the paged user has a display telephone, the paged user can see your caller ID. For example, users A and B are on a call. You have an urgent message for user A and make a whisper page. All three users hear the tone that signals the page, but only user A hears the page itself. You cannot hear user B.

- 1. Scroll right from the Phone screen to gain access to the Features screen.
- 2. If necessary, scroll down to Whisper Page and press **OK** or just press the corresponding line button.
- 3. Enter the extension you want to call.
- 4. Press **Enter** or **OK** to immediately start dialing and deliver your message when the person you called answers.

Chapter 6: Handling outgoing calls

Making a call

About this task

If you are not on a call, dial the number to call. If you have earlier configured the dialing option to "editable" you can edit the number as you enter it, then call it using softkeys; see <u>Making a call using edit dialing</u> on page 36 for information. Use the Phone screen to view and manage calls. Press **Phone** to view the main Phone screen. When the phone displays the Phone screen, press **Phone** to move to the top of the call appearance list.

Procedure

- 1. Lift the handset, or press **Speaker** or **Headset** (if applicable) or a line button for an available line.
- 2. Dial the number to call.

If you are on a mute call, to select an available call line appearance, you can use **Up** or **Down** arrows.

Making a priority call

About this task

Use the Priority Calling feature to provide a special type of internal call alerting for the users. The called party hears a distinctive ringing when the calling party uses Priority Calling.

- 1. Press the **Main menu**. Before dialing, scroll right from the Phone screen to gain access to the Features screen.
- 2. Scroll to **Features**, and press **Select**.
- 3. Scroll down to **Priority Call**, press **OK**, or press the corresponding line button.
- 4. Enter the extension you want to call.
- 5. Press **Enter** or **OK** to initiate a priority call.

Precedence call

Making a priority call with precedence provides user with options to override other calls. There are five precedence level that you can choose. You can manually dial the extension number or select the extension from **Favorites**, **Recents**, or **Contacts**. The precedence level is valid for only one call session. The call precedence level are categorized under the following options and order:

- FO: Flash Override. Highest precedence.
- · FL: Flash.
- IM: Immediate.
- PR: Priority.
- Routine: (Default) Lowest precedence. **Routine** is highlighted on the call session line if no call is made within five minutes.

You can initiate a precedence call from Busy Indicator and Bridged Appearance. Initiating a precedence call from WML browser and Team button is not supported.

Making a precedence call

There are five methods by which you can make a priority call:

- Dial plan configuration: Configuration is done on Local Session Controller (LSC) or Enterprise Session Controller (ESC) with Feature Access Code (FAC).
- **Priority** softkey: Visible only when it is configured with the appropriate system parameter.
- · Main Menu.
- Options & Settings menu.

Making a precedence call by using Priority softkey

Before you begin

Ensure that the **Priority** softkey is enabled by your administrator.

Procedure

- 1. Press **Priority** softkey on the idle line appearance.
- 2. Select the precedence level on the Precedence Selection screen.
- 3. Dial the extension manually.

You can also select **redial** softkey or **autodial** from the System Number screen.

Making a precedence call by using the Main menu

Procedure

- Press Main Menu.
- 2. Select Priority Call.
- 3. On the Precedence Selection screen, select the precedence level.
- 4. Dial the extension from one of the following:
 - Contacts
 - Recents
 - · The dial pad

Making a precedence call by using dial plan configuration

About this task

Use this procedure to make a precedence call manually by dialing the extension number.

Before you begin

Ensure that the Dial plan is configured on the Local Session Controller or Enterprise Session Controller with the Feature Access Code (FAC).

Procedure

- 1. Lift the handset or press one of the following:
 - Speaker
 - Headset
 - Corresponding line button
- 2. Dial the FAC followed by the extension number.

Making an emergency call

About this task

If your administrator configured emergency calling for your phone, the **Phone** screen displays the **Emerg** softkey to dial a preset emergency services number.

Note:

You can make an emergency call when your phone is logged out only if your administrator configured this feature for you. You can also make an emergency call when you lock your phone.

Important:

During phone failover, when the phone switches between system servers due to a system failure, the **Emerg** softkey might not be available until your phone connects to an alternate server. This process might take a few seconds.

Procedure

- 1. On the Phone screen, press Emerg.
- 2. Press **Yes** when the phone displays a prompt.

Some call servers call back to confirm the emergency status. The phone automatically answers the incoming call on the speaker by going off-hook.

3. To end the emergency call, press End Call.

Redialing a number

Procedure

1. From the Phone screen, press **Redial**.

The phone redials the last number or a list of the most recent numbers that you have dialed appears from which you can select a number to redial.



Note:

The phone clears the last number dialed and redial list if you clear the Outgoing Call Log. Also, the redial softkey disappears.

2. If you are working with a redial list, scroll to the number to call and press Call or OK or press the corresponding line key (LED).

Your system administrator can disable Redial functionality.

Speed dialing a person

Procedure

On the Phone screen, press and briefly hold the dialpad key assigned to the person you want to call. If speed dial numbers are assigned to a button module attached to your phone, press the button assigned to the person you want to call.

Autodialing a pre-assigned number

About this task

Your system administrator may set up frequently called numbers such as Information Technology or the Help Desk as Autodial numbers, so you can dial them with one touch.

Procedure

- 1. From the Phone screen, scroll right till you gain access to the System Numbers menu.
- 2. Select the number you want to call.
- 3. Press the Call softkey or the OK button.

Making a call using edit dialing

Before you begin

Ensure that the Edit Dialing feature is enabled on your phone.

About this task

Using the Edit dialing feature, you can edit the number before actually dialing by using the **Bksp** softkey. Using softkeys, you can change the number or character format or backspace to "edit" the number before actually dialing it.

Procedure

- 1. On the Phone screen, enter the number you want to call.
- 2. To edit the number, press **Bksp** to erase one character at a time.
- 3. To change the character format press the **123** softkey.
- 4. Press Call.

Calling a person from the Contacts list

About this task

Use this procedure to call any contact from the Contacts list.

- 1. Press Contacts.
- 2. Select the person or number that you want to call.
- 3. Find the contact that you want to call by typing the name of the person as listed.

For example, if you added John Smith to your Contacts list as "Smith, John", start typing the last name rather than his first name. Each time you press the dialpad, the list display shifts to match your input. You can also scroll up or down to locate the contact.

4. Press Call.

Making a call using URI dialing

Before you begin

- Ensure that you have the URI of the extension number.
- Ensure that the Edit dialing feature is enabled in your phone.

Procedure

1. Enter the number that you want to call.

Press **abc**, or **123** softkey to change between the input methods.



■ Note:

Press the **Backspace** softkey to delete the characters you have entered.

- 2. Enter the complete URI that you want to call.
- 3. Press the Call softkey to make the call.

Making a call using a Click to dial link

About this task

You can use the Click to Dial feature to make a call from a WML browser or any other screen that provides a dialing link. Usually, a handset icon indicates a line with this type of link.

Procedure

- 1. Select the line with the link for the person or number you want to call.
- 2. Press the line button corresponding to the line with the link or press **OK**.

Result

The phone starts a call to the person or number associated with the click to dial link.

Calling a person from the call history

Procedure

- Press Recents.
- 2. Scroll to the left or right to view the list of all calls, or separate lists of missed, answered or outgoing calls.
- 3. Scroll up or down to select the person or number you want to call.
- 4. Select the person or number you want to call.
- 5. Press the Call softkey or the OK button or press the corresponding line key.

Dialing an E.164 number

About this task

E.164 is a standard format of international public telephone numbering. An E.164 number can have up to 15 digits and is preceded by a plus sign (+). Use the following procedure to dial an E.164 number.

Procedure

- 1. Press asterisk (*) twice.
 - If you are using the **SPEAKER**, the **HEADSET**, or the call appearance line, the phone displays the plus sign (+) softkey on the screen.
- 2. Dial the number that you want to call.

Making an auto intercom call

About this task

Use the auto intercom feature to call a specific extension or intercom group.

- 1. Before dialing, scroll right from the phone screen to access the Features screen.
- 2. Scroll down to **Auto Icom** and press **OK** or just press the corresponding line button.
 - Two numbers display with the Auto Icom feature, for example "Auto icom 2 3". The first number denotes the intercom group number for the Dial Intercom feature. The next number denotes the extension your administrator has predefined as your automatic intercom destination extension.
- 3. Press the number(s) that corresponds to the destination extension.

4. Press **Enter** or **OK** to activate the intercom call to that extension, where the call appearance identifies the incoming call with your name followed by ICOM.

Calling someone in your intercom group

About this task

If your system administrator has set up an intercom group, you can call anyone in that group by pressing a few numbers.

Procedure

- 1. Before dialing, scroll right from the Phone screen to access the Features screen.
- 2. If necessary, scroll down to Dial Icom and press **OK** or just press the corresponding line button.

The intercom group number shows next to the Dial Intercom feature and the next denotes the extension your administrator has predefined as your automatic intercom destination extension.

- 3. Press the number(s) that corresponds to the destination extension.
- 4. Press **Enter** or **OK** to activate the intercom call to that extension, where the call appearance identifies the incoming call with your name followed by ICOM.

Initiating a group page

About this task

Using the Group Paging feature, you can make a call to a group of users that your system administrator has set up for you. A group page supports only one-way audio. That is, when you initiate a group page, only you can speak. When you initiate a group page, the page continues till you end it. However, the participants can drop out from the page individually.

To initiate a group page, you must know the group pilot number of the group that you are trying to send a page to. To know about the group pilot number, contact your system administrator.

- 1. Dial the group pilot number.
 - The extensions in the group that you are calling auto answer the page.
- 2. Wait for seven seconds before you speak as the phone requires that time to allow an audio path.
- 3. Press **End Call** to stop paging.

Making an outgoing call on a bridged line

About this task

When you make a call on a bridged line, you are using another phone user's line. The caller ID associated with the call you are making might show the call as coming from you or coming from the person whose line you are using.

Before you begin

Ensure that the feature is activated by the administrator.

Procedure

- 1. Select the bridged line you want to use.
- 2. Press **OK** or select the corresponding call appearance to get a dial tone.
- 3. Dial the phone number, or call the person from the Contacts list, or call the person from the Recents list or select the **Redial** softkey.

Speed dialing to a monitored extension

About this task

Use this task to make a call to a monitored phone. If the monitored phone has an active call redirection feature and you can override the feature, the monitored phone rings for 30 seconds. If no one answers the call during this time, the system redirects the call to the redirected number.

Before you begin

Ensure that the monitored phone to which you make the call is in an idle state.

Procedure

- 1. Press Main menu and scroll to Features.
- 2. Press **Select**.
- 3. Scroll to choose the monitored phone that you want to call.
- 4. Press Select twice.

The phone makes a call to the monitored extension.

Chapter 7: Handling call related operations

Muting a call

About this task

While on a call, you can mute the microphone of your phone so that the other party cannot hear you.

Before you begin

You need to contact your phone administrator to configure this feature.

Procedure

- 1. Press **Mute** during a call so that the other person on the call cannot hear you.
- 2. Press Mute again to unmute the call.



The Mute button light is on when you mute the call, and the top line displays the Mute

Putting a call on hold

Procedure

- 1. Select the active line you want to put on hold.
- 2. Press Hold.



Note:

The phone might display a hold timer when you put a call on hold.

3. Press Resume, OK button, or the line button of the held call to retrieve the call. Your system administrator might have administered the Hold Recall feature, which alerts you visually and with a priority ring to remind you of a held call after a certain period of time.

Making an unattended transfer

About this task

An unattended transfer is when you transfer an active call without establishing a call with the call-transfer recipient.

Procedure

1. On an active call, press or tap the **Transfer** softkey.

The phone displays the Enter transfer destination screen.

- 2. Enter the phone extension number or the SIP URI on the **Destination** line or select from one of the following options:
 - **Held Call**: Displays the held call line appearance as an option and switches to the Select Transfer Method screen.
 - **Recents**: Displays the recent call history as an option and switches to the Select Transfer Method screen.
 - Contacts: Displays the contacts list as an option and switches to the Select Transfer Method screen.
 - · Cancel: Terminates the call transfer.
 - More: Displays more options related to call transfer.
 - Priority: Displays Precedence selection screen.

You can also use **Favorites** to transfer the call.

3. Select **Transfer** softkey.

Use **Bksp** softkey to clear the input, **Cancel** softkey to terminate the call transfer, and **More** for more options. **Symbol**, **Clear**, **123**, and **Cancel** are displayed when you select **More** option.

The phone displays the Select Transfer Method screen.

- 4. Select Talk softkey.
- 5. To complete the transfer, press the **Complete** softkey.

The phone transfers the call to the selected number.



- Unanswered transfers might return to your phone as a recalled transfer. In this case, you hear a priority ring and see a display message Return next to the call.
- In the Avaya Aura® environment, if the administrator enables the Transfer on Hangup feature, you can disconnect the call to complete the transfer.

Making an attended transfer

About this task

An attended transfer is when you put an active call on hold and establish a second call with the call-transfer recipient before transferring the call.

Procedure

1. On an active call, press or tap the **Transfer** softkey.

The phone displays the Enter transfer destination screen.

- 2. Enter the phone extension number or the SIP URI on the **Destination** line or select from one of the following options:
 - **Held Call**: Displays the held call line appearances as an option and switches to the Select Transfer Method screen.
 - **Recents**: Displays the recent call history as an option and switches to the Select Transfer Method screen.
 - Contacts: Displays the contacts list as an option and switches to the Select Transfer Method screen.
 - · Cancel: Terminates the call transfer.
 - More: Displays more options related to call transfer.
 - Priority: Displays Precedence selection screen.

You can also use **Favorites** to transfer the call.

3. Select **Transfer** softkey.

Use **Bksp** softkey to clear the input, **Cancel** softkey to terminate the call transfer, and **More** for more options. **Symbol**, **Clear**, **123**, and **Cancel** are displayed when you select **More** option.

The active call is put on hold, and the second call starts ringing. The call transfer-recipient answers the call.

4. To complete the transfer, press the **Complete** softkey.

The phone transfers the call to the selected number.

₩ Note:

- Unanswered transfers might return to your phone as a recalled transfer. In this case, you hear a priority ring and see a display message Return next to the call.
- In the Avaya Aura® environment, if the administrator enables the Transfer on Hangup feature, you can disconnect the call to complete the transfer.

Making a blind transfer

About this task

Use this procedure to transfer an active call without establishing a call with the call-transfer recipient.

Before you begin

Ensure that the Blind Transfer feature is enabled by your administrator.

Procedure

1. On an active call, press or tap the **Transfer** softkey.

The phone displays the Enter transfer destination screen.

- 2. Enter the phone extension number or the SIP URI on the **Destination** line or select from one of the following options:
 - **Held Call**: Displays the held call line appearance as an option and switches to the Select Transfer Method screen.
 - **Recents**: Displays the recent call history as an option and switches to the Select Transfer Method screen.
 - Contacts: Displays the contacts list as an option and switches to the Select Transfer Method screen.
 - Cancel: Terminates the call transfer.
 - More: Displays more options related to call transfer.
 - Priority: Displays Precedence selection screen.

You can also use **Favorites** to transfer the call.

3. Select Transfer softkey.

Use **Bksp** softkey to clear the input, **Cancel** softkey to terminate the call transfer, and **More** for more options. **Symbol**, **Clear**, **123**, and **Cancel** are displayed when you select **More** option.

The phone displays the Select Transfer Method screen.

4. To complete the transfer, press the **Now** softkey.

The phone transfers the call to the selected number.



- Unanswered transfers might return to your phone as a recalled transfer. In this case, you hear a priority ring and see a display message Return next to the call.
- In the Avaya Aura[®] environment, if the administrator enables the Transfer on Hangup feature, you can disconnect the call to complete the transfer. This feature is available only when Blind Transfer is disabled.

- 5. To transfer a call to an attended recipient, do the following:
 - a. Press Talk.

The first call is put on hold, and the call-transfer recipient's phone starts ringing.

b. After the recipient answers your call, press **Complete**.

Excluding others from bridging on to your call

About this task

Use the Exclusion feature to prevent others who are bridged to your extension from bridging onto a specific call. You can activate exclusion only during an active call.

Before you begin

The feature is available only if the administrator enables the option for your extension.

Procedure

1. Access the Features screen during an active call.

called party are dropped from the call.

Scroll down to Exclusion and press **OK** or just press the corresponding line button.When you activate Exclusion during a call, all parties except you and the calling and the

Independent alerting for each bridged call appearance

You can configure a unique alerting option for each bridged call appearance on your phone if the administrator has enabled the Independent alerting feature for your extension.

The following four options are available:

- On: The phone plays a ringtone on an incoming call on the bridged appearance.
- Off: The phone does not play an alert ringtone on an incoming call on the bridged appearance.
- **Delayed**: The phone plays an alerting melody after a delay if you do not answer a call on the bridged appearance. Your administrator can configure the delay.
- **Abbreviated**: The phone plays a single beep to indicate a call on the bridged appearance.

Note:

For multiple call appearance alerting, the phone highlights the call appearance with the most recent incoming call.

Transferring a call to a monitored phone

About this task

Use this procedure to transfer an active call to a monitored phone.

Before you begin

You must be on an active call.

Procedure

- 1. Press Main menu and scroll to Features.
- 2. Press Select.
- 3. Scroll to choose the monitored phone to which you want to transfer the active call, and press **Select**.

The system puts the active call on hold and rings the monitored phone.

- 4. To complete the transfer, perform one of the following actions:
 - Press the Complete soft key.
 - · On-hook the handset.
 - Press the Speaker button.

Viewing the status of monitored stations

Procedure

- 1. Press Main menu and scroll to Features.
- 2. Press Select.
- 3. Scroll to view the status of the required monitored extension.

The Team button screen remains active until you close the screen.

Parking a call

About this task

Use the Call Park feature to answer a held call at another extension if you are part of a telephone coverage or hunt group. For example, if you need to go to another location to verify some information, you can park your current call and answer it at another location within your group.

Procedure

1. During an active call, gain access to the Features screen.

- 2. Scroll down to Call Park, and press one of the following:
 - OK
 - Corresponding line button

A checkbox is selected and is displayed on screen.

Unparking a call

About this task

Use the Call Unpark feature to release a call from the extension at which it was parked, when the extension is part of a coverage or hunt group.

Procedure

- 1. From the Phone screen, gain access to the Features screen.
- 2. Press **Select** or **OK** or the corresponding line button to choose **Call Unpark**.
- 3. Enter the original extension from which the call was parked.
- 4. Press **Enter** or **OK** to unpark the call.

Handling calls and conferences using Multiple Device Access

About this task

With the Avaya Aura® and Multiple Device Access feature, you can have up to ten devices configured with the same extension number. You can use this extension number to transfer active calls between your devices.

Before you begin

Ensure that the system administrator has activated the Multiple Device Access feature (MDA) for your extension.

Procedure

- 1. Initiate a call from your phone.
- 2. To transfer the call to another phone, press **Bridge** on your phone.

If the MDA phone that is joining the call uses a different signaling mode address family, you might notice the Limited Service icon appear on your device for a brief moment. After the MDA phone that is joining the call switches to using the signaling mode address family of the active call, the icon disappears.

Related links

<u>Dropping or Disconnecting the last participant from a conference call</u> on page 49 <u>No Hold Conference</u> on page 75

Recording a call

About this task

Use the One Touch Recording (OTR) feature to record a malicious call on your voice mail system. This feature is available only if your administrator has set up the feature on your telephone.

Procedure

- 1. During an active call, scroll right from the Phone screen to access the Features menu.
- 2. If necessary, scroll down to OTR and press **OK** or just press the corresponding line button to start recording the call.



Important:

Some countries, states, and localities have laws that determine if and under what circumstances you can record telephone conversations. Before using the OTR feature, you must understand and comply with these laws.

3. Hang up to stop recording.

Using the conference feature

You can use conference calls to speak with people from different locations on the same call. Additional conferencing options might be available through Expanded Meet-Me Conferencing. Contact your administrator for more information about this feature.

Adding a person to an active call

About this task

You can add participants to an active call to set up a conference call.

Before you begin

Start a call.

Procedure

To make a call to a participant, do one of the following:

- Dial the phone extension by using the dial pad.
- Call the person from the Contacts list or the Recents list.

Adding a person on hold to a conference call

About this task

You can add a held call to a conference call.

Procedure

- 1. On the Phone screen, select your active call.
- 2. Press **Held Call** soft key to see a list of held calls.
- 3. Select the call on hold that you want to add to the conference.
- 4. Press one of the following:
 - Join
 - OK

The held call is added to the conference call.

Putting a conference call on hold and resuming a call

About this task

Use this procedure to put a conference participant on hold, while other participants continue the conference call.

Procedure

- 1. Press Hold button during a conference call.
- 2. Do one of the following:
 - Press Resume.
 - Select the call appearance to resume the conference call.

Dropping or Disconnecting the last participant from a conference call

About this task

Depending on the configuration made by your administrator, you can disconnect the last participant who joined the conference call. After you disconnect the last participant, you cannot disconnect other participants. You can disconnect a participant again after you add another participant to the conference call.

Before you begin

Ensure that the administrator enabled the feature.

- 1. From the phone screen, select your active conference call.
- 2. Tap **More** > **Drop** when the conference is active.

3. Tap **Drop**.

Result

The participant who was added last gets disconnected from the conference.

Related links

<u>Handling calls and conferences using Multiple Device Access</u> on page 47 <u>No Hold Conference</u> on page 75

Viewing the details of a conference

About this task

Use this procedure to view the details of the participants on a conference call.

If you cannot, it might be due to the server on which your extension is configured. Contact your system administrator.

- 1. On the Phone screen, select your active call.
- 2. Do one of the following:
 - Dial the telephone number.
 - · Call the person from the Contacts list.
 - Call the person from the Recents list.

Chapter 8: Handling Contacts

Using the contacts feature

You can save up to 250 names and up to 6 telephone numbers for each name. When you press the Contacts button, the phone activates the Contacts search mode automatically. You can also import or export a Contact list using a USB device.

Note:

When you press the Contacts button you might not see all of the functions that are described in this chapter. The functions are not available because your administrator has disabled changes to Contacts.

Adding a new contact

About this task

You can add up to three numbers to a contact. You can add up to six distinct numbers to a contact. For a work extension, selecting Track Presence allows you to track the contact's presence, for example, Available, Busy, Away, Do Not Disturb, Out of Office or Offline. You need to create a new contact to track presence if the work extension of the contact is changed.

- 1. Do one of the following:
 - If this is your first Contacts list entry, press Contacts > New.
 - If you already have entries in your Contacts list, press Contacts > More > New.
- 2. Enter the first and last name using the dial pad.
 - Press the number key that corresponds to the letter or number you want to enter until the letter or number is displayed.
 - If the characters are on the same key, pause before entering the next character.
 - To enter a space, press **0**.
 - Enter remaining letters or numbers.
 - To delete the last character, press the Bksp softkey.



■ Note:

If you want to remove a letter, number, space, or symbol that is in the middle of the text you entered, use the left and right navigation arrows to place your cursor after the character you want to remove. Once your cursor is in the correct position, press the **Bksp** softkey to remove the character to the left of the cursor.

- 3. Choose **Yes** in the **Track Presence** field to know the presence information for this contact. If the presence information is available for this person, the phone displays the presence icon next to this name of the contact on the Phone screen or the Contact screen.
- 4. In the **Number** field, enter the extension number.

The contact number can include a-z, A-Z, 0-9, and the following special symbols: comma (,), space, dash (-), dot (.), + , * , #, \$, &, !, ~, ?, +, =, |. A comma (,) inserts a pause during dialing.

5. Press **More** > **Primary** if applicable.

The primary number is the one that will always display without having to go into contact details.



Note:

When adding a contact number, you must use your enterprise phone number as the Primary number as this number is utilized for presence indication.

- 6. Scroll to the next field and choose the type of number that you entered: Work, Home, Mobile.
- 7. If you have another number of this contact, scroll down and repeat steps 5 to 6.

You can add up to five additional numbers to one contact entry, but you can designate only one number as primary.

8. Press Save.

Editing a contact

About this task

If your administrator enables the access to modify contacts, you can edit your local contacts.

Before you begin

Ensure your administrator enables the Edit option.

- 1. Press Contacts.
- 2. Search for and select the contact you want to edit.
- Press More > Edit or Details > Edit.

- 4. Choose the field you want to edit.
- 5. Use the dial pad and soft keys to change the contact information.
- 6. Press Save.

Searching for a contact

About this task

Use this task to search for a contact that already exist in your contacts list.

You can jump to a certain group of letters in your contacts list by pressing the associated dial pad button. For example, if you press 3, the phone displays entries starting with D, E, or F depending on the names of contacts that you might have in the contacts list that start with any of these letters. With each successive dialpad key press, the phone displays the matching entries.

Procedure

- Press Contacts.
- 2. Use the dialpad to type the name that you want to search.

If you set up your contacts in the Last Name and First Name format, type the letters of the last name. If you have set up your contacts using a different format, type the most likely letters that matches the contact that you want to find.

- 3. When the phone displays the required match, you can perform any of the following actions:
 - To call the contact, press Call.
 - To edit the contact information, press **More** > **Edit**.

Extended searching

About this task

If your system administrator has set up a corporate contact list or database and has made the extended searching feature available, you can make a call to other users in your system by name.

- Press Contacts.
- 2. Press More > Search.
- 3. Use the dialpad keys to enter all or part of the first and last name of the person that you want to call.
- 4. Press **Search** to start the search.

- 5. If the search displays the name and number of the person that you want to call, select the line on which the name appears, and select an appropriate softkey from the following sofkeys:
 - Call: To dial the number of the selected person.
 - **Details**: To see detailed information about the selected person.
 - +Contacts: To add the selected person to your Contacts list.
 - Cancel: To return to the Search screen.
- 6. If the search does not locate the person that you are searching, press **Cancel**, and use this procedure to perform a different search. For example, if you entered a partial first and last name, enter the name in its entirety and search again.

Viewing the contact details

About this task

Use this procedure to view the details of a contact. You can call, edit, or delete a contact from the Details window.

Before you begin

You must have at least one contact in the Contacts list.

Procedure

- 1. Press Contacts.
- 2. Select the contact that you want to view.
- 3. Press **Details** to see the information available for that contact.
 - Selecting Details is the only way to dial a second or third number for a contact.
- 4. Press the appropriate softkey to call or edit this contact, delete this contact, or return to the Contacts screen.

Assigning specific ring tone to a contact

You can configure the ring tone that your phone plays when your phone receives a call from a contact in your local phone book. Hence, when you receive an incoming call, you can identify the caller based on the ringer that your phone plays. If you have not specified a ring tone for a contact, the phone plays the default ring tone.

Procedure

1. Press Contacts.

- 2. Select the contact for which you want to assign a ring tone, and press **Details**.
- 3. Press Edit.
- 4. Scroll to Ringer.
- 5. Press **OK**.
- 6. Use the Up and Down navigation keys to choose the ring tone of your choice and press **OK**.
- 7. Press Back.
- 8. Press Save.

Deleting a contact

About this task

You can delete your local contacts.

Procedure

- Press Contacts.
- Select the contact to delete.
- 3. Press **Yes** to confirm or **No** to cancel.

Accessing Exchange contacts

About this task

You can now access and download your Calendar contacts to your phone using your exchange credentials. You can synchronize up to 50 MS Exchange contacts to your phone. These contacts are available under the new screen **Exchange Contacts**. Presence information is available only for your local contacts.

You can access your local PPM contacts in the **Local Contacts** screen and add the Exchange contacts to PPM. If you have a greater number of PPM contacts, the phone will respond slower while the contacts are loaded.

Note:

Ensure that the system administrator has configured your extension for this feature.

Using the **Exchange Contacts** feature, you can perform the following actions on your *Outlook* contacts from your Deskphone:

- View the contacts.
- · Search for a particular contact.

- · Call a contact.
- View the details of a contact.
- Copy a contact to your local contacts.

You can not edit or delete an **Exchange contact** from your Deskphone. You must copy the contact to your local contacts before you modify any details of that contact.

Before using this feature, you must first enter your Exchange server credentials.

Procedure

- 1. Press Contacts.
- 2. Press the More softkey twice and then press the Exchange A or softkey.
- 3. To copy a contact from the Exchange server to the contacts list, press **+Local**.
- 4. On the Contact Edit screen, specify the name, telephone numbers, and telephone types for the contact.
- 5. Press Save.

LDAP Directory

With the LDAP Directory feature, you can search for contacts in available Lightweight Directory Access Protocol (LDAP) directories. An LDAP directory option appears at the top of the **Contacts** application list.

You can also select an LDAP directory as your contact search source. This selection disables other search sources. When the LDAP directory is an active search source, if you select another search source, this selection disables the LDAP directory search.

You can enter multiple search keywords and view multiple attributes for each match, such aspersonal names, addresses, job titles, and telephone numbers.

You can add frequently used LDAP contacts to your local **Contacts** with the help of the **New** soft key.

You can view details of the LDAP contact with the help of the **Details** soft key.

Related links

<u>Searching LDAP contacts</u> on page 56 <u>Setting LDAP Directory as the contact search source</u> on page 57

Searching LDAP contacts

About this task

You can search LDAP directory using **Contacts** application on your phone or directly. You can use multiple search attributes and display upto 20 matches for each search.

Do not use the backslash symbol in your search queries. If your query contains a backslash, enter $\5c$ instead of it. Commas and blank spaces separate search keywords. If your keyword contains a comma or a space, enter $\2c$ for commas and $\2p$ for spaces.

Before you begin

Set LDAP directory as the contacts search source.

Procedure

- Press Contacts.
- 2. **(Optional)** To navigate through **Main Menu** list, do one of the following:
 - Scroll to **Applications**, and press **Select**.
 - Scroll to Contacts, and press Select.
- 3. If you are searching from a LDAP Directory, scroll to **LDAP Directory**, and press **Select**.

The phone displays the list of up to 1000 LDAP contacts. You can use **Up** and **Down** line keys to scroll through the list. If the phone cannot retrieve the contacts from a LDAP server, the phone displays the following message:

No contacts in the group.

- 4. Press **Search**.
- 5. Scroll to the **Search type** option and toggle between **Starts with** and **Contains**.

When you select **Starts with**, the phone returns only the matches that have your query at the start. When you select **Contains**, the phone returns all matches that contain your query.

6. Use the dial pad to enter multiple keywords, separated by a blank space or a comma, into the **Search** field, and press **Search**.

The phone displays the list of matches. If no matches are found in the LDAP directory, the phone displays the following message: No match found.

If more than 20 matches are found in the LDAP directory, the phone displays the following message: We found too many matches. Select from the list or press Back to refine your search.

You can also choose Starts with or Contains.

7. **(Optional)** Press **Details** to view contact information for a selected match.

Related links

LDAP Directory on page 56

Setting LDAP Directory as the contact search source

About this task

You can select an LDAP directory as your contact search source to enable searching from the **Contacts** application. This selection disables other available search sources for the **Contacts** application.

Before you begin

Ensure that the administrator enabled the feature.

Procedure

- 1. Press Contacts.
- 2. To navigate through main menu, do the following:
 - a. Scroll to **Applications** and press **Select**.
 - b. Scroll to **Contacts** and press **Select**.
- To select LDAP Directory as a source for contact search, press Search > More > Sources.
- 4. Scroll to LDAP contacts, and press Toggle.

LDAP Directory is now your contact search source. Other sources are disabled. The phone displays the following message: \mbox{LDAP} selected — other search sources disabled.

5. Press Save.

Related links

LDAP Directory on page 56

Chapter 9: Handling Call History

Call History

Press the **History** key on the deskphone. This will navigate you to the history page on the phone screen.

The History screen provides a list of recent calls, with information about call types, such as missed, answered, or outgoing. The information also provides the caller name and caller number, call time, and call duration. The call log can store up to 21 digits. You can also make a call from the call log.

Note:

The phone displays the caller number only if available.

Call History also shows bridged calls. If you are a member of a call pickup group, the deskphone shows calls that you picked up for another person or calls that you missed and answered by someone with a Forwarding icon. Using this feature, you can review details of types of call pickup. When you have one or more missed calls, the History button lights up and the top line displays Missed Calls icon and the number of missed calls.

If your administrator configured the Busy Station Call Log feature, the deskphone saves all incoming calls that get a busy treatment in the call log. An incoming call gets a busy treatment when:

- · All your call appearances are busy and you get an incoming call.
- Your LNCC feature is active and you get an incoming call while you are already on an active call.
- The Restrict Last Appearance parameter is set to yes and you get an incoming call when all
 but one of your call appearances are busy. The Restrict Last Appearance parameter, if set to
 Yes, sets the last available call appearance to originating calls only. This setting enables
 transfer of any of the active calls to another call appearance. If this parameter is set to No,
 then all call appearances might be occupied for incoming calls and you cannot transfer any of
 the active calls.

The deskphone displays these calls as Missed calls in the call log. The deskphone also lights up the History LED and shows the missed calls on the top line.

Viewing the call history

Procedure

Press Recents.

You can go to the top of the list by pressing **Recents** again.

2. Scroll to the right or left to view separate lists of answered, outgoing, or missed calls.



When contacts whose presence you have set up to track have called you, the applicable presence icon displays along with the call information.

3. Scroll up or down to view the entries on the list.

Viewing call history details

Procedure

- 1. Press Recents.
- 2. Select the number you want to view.
- 3. Press Details.

If you are logging bridged calls as well as your own, bridged call details are identified by either CALL FOR: (calls made to the bridged line) or CALLED FROM: (calls made from the bridged line) preceding the applicable number.

4. To return to the list view, press Back.

Adding an entry from the call history to your contacts list

1. Press **Recents**.

- 2. Select the number you want to add to your Contacts list.
- 3. Press +Contact.
- 4. If necessary, edit the name and telephone number.
- 5. Press Save.

Removing an entry from call history

Procedure

- Press Recents.
- 2. Select the number you want to delete.
- 3. Press More, and then press Delete.
- 4. Press **Yes** to confirm the deletion.

Clearing all call history entries

About this task

Clearing all entries from the call history deletes all the entries for the specific list you are viewing. For example, if you are viewing the Outgoing calls list, the phone deletes only the entries for outgoing calls.

Procedure

- 1. Press Recents.
- 2. Press Clear All.
- 3. Press **Yes** or **OK** to confirm.

Turning off call history

Use this task to turn History on or off. If you have bridged call appearances on your phone, you can choose whether or not to include calls to your bridged lines in your call history log.

- 1. Press Main Menu.
- 2. Select Options & Settings > Application Settings.
- 3. To select the type of call history logging that you want to turn off, perform one of the following actions:
 - To turn off logging your calls, select History.
 - To turn off logging the bridged lines, select Log Bridged Calls.
- 4. Press **Change** or **OK** or the corresponding line key to turn call history logging on or off.
- 5. Press Save.

Chapter 10: Handling Presence

Presence

If your administrator enabled the presence feature for your phone, the phone displays your presence information on the top line. With the Presence feature, you can:

- Track the presence information of a contact for whom you set the Track Presence option to Yes. You can turn on the Track Presence option for a contact while adding a contact or editing the contact details.
- · Manually change your presence status.

You can use the Track Presence feature to view presence information of users in your Contacts list. With the Track Presence feature, you can see whether the person you want to get in touch with is available or not, and receive an indication of when that person is available to receive a call. In addition, when you are on a call, other users can see that you are busy and can call you later, or contact you using another method.

Viewing contact presence status

Procedure

- Press Contacts.
- Scroll to the required contact.

The phone displays presence icon for the contact to show the status.

Changing the presence status

About this task

The phone displays your presence status on the top line that you can change manually.

- 1. Press Main Menu.
- 2. Press **Select** to select **My Presence**.

- 3. Scroll and press **Select** to choose any of the following options:
 - Automatic: To let the phone manage the presence state.
 - Available: To show you are available and open for communication.
 - Busy: To show you are busy.
 - Away: To show you are away from the phone.
 - Do not Disturb: To show you are not open for communication.
 - Out of Office: To show you are out of office.
 - Offline: To appear invisible. The phone continues to keep the presence subscriptions with the Presence Server. The phone also keeps receiving notifications for the contacts for whom the phone subscribed to watch.
- Press Save.

Enabling SAC when DND is active

About this task

Perform the following procedure to activate the Send All Calls (SAC) feature to redirect calls to the redirection number when you have manually set the presence status to Do Not Disturb (DND). This feature is available only if your administrator configured it for you.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Advanced Options > Presence Integration.
- 3. Select **DND affects SAC** and change the value to **Yes**.
- 4. Press Save.

Enabling Away Timer

About this task

Perform the following procedure for the phone to automatically update the presence status to Away after a predefined time.

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Advanced Options > Presence Integration.

- 3. Select **Away Timer** and change the value to **On**.
- 4. Select Away Timer Value.
- 5. Enter the time in minutes. You can enter any value in the range of 5 to 999.
- 6. Press Save.

Chapter 11: Handling Calendar

Using the Calendar

If your administrator has set up the **Exchange Integration** option under **Advanced Options** on the **Main menu**, you can integrate the Microsoft[®] Exchange Server calendar with your phone. When Exchange Calendar is active, a **Calendar** label displays beneath your last call appearance on the Phone screen. Appointments display in the order of their start times and are removed once the meeting time expires. Calendar information is updated whenever you log in to your phone, when you change calendar settings, when you access the Calendar, and when you press the **Refresh** softkey while viewing an appointment.

Reviewing your appointments

About this task

Use this task to view your calendar appointments on your phone.

Procedure

- 1. On the Phone screen, scroll to choose **Applications** > **Calendar**.
 - The phone displays the appointments in the start-time order.
- 2. Perform one of the following actions:
 - To move backward or forward from one appointment to another, press **Prev** or **Next**.
 - To call the person with whom you have the appointment, press To call the person with whom you have the appointment, tap **Call**.
 - Note:

The number of the person whom you want to call must be present on the Appointment Detail.

- To update the calendar with any new appointments that you have set up on your calendar, press **More** > **Refresh**.
- If you pressed **More** and want to re-display the previous set of softkeys, press **More** again.
- To exit the calendar and return to the Phone screen, press **More** > **Exit**.

Calendar appointment reminders

About this task

If you have set the **Exchange Reminder Time** option to **Yes**, the phone displays a pop-up to remind you of the upcoming calendar appointments when the Exchange Reminder Time that you set is reached.

Procedure

When you get a reminder, perform one of the following actions:

- To ignore the reminder now, but to be reminded after the snooze period, press **Snooze**.
- To ignore the reminder completely, press **Dismiss**.

Chapter 12: Managing Features

Features

This topic describes the special features of your phone. Your administrator might have set up your phone with the features and the call appearances on one screen. The Features screen gives you access to advanced telephony features, such as Call Forwarding and Speed Dial buttons. You can use Send All Calls and Call Forward features to forward incoming calls to other numbers. When you enable the EC500, you can forward calls from your desk phone to your cell phone. Other features such as Call Park, Call Pickup Extended, and Transfer to Voicemail may be available on your Features screen. The Forward menu also lists the forwarding features. The features that are available depend on what your administrator has assigned to your phone.

You can also invoke these features using the Feature Access Code (FAC). If you activate or deactivate a feature using FAC and the corresponding feature button is not administered on the phone, you might not get the indication of the feature activation or deactivation.

In addition to the Features screen, your administrator might also provide selected features on softkeys on the call appearance (Phone) screen. For more information about what features and options are available for your extension, contact your administrator.

Feature table

Feature table

Use this table as a reference to standard feature names and their corresponding references. Depending on how your system is administered, not all features shown here may be available to you. For detailed information about a feature, see the corresponding topics.

Feature Name	Reference
Autodial	See the topic <i>Autodialing a pre-assigned number</i> for more information.
Auto Icom or Auto In	See the topic <i>Making an auto intercom call</i> for more information.
Auto Callback	See the topic Setting up automatic call back for more information.

Table continues...

Feature Name	Reference
BCA	See the topic <i>Using bridged call appearances</i> for more information.
Busy Indicator	See the topic <i>Monitoring other extensions at a glance</i> for more information.
Call park	See the topic <i>Parking a call</i> for more information.
Call pickup	See the topic <i>Answering a call for a call pickup group member</i> for more information.
Call unparking	See the topic <i>Unparking a call</i> for more information.
Cfrwd or CFrwd	See the topic Call forwarding for more information.
CFBDA	See the topic Enabling call forwarding when your line is busy or you do not answer for more information.
CPN Block	See the topic <i>Blocking your extension from displaying during calls</i> for more information.
CPN Unblock	See the topic <i>Displaying your extension on outgoing calls</i> for more information.
ECF	See the topic Setting rules for enhanced call forwarding for more information.
Dial Icom	See the topic Calling someone in your intercom group for more information.
Dir Pickup	See the topic <i>Picking up a call to another extension</i> for more information.
EC500	See the topic <i>Activating EC500 for simultaneous</i> ringing on multiple phones for more information.
Exclusion	See the topic Excluding others from bridging on to your call for more information.
Extend Call	See the topic Extending a call to your cell phone (EC500) for more information.
Ext Pickup	See the topic <i>Picking up a call to another call pickup group</i> for more information.
Group page	See the topic <i>Initiating a group page</i> for more information.
HAC	See the topic <i>Configuring Hearing Aid Compatibility</i> for more information.
Hotline	See the topic About Hotline for more information.
Hunt Group Busy	See the topic <i>Hunt Group Busy</i> for more information.
LNCC	See the topic <i>Activating the LNCC feature</i> for more information.

Table continues...

Feature Name	Reference
MCT Act	See the topic <i>Tracing a malicious call</i> for more information.
Multiple Device Access	See the topics Handling calls and conferences using Multiple Device Access for more information.
Call log	See the topic Call history for more information.
Presence	See the topic <i>Presence</i> for more information.
Priority Call	See the topic <i>Making a priority call</i> for more information.
SendAllCalls, SAC, or SAC with a third-party's extension, if applicable	See the topic Activating Send All Calls for more information.
SLA Mon™	See the topic <i>SLA Mon</i> [™] for more information.
Team	See the topic <i>Team Button</i> for more information.
Transfer to Voicemail	See the topic <i>Sending an active call to voicemail</i> for more information.
Whisper Act	See the topic <i>Interrupting a call with a whisper page</i> for more information.

Accessing the Features screen

About this task

Use this task to gain access to the **Features** screen.

The option on the **Features** screen display one of the following icons:

- The \square icon: Indicates the feature is available.
- The

 icon: Indicates the feature is activated.
- The icon: Indicates the feature is not available.

For models with LEDs, the LED next to the feature name indicates if the feature is currently on or off. If the light is on, the feature is on.

Procedure

1. On the Phone screen, use the right navigation button to gain access to the **Features** screen.

To return to the main Phone screen, press **Phone** or scroll to the left.

2. Scroll down to see the features that have been administered for your extension.

Using bridged call appearances

In addition to your own call appearances, your phone might show one or more bridged call appearances on the display screen. A bridged call appearance is of another user and enables you to determine if that call appearance is in use, answer calls on that appearance, or join a call in progress on that call appearance from your phone. You can also make outgoing calls on a bridged call appearance when the bridged call appearance is not in use.

Busy Indicator

With the Busy Indicator (BI) feature, you can do the following:

- · View the status of other users in the network
- · Make quick calls to the monitored users
- Transfer calls by pressing the Busy Indicator line key
- Make conference calls with BI users

The icon next to the Busy Indicator line key displays the current status of the monitored user (idle or busy).

The user status is also reflected by the indication of LEDs integrated into the corresponding line keys.

You can relabel and move a Busy Indicator line key from the Phone keys customization menu. However, you cannot add or delete Busy Indicator keys configured on your phone. Contact your system administrator if you want to add more BI line keys or delete the existing ones.

Related links

<u>Busy Indicator icons and LED indication</u> on page 70 <u>Call Transfer to a monitored user on page 71</u>

Busy Indicator icons and LED indication

Busy Indicator icons look the same as Presence "Available" and "On a call" icons but they might differ depending on the phone or the button module model.

The following table displays the Busy Indicator icons and LED indication for 9600 Series IP Deskphones, and JBM24 Button Module.

State	Phone icons	JBM24 Button Module icons	Red LED for the line key	Green LED for the line key
Idle	②	~	Off	Off
Busy	<u>C</u>	©	Off	On

Related links

Busy Indicator on page 70

Busy Indicator call operations

Making a call to a monitored user

About this task

You can make a quick call to monitored users, for example, when you want to provide direct instructions to them.

Procedure

Do one of the following:

- On the Phone screen, scroll to the required Busy Indicator line, and press Call.
- Press the required Busy Indicator line key.

Related links

Busy Indicator on page 70

Making a conference call with a monitored user

About this task

Use this procedure to add a monitored user to an active call to set up a conference call.

Procedure

- 1. Press the **Phone** key.
- 2. Do one of the following:
 - Scroll to the required Busy Indicator line, and press Call.
 - · Press the required Busy Indicator line key.

Related links

Busy Indicator on page 70

Call Transfer to a monitored user

Ongoing calls can be transferred to a user on the Busy Indicator line. This transfer is managed similarly to Call Transfer to a phone extension.

You can transfer a call immediately (blind transfer) or after making a consultative call to the monitored user (attended transfer).

Related links

Busy Indicator on page 70

Making a blind transfer to a monitored user on page 72

Making an attended transfer to a monitored user on page 72

Making a blind transfer to a monitored user

About this task

Use this procedure to transfer immediately an active call to a monitored user.

Procedure

- 1. During an active call, press Transfer.
- 2. Do one of the following:
 - Press the Busy Indicator line key corresponding to the user you want to transfer the call to
 - Press the **Phone** key, scroll to the required Busy Indicator line, and press **Select**.

The phone displays the Transfer now or talk with [BI extension number]? window.

3. Press Now.

Your call is transferred to the monitored line.

Related links

Call Transfer to a monitored user on page 71

Making an attended transfer to a monitored user

About this task

Use this procedure to transfer an active call to a monitored user by talking to this user first.

Procedure

- 1. During an active call, press **Transfer**.
- 2. Do one of the following:
 - Press the Busy Indicator line key corresponding to the user you want to transfer the call to.
 - Press the Phone key, scroll to the required Busy Indicator line, and press Select.

The phone displays the Transfer now or talk with [BI extension number]? window.

3. Press Talk.

The current call is placed on hold, and a call to the monitored user is established.

4. To end your consultative call and to transfer the held call, press **Complete**.

Related links

Call Transfer to a monitored user on page 71

Monitoring other extensions at a glance

About this task

Use this procedure to monitor phones for others. You can see whether an extension is idle or busy at a glance.

Before you begin

Ensure that the administrator enabled the feature.

Procedure

- 1. Press Main menu and scroll to Features.
- 2. Press Select.
- 3. Scroll to the System Numbers.
- 4. If necessary, scroll to the line button for the extension you want to check.
- 5. If that extension is in use, the phone displays **Busy** next to the extension number.
- 6. To call a monitored extension, scroll to the applicable line and press the line or OK button associated with that extension.

SLA Mon[™]

SLA Mon[™] technology is a patented Avaya technology embedded in Avaya products to facilitate advanced diagnostics. The phones supports Avaya Diagnostic Server with SLA Mon[™] agent.

SLA Mon[™] server controls the SLA Mon[™] agents to execute advanced diagnostic functions, such as:

- · Endpoint diagnostics
 - To remotely control IP phones to assist end users with IP phone configuration and troubleshooting.
 - To remotely generate single and bulk test calls between IP phones.
 - To remotely execute limited packet captures on IP phones to troubleshoot and diagnose IP phone network traffic.
- Network monitoring
 - To monitor multiple network segments for performance in terms of packet loss, jitter, and delay.
 - To monitor hop-by-hop QoS markings for voice and video traffic.

Long-term acoustic exposure protection

9600 Series IP Deskphones have the long-term acoustic exposure protection to prevent the users from getting acoustic shocks. This feature reduces the loud volume of the conversations on the phone call to permissible acoustic limits. The user can set the permissible acoustic limit to dynamic or predefined static values. If a dynamic setting is selected, the feature activates itself and gradually reduces the loud volume of the phone conversations to prevent from reaching the damaging decibel levels.

Long-term acoustic exposure protection feature satisfies OSHA, ETSI and employee health safety requirements.

Important:

Only L100 Series Headsets with RJ9 connector support long-term acoustic exposure protection when the headset profile is set to **Profile1**.

Related links

Configuring Long term acoustic exposure protection on page 74

Configuring Long term acoustic exposure protection

About this task

Use this procedure to configure the long-term acoustic exposure protection feature for your headset to protect from the acoustic exposure.

Before you begin

Ensure you set the headset profile to Profile1, and use L100 Series Headsets.

Procedure

- 1. Press Avaya Menu.
- 2. Scroll to Options & Settings, and press Select.
- 3. Scroll to **Advanced Options**, and press **Select**.
- 4. Scroll to Long Term Acoustic Exposure Protection, and press Select.
- 5. Choose one of the following and press **Select**:
 - Default
 - Off
 - Dynamic
 - 8 hours
 - 4 hours

Related links

Long-term acoustic exposure protection on page 74

No Hold Conference

With the No Hold Conference feature, you can add participants to your call while continuing your active conversation. The No Hold Conference feature lets you create a conference call without putting any call participant on hold.

For example, if you press the administered **No Hold Conf** button and then dial an extension the participant that answers the call joins the no hold conference.

Your administrator can configure your phone to support the no hold conference feature on a button module. You can use the call appearance for a regular or pre-configured number.

Using the **No Hold Conf** button you can add more participants to the no hold conference.

The administrator can pre-configure only one number on System Manager. When you press the **No Hold Conf** button, the call is placed to the pre-configured number when the participant answers the call joins the no hold conference.

If the participants do not answer the call within the configured time-out duration 9600 Series IP Deskphones will display the appropriate message on the phone screen.

Related links

Adding a participant to no hold conference on page 75

Dropping or Disconnecting the last participant from a conference call on page 49

Handling calls and conferences using Multiple Device Access on page 47

Adding a participant to no hold conference

About this task

You can add participants to your call while continuing your conversation without interruption. You can add up to six participants in the no hold conference call.

You will get appropriate messages displayed on the top bar of your phone screen when you are attempting no hold conference.

Half width mode is only supported in Avaya 9608/9608G and Avaya 9611/9611G IP Deskphones.

Before you begin

Ensure that your administrator activates the no hold conference feature.

Ensure that you are on a call.

- 1. During an active call, on the phone screen, tap **Features**
- 2. Tap No Hold Conf.
- 3. You can add users to a no hold conference by using one of the following methods:
 - If an extension number is pre-configured by your administrator, you can press **Select**.
 - If the extension number is not pre-configured, you will get a Destination screen to enter the extension number, press **OK**.

- You can press the Contact button, and select a number from the contact list.
- You can press the History button, and select a number from the list.
- 4. To add more participants to the existing no hold conference, repeat Steps 2 and 3.



™ Note:

You can press the **Cancel** soft key to terminate the no hold conference.

Related links

No Hold Conference on page 75

Assigning labels to auto-dial numbers

About this task

Autodial numbers are frequently-called numbers in your office or organization, for example, a Help desk number. Your system administrator sets up Autodial numbers, but you can assign and edit their labels. The administrator might just allot a specific button to be an Autodial number, but leave the number itself blank; in this case you can add the number yourself.

Procedure

- 1. From the Phone screen, scroll right twice to display the System Numbers menu.
- 2. Scroll to the line to which you want to assign a label or number.
 - Some labels are not editable. If you can't scroll to a certain line or hear an error tone when you press the line button, you cannot edit that label.
- Press Edit.
- 4. Use the dialpad to enter the label text or the Autodial number.
- Press Save.

Setting up automatic call back

About this task

When an extension you call is busy, use Automatic Call Back to receive a return call automatically, as soon as that extension is free.

- 1. Gain access to the Features screen when you get a busy signal from the extension that vou called.
- 2. Scroll to Auto Callback.

3. Press **OK** or press the corresponding line button.

When you hang up the callback call, the feature deactivates automatically.

Blocking your extension from displaying during calls

About this task

You can override the system (default) setting to display your extension on outgoing calls. Use the Calling Party Number Blocking feature to prevent your number from displaying.

Procedure

- 1. From the Phone screen, access the Features screen. From the Phone screen, scroll right to access the Features screen.
- 2. Select CPN Block.
- 3. Enter the extension number you do not want the called party to see.
- 4. Press **Enter** or **OK** to start calling party number blocking.

Displaying your extension on outgoing calls

About this task

If you used the Calling Party Number (CPN) Block feature to block displaying your extension on the calls you make, you can change it back using CPN Unblock. CPN Unblock allows parties you call see your extension.

- 1. From the Phone screen, access the Features screen. From the Phone screen, scroll right to access the Features screen.
- 2. Select CPN Unblock.
- 3. Enter your extension number.
- 4. Press **Enter** or **OK** to stop calling party number blocking.

Setting mute alert

About this task

You can use the mute alert feature to get an alert if you start to speak while you have put your phone on mute. You can select any of the following alerts:

- Audible: If you put a call on mute and start speaking, the deskphone produces a beep after 15 seconds to notify that you have muted your phone.
- Visual: If you put a call on mute and start speaking, the phones displays the Phone on mute message after 15 seconds on the phone status line.
- Both: Combines the actions and options of both audible and visual alerting.

If the mute alert feature is active and you put a call on mute, the phone displays the Mute Alert on status on one of the call appearance lines. You can press the line to deactivate the mute alert feature.

Procedure

- 1. Press Avaya Menu.
- 2. Select Options & Settings.
- Press Select or OK.
- 4. Select Call Settings.
- 5. Press Select or OK.
- 6. Select Mute Alerting.
- 7. Press Change or OK to toggle between the choices: None, Audible, Visible, and Both.
- 8. Press Save.

Setting up enhanced call pickup alerting

About this task

Use this feature to configure audible and visual alert when an incoming call to someone in your corresponding call pickup group is ringing.

- 1. Press Main Menu.
- 2. Select Options & Settings.
- 3. Press Select or OK.
- 4. Select Screen & Sound Options.
- 5. Scroll to Call Pickup Ring Type.

- Press Select or OK.
- 7. Select the ring tone using the navigation keys.
- 8. To set the type of alerts for call pickup, select Call Pickup Indication.
- 9. Select the call pickup indication type using the right or left navigation keys or press **Change** softkey.
- 10. Press Save.

Tracing a malicious call

About this task

Use this feature to trace a malicious call. Activating Malicious Call Trace (MCT Act) alerts a controller to begin call tracing and provide information for reporting this call. This feature is available only if your administrator has set up the phone system to trace and track malicious calls and there is an attendant or controlling user to oversee the trace.

Procedure

During an active call, access the Features menu. During an active call, scroll right from the Phone screen to access the Features menu.

Activating the LNCC feature

About this task

If you are on a call and do not want to be disturbed from subsequent incoming calls, you can use the Limit Number of Concurrent Calls (LNCC) feature. The LNCC feature controls the number of concurrent incoming calls. If you get an incoming call when your LNCC feature is active and you are already on an active call, the caller gets the busy tone. Thus, the caller does not wrongly assume that you are not at the desk when you do not answer the call or the call is send to a coverage. If the Busy Station Call Log feature is enabled, the deskphone saves this incoming call as a missed call in the call log.

If you activated the Limit Number of Concurrent Calls (LNCC) feature in the edit dialing mode, and you start dialing a number when at the same time your deskphone receives a call, the deskphone presents this call to you instead of logging the call.

- 1. Gain access to the Features screen.
- 2. Scroll to select LimitInCalls.
- 3. Press **Select** or the corresponding line button to activate the feature.

The deskphone displays the confirmation screen with the message Limit Concurrent Incoming Calls and an LNCC icon on the top line of the Phone screen.

4. To remove the confirmation screen, press the **OK** softkey.

You can also remove the confirmation screen by jumping to a different screen using deskphone buttons such as Contacts, History, or Home.

Deactivating the LNCC feature

Procedure

- 1. Gain access to the Features screen.
- 2. Scroll to choose LimitInCalls.
- 3. Press **Select** or the corresponding line button to deactivate the feature.

Result

The deskphone deactivates the Limit Number of Concurrent Calls (LNCC) feature and removes the LNCC icon from the top line.

Visual alert for an encrypted call

While using your phone, you can now see whether an incoming or an outgoing call is encrypted. The secure status is indicated by the secure icon, a padlock, on the active call appearance.



The secure icon appears only if a two-party call is encrypted.

Activating EC500 for simultaneous ringing on multiple phones

About this task

With the EC500 feature, you can program calls in the way that your desk phone and your cell phone ring simultaneously when there is an incoming call. Using this feature, you can answer office calls while you are away from your desk. The system administrator has to add your cell phone number and program the desk phone.

Procedure

- 1. From the Phone screen, go to the **Features** screen.
- 2. Scroll to **EC500**, and press **Select**.

Extending a call to your cell phone (EC500)

About this task

You can use the Extend Call feature to receive a call that is active on your office phone on your mobile phone. The Extend Call feature uses EC500 Extension to Cellular. You to transfer an office call to your mobile phone and move away from your desk. This feature is programmed by your system administrator.



Note:

Your administrator can set the destination mobile number.

Procedure

- 1. During an active call, gain access to the Features screen.
- 2. Scroll to **Extend Call**, and press **OK** to forward the call to your mobile phone.
- Answer the call on your cell phone.

The call remains active on your phone, so you can switch back to your phone at any time.

Listening to your voicemail

About this task

Use this procedure to listen to your voicemail The **Message** button and the Message Wait Indicator at the upper right corner of the phone lights to indicate that you have a voice message.

Before you begin

- Ensure that the system administrator configures the voicemail for your extension.
- Obtain the user ID and password of your voicemail from your system administrator.

- 1. To log in to your voicemail, press the **Message** button.
- 2. Follow the voice prompts to playback your voice messages.

About Hotline

You can use the Hotline feature to dial a preconfigured number that your system administrator has already set for you.

To dial the hotline number, lift your handset, or press **SPEAKER**. Alternatively, if you are using a headset, press **HEADSET**. The phone automatically dials the number that your system administrator has configured for you.

Team Button

When the administrator configures the Team Button feature for your phone, you can do the following:

- Monitor another phone to know whether calls are redirected to another phone.
- · Monitor another phone to know whether that phone has an active call.
- Answer calls that ring on the monitored phone.

Use the Team Button soft key to:

- Make a speed dial call to the monitored phone. You can do this when the monitored phone is not in use.
- Transfer an active call to the monitored phone.

The call redirection feature, Send All Calls, Call Forward, or ECF might be active on the monitored phone. The monitoring phone can override call redirection when speed dialing or transferring an active call to the monitored phone. The override feature ensures that the call made to the monitored phone rings on the monitored phone and is not routed to the redirected number.

To override call redirection, the administrator must configure on Avaya Aura® Session Manager:

- The monitored phone setting that enables the monitoring phone to override call redirection directly or through a choice provided to the user.
- The monitoring phone setting that enables the phone to override the call redirection feature that is active on a monitored phone.

For more information to set the overriding permission on Avaya Aura[®] Session Manager, see *Administering Avaya Aura*[®] *System Manager*.

The following table shows different icons of the Team Button feature for the 9611G IP phone.

The following table shows different icons of the Team Button feature:

Icon	Description
0	The monitored extension is idle.

Table continues...

0	The monitored extension is on another call.
•	The monitored extension is idle, but the user has forwarded all incoming calls to a different extension.
•	The monitored extension is on another call, and the user has forwarded all incoming calls to another extension.
0	The monitored extension is idle, and the user has enabled ringing.
©	The monitored extension is idle, and the user has enabled ringing from multiple lines.
0	The monitored extension is busy on other call, and the user has enabled ringing.
©	The monitored extension is busy on other call, and the user has enabled ringing from multiple lines.

Browser

Your phone includes WML Web browser capability to use additional applications such as LDAP. The applications available through the browser vary depending on how your system administrator has configured your phone.

Gain access to the browser through **Main Menu**. If you do not see the **Browser** option on Main Menu, Web applications must be available for your phone.

Using the WML browser

Procedure

- 1. Press Main Menu.
- 2. Scroll to Browser.
- 3. Press Select or OK.

The WML browser opens the home page.

- 4. Scroll to the link that you want to view.
- 5. Press **OK** to open the link.
- 6. Perform any of the following actions:
 - To stop loading the current page, press Cancel.
 - To reload the current page, press Refresh.
 - To open the home page, press Main Menu.

- To close the browser, press **Phone**.
- To edit a text in an application, use the right side call appearance buttons.

Hunt Group Busy

Using the Hunt Group Busy feature, users can opt-in or opt-out of the calls specific to the hunt group. A hunt group is a group of users who handle the similar types of calls. A user can be a part of multiple hunt groups.

The Features screen displays the **Hunt Group Busy** buttons. Each **Hunt Group Busy** button corresponds to a specific hunt group. The **Hunt Group Busy** button label includes a unique four-digit index for each group.

Using Hunt Group Busy

About this task

Use the **Hunt Group Busy** buttons on the Features screen to manage the calls from a particular hunt group.

Procedure

- 1. To stop receiving calls from a particular hunt group, press the corresponding **Hunt Group Busy** button.
- 2. To turn off the Hunt Group Busy feature for a particular hunt group and start receiving calls, press the corresponding **Hunt Group Busy** button.

Call forwarding

You can forward your incoming calls to another number or to voice mail. When the Forward button light is on, one or more of the forwarding features are active. The forwarding features available on your phone depend on the options your administrator has set. For more information about the options available on your extension, contact your administrator.

Activating Send All Calls

About this task

When Send All Calls (SAC) feature is on, your incoming calls go directly to a predefined coverage number, typically your voice mail. Incoming calls ring once at your extension and then go directly to a number which is set by your system administrator. If the SAC feature is administered on your phone, a **Send All** softkey appears on the Phone screen for idle calls.

Pressing Send All turns Send All Calls on. If it is already on, pressing Send All turns it off.

You can also turn **Send All Calls** on or off by using the phone Features list.

If you enabled the DND affects SAC option, the phone activates the SAC feature when you manually change the presence status to DND.



Do not enable the SAC feature in case you selected the cover all option for the coverage path. Enabling both features at the same time can cause duplicate entries in the call log.

Procedure

- 1. Navigate to the Features screen.
- Scroll to choose **Do not disturb**.



If you want the feature label to read as **Send all calls**, contact your administrator to relabel the feature name.

3. Press **Select** or **OK** or the corresponding line key to activate the feature.

Activating call forwarding

About this task

Use this task to forward your calls to a specified number.

- 1. Gain access to the Features screen.
- 2. Scroll to choose Call Forward.
- 3. Press **Select** or the corresponding line button.
- 4. Enter the destination number to which you want to forward your calls.
- Press #.



Note:

You can view the call originator when the call forwarding chain has two or more participants. This feature works if your administrator has configured the related parameter.

Disabling call forwarding

About this task

Use this task to turn off any call forwarding feature that you activated.

Procedure

- 1. Press the right navigation button to gain access to the Features screen.
- 2. Select the active call forwarding feature that you want to turn off.
- 3. Press **OK** or the line button on which the call forwarding feature appears.

Enabling call forwarding when your line is busy or you do not answer

About this task

Use this task to set a number to which your calls are forwarded when your line is busy or when you do not answer a call. You must enter the telephone number where the calls are forwarded each time you enable this feature.

Procedure

- 1. From the Phone Screen, gain access to the Features screen.
- 2. Press Select to choose Call Fwd Busy/No Ans.
- 3. Enter the number to which you want to forward your calls.
- 4. Press **Enter** or **OK** button to turn call forwarding off if it is already on.

Setting rules for enhanced call forwarding

About this task

You can use this feature to forward the incoming calls on your phone to various destination numbers based on call type and call state.

Procedure

1. From the feature list, select **Enhanced Call Forward**.

The phone displays a list of enhanced call forwarding rules.

- 2. Select the required rules from the following list, and enter the corresponding numbers.
 - · Forward all calls:
 - Internal [Enter Number]
 - External [Enter Number]
 - · Forward when busy:
 - Internal [Enter Number]
 - External [Enter Number]
 - · Forward when no answer:
 - Internal [Enter Number]
 - External [Enter Number]

If you have configured a number for any of the rules, the phone displays that number in place of the text Enter Number.

- 3. Press **Save** to save the destination number.
- 4. Perform one of the following actions:
 - To activate forwarding for a rule, press **Turn on** for that rule.
 - To activate forwarding for all the rules, press All on.

Editing a rule

Procedure

- 1. Access the Enhanced Call Forward feature from the Features screen.
- 2. Select the rule that you want to edit and press **Edit**.
- 3. Enter the destination number using the numeric keypad.
- 4. Press Save.

Turning off a rule

- 1. Access the **Enhanced Call Forward feature** from the Features screen.
- 2. Select the rule that you want to turn off.

Managing Features

- 3. Press Turn off.
- 4. To turn off all the active rules, press **All off**.
- 5. Press **Exit**.

Chapter 13: Customization

Customizing Settings

Options & Settings

The **Options & Settings** menu contains the following submenus:

- Call Settings
- Assign Speed Dial Entries
- Assign Favorites Entries
- Application Settings
- Screen & Sound Options
- Language & Region
- Advanced Options

The **Call Settings** menu includes choices for automatically displaying the Phone screen when, you get an incoming call, when you place a call, when you answer a call, turning call timers on or off, controlling how Redial works, turning **Visual Alerting** on or off, and more.

Assign Speed Dial Entries lets you assign speed dial numbers to up to 10 contacts. When you a press a single digit key and keep the key depressed for a short duration, the phone initiates a call to that person.

Assign Favorites Entries lets you build a list of up to nine favorite contacts or features.

The **Application Settings** menu includes choices for personalizing button labels, turning call **Recents** on or off and including bridged calls in your call **Recents**.

Screen & Sound options includes choices for adjusting brightness and contrast, ring pattern, background, button clicks, error tones, text size and phone screen width.

Language and Region settings includes choices for setting the display language and the time format.

The **Advanced Options** menu includes choices for integrating other applications such as Microsoft[®] Exchange Server with your phone.

You can also set AGC (Automatic Gain Control) for your headset, handset, and the speaker audio.

Displaying the Phone screen on dialing

About this task

Use this task to set the phone to display the Phone screen when you dial a number to make a call.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Call Settings > Phone Screen on Calling.
- 3. Press **Change** to select one of the following:
 - Yes: To display the Phone screen when you dial a number.
 - No: To remain on the current screen when you dial a number.
- 4. Press Save .

Displaying the Phone screen on receiving a call

About this task

Use this task to display the Phone screen when you receive a call.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Call Settings > Phone Screen on Ringing.
- 3. Press **Change** to select one of the following:
 - Yes: To display the Phone screen when you receive a call.
 - No: To remain on the current screen when you receive a call.
- 4. Press Save.

Displaying call timers

About this task

You can set your call settings to display the duration of calls. You can turn the call timer display on or off.

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Call Settings > Display Call Timers.
- 3. Press Change to select Yes or No.
- 4. Press Save.

Setting redial options

About this task

Use this task to view a list of last four numbers that you dialed or to dial the last dialed number when you use the redial feature.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Call Settings > Redial.
- 3. Press **Change** to select one of the following options:
 - One Number: To dial the last dialed number.
 - List: To display the last four dialed numbers.
- 4. Press Save.

Configuring visual alerts

About this task

Use this task to cause the LED in the top right corner of the phone to flash when the phone gets incoming calls.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Call Settings > Visual Alerting.
- 3. Press Change to select On or Off.
- 4. Press Save.

Setting the audio path

About this task

Sets your phone to receive calls on the Speaker or the Headset.

- 1. Press Main Menu.
- 2. Press Select to select Options & Setting > Call Settings > Audio Path.
- 3. Press Change to select Headset or Speaker.
- 4. Press Save.

Setting dialing options

About this task

Your phone has the following dialing options:

- You can dial a number by picking up the handset, getting a dial tone, and dialing the required number (off-hook dialing).
- If you set the Edit Dialing feature, you can enter the number or a part of it, edit the entered digits if needed, and press the corresponding softkey to dial.

When on-hook dialing is enabled, Edit Dialing is not available.

If you activated the Limit Number of Concurrent Calls (LNCC) feature in the edit dialing mode, and you start dialing a number when at the same time your phone receives a call, the phone presents this call as a missed call.

Procedure

- 1. Press Main Menu.
- 2. Navigate to Options & Settings > Call Settings > Dialing options.
- 3. Press Change to select On-hook or Editable.

When on-hook dialing is enabled, Edit Dialing is not available. During an active call, when you select the second line appearance, the first line appearance goes on hold and the **Editable** mode is disabled irrespective of your **Dialing options** setting.

4. Press Save.

Toggling name and number

About this task

Use this procedure to display either caller name or caller number if the caller name is too long to fit on the phone screen.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Call Settings > Toggle Name/Number.
- 3. Press Change to select On or Off.
- 4. Press Save .

Setting up speed dialing

About this task

Use this task to assign speed dial numbers to your contacts. You can assign speed dial numbers to up to 10 contacts.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Assign Speed Dial Entries.
- 3. Scroll and press **Assign** to select the required unassigned line.
- 4. Press **Select** to select the number that you want to assign.

Setting up favorites

About this task

Use this task to create a list of favorite contacts or features for quick access. You can include up to nine favorite items in the favorite list.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Assign Favorites Entries.
- 3. Press **Contacts** or **Features** to select and set the favorites.

Personalizing labels

About this task

You can change the labels that the phone displays for your extensions, features, and the system numbers or speed dial buttons. For example, you can change the label for your extension to *My Line*. If you have a button module attached to your phone, you can change any of those labels. For example, you can change a Help Desk extension to read *Help Desk*.

Procedure

- 1. Press Main Menu.
- 2. Select Options & Settings.
- 3. Press Select or OK.
- 4. Select Application Settings.
- 5. Press Select or OK.
- Select Personalize Labels.
- 7. Press Select or OK.
- 8. Select the label you want to edit.

If the label you want to edit is on the **Features** menu, scroll down past your call appearances, and select the feature you want to edit. If the label you want to edit is on the **System Numbers** menu, scroll to right and select the system number label you want to personalize.

9. Press Edit.

10. Type a new label without any comma (,).

Press More then Clear to clear all text fields and start again.

- 11. Press Save or OK.
- 12. (Optional) To revert to the default button labels, select Main Menu > Options & Settings > Application Settings > Restore Default Button Labels.
 - a. Press Select.
 - b. Press **Default**.

Adjusting the brightness or contrast of the display

About this task

Use this task to adjust the brightness and contrast of phone screen or button module as applicable. Contrast adjustment applies only to a phone with a black and white display or a button module attached to a phone with a color display screen. You cannot adjust the contrast of a phone with a colored display.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options.
- Press Brightness or Contrast.
- 4. Select Phone or an attached button module as applicable.
- 5. Use the arrow keys to increase or decrease the brightness or contrast.
- 6. Press Save.

Setting the text size

About this task

Use this task to change the size of the text. The large text option is available only for the English language.

Before you begin

You can use the procedure only if the administrator enables the option for your phone.

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options > Text Size.
- 3. Press **Change** to select one of the following:
 - Normal: To set the default text size.
 - Large: To set the large text size.
- 4. Press Save.

Setting a ring tone for incoming forwarded calls

About this task

Use this task to specify the ring tone that you want to hear for incoming calls that are forwarded to your phone. You can hear the ring tone that you specified for the:

- · Caller.
- · First phone that forwarded the call.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options > Call Fwd Ring.
- 3. Press **Change** to select one of the following:
 - Caller: To hear the ring tone that you specified for the caller.
 - **Forwarder**: To hear the ring tone that you specified for the first phone that forwarded the call.
- 4. Press Save.

Setting a ring tone for your phone

About this task

Use this task to select a ring tone for incoming calls. You can select from a range of classic and rich ring tones. Classic ring tones are simple synthesized sounds. Rich ring tones are richer and more complex sounds.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options > Personalized Ringing.
- 3. Press **Change** to select the required ring tone.
- 4. Press Save.

Setting a ring tone for Team Button

About this task

Use this task to set a ring tone for phones that you monitor.

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options > Team Button Ring Type.

- 3. Press **Change** to select the required ring tone.
- 4. Press Save.

Assigning ring tone to a monitored station

About this task

Use this task to set a ring tone for a specific monitored station.

Procedure

- 1. Press Home.
- 2. Select Options & Settings > Screen & Sound Options > Team Button Ring Type.
- 3. Scroll through the list to select the monitored deskphone.
- 4. Select the required ring tone from the list and press **Save**.

Setting an alert for a call pickup group

About this task

Use this task to set a call pickup group alert on your phone. The call pickup group alert provides a visual or an audio alert on your phone when a member in your call pickup group gets a call.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options > Call Pickup Indication.
- 3. Press **Change** to select one of the following:
 - · Audible: Provides an audio alert.
 - · Visual: Provides a visual alert.
 - Both: Provides both audio alert and visual alert.
 - None: Provides no call pickup alert.
- 4. Press Save.

Setting a ring tone for a call pickup group

About this task

Use this task to select a ring tone for an audio alert on your phone for a call pickup group.

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options > Call Pickup Ring Type.

- 3. Press **Change** to select the required ring tone.
- 4. Press Save.

Changing the background logo

About this task

If your system administrator has set up an alternate background choice, you can change the logo your screen displays.

Note:

Your system administrator can also change the background logo through the settings file.

Procedure

- 1. Press Main Menu.
- Press Select to select Options & Settings > Screen and Sound Options > Background Logo.
- 3. To select the required logo, press one of the following:
 - Right arrow key
 - · Left arrow key
- 4. Press Save.

Turning button click sounds on and off

About this task

Use the procedure to turn off button click sound.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options > Button Clicks.
- 3. Press **Change** to turn sound on or off.
- 4. Press Save.

Turning error tones on or off

Your phone beeps if you make a mistake or take an action that is not allowed. If you do not want to hear error beeps, set your error tone to Off.

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options > Error Tones.
- 3. Press **Change** to turn error tones on or off.

4. Press Save.

Setting key repeat delay

About this task

Use this procedure to set the time for which you must press the navigation key to start the auto repeat process. You can select from the following options:

- No Repeat
- Default
- Short
- Long
- Very Long

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options > Key Repeat Delay.
- 3. Press Change to select the required option.
- 4. Press Save.

Activating mute alerting

You can configure your phone to alert you if your phone is on mute. The alert can be an audible beep and a visible indication on the top line of your phone. Mute alerting is turned off automatically when you press the Mute button to take the call off mute.

- 1. Press Main Menu.
- Press Select to select Options & Settings > Call Settings > Mute Alerting.
- 3. Press **Change** to select from one of the following options:
 - Audible: If you put a call on mute and start speaking, after 15 seconds, the phone
 produces a beep to notify you that you have muted your phone.
 - Visual: If you put a call on mute and start speaking, after 15 seconds, the phones displays a message that reads "Phone is on mute" on the phone status line.
 - Both: Combines the actions and options of both audible and visual alerting.
 - None: Disables the mute alerting feature for your phone.
- 4. Press Save.

Enabling wireless headset bidirectional signaling

Before you begin

Check if the headset supports electronic hook switch (EHS) signaling.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Call Settings > Headset Signaling.
- 3. Press **Toggle** to select one of the following options:
 - **Disabled**: Disables signaling from the phone to the headset.
 - **Switch hook and alert**: Activates the link to the headset if you press **Headset**. When the phone receives an incoming call you hear the alert tone in the headset.
 - **Switch hook only**: Activates the link to the headset if you press **Headset**. When the phone receives an incoming call you do not hear the alert tone in the headset.
- 4. Press Save.

Setting the phone screen width

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Option & Settings > Screen & Sound Options > Phone Screen Width.
- 3. Press **Toggle** to select one of the following options:
 - Full: Each call appearance or feature occupies the entire width of a line.
 - Half: Each call appearance or feature occupies half the width of a line, effectively splitting the screen in two halves.
 - **Default**: Each call appearance or feature occupies the entire width of a line.
- 4. Press Save.

Turning Continuous Scrolling on or off

About this task

Use the procedure to control continuous scrolling feature for your phone.

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Screen & Sound Options > Continuous Scrolling.
- 3. Press **Change** to turn continuous scrolling on or off.

4. Press Save.

Changing the display language

About this task

Use this task to change the display language of your phone.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Language & Region > Language.
- 3. Press **Select** or **OK** button to change the language.
- 4. Press Save.

Setting the time format

You can change the way your phone displays the time on your Phone screen. The time format is either 12 or 24 hours.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Language & Region > Time Format.
- 3. Press **Change** to select the required time format.
- 4. Press Save.

Setting headset profile

About this task

Use the procedure to select the headset profile that best matches the acoustic properties of the headset.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Advanced Options > Headset Profile.
- Press Change or OK button to select the profile that matches your headset.
- 4. Press Save.

Turning automatic gain control on or off

About this task

The automatic gain control (AGC) automatically adjusts the audio output level to achieve a constant and better quality audio.

Configuring Hearing Aid Compatibility

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Advanced Options > Handset Equalization Operation.
- 3. Press **Change** to select one of the following options:
 - Default
 - Audio Opt for audio optimization
 - HAC Opt for hearing aid compatibility optimization
- 4. Press Save.

Entering Microsoft® Exchange credentials for basic authentication

About this task

You can integrate your phone with Microsoft[®] Exchange account by using the Basic authentication method. If your administrator has set up this option, you can integrate Microsoft[®] Exchange Server calendar and contacts with your phone.

Before you begin

Ensure that you have a valid exchange credential.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Advanced Options > Exchange Integration.
- 3. (Optional) Select the Basic authentication.
- 4. If you have already set up your credentials and do not want to change them, proceed to Step 5. To establish or change your credentials, select **Email Name & Password** and enter the following:
 - Your Microsoft® Exchange server email user name.
 - Your Microsoft[®] Exchange server email password.
 - The domain of the server on which Microsoft® Exchange runs.
 - Whether you want the phone to display a prompt to enter your user name and password every time you access Microsoft® Exchange calendar on your phone. Press **Change** to change the setting as required.
- 5. Press Save.

Result

Basic authentication is successful, and your phone is integrated with the Microsoft® Exchange account.

Entering Microsoft® Exchange credentials for OAuth authentication

About this task

You can integrate your phone with Microsoft[®] Exchange account by using the OAuth authentication method. If your administrator has set up this option, you can integrate Microsoft[®] Exchange Server calendar and contacts with your phone.

Before you begin

Ensure that you have a valid exchange credential.

Procedure

- 1. Press Main Menu.
- 2. Press Select to select Options & Settings > Advanced Options > Exchange Integration.
- 3. (Optional) Select the OAuth authentication.
- 4. If you have already set up your credentials and do not want to change them, proceed to Step 5. To establish or change your credentials, select **Email Name & Password** and enter the following:
 - Your Microsoft[®] Exchange email address.
 - Your Microsoft® Exchange server address.
- 5. Press Save.

The **Save** soft key appears only after you enter the valid details.

6. The phone screen displays the device verification URL https://microsoft.com/devicelogin and the dynamically generated User code for verification.

The phone screen displays these details for a maximum of 15 minutes.

- 7. Enter the URL in your browser and enter the User code when the Microsoft® application prompts.
- 8. Follow the user prompts of the Microsoft® application.

Result

OAuth authentication is successful, and your phone is integrated with the Microsoft® Exchange account.

Entering Microsoft® Exchange credentials for enabling Calendar and Contacts

About this task

You can integrate your phone with Microsoft[®] Exchange account by using the Microsoft[®] authentication method. If your administrator has set up this option, you can integrate Microsoft[®] Exchange Server calendar and contacts with your phone.

Before you begin

Ensure that your phone is integrated with the Microsoft® Exchange account.

Procedure

- 1. To set or change your calendar preferences, select **Calendar** and enter the following:
 - Whether or not you want your phone to activate the calendaring feature. Press **Change** to change the **Use Exchange Calendar** setting to **Yes** or **No**.
 - Whether or not you want your phone to remind you of items on your calendar. Press **Change** to change the **Enable Exchange Reminder** setting to **Yes** or **No**.
 - If you want to be reminded of calendar items, indicate in minutes how far in advance you want to get a reminder for your appointments. For example, setting the value to 120 will cause a reminder to appear two hours before the appointment start time and setting the value to 5 will cause a reminder to appear five minutes before the start time of appointment. Setting the value to 0 minutes will cause the reminder to be displayed at the start time of the appointment. To enter minutes, select **More**, then **123** and type the number of minutes.
 - Whether you want the appointment reminder to reappear after a "snooze" period in minutes you specify. For example, setting the Exchange Snooze Time value to 5 will cause a Reminder popup to reappear five minutes after you have "snoozed" it.
 - Whether or not you want to hear a tone with a reminder popup window. Press **Change** to change the **Exchange Reminder Tone** setting to **Yes** or **No**.
- 2. To change your contacts preferences, select **Contact** and configure the following:
 - Whether or not you want your phone to remind you of items on your calendar. Press Change to change the Use Exchange Contacts setting to Yes or No.
 - Contact your administrator if you want to change the Exchange subscription period.

Note:

When Exchange calendar is active, a Calendar label displays beneath your last call appearance on the Phone screen.

Chapter 14: Troubleshooting

Limited access during failover

One or more telephone system servers provide your phone with its connectivity, features, and functionality. If a disconnect or switch from one server to another occurs, your phone goes into Failover mode to keep it operating while alternate server resources are established. Depending on the server your phone is on, an icon may appear on the Top display line to notify you that failover is in effect.

Failover has different stages. For example, while your phone transitions to a new server it is in limbo and functionality may be limited. When the alternate server is active, your phone assumes the functionality available on that server, which may not be the same as your original server. When the original server is restored, your phone transitions back (failback) and functionality may again be limited during the transition. When your phone is back on the original server, normal functionality is restored. Failover and failback are automatic; you have no control over failure mode.

Keep in mind that during failover certain features may not be available and telephone functionality may be limited. Check the soft keys at the bottom of the display to determine the actions you can take during failover.

Important:

Do not log your telephone off during failover or until normal service is restored on your original telephone server. Logging off during failover, during transition to or from an alternate server, or while your phone is active on an alternate server may cause your phone to become inoperable.

The following conditions apply when your telephone is in Failover mode:

- If you are on a call when failover occurs, the call will remain active. You cannot initiate new calls while your phone transitions to the alternate server.
- Certain soft keys may not display and their related functions may be unavailable until transition to the alternate server is complete.
- Call connection may take longer than usual.
- During the transition to a new server, any active conference calls, call transfers, and held calls may be dropped. Incoming calls might not reach you and can go to voice mail.
- Emergency calls might or might not work, depending on the stage of failover and the functionality available on the alternate server.

- The Message Waiting Indicator is cleared, but voice mail might still be available if the voice mail server to which calls are being sent is not in failover.
- Transitions back to the normal server will restore all original functionality.

Chapter 15: Resources

Documentation

See the following related documents at http://support.avaya.com:

Title	Use this document to:	Audience			
Overview					
Avaya Aura® Session Manager Overview and Specification	See characteristics and capabilities, including feature descriptions, interoperability, performance specifications, security, and licensing requirements of the Avaya Aura® Session Manager.	People who want to gain a high-level understanding of the Avaya Aura® Session Manager features, functions, capacities, and limitations.			
Avaya Aura® Communication Manager Feature Description and Implementation	See characteristics and capabilities, including feature descriptions, interoperability, performance specifications, security, and licensing requirements of the Avaya Aura® Communication Manager.	People who want to gain a high-level understanding of the Avaya Aura® Communication Manager features, functions, capacities, and limitations.			
Avaya IP Office [™] Platform Feature Description	See information about the feature descriptions.	People who perform system administration tasks.			
Avaya IP Office [™] Platform Solution Description	See information about how the products and services interoperate with this solution.	People who want to gain a high-level understanding of the IP Office features, functions, capacities, and limitations.			
Implementing					
Deploying Avaya Aura [®] Session Manager	See the installation procedures and initial administration information for Avaya Aura® Session Manager.	People who install, configure, and verify Avaya Aura® Session Manager on Avaya Aura® System Platform.			

Table continues...

Title	Use this document to:	Audience		
Upgrading Avaya Aura [®] Session Manager	See upgrading checklists and procedures.	People who perform upgrades of Avaya Aura® Session Manager.		
Deploying Avaya Aura [®] System Manager on System Platform	See the installation procedures and initial administration information for Avaya Aura® System Manager.	People who install, configure, and verify Avaya Aura® System Manager on Avaya Aura® System Platform at a customer site.		
IP Office SIP Telephone Installation Notes	See the installation procedures and initial administration information for IP Office SIP telephone devices.	People who install, configure and verify SIP telephone devices on IP Office.		
Administering				
Administering Avaya Aura® Session Manager	See information about performing Avaya Aura® Session Manager administration tasks, including how to use management tools, how to manage data and security, and how to perform periodic maintenance tasks.	People who perform Avaya Aura® Session Manager system administration tasks.		
Administering Avaya Aura® System Manager	See information about performing Avaya Aura® System Manager administration tasks, including how to use management tools, how to manage data and security, and how to perform periodic maintenance tasks.	People who perform Avaya Aura® System Manager administration tasks.		
Administering Avaya IP Office™ Platform with Manager	See information about short code configurations for the feature list	People who need to access IP Office features using short codes.		
Administering Avaya IP Office™ Platform with Web Manager	See information about IP Office Web Manager administration tasks, including how to use the management tool, how to manage data and security, and how to perform maintenance tasks.	People who perform IP Office Web Manager administration tasks.		
Maintaining				
Maintaining Avaya Aura [®] Session Manager	See information about the maintenance tasks for Avaya Aura® Session Manager.	People who maintain Avaya Aura [®] Session Manager.		
Troubleshooting Avaya Aura® Session Manager	See information for troubleshooting Avaya Aura® Session Manager, resolving alarms, replacing hardware, alarm codes, and event ID descriptions.	People who troubleshoot Avaya Aura® Session Manager.		

Table continues...

Title	Use this document to:	Audience
Using IP Office System Status	See information about the maintenance tasks for System Status Application.	People who maintain System Status Application.
Using IP Office System Monitor	See information about the maintenance tasks for SysMonitor.	People who maintain SysMonitor.

Related links

Finding documents on the Avaya Support website on page 108

Finding documents on the Avaya Support website

Procedure

- 1. Go to https://support.avaya.com.
- 2. At the top of the screen, type your username and password and click **Login**.
- 3. Click Support by Product > Documents.
- 4. In **Enter your Product Here**, type the product name and then select the product from the list.
- 5. In **Choose Release**, select the appropriate release number.

The **Choose Release** field is not available if there is only one release for the product.

6. In the **Content Type** filter, click a document type, or click **Select All** to see a list of all available documents.

For example, for user guides, click **User Guides** in the **Content Type** filter. The list only displays the documents for the selected category.

7. Click Enter.

Related links

Documentation on page 106

Viewing Avaya Mentor videos

Avaya Mentor videos provide technical content on how to install, configure, and troubleshoot Avaya products.

About this task

Videos are available on the Avaya Support website, listed under the video document type, and on the Avaya-run channel on YouTube.

- To find videos on the Avaya Support website, go to https://support.avaya.com/ and do one of the following:
 - In Search, type Avaya Mentor Videos, click Clear All and select Video in the Content Type.
 - In Search, type the product name. On the Search Results page, click Clear All and select **Video** in the **Content Type**.

The Video content type is displayed only when videos are available for that product.

In the right pane, the page displays a list of available videos.

- To find the Avaya Mentor videos on YouTube, go to www.youtube.com/AvayaMentor and do one of the following:
 - Enter a key word or key words in the Search Channel to search for a specific product or
 - Scroll down Playlists, and click a topic name to see the list of videos available for the topic. For example, Contact Centers.



■ Note:

Videos are not available for all products.

Support

Go to the Avaya Support website at https://support.avaya.com for the most up-to-date documentation, product notices, and knowledge articles. You can also search for release notes. downloads, and resolutions to issues. Use the online service request system to create a service request. Chat with live agents to get answers to guestions, or request an agent to connect you to a support team if an issue requires additional expertise.

Index

A		call transfer (continued)	
		making a conference call	
access limited during failover		overview	
activating LNCC	<u>79</u>	transferring a call	<u>71</u>
Active calls		button click sounds	
directing to cell phone	<u>81</u>	configuring	<u>97</u>
administrative messages		Button labels	
about	27	personalizing	93
AGC		Button labels, restoring to default labels	
answering call on a monitored extension		Button module, adjusting brightness or contrast	
Applications		zanen medale, dajaeang zugnarese er semalet ini	<u></u>
appointments	<u>20</u>		
reviewing calendar	65	C	
Assigning ring tone	<u>00</u>		
forwarded calls	05	calendar	
		reminders	
monitored station	<u>90</u>	reviewing appointments on	<u>65</u>
Assigning ring tone,	0.5	Calendar	
monitored station		about	<u>65</u>
Team Button	<u>95</u>	Calendar, preferences	<u>101</u> , <u>102</u>
audio path		Calendar, setup	<u>101</u> , <u>102</u>
on-hook		Call back	76
auto intercom call	<u>38</u>	Call history	
Autodialing		calling from	38
calling a person	<u>36</u>	Call History	
setting up labels	<u>76</u>	icons	22
automatic call back	<u>76</u>	Call history log	
Avaya Menu		about	50
about	25	Call parking	
Avaya Home			
Main Menu		Call pickup	<u>31</u>
Avaya support website		call pickup alert indication	00
Away Timer		setting	<u>96</u>
Away Timer enable		Call Timers	00
7 way Timer Grabic	<u>00</u>	displaying	<u>90</u>
		call transfer	
В		attended	
		consultative	
back-panel		blind transfer	
Background logo		to a monitored phone	<u>46</u>
basic authentication	<u>101</u>	unattended	<u>42</u>
bridged call appearance		Call Transfer	
joining	<u>30</u>	Busy Indicator user	<u>71</u>
Bridged call appearance		Call unparking	<u>47</u>
about	70	calling	
Bridged Calls	_	using a click to dial link	37
answering	29	Calling a number	
Bridging		using Autodial	36
browser, WML		calling a person	
Busy Indicator	<u>00</u>	using speed dial	35
call transfer		calling intercom group	
attended transfer	72		
blind transferblind transfer		calling using intercom	<u>30</u> , <u>39</u>
		calls	00
icons and LED indication		contact list	
making a call	<u>/1</u>	multiple device access	<u>4 /</u>

calls (continued)		emergency call	<u>34</u>
switching phone	<u>47</u>	enable Away Timer	<u>63</u>
change presence status	<u>62</u>	enable wireless headset	<u>99</u>
Changing		Enabling SAC when DND is active	63
display language	.100	encrypted call	
click to dial		Enhanced Call Forwarding, rules	
making a call using	37	Error tones	
conference calls		turning on and off	97
adding a person on hold	49	Exchange contacts	
details		Excluding others from bridging	
dropping a participant	<u>50</u>	exclusion	
putting a call on hold		extension	 -
. •			77
setting up	<u>40</u>	blocking display	
Conference calls	40	unblocking display	<u>//</u>
about			
conference, add participant using no hold conference	<u>75</u>	F	
configuring			
long term acoustic exposure protection	<u>74</u>	failover	104
contact		Favorites	
adding	<u>51</u>	setting up	93
contacts		feature	
adding from call history	60	Hunt Group Busy	84
calling a person	36	Feature name	<u></u>
deleting		Feature reference	67
editing			<u>01</u>
LDAP Directory <u>56</u>		features	20
searching		priority call	
selecting		Features	
Contacts	<u>54</u>	accessing	<u>69</u>
	E4	forwarding	
about	<u>5 I</u>	a call	
Continuous Scrolling	00	turning off	<u>86</u>
turning on and off		Forwarding	
coverage	<u>85</u>	a call	86
		Forwarding calls	
ח		about	84
deactivating LNCC	80		
deskphone display icons		G	
about			
Dial intercom call		Go To Phone Screen on Calling	
	<u>၁</u>	setting	<u>90</u>
Dialing Options	02	Go To Phone Screen on ringing	
setting		setting	
Directed call pickup <u>3(</u>	<u>J</u> , <u>31</u>	group page	<u>39</u>
Display		Guest login	<u>18</u>
adjusting brightness			
adjusting contrast	<u>94</u>	Ц	
display language		Н	
changing	. <u>100</u>	UAC bearing aid competibility	101
document changes	<u>11</u>	HAC, hearing aid compatibility	
-		Handset AGC	
-		Headset AGC	<u>100</u>
E		headset profile	
T 164	20	setting	<u>100</u>
E.164	<u>38</u>	History	
EC500		clearing all call entries	<u>61</u>
Extend Call		of calls	
edit dialing	<u>36</u>	removing a call from	
Edit dialing	92	•	

Index

History (continued)		Main Menu <i>(continued)</i>	
turning off	<u>61</u>	options	<u>89</u>
viewing call details	<u>60</u>	making a call	<u>32</u>
viewing for calls	<u>60</u>	contacts list	<u>36</u>
hold		dial plan	<u>34</u>
putting a conference call on hold	<u>49</u>	precedence call	<u>33</u> , <u>34</u>
Hold		prefix digits	<u>34</u>
putting a call on hold	<u>41</u>	priority	<u>32</u>
hotline	<u>82</u>	Priority softkey	<u>33</u>
Hunt Group Busy		malicious call tracing	
using	<u>84</u>	manual presence state icons	<u>23</u>
		messages	
1		about	<u>27</u>
1		Microsoft Exchange integration	<u>101, 102</u>
icons	23	MLPP icons	<u>24</u>
manual presence state		About icons	<u>24</u>
icons in deskphone display	<u>20</u>	monitoring other extensions	<mark>73</mark>
about	19	multiple device access	
ignoring calls		handling calls	<u>47</u>
incoming calls	<u>23</u>	handling conference	
answering	28	mute alert	
forwarding		setting	78
sending to coverage		muting calls	41
Incoming calls	<u>00</u>	•	
directing to multiple telephones	80	N	
Incoming Calls	<u>00</u>	IN	
forwarding when busy or no answer	86	name, number	92
incoming precedence calls	<u>00</u>	navigation arrows	<u>52</u>
answering	20	right and left	10
Intercom group		up and down	
intercom group	<u>59</u>	navigation tips	
		Network information	<u></u>
K		viewing	26
	00	no hold conference	
key repeat delay	<u>98</u>	no hold conference, add participant	
I			
_		0	
Large text, Text size	<u>94</u>	OAuth authentication	100
LDAP Directory		On-hook dialing	
contacts		Options & Settings	
overview	<u>56</u>	call history	
listening	0.4	call pickup alert settings	
voicemail	<u>81</u>	configuring visual alerts	
LNCC	70	go to phone screen on calling	
activating		go to phone screen on ringing	
deactivating		mute alert settings	
Locking your phone		phone screen on calling	
Logging in to your phone extension		redial settings	
Logging in to your telephone		Setting Autodial numbers	
Logging out of your telephone extension		setting call pickup ring tone	
Login as a guest user		Setting dialing options	
Logo	<u>97</u>	Setting draining options	
		setting ring tone	
M		Setting speed dial numbers	
		outgoing calls	<u>92</u>
Main Menu		blocking extension display	77
		Properties extension dishias	<u>//</u> /

outgoing calls <i>(continued)</i>	setting headset profile	<u>100</u>
edit dialing a number	36 setting, editing, disabling .	<u>86</u>
making a call	32 settings	
making a call on a bridged line	40 screen width	<u>99</u>
redialing a number	<u>35</u> signaling	<u>99</u>
unblocking extension display		
overview		<u>10</u> 0
Hunt Group Busy		
•		<u>3</u>
D	Speed Dialing	
P		92
naga	ounnort .	<u>10</u> 9
page	<u>0 1</u>	<u></u>
Parking calls	_	
Phone Screen on Calling	T	
setting		
Phone Settings		
Picking up calls3		<u>4(</u>
precedence call		<u>46</u>
dial plan		<u>30</u> , <u>8</u> 2
making a call <u>34</u>		monitored phone46
prefix digits <u>34</u>	telephone stand	
making a call	33 about	<u>16</u>
Priority softkey	deskphone stand	<u>16</u>
making a call <u>33</u>	Time format	<u>100</u>
presence	<u>62</u> toggling	<u>92</u>
presence icons	23 tracing calls	<u>48</u> , <u>79</u>
problems with the phone	<u>04</u>	
protection	-, U	
long term acoustic exposure	<u>74</u>	
•		47
D		3
R	using	<u></u>
recents		84
calling from	-	<u></u>
recording a call	40	
redial	V	
redial options setting	04	<u>108</u>
	oo view contact procence ca	tus <u>62</u>
related documentation	visiting user, logging in as	<u>1</u> 7
retrieving a voice message	Viodai / lioi to	
Ring tone	configuring	<u>9</u>
selecting		
setting for call pickup	96 W	
	VV	
S	Whisper page	3
		83
screen width		<u></u>
Search		
database	53	
extended		
secure		
calls	80	
selecting ring tone		
SENDALL		
setting	<u></u>	
headset profile	00	
110auset profite	<u>00</u>	