

### Entering your mailbox

1. Enter MMS access number

No: \_\_\_\_\_

2. Press **#**
3. Enter your mailbox number
4. Enter your password

### Listening to messages



- |                 |          |
|-----------------|----------|
| Voice messages  | <b>1</b> |
| E-mail messages | <b>2</b> |
| Fax messages    | <b>3</b> |

### While listening to a message

- |             |          |                |            |
|-------------|----------|----------------|------------|
| Rewind      | <b>1</b> | Quieter        | <b>7</b>   |
| Pause       | <b>2</b> | Reset Volume/  | <b>8</b>   |
| Forward     | <b>3</b> | Next Language* |            |
| Slower      | <b>4</b> | Louder         | <b>9</b>   |
| Envelope    | <b>5</b> | Message start  | <b>1-1</b> |
| Faster      | <b>6</b> | Message end    | <b>3-3</b> |
| Reset speed | <b>0</b> | Skip           | <b>#</b>   |



\*If your system supports multiple languages

### After listening to a message

- |         |          |        |          |
|---------|----------|--------|----------|
| Print   | <b>2</b> | Replay | <b>4</b> |
| Forward | <b>6</b> | Erase  | <b>7</b> |
| Reply   | <b>8</b> | Skip   | <b>#</b> |

## Sending a voice message

2

1. Record message
  2. After recording
  3. Enter address, followed by **#**  
(To spell name, press **#** )
  4. Enter another address?
  5. After addressing
  6. Send
-  To cancel recording
-  To mark as urgent

**#**

**#** **#**

**#**

**\***

**2**

## Changing your settings

4

Greetings **1**

Password **9**

## Shortcuts

Cancel/Return to Menu/Exit

**\***

Finish/Skip

**#**

Bypass system greeting

**#**