



**Avaya Call Management System  
Supervisor  
Release 11  
Reports**

585-210-708  
Comcode 700206550  
Issue 1  
May 2002  
Compas ID 90734

## Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

## Preventing Toll Fraud

"Toll fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or working on your company's behalf). Be aware that there may be a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

## Avaya Fraud Intervention

If you *suspect that you are being victimized* by toll fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1 800 643 2353 for the United States and Canada. For additional support telephone numbers, see the Avaya web site:

<http://www.avaya.com>

Click on **Support**, then click on **Escalation Lists US and International**. This web site includes telephone numbers for escalation within the United States. For escalation telephone numbers outside the United States, click on **Global Escalation List**.

## Providing Telecommunications Security

Telecommunications security (of voice, data, and/or video communications) is the prevention of any type of intrusion to (that is, either unauthorized or malicious access to or use of) your company's telecommunications equipment by some party.

Your company's "telecommunications equipment" includes both this Avaya product and any other voice/data/video equipment that could be accessed via this Avaya product (that is, "networked equipment").

An "outside party" is anyone who is not a corporate employee, agent, subcontractor, or working on your company's behalf. Whereas, a "malicious party" is anyone (including someone who may be otherwise authorized) who accesses your telecommunications equipment with either malicious or mischievous intent.

Such intrusions may be either to/through synchronous (time-multiplexed and/or circuit-based) or asynchronous (character-, message-, or packet-based) equipment or interfaces for reasons of:

- Utilization (of capabilities special to the accessed equipment)
- Theft (such as, of intellectual property, financial assets, or toll-facility access)
- Eavesdropping (privacy invasions to humans)
- Mischief (troubling, but apparently innocuous, tampering)
- Harm (such as harmful tampering, data loss or alteration, regardless of motive or intent)

Be aware that there may be a risk of unauthorized intrusions associated with your system and/or its networked equipment. Also realize that, if such an intrusion should occur, it could result in a variety of losses to your company (including but not limited to, human/data privacy, intellectual property, material assets, financial resources, labor costs, and/or legal costs).

## Your Responsibility for Your Company's Telecommunications Security

The final responsibility for securing both this system and its networked equipment rests with you - an Avaya customer's system administrator, your telecommunications peers, and your managers. Base the fulfillment of your responsibility on acquired knowledge and resources from a variety of sources including but not limited to:

- Installation documents
- System administration documents
- Security documents
- Hardware-/software-based security tools
- Shared information between you and your peers
- Telecommunications security experts

To prevent intrusions to your telecommunications equipment, you and your peers should carefully program and configure:

- your Avaya-provided telecommunications systems and their interfaces
- your Avaya-provided software applications, as well as their underlying hardware/software platforms and interfaces
- any other equipment networked to your Avaya products.

## Trademarks

*INFORMIX* is a registered trademark of *INFORMIX Software, Inc.*

*Microsoft, MS, Windows, and NT* are registered trademarks of *Microsoft Corp.*

*MultiVantage* is a trademark of *Avaya, Inc.*

## Ordering Information

**Call:** Avaya Publications Center  
Voice +1 800 457 1235  
Fax +1 800 457 1764  
International Voice +1 410 568 3680  
International Fax +1 410 891 0207

**Write:** Globalware Solutions  
200 Ward Hill Avenue  
Haverhill, MA 01835 USA  
Attention: Avaya Account Manager

**Email:** [totalware@gwsmail.com](mailto:totalware@gwsmail.com)

**Order:** Document No. 585-210-708, Issue 1  
May 2002

You can be placed on a Standing Order list for this and other documents you may need. Standing Order will enable you to automatically receive updated versions of individual documents or document sets, billed to account information that you provide. For more information on Standing Orders, or to be put on a list to receive future issues of this document, please contact the Avaya Publications Center.

## Avaya National Customer Care Center

Avaya provides a telephone number for you to use to report problems or to ask questions about your contact center. The support telephone number is 1-800-242-2121.

## Avaya Web Page

For information about Avaya products and service, go to [www.avaya.com](http://www.avaya.com). For Avaya product documentation, go to [www.avayadocs.com](http://www.avayadocs.com).

## Comments

To comment on this document, return the comment card at the end of the document.

## Acknowledgment

This document was written by the CRM Development group.

# Avaya CMS Supervisor

## Release 11

### Reports

## Contents

### About this information product

Purpose . . . . .	19
Reissue reason . . . . .	19
Safety labels . . . . .	19
Intended audience . . . . .	19
How to use this information product . . . . .	19
Related documentation . . . . .	20
Report examples . . . . .	20

### Introduction

About CMS and Supervisor . . . . .	21
Available reports . . . . .	22
Interactions with switch features . . . . .	25
Location IDs on Supervisor and the switch . . . . .	25
How CMS tracks ACD data . . . . .	25
Terminology . . . . .	26
Prerequisite system administration . . . . .	28
Dictionary . . . . .	28
Call center administration . . . . .	28
User permissions . . . . .	28
System setup . . . . .	28
Relationships to other subsystems . . . . .	29
Timetable . . . . .	29
CMS . . . . .	29
Dictionary . . . . .	29
Exceptions . . . . .	29
Scripting . . . . .	30
User permissions . . . . .	30
Agent and trunk states . . . . .	31
Agent states . . . . .	31
Trunk states . . . . .	33
Refresh rate for real-time and integrated reports . . . . .	34
Fastest allowable refresh rate . . . . .	34
Default refresh rate . . . . .	34
Shortest refresh rate . . . . .	34

## Using reports

How this chapter is organized . . . . .	35
How to access reports . . . . .	35
Report Designer and Scripting features . . . . .	36
Report Designer . . . . .	36
Scripting . . . . .	36
Selecting and running reports . . . . .	37
About selecting historical report run dates . . . . .	37
Different ways to select dates . . . . .	37
About the browse windows . . . . .	37
Use the Browse Date window . . . . .	38
Navigation path . . . . .	38
Procedure . . . . .	38
Use Browse Dates window . . . . .	39
Navigation path . . . . .	39
Procedure . . . . .	39
Use the Browse Month window . . . . .	40
Navigation path . . . . .	40
Procedure . . . . .	40
Use the Browse Months window . . . . .	41
Navigation path . . . . .	41
Procedure . . . . .	41
About selecting historical report run times . . . . .	42
Selecting times . . . . .	42
Use the Browse Time window . . . . .	43
Navigation path . . . . .	43
Procedure . . . . .	43
Exiting and restarting reports . . . . .	44
How to exit a report . . . . .	44
How to restart a report . . . . .	44
Report menu bar . . . . .	45
Report menu . . . . .	45
Report menu . . . . .	45
Menu item functions . . . . .	46
Save as HTML . . . . .	48
Browsers . . . . .	48
Selecting Save as HTML location . . . . .	48
Using Save as HTML . . . . .	49
Output files . . . . .	50
Templates . . . . .	50
Not using templates . . . . .	50
Using existing templates . . . . .	51
Save as HTML template tags . . . . .	51
Fonts . . . . .	51
Edit . . . . .	52
Edit menu . . . . .	52
Menu item functions . . . . .	53

Format . . . . .	54
Format menu . . . . .	54
Menu item functions . . . . .	54
Tools . . . . .	55
Tools menu . . . . .	55
Menu item functions . . . . .	55
Options . . . . .	56
Options menu . . . . .	56
Menu item functions . . . . .	56
Editing and viewing reports . . . . .	57
Report layouts . . . . .	57
Report types . . . . .	57
What constitutes a report? . . . . .	57
Tables . . . . .	57
Charts . . . . .	59
Formatting table reports . . . . .	60
Accessing the Table Format Options window . . . . .	60
General tab . . . . .	60
General tab parameters . . . . .	61
Sort tab . . . . .	61
Using the Sort tab . . . . .	62
About the Chart Format Options window . . . . .	63
About charts . . . . .	63
Accessing the Chart Format Options window . . . . .	63
How your changes affect others . . . . .	63
Related topic . . . . .	63
General tab window and fields . . . . .	64
Navigation path . . . . .	64
General tab example . . . . .	64
General tab fields . . . . .	65
3D Effects tab window and fields . . . . .	66
Related topic . . . . .	66
Navigation path . . . . .	66
3D Effects tab example . . . . .	66
3D tab fields . . . . .	67
Axis tab window and fields . . . . .	68
Navigation path . . . . .	68
Axis tab example . . . . .	68
Axis tab fields . . . . .	68
Type tab window and fields . . . . .	69
Navigation path . . . . .	69
Type tab example . . . . .	69
Type tab fields . . . . .	70
Title tab window and fields . . . . .	71
Navigation path . . . . .	71
Title tab example . . . . .	71
Title tab fields . . . . .	72

Legend tab window and fields	73
Navigation path	73
Legend tab example	73
Legend tab fields	74
Data Labels tab window and fields	75
Navigation path	75
Data Labels tab example	75
Data Labels tab fields	76
Minimizing report output windows	77
Icons associated with minimized report windows	77
Icons associated with minimized report thresholds	78
Right mouse button pop-up menus	79
Rotating a 3D chart	81
Exporting report data	82
Defaults	82
Report format	82
How to export a data report	82
Copying chart reports	84
Resizing report windows and columns	85
Resizing a window	85
Standard report window	85
Graphical report window	85
Changing a column width	85
Setting report threshold highlights	86
Reports	86
Entities	86
Turn highlights on and off	86
Example	87
Set report threshold highlights	88
Before you start	88
Threshold Settings example	88
Procedure	89
Tips for setting report threshold highlights	90
Available agent threshold settings	92
Available Split/Skill threshold settings	95
About split/skill threshold settings	95
Split/Skill table	96
Available VDN threshold settings	98
Report options	100
Options General tab	101
Options General tab example	101
Options	102
Options Report Colors tab	103
Options Report Colors tab example	103
Scheme	104
Options Threshold Colors tab	105
Options Threshold Colors tab example	105
Procedure	105
Options Name Format tab	106
Options Name Format tab example	106
Procedure	107

Create a new report color scheme . . . . .	108
Report Colors tab example . . . . .	108
Procedure . . . . .	109
Create a new threshold color scheme . . . . .	110
Threshold Colors tab example. . . . .	110
Procedure . . . . .	111
Create a new name format . . . . .	112

## Real-time reports

Organization of real-time reports . . . . .	113
About real-time reports . . . . .	114
Introduction . . . . .	114
Presentation . . . . .	114
Diagram of real-time reporting system . . . . .	115
Agent reports. . . . .	116
General information about Agent reports . . . . .	116
What an Agent report contains . . . . .	116
Organization of Agent reports . . . . .	116
Agent report selector example. . . . .	117
Agent report selector windows and input fields . . . . .	118
Agent report input fields. . . . .	118
Input fields . . . . .	119
Agent Group report . . . . .	120
Things to know about this report. . . . .	120
Agent Group report example . . . . .	120
Agent Group report description . . . . .	121
Agent report . . . . .	123
Things to know about this report. . . . .	123
Agent report example. . . . .	123
Agent report description . . . . .	124
Agent Information report. . . . .	126
Things to know about this report. . . . .	126
Agent Information report example . . . . .	127
Agent Information report description . . . . .	127
Graphical Information report . . . . .	131
Things to know about this report. . . . .	131
Graphical Information report example . . . . .	132
Graphical Information report description . . . . .	132
Other reports. . . . .	137
General information about other reports . . . . .	137
What other reports contain . . . . .	137
Organization of other reports . . . . .	137
Other report selector window . . . . .	138
Event Count Summary report . . . . .	139
Things to know about this report. . . . .	139
Relationships to other subsystems . . . . .	139
Event Count Summary input window . . . . .	139
Event Count Summary input fields. . . . .	140
Event Count Summary report example. . . . .	140

Event Count Summary report description . . . . .	141
Multi-ACD report . . . . .	142
Things to know about this report . . . . .	142
Multi-ACD report input window . . . . .	143
Multi-ACD report input fields . . . . .	144
Multi-ACD report example . . . . .	145
Multi-ACD report description . . . . .	145
Multi-ACD Top Agent report . . . . .	150
Things to know about this report . . . . .	150
Multi-ACD Top Agent report input window . . . . .	151
Multi-ACD Top Agent report input fields . . . . .	152
Multi-ACD Top Agent report example . . . . .	153
Multi-ACD Top Agent report description . . . . .	153
Queue/Agent reports . . . . .	157
General information about Queue/Agent reports . . . . .	157
What Queue/Agent reports contain . . . . .	157
Organization of Queue/Agent reports . . . . .	157
Queue/Agent report selector window and input fields . . . . .	158
Queue/Agent report input fields . . . . .	158
Queue/Top Agent Status report . . . . .	159
Things to know about this report . . . . .	159
Queue/Top Agent Status report example . . . . .	160
Queue/Top Agent Status report description . . . . .	160
Queue/Agent Status report . . . . .	165
Things to know about this report . . . . .	165
Queue/Agent Status report example . . . . .	166
Queue/Agent Status report description . . . . .	166
Queue/Agent Summary report . . . . .	172
Things to know about this report . . . . .	172
Queue/Agent Summary report example . . . . .	172
Queue/Agent Summary report description . . . . .	173
Split/Skill reports . . . . .	175
General information about Split/Skill reports . . . . .	175
Organization of Split/Skill reports . . . . .	175
Split/Skill report selector window and input fields . . . . .	177
Split/Skill report selector window . . . . .	177
Split/skill report input fields . . . . .	177
Split/skill report input fields . . . . .	179
Split/Skill Call Profile report . . . . .	180
Things to know about this report . . . . .	180
Split/Skill Call Profile report example . . . . .	180
Split/Skill Call Profile report description . . . . .	181
Real-time Graphical Active Agents report . . . . .	184
Things to know about this report . . . . .	184
Graphical Active Agents report example . . . . .	185
Graphical Active Agents report description . . . . .	185
Real-time Graphical Allocated Agents report . . . . .	188
Things to know about this report . . . . .	188
Graphical Allocated Agents report example . . . . .	189
Graphical Allocated Agents report description . . . . .	189



Split/Skill Graphical AUX Agents report . . . . .	192
Things to know about this report. . . . .	192
Report formats . . . . .	192
Split/Skill Graphical AUX Agents report example . . . . .	193
Split/Skill Graphical AUX Agents report description . . . . .	194
Split/Skill Graphical AUX Top Agents report. . . . .	196
Things to know about this report. . . . .	196
Split/Skill Graphical AUX Top Agents report example . . . . .	197
Split/Skill Graphical AUX Top Agents report description . . . . .	198
Split/Skill Graphical Call Profile report . . . . .	199
Things to know about this report. . . . .	199
Split/Skill Graphical Call Profile report example. . . . .	200
Split/Skill Graphical Call Profile report description . . . . .	201
Split/Skill Graphical EWT report . . . . .	203
Overview. . . . .	203
Things to know about this report. . . . .	203
Split/Skill Graphical EWT report example . . . . .	204
Split/Skill Graphical EWT report description . . . . .	205
Split/Skill Graphical Queue report . . . . .	207
Things to know about this report. . . . .	207
Split/Skill Graphical Queue report example. . . . .	208
Split/Skill Graphical Queue report description . . . . .	209
Split/Skill Graphical Skill Overload report . . . . .	210
Things to know about this report. . . . .	210
Split/Skill Graphical Skill Overload report example . . . . .	211
Split/Skill Graphical Skill Overload report description . . . . .	212
Split/Skill Graphical Staffing Profile report. . . . .	213
Things to know about this report. . . . .	213
Split/Skill Graphical Staffing Profile report example . . . . .	214
Split/Skill Graphical Staffing Profile report description . . . . .	215
Split/Skill Graphical Status report. . . . .	218
Things to know about this report. . . . .	218
Split/Skill Graphical Status report example . . . . .	219
Split/Skill Graphical Status report description . . . . .	220
Split/Skill Graphical Top Skill Status report . . . . .	223
Things to know about this report. . . . .	223
Split/Skill Graphical Top Skill Status report example . . . . .	224
Split/Skill Graphical Top Skill Status report description . . . . .	225
Reserve1 AUX Agents report . . . . .	228
Things to know about this report. . . . .	228
Reserve1 AUX Agents report description . . . . .	229
Reserve2 AUX Agents report . . . . .	232
Things to know about this report. . . . .	232
Reserve2 AUX Agents report description . . . . .	233
Skill AUX report. . . . .	236
Things to know about this report. . . . .	236
Skill AUX report example . . . . .	236
Skill AUX report description . . . . .	237

Skill Status report . . . . .	238
Things to know about this reports . . . . .	238
Skill Status report example . . . . .	240
Skill Status report description . . . . .	240
Skill Top Agent report . . . . .	246
Things to know about this report . . . . .	246
Skill Top Agent report example . . . . .	247
Skill Top Agent report description . . . . .	248
Split Status report . . . . .	252
Things to know about this report . . . . .	252
Split Status report example . . . . .	254
Split Status report description . . . . .	254
Split/Skill report . . . . .	257
Things to know about this report . . . . .	257
Split/Skill report example . . . . .	258
Split/Skill report description . . . . .	258
Split/Skill by Location report . . . . .	261
Overview . . . . .	261
Things to know about this report . . . . .	261
Split/Skill by Location report example . . . . .	262
Split/Skill by Location report description . . . . .	263
Split/Skill Top Agent Status report . . . . .	264
Things to know about this report . . . . .	264
Split/Skill Top Agent Status report example . . . . .	264
Split/Skill Top Agent Status report description . . . . .	265
Split/Skill Agent Status by Location report . . . . .	269
Things to know about this report . . . . .	269
Split/Skill Agent Status by Location report example . . . . .	270
Split/Skill Agent Status by Location report description . . . . .	271
Trunk Group report . . . . .	274
Trunk Group report selector window and input fields . . . . .	274
Trunk Group report selector window . . . . .	274
Trunk Group report input fields . . . . .	275
Trunk Group report . . . . .	276
Things to know about this report . . . . .	276
Trunk Group report example . . . . .	276
Trunk Group report description . . . . .	277
VDN reports . . . . .	278
General information about VDN reports . . . . .	278
Organization of VDN reports . . . . .	278
VDN report selector window and input fields . . . . .	279
VDN report selector window . . . . .	279
VDN report input fields . . . . .	280
VDN Call Profile report . . . . .	281
Things to know about this report . . . . .	281
Prerequisite System Administration . . . . .	281
VDN Call Profile report example . . . . .	282
VDN Call Profile report description . . . . .	282

VDN Graphical Call Profile report . . . . .	285
Things to know about this report. . . . .	285
VDN Graphical Call Profile report example. . . . .	286
VDN Graphical Call Profile report description . . . . .	287
VDN Skill Preference report . . . . .	289
Things to know about this report. . . . .	289
VDN Skill Preference report example . . . . .	289
VDN Skill Preference report description . . . . .	290
VDN report . . . . .	292
Things to know about this report. . . . .	292
VDN report example . . . . .	292
VDN report description . . . . .	293
Vector report . . . . .	295
Vector selector window and input fields. . . . .	295
Overview. . . . .	295
Vector report selector window . . . . .	295
Vector report input fields . . . . .	296
Vector report . . . . .	297
Things to know about this report. . . . .	297
Vector report example . . . . .	297
Vector report description . . . . .	298
Drill-down reports. . . . .	300
General information about drill-down reports . . . . .	300
Drill-down report access . . . . .	300
Location ID as a report field . . . . .	300
Finding drill-down information . . . . .	300
Drill-down report types . . . . .	301
Modifying drill-down reports . . . . .	301
Drill-Down Top Agent Work State report . . . . .	302
Report contents . . . . .	302
Report use . . . . .	302
Database items. . . . .	302
Drill-down Top Agent Work State report example . . . . .	303
Drill-down Top Agent Work State report description . . . . .	304
Drill-Down Work State report. . . . .	306
Report contents . . . . .	306
Report use . . . . .	306
Database Items . . . . .	307
Drill-Down Work State report example . . . . .	307
Drill-Down Work State report description . . . . .	308

## Historical reports

Organization of historical reports . . . . .	311
About historical reports . . . . .	312
Introduction . . . . .	312
Presentation . . . . .	312
Diagram of historical reporting system . . . . .	313
Presentation of report information . . . . .	314
How long does CMS store data? . . . . .	314

Agent reports	315
General information about agent reports	315
What an Agent report contains	315
Organization of Agent reports	315
Agent report selector window	316
Agent report input fields	317
Agent report input fields	317
Agent AUX report	320
Things to know about this report	320
Agent AUX report example	320
Agent AUX report description	321
Agent Attendance report	322
Things to know about this report	322
Agent Attendance report example	322
Agent Attendance report description	323
Agent Event Count report	325
Things to know about this report	325
Agent Event Count report example	325
Agent Event Count report description	326
Agent Graphical Time Spent Daily report	327
Things to know about this report	327
Agent Graphical Time Spent Daily report example	328
Agent Graphical Time Spent Daily report description	328
Agent Group Attendance report	331
Things to know about this report	331
Agent Group Attendance report example	331
Agent Group Attendance report description	332
Agent Group AUX report	334
Things to know about this report	334
Agent Group AUX report example	334
Agent Group AUX report description	335
Agent Group Summary report	336
Things to know about this report	336
Agent Group Summary report example	336
Agent Group Summary report description	337
Agent Inbound/Outbound report	341
Things to know about this report	341
Agent Inbound/Outbound report example	341
Agent Inbound/Outbound report description	342
Agent Login/Logout (Skill) report	345
Things to know about this report	345
Agent Login/Logout (Skill) report example	346
Agent Login/Logout (Skill) report description	346
Agent Login/Logout (Split) report	348
Things to know about this report	348
Agent Login/Logout (Split) report example	348
Agent Login/Logout (Split) report description	349

Agent Split/Skill report . . . . .	350
Things to know about this report. . . . .	350
Agent Split/Skill report example . . . . .	350
Agent Split/Skill report description . . . . .	351
Agent Summary report . . . . .	354
Overview. . . . .	354
Things to know about this report. . . . .	354
Agent Summary report example . . . . .	354
Agent Summary report description. . . . .	355
Agent Trace by Location report . . . . .	359
Things to know about this report. . . . .	359
Agent Trace by Location report example . . . . .	359
Agent Trace by Location report description. . . . .	360
Other reports. . . . .	363
General information about other reports . . . . .	363
What an other report contains . . . . .	363
Organization of other reports . . . . .	363
Other report selector window . . . . .	364
Call Records report . . . . .	365
Things to know about this report. . . . .	365
Call Records report input fields . . . . .	366
Call Records report example . . . . .	367
Call Records report description . . . . .	367
Call Work Code report. . . . .	372
Things to know about this report. . . . .	372
Prerequisite system administration . . . . .	372
Call Work Code report input fields . . . . .	373
Call Work Code report example . . . . .	374
Call Work Code report description . . . . .	375
Split/Skill reports . . . . .	376
General information about Split/Skill reports . . . . .	376
What a Split/Skill report contains . . . . .	376
Organization of Split/Skill reports . . . . .	376
Split/Skill report selector window . . . . .	377
Split/Skill report selector window and input fields . . . . .	378
Split/Skill report input fields . . . . .	378
Split/Skill Call Profile report . . . . .	381
Things to know about this report. . . . .	381
Split/Skill Call Profile report example . . . . .	381
Split/Skill Call Profile report description . . . . .	382
Split/Skill Graphical ASA report . . . . .	384
Split/Skill Graphical ASA report example. . . . .	385
Split/Skill Graphical ASA report input fields. . . . .	386
Split/Skill Graphical ASA report description . . . . .	387
Split/Skill Graphical Average Positions Staffed report . . . . .	388
Things to know about this report. . . . .	388
Split/Skill Graphical Average Positions Staffed report example . . . . .	389
Split/Skill Graphical Average Positions Staffed report description . . . . .	389

Split/Skill Graphical ASA Daily report . . . . .	390
Things to know about this report . . . . .	390
Split/Skill Graphical ASA Daily report example . . . . .	391
Split/Skill Graphical ASA report description . . . . .	392
Split/Skill Graphical Call Profile report . . . . .	393
Things to know about this report . . . . .	393
Split/Skill Graphical Call Profile report example . . . . .	394
Split/Skill Graphical Call Profile report description . . . . .	394
Split/Skill Graphical Multi-ACD Service Level report . . . . .	397
Things to know about this report . . . . .	397
Split/Skill Graphical Multi-ACD Service Level report input window . . . . .	398
Split/Skill Graphical Multi-ACD Service Level report input fields . . . . .	399
Split/Skill Graphical Multi-ACD Service Level report example . . . . .	400
Split/Skill Graphical Multi-ACD Service Level report description . . . . .	401
Split/Skill Graphical Service Level report . . . . .	402
Things to know about this report . . . . .	402
Split/Skill Graphical Service Level report example . . . . .	403
Split/Skill Graphical Service Level report description . . . . .	404
Split/Skill Graphical Skill Overload report . . . . .	405
Things to know about this report . . . . .	405
Split/Skill Graphical Skill Overload report example . . . . .	406
Split/Skill Graphical Skill Overload report description . . . . .	407
Split/Skill Graphical Time Spent report . . . . .	408
Things to know about this report . . . . .	408
Split/Skill Graphical Time Spent report example . . . . .	409
Split/Skill Graphical Skill Time Spent report description . . . . .	409
Split/Skill Outbound report . . . . .	411
Things to know about this report . . . . .	411
Split/Skill Outbound report example . . . . .	412
Split/Skill Outbound report description . . . . .	412
Split/Skill report . . . . .	414
Things to know about this report . . . . .	414
Split/Skill report example . . . . .	414
Split/Skill report description . . . . .	415
Split/Skill by Location report . . . . .	420
Things to know about this report . . . . .	420
Split/Skill by Location report example . . . . .	420
Split/Skill by Location report description . . . . .	421
Split/Skill Summary report . . . . .	426
Things to know about this report . . . . .	426
Split/Skill Summary report example . . . . .	427
Split/Skill Summary report description . . . . .	427
System reports . . . . .	432
General information about system reports . . . . .	432
What a system reports contain . . . . .	432
Organization of system reports . . . . .	432
System report selector window . . . . .	433
System Graphical Maximum Delay report . . . . .	434
Things to know about this report . . . . .	434
Graphical Maximum Delay report input window . . . . .	434

System report input fields . . . . .	435
System Graphical Maximum Delay report example . . . . .	436
System Graphical Maximum Delay report description . . . . .	437
System Multi-ACD by Split/Skill report . . . . .	438
Things to know about this report. . . . .	438
Multi-ACD by Split/Skill report input window . . . . .	439
Multi-ACD by Split/Skill report input fields . . . . .	440
System Multi-ACD by Split/Skill report example . . . . .	441
System Multi-ACD by Split/Skill report description . . . . .	441
System Multi-ACD report . . . . .	444
Things to know about this report. . . . .	444
Multi-ACD report input window . . . . .	444
Multi-ACD report input fields . . . . .	445
System Multi-ACD report example . . . . .	446
System Multi-ACD report description . . . . .	447
System report. . . . .	449
Things to know about this report. . . . .	449
System report input window . . . . .	449
System report input fields . . . . .	450
System report example . . . . .	451
System report description . . . . .	451
Trunk/Trunk Group reports . . . . .	456
General information about Trunk/Trunk Group reports . . . . .	456
What a Trunk/Trunk Group report contains . . . . .	456
Organization of Trunk/Trunk Group reports . . . . .	456
Trunk/Trunk Group report selector window . . . . .	457
Trunk/Trunk Group report input fields . . . . .	458
Trunk Group report input fields . . . . .	458
Trunk/Trunk Group Busy Hour report . . . . .	461
Things to know about this report. . . . .	461
Trunk/Trunk Group Busy Hour report example . . . . .	462
Trunk/Trunk Group Busy Hour report description . . . . .	462
Trunk report . . . . .	464
Things to know about this report. . . . .	464
Trunk report example . . . . .	465
Trunk report description . . . . .	465
Trunk Group report . . . . .	467
Things to know about this report. . . . .	467
Trunk Group report example . . . . .	468
Trunk Group report description . . . . .	468
Trunk Group Summary report . . . . .	470
Things to know about this report. . . . .	470
Trunk Group Summary report example . . . . .	471
Trunk Group Summary report description . . . . .	471
VDN reports . . . . .	474
General information about VDN reports . . . . .	474
What a VDN report contains . . . . .	474
Organization of VDN reports . . . . .	474
VDN report selector window . . . . .	475

VDN report input fields . . . . .	476
VDN report input fields . . . . .	476
VDN Busy Hour report . . . . .	477
Things to know about this report . . . . .	477
VDN Busy Hour report example . . . . .	477
VDN Busy Hour report description . . . . .	478
VDN Call Profile report . . . . .	480
Things to know about this report . . . . .	480
Prerequisite system administration . . . . .	480
VDN Call Profile report example . . . . .	481
VDN Call Profile report description . . . . .	482
VDN Graphical Busy/Abandon/Disconnect Comparison report . . . . .	484
Things to know about this report . . . . .	484
VDN Graphical Busy/Abandon/Disconnect Comparison report example . . . . .	485
VDN Graphical Call Profile report description . . . . .	486
VDN Graphical Call Profile report . . . . .	487
Things to know about this report . . . . .	487
VDN Graphical Call Profile report example . . . . .	488
VDN Graphical Call Profile report description . . . . .	489
VDN Graphical Service Level report . . . . .	491
Things to know about this report . . . . .	491
VDN Graphical Service Level report example . . . . .	492
VDN Graphical Service Level report description . . . . .	493
VDN Multi-ACD Flow report . . . . .	494
Things to know about this report . . . . .	494
VDN Multi-ACD Flow report example . . . . .	495
VDN Multi-ACD Flow report description . . . . .	495
VDN report . . . . .	498
Things to know about this report . . . . .	498
VDN report example . . . . .	498
VDN report description . . . . .	499
VDN Skill Preference report . . . . .	503
Things to know about this report . . . . .	503
VDN Skill Preference report example . . . . .	503
VDN Skill Preference report description . . . . .	504
Vector report . . . . .	507
General information about the Vector report . . . . .	507
Organization of the Vector report . . . . .	507
Vector report selector window . . . . .	507
Vector report input fields . . . . .	508
Vector report input fields . . . . .	508
Vector report . . . . .	510
Things to know about this report . . . . .	510
Vector report example . . . . .	510
Vector report description . . . . .	511



## Integrated reports

How this chapter is organized . . . . .	515
About integrated reports . . . . .	516
Definition of integrated reports . . . . .	516
Integrated report data . . . . .	516
Diagram of integrated reporting system . . . . .	516
Presentation of report information . . . . .	517
Agent reports. . . . .	518
General information about agent reports . . . . .	518
Organization of agent reports . . . . .	518
Agent report selector window and input fields . . . . .	519
Agent report selector window . . . . .	519
Agent report input fields. . . . .	520
Agent Graphical Information report. . . . .	521
Ways to access this report . . . . .	521
Things to know about this report. . . . .	521
Switch information . . . . .	522
Agent Graphical Information report example . . . . .	522
Agent Graphical Information report description . . . . .	523
Agent Information report. . . . .	528
Things to know about this report. . . . .	528
Agent Information report example . . . . .	529
Agent Information report description . . . . .	529
Split/Skill reports . . . . .	533
General information about Split/Skill reports . . . . .	533
Organization of Split/Skill reports . . . . .	533
Split/Skill reports selector window and input fields. . . . .	534
Split/Skill reports selector window . . . . .	534
Split/Skill report input fields . . . . .	535
Split/Skill Comparison report . . . . .	536
Things to know about this report. . . . .	536
Split/Skill Comparison report example . . . . .	536
Split/Skill Comparison report description . . . . .	537
Graphical Skill Overload report . . . . .	539
Things to know about this report. . . . .	539
Graphical Skill Overload report example . . . . .	539
Graphical Skill Overload report description . . . . .	540
Graphical Split/Skill View report . . . . .	541
Things to know about this report. . . . .	541
Graphical Split/Skill View report example . . . . .	541
Graphical Split/Skill View report description . . . . .	542
VDN report. . . . .	545
General information about the VDN report . . . . .	545
VDN report selector window. . . . .	545
VDN report input fields . . . . .	546

**Contents**

VDN Graphical Call Handling report . . . . .	547
Things to know about this report . . . . .	547
VDN Graphical Call Handling report example . . . . .	548
VDN Graphical Call Handling report description . . . . .	549
<b>Glossary . . . . .</b>	<b>551</b>
<b>Index . . . . .</b>	<b>567</b>

# About this information product

## Purpose

---

This book describes the Avaya Call Management System (CMS) reports that are generated through the Avaya CMS Supervisor software.

The book includes:

- A description of each report
- An example of each report
- Definitions of all report fields
- Tips for customizing specific reports

## Reissue reason

---

This document is being reissued to comply with CMS R3V11 and Supervisor R11.

## Safety labels

---

The following icon signifies a caution, warning, or danger condition:



## Intended audience

---

This document is written for users who analyze the available reports and use them to efficiently run their call centers.

## How to use this information product

---

The following list describes the contents of each chapter and appendix in this document:

- Chapter 1, Introduction
- Chapter 2, Using reports
- Chapter 3, Real-time reports: show snapshots of call center activity throughout the day

## About this information product

- Chapter 4, Historical reports: compile call center information in 15-, 30-, or 60-minute intervals. The interval information is then converted into daily, weekly, and monthly summary data.
- Chapter 5, Integrated reports: compile call center information from a specified start time in the past 24 hours up to and including the current interval.

## Related documentation

---

The following documents can help you use the CMS software to its maximum capability. Those most closely related to this document are the Administration and Report Designer documents.

- *Avaya Call Management System R3V11 Administration document* (585-215-515)
- *Avaya Business Advocate R11 User Guide* (585-210-711)
- *Avaya Call Management System Custom Reports* (585-215-822)
- *Avaya Call Management System R3V11 External Call History Interface* (585-780-700)
- *Avaya Call Management System R3V11 Software Installation, Maintenance and Troubleshooting* (585-215-115)
- *Avaya Call Management System Supervisor Version 11 Installation and Getting Started* (585-210-706)
- *Avaya Contact Center R11 and R3V11 Call Management System Change Description* (585-780-400)
- *Avaya Call Management System Supervisor R11 Report Designer User Guide* (585-210-707)

## Report examples

---

The report examples included in this document were taken from test lab machines and are not intended to emulate real data. Report data will vary dependent on your individual site.

# Introduction

This chapter is written for Avaya Call Management System (CMS) Supervisor users who access the real-time, historical, and integrated reports subsystems. It outlines how reporting works and the reports that are available.

## About CMS and Supervisor

---

Call center reports are generated through the Supervisor software.

The software monitors the operations of and collects data from the switch. This data is then organized into reports that help you manage call center facilities and personnel. These reports may be displayed in real time, printed immediately, stored in a file, or scheduled for printing at a later time.

The data tracked includes caller identification, service parameters, internal call transfers, outgoing calls, and agent sales. Real-time reports can be updated as often as every three seconds and summarized as often as every 15 minutes. Historical reports are available in intervals of 15, 30, or 60 minutes; daily; weekly; and monthly summaries. Integrated reports include data for a specified start time in the past 24 hours up to and including the moment the report is generated.

One CMS can manage up to 10,000 agent/split/skill or agent/skill pairs in up to eight switches Automatic Call Directories (ACDs) at different locations. This permits you to add agents in new locations while maintaining centralized supervision to control costs.

You can use reports to do the following:

- Determine how many agents are needed.
- Manage call volume fluctuations.
- Configure the software to make changes automatically and to meet unexpected demands.
- Change agent skill assignments.
- Move agents between skills and/or initiate agent audit trails.
- Change Vector Directory Numbers (VDNs) to vector associations.

## Available reports

---

The following table lists the Supervisor reports that are available. The remaining chapters of this document give you an overview and an example of each report. The reports you see depend on your switch type, permissions, and system performance.

Report name	Real-time	Historical	Integrated
Outbound Split/Skill		•	
Agent Attendance		•	
Agent AUX		•	
Agent Event Count		•	
Agent Graphical Information			•
Agent Graphical Time Spent		•	
Agent Group Attendance		•	
Agent Group AUX		•	
Agent Group Report	•		
Agent Group Summary		•	
Agent Inbound/Outbound		•	
Agent Information			•
Agent Login/Logout (Skill)		•	
Agent Login/Logout (Split)		•	
Agent Report	•		
Agent Split/Skill		•	
Agent Status by Location	•		
Agent Summary		•	
Agent Trace		•	
Busy Hour by Trunk Group		•	
Busy Hour by VDN		•	
Call Record		•	
Call Work Code		•	

Report name	Real-time	Historical	Integrated
Event Count Summary	•		
Graphical Active Agents	•		
Graphical Allocated Agents	•		
Graphical AUX Reserve1 Agents	•		
Graphical AUX Reserve2 Agents	•		
Graphical Average Positions Staffed		•	
Graphical Busy/Abandon/ Disconnect		•	
Graphical Maximum Delay		•	
Graphical Multi-ACD Service Level Daily		•	
Graphical Queue	•		
Graphical Skill Overload			•
Graphical Split/Skill	•		
Graphical Split/Skill Call Profile	•		
Graphical Split/Skill View			•
Graphical Staffing Profile	•		
Graphical VDN Call Profile	•		
Multi-ACD	•	•	
Multi-ACD by Split/Skill		•	
Multi-ACD Call Flow by VDN		•	
Multi-ACD Top Agent	•		
Queue/Agent Status	•		
Queue/Agent Summary	•		
Queue/Top Agent Status	•		
Reserve1 AUX Agents	•		
Reserve2 AUX Agents		•	
Skill AUX Report	•		
Skill Status	•		

Report name	Real-time	Historical	Integrated
Skill Top Agent Report	•		
Split Status	•		
Split/Skill Average Speed of Answer		•	
Split/Skill by Location	•		
Split/Skill Call Profile	•	•	
Split/Skill Comparison			•
Split/Skill Graphical AUX Agents	•		
Split/Skill Graphical AUX Top Agents	•		
Split/Skill Graphical Call Profile	•	•	
Split/Skill Graphical EWT	•		
Split/Skill Graphical Service Level		•	
Split/Skill Graphical Status	•		
Split/Skill Graphical Time Spent		•	
Split/Skill Graphical Top Skill Status	•		
Split/Skill Outbound		•	
Split/Skill Queue	•		
Split/Skill Report	•	•	
Split/Skill Service Level		•	
Split/Skill Status		•	
Split/Skill Summary		•	
System		•	
System Multi-ACD		•	
System Multi-ACD by Split/Skill		•	
Top Agent Status	•		
Trunk		•	
Trunk Group	•	•	
Trunk Group Summary		•	



Report name	Real-time	Historical	Integrated
VDN Call Handling			•
VDN Call Profile	•	•	
VDN Multi-ACD Flow		•	
VDN Report	•	•	
VDN Service Level		•	
VDN Skill Preference	•	•	
Vector	•	•	
Work State Report for Reserve1 Agents	•		
Work State Report for Reserve2 Agents	•		

## Interactions with switch features

---

See the Avaya Call Management System Database Items and Calculations document or the Avaya Call Management System Administration document for information about the interactions with switch features.

## Location IDs on Supervisor and the switch

---

CMS R3V11 supports location IDs from 1 to 44. MultiVantage™ systems support location IDs from 1 to 64. When running CMS reports that include location IDs (LOC\_ID), those IDs defined on the MultiVantage system that are greater than 44 will be listed as 0 by CMS.

## How CMS tracks ACD data

---

Using the data in the real-time and historical databases, CMS can generate standard reports which allow you to track your call center's activities. CMS tracks the various agent, split/skill, trunk, trunk group, vector, and VDN activities at different points in the call process. See the Avaya Call Management System Administration document for more information.

---

# Terminology

The following terms are used throughout this book. For additional CMS terms, see the Glossary.

Term	Description
Current interval	The current intrahour interval which can be 15, 30, or 60 minutes. The current interval is part of the real-time database.
Custom reports	See the Avaya Call Management System Custom Reports document for more information.
Designer reports	Real-time or historical reports that have been customized from existing reports or designed according to your needs from Report Wizard or Report Designer. See the Avaya Call Management System Supervisor Report Designer document for more information.
Daily data	Interval data that have been converted to a one-day summary.
Exception reports	Display occurrences of unusual call-handling events.
Historical database	Contains intrahour records for up to 62 days in the past, daily records for up to 5 years in the past, and weekly or monthly records for up to 10 years for each CMS-measured agent, split/skill, trunk, trunk group, vector, and VDN.
Historical reports	Display past Automatic Call Distribution (ACD) data for various agent, split/skill, trunk, trunk group, vector, or VDN activities.
Integrated reports	Compile call center information from a specified start time in the past 24 hours up to and including the current interval.
Monthly data	Daily data that have been converted to a monthly summary.
Multiuser mode	Any administered CMS user can log into CMS. Data continues to be collected if data collection is turned on.
Previous interval	One intrahour interval. At the end of each intrahour interval, the contents of the current intrahour interval are copied to the previous intrahour interval portion of the real-time database.
Real-time database	Current and previous intrahour data on each CMS-measured agent, split/skill, trunk, trunk group, vector, and VDN.
Real-time reports	Display current ACD call activity on agents, splits/skills, trunks, trunk groups, vectors, and VDNs.

Term	Description
Single-user mode	Only one person can log into CMS. Data continues to be collected if data collection is turned on. This mode is required to change some CMS administration.
Subsystem	Each Supervisor Controller selection. For example, reports is referred to as a subsystem.
Weekly data	Daily data that has been converted to a weekly summary.

---

# Prerequisite system administration

The following system administration must be performed before you can fully use the real-time and historical reports subsystem.

## Dictionary

---

If you want names to appear on split/skill, trunk group, agent group, ACD, call work code, VDN, and vector reports, the names must first be entered in the Dictionary subsystem. If names are not assigned in the Dictionary subsystem, numbers appear as the default.

## Call center administration

---

To get Split/Skill Call Profile or VDN Call Profile reports, you must first define your acceptable service level and service level increments for the splits/skills and VDNs in the Split/Skill Call Profile Setup and VDN Call Profile Setup window in the Call Center Administration subsystem.

To get an Agent Trace report, you must first start collecting agent trace data.

See the Avaya Call Management System Administration document for more information on setting call profiles and activating agent traces.

## User permissions

---

For a report to display data, you must have read permission for the split/skill, trunk group, ACD, vector, or VDN. For example, if you have read permission for Splits 1, 2, and 4, and try to run a report on Splits 1, 4, and 5, you receive data for Splits 1 and 4 but not for Split 5, because you do not have read permission for that split.

For more information, see the Avaya Call Management System Administration document.

## System setup

---

You need to specify how much of the data to save for later use by historical reports.

For more information, see the Avaya Call Management System Administration document.

---

# Relationships to other subsystems

Real-time reports have the following relationships to other CMS subsystems.

## Timetable

---

You cannot put a real-time report on a timetable. You can use shortcuts to display real-time reports. You must use the CMS terminal to use Timetable.

See the Avaya Call Management System Administration document.

## CMS

---

If you cancel a report in Supervisor, the data requests for the report do not cancel in CMS. Therefore, the report continues to run on the CMS side, even though it is canceled in Supervisor. Until the data requests clear, Supervisor and CMS may slow down as a result. If the data request is for a large amount of data, the system could slow down.

## Dictionary

---

For split/skill, VDN, vector, and ACD names to appear on reports, names must be defined and entered in the Dictionary subsystem.

See the Avaya Call Management System Administration document.

## Exceptions

---

When an exception occurs, CMS notifies you in three ways:

- The terminal beeps unless you have disabled the beep through the Supervisor Controller.
- You can see information about exception conditions by looking at appropriate real-time reports.
- The Commands: The exceptions menu item in Supervisor allows you to view a running count of exceptions for Real-Time, Agents, Splits/Skills, VDNs, Vectors, and Trunk Groups. To be notified of these exceptions, you must have exception permission turned on for the specific split/skill, trunk group, ACD, VDN, and vector. Exception permissions are assigned through the Supervisor Tools: User Permissions menu item.
- The exception is entered in the real-time exceptions log.

For more information, see the Avaya Call Management System Administration document.

### Scripting

---

The Scripting feature lets you create a script to run a specified report or run a report and export the data on schedule. The scripts require a customer-provided scheduler to be run at a later time.

For more information on the Scripting feature, see the Avaya Call Management System Administration document.

### User permissions

---

The default real-time and integrated reports refresh rate is determined by your Avaya Call Management System (CMS) System Administrator. The administrator then assigns each user a minimum refresh rate through the Avaya CMS Supervisor User Permissions menu item. If you enter a refresh rate that is less than your administrator-assigned refresh rate, an error message displays.

For more information, see the Avaya Call Management System Administration document.

# Agent and trunk states

Status changes of all ACD data (for splits/skills, trunk groups, vectors, VDNs, agents, and trunks) are sent from the switch. As a result, the states of agent extensions and trunks are what all other data are based on. Agent states appear on real-time reports as CMS records the current status of the ACD, and trunk states appear on the CMS real-time trunk report. The following list of agent states includes the default agent states. The names can be changed in the Dictionary.

## Agent states

Agent state	Description
ACD	The agent logged into this extension is on a split/skill or direct agent call.
Available (AVAIL)	The extension is able to accept an ACD call. An extension is AVAIL in AUTO-IN (AI) or MANUAL-IN (MI) work modes any time a station does not have a call active or on hold.
After Call Work (ACW)	The agent is engaged in bookkeeping, data entry, or other work related to the previous call, and is not available to receive another call. The extension enters ACW after an ACD call in the MANUAL-IN mode completes. On the Enterprise Communications Server (ECS), the agent can select the state with the ACW key. If the agent presses the ACW button while on an ACD call, then the agent goes into ACW mode when the call is released. This ACW time is tracked as call-associated ACW. If the agent presses the ACW button while the agent is not on an ACD call, then the agent will be placed into the ACW mode, but this ACW will not be tracked as call-associated ACW. An agent's time in ACW includes time an agent is on incoming or outgoing calls while in ACW, as well as time in ACW when the agent is not connected to any calls.
Auxiliary Work (AUX)	The agent is engaged in non-ACD work, is on break, in a meeting, at lunch, and so on. The agent presses the AUX WORK key when the agent wants CMS to recognize the extension as staffed, but does not want the ACD to distribute calls to the voice terminal. An agent's time in AUX includes time an agent is on incoming or outgoing calls while in AUX, as well as time in AUX when the agent is not connected to any calls. Agents also accrue AUX time when they make or receive extension calls from AUTO-IN or MANUAL-IN mode. Reason codes describe the reasons you are in the AUX work mode (for example, you are on break).
Direct Agent ACD (DACD)	The agent is on a direct agent ACD call.

Agent state	Description
Direct Agent ACW (DACW)	The agent is in the after call work state for a direct agent ACD call.
OTHER	The agent is doing other work. This may represent that an agent is in multiple splits or with multiple skills and is doing work for a split or skill other than this one, or that the agent has put a call on hold, or that the agent is dialing to place a call or activate a feature.
UNKNOWN	CMS does not recognize the current state. UNKNOWN remains until the condition is cleared (corrected) and/or the agent completes the current ACD call and any associated ACW, or a current agent state message is sent to CMS from the switch.
UNSTAF Unstaffed	The agent is not logged in and is not being tracked by CMS.
RINGING	The time a call rings at an agent's voice terminal after leaving the queue and before the agent answers the call. With this state, you can actually determine how long a call rings before an agent answers, and thereby determine the actual time a caller waits in queue and waits while the call is ringing to better analyze your call center's performance.



## Trunk states

---

Trunk state	Description
IDLE	The trunk is waiting for a call.
CONN	The caller and agent are connected on a call.
QUEUED	An ACD call has seized a trunk and is queued to a split or skill waiting for an agent to answer.
SEIZED	A call is using the trunk, either incoming or outgoing.
MBUSY	The trunk is maintenance busy, or out of service for maintenance purposes.
HOLD	The agent has put the caller on this trunk on hold.
UNKNOWN	CMS does not recognize the state of the trunk.
DABN	The caller abandoned the call. The trunk quickly goes to idle.
FBUSY	Forced busy. For the ECS, you can receive busy calls if there is no call in queue for the split and no agents are available.
FDISC	The caller receives a forced disconnect. This appears only if you have the Vectoring feature.
RINGING	A call is ringing at the agent's voice terminal.

---

# Refresh rate for real-time and integrated reports

When you order a real-time or integrated report, you must specify a refresh rate for the report. This rate determines how often the report is updated to display new data.

## Fastest allowable refresh rate

---

Your fastest allowable refresh rate is defined in the User Permissions—User Data window as minimum refresh rate; see the Avaya Call Management System Administration document. For any user, the fastest rate that may be defined is every 3 seconds. However, the actual speed at which a report refreshes may be slower than the defined speed, since the number of active terminals, the number of active windows, and the number of real-time reports can have an impact on refresh rates.

## Default refresh rate

---

The default refresh rate when you bring up the report input window is your minimum refresh rate (defined by the CMS System Administrator) plus 15 seconds. You can change the refresh rate from the default at any time, with the minimum allowable refresh rate being three seconds. The minimum default refresh rate when a report is run as a script is user-defined.

## Shortest refresh rate

---

If you want to calculate the shortest real-time report refresh rates for your CMS configuration, go to the cmsadm menu in the Sun Microsystems, Inc. Solaris® system. The Real-Time Refresh program calculates the shortest refresh rates.

# Using reports

This chapter gives you general information about how to use Avaya Call Management System (CMS) Supervisor reports. Supervisor reports display, report, and summarize the performance of any measured subset of the Automatic Call Directory (ACD), including agents, splits/skills, trunks/trunk groups, Vector Directory Numbers (VDNs), and vectors.

## How this chapter is organized

---

This chapter is divided into the following sections:

- [Report Designer and Scripting features](#) on page 36
- [Selecting and running reports](#) on page 37
- [Report menu bar](#) on page 45
- [Editing and viewing reports](#) on page 57

## How to access reports

---

No matter where you run a report from, the way you select, run, edit, and view a report is the same.

You will find reports available under the following menus and tabs:

- Commands | Reports | Real-Time, Historical, or Integrated tab
- Commands | Dictionary | Reports tab
- Commands | Exceptions | Reports tab
- Commands | Agent Administration | Reports tab
- Commands | Call Center Administration | Reports tab
- Tools | Maintenance | Reports tab

### More information

Procedures that apply to reports that are located in a specific Command or Tool are located in the appropriate chapter in the *Avaya Call Management System Administration* guide.

---

# Report Designer and Scripting features

## Report Designer

---

If you have Report Designer and want to easily generate a new customized report, select the Report Wizard button in the Controller toolbar.

### More information

For more information about the Report Designer, see the Avaya Call Management System Supervisor Report Designer user guide.

## Scripting

---

The Scripting feature lets you create a script to run a specified report or run a report and export the data on schedule. The report can run in the current Supervisor session and be displayed on the PC, or it can run in the background.

### More information

For more information on the Scripting feature, see the Avaya Call Management System Administration document.

# Selecting and running reports

This section describes how to select and run reports through Supervisor.

## About selecting historical report run dates

### Different ways to select dates

When you run historical reports, you need to select the date or dates for which to run the report. To do this, you can do any of the following:

- Type the date or date range in the Date or Dates input field.
- Type a relative date. For example, type -2 for two days ago.
- Select the date or dates from the history list of previously-used dates for this report.
- Select the Browse button.

### About the browse windows

When you select the Browse button from an input window for a historical report, one of the following windows will open:

If your input window is for the following type of historical report	Then the following window opens from the Browse button next to the Date or Dates field
Interval	Browse Date
Daily or Weekly	Browse Dates
Monthly (reports for one month of data)	Browse Month
Monthly (reports for one or more months of data)	Browse Months

## Use the Browse Date window

Use the Browse Date window to select dates for a report. The Browse Date window only opens from an input window for an interval historical report.

### Navigation path

---

Commands | Reports | Historical | an interval report

### Procedure


---

To use the Browse Date window, do the following:

1. From an input window for an interval historical report, press the Browse button after the Date field.



**Result:**

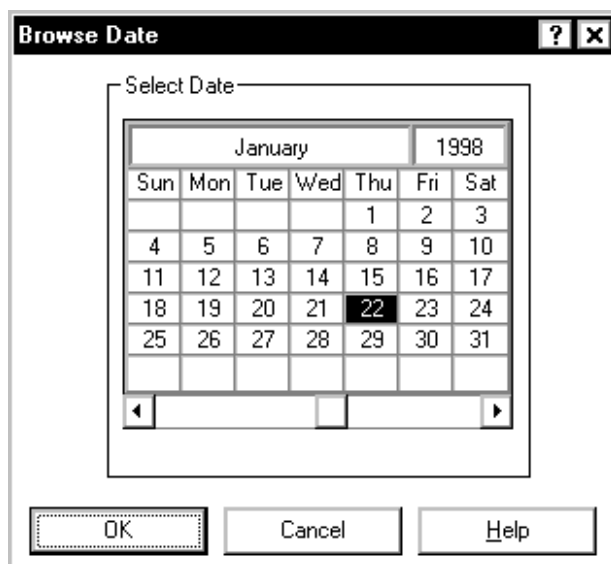

2. To select a specific date, use your mouse to point at a day and click. The day is highlighted.

The day is highlighted.

If you want to choose a date that is not in the current month, use the arrow keys at the bottom of the window to scroll through the months.

3. Select the OK button.

# Use Browse Dates window

Use the Browse Dates window to select dates for a report. The Browse Dates window only opens from an input window for a daily or weekly historical report.

## Navigation path

---

Commands | Reports | Historical | a daily or weekly report

## Procedure

---

To use the Browse Dates window, do the following:

1. From an input window for a daily or weekly historical report, press the Browse button after the Dates field.



2. Choose one of the following:

To select	Do this
Specific dates	Point and click in each date box. You can select as many days as you want.
A range of dates	<p>Select the Range button.</p> <p>Point and click on the first day of the desired range, and the last day of the range.</p> <p>If you want to choose a date that is not currently displayed, use the arrow keys at the bottom of the window to scroll through the months.</p>

The dates you selected are highlighted.

3. Select the OK button.

# Use the Browse Month window

Use the Browse Month window to select dates for a report. The Browse Month window opens only from an input window for a monthly historical report. The Browse Month window is used in monthly reports where the data is for a single month. The window is initialized to the values in the input field or to the month previous to the current month when the input field is empty.

## Navigation path

---

Commands | Reports | Historical | a monthly report

## Procedure

---

To use the Browse Month window, do the following:

1. From an input window for a monthly historical report, press the Browse button after the Dates field.



2. Select the Month and the Year from the drop-down menus.

The minimum date is January 1980 and the maximum date is December 2037.

3. Select the OK button.



## Use the Browse Months window

Use the Browse Months window to select dates for a report. The Browse Months window opens only from an input window for a monthly historical report. The Browse Month window is used in monthly reports where the data is for one or more months.

### Navigation path

---

Commands | Reports | Historical | a monthly report

### Procedure

---

To use the Browse Months window, do the following:

4. From an input window for a monthly historical report, press the Browse button after the Dates field.



5. Select the month and year from the First Month drop-down menu.

The minimum date is January 1980 and the maximum date is December 2037.

6. Select the Number of Months you want displayed in the report.

The system populates the Last Month field with the month specified in the Number of Months field.

7. Select the OK button.

## About selecting historical report run times

### Selecting times

---

When you run interval historical reports, you need to select the time period for which to run the report.

To do this, do any of the following:

- Type the time range in the Times input field.
- Select the times from the history list of previously used times for this report.
- Select the Browse button next to the Times input field.

# Use the Browse Time window

Use the Browse Time window to select times for a report. The Browse Time window opens only from an input window for an interval historical report.

## Navigation path

---

Commands | Reports | Historical | an interval report

## Procedure

---

To use the Browse Time window, do the following:

1. From an input window for an interval historical report, press the Browse button after the Time field.



2. Select the time you want the report to begin with from the Starting Interval drop-down list.  
The report data will begin with the interval that begins immediately after the time you enter.
3. Select the time you want the report to end with from the Ending Interval drop-down list.
4. Select the OK button.

## Exiting and restarting reports

### How to exit a report

---

To exit a report (return to the Controller), do one of the following:

- Double click the System button.
- Select Close from the System button menu.
- Select Exit from the Report menu.

If the system shuts down due to an error, any changes you have made to the reports you are running are saved.

### How to restart a report

---

To restart a report (return to the report input window), Select Restart from the Report menu.

Work State drill-down reports and unsaved reports created in Report Wizard cannot be restarted.

---

# Report menu bar


This section describes the menu items that are available in each of the Report menu bar menus.

## Report menu

### Report menu

---

The Report menu has options that relate specifically to the report you are running.

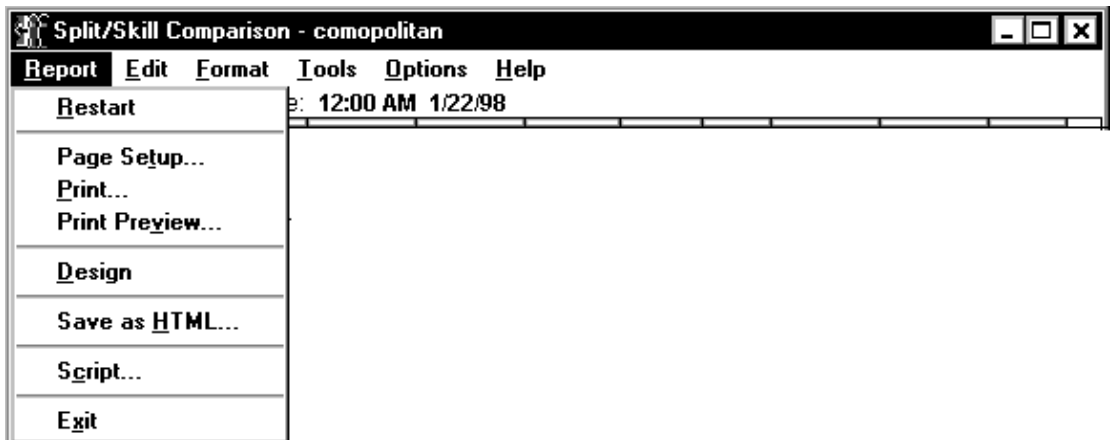

## Menu item functions

---

This table describes the action that each menu item performs:

Menu Item	Action
Restart	Closes the current report output window and displays the input window for the current report. This allows you to run the same report, changing inputs as needed. This is disabled for Drill-Down reports and if the report is an unsaved report created using the Report Wizard (this item is reenabled when the report is saved).
Page Setup	Displays the Page Setup window. For more information, refer to the Microsoft® Windows® documentation or Help.
Print	Displays the Print window. When you select Print from the Report menu, the report that is active will be printed according to the options you choose in the Print window. If the report is a real-time report, only one refresh of the report will be printed. For more information, refer to the Windows documentation or Help.
Print Preview	Displays the report so that you can see it before printing. Once you have selected Print Preview, you may print the report. For more information, refer to the Windows documentation or Help.
Design	If you have purchased the Report Designer software and your Avaya Call Management System (CMS) User ID is authorized to use the Report Designer, you can access the Report Designer Design Mode window from any report using this menu item. When you select Design from the Report menu, the report that is currently running remains visible, but you are placed in the Design Mode, where you can edit the report. For more information on the Design Mode, see the Avaya Call Management System Supervisor Report Designer user guide. The Design menu item will be grayed out if you are currently running a drill-down report.

Menu Item	Action
Save	Saves the report that you edited.
Save as	Saves the report you edited under a different file name.
Save as HTML	Displays the Save as HTML window, which lets you save a snapshot of the report output as an HTML file. Selecting the Script button in this window displays the Save as Script dialog box, which lets you create a script to run the specified report and save the output as an HTML file.
Script	Displays the Save as Script dialog box, which enables you to create a script to run a specified report on schedule and display it on your computer. The script can be interactive or automatic.
Exit	Closes the active report output window. The location of the report output window is saved when the report is exited, and that is where the report will display the next time you run it.

# Save as HTML

The Save as Hypertext Markup Language (HTML) function allows the user to export a snapshot of a report running in Supervisor and save it as an HTML file. Any report generated in Supervisor can be converted to an HTML file. This file can then be stored on a web server for viewing on the Internet or an Intranet.

Things to note:

- Save as HTML does not automatically save the HTML file onto a web server. You must copy the HTML file and any associated graphics to the Internet server you want to use.
- Save as HTML does not automatically update the HTML for real-time reports.
- Save as HTML is found in the report pull-down menu on an open report.
- Save as HTML does not support 32-bit color mode for graphics saved using Save as HTML.

## Browsers


---

To view the HTML file, your Internet browser must support tables and Graphic Interchange Format (GIF) graphic files. For example, Netscape Navigator 3.0 or Microsoft Corp. Microsoft <sup>TM</sup> Internet Explorer 3.0, or later versions of either, support tables and GIF graphic files.

## Selecting Save as HTML location


---

Save as HTML function can be found in the Report pull-down menu.

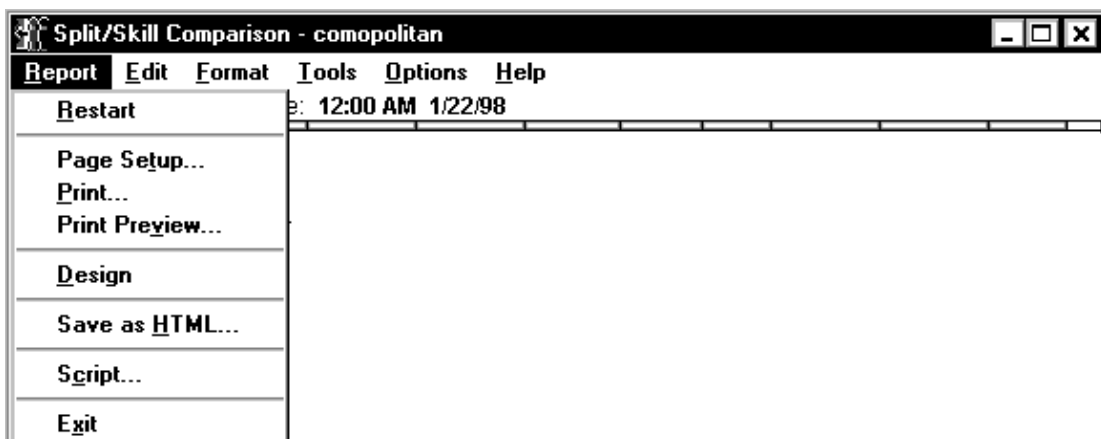



When you select Save as HTML, the Save as HTML dialog box displays:

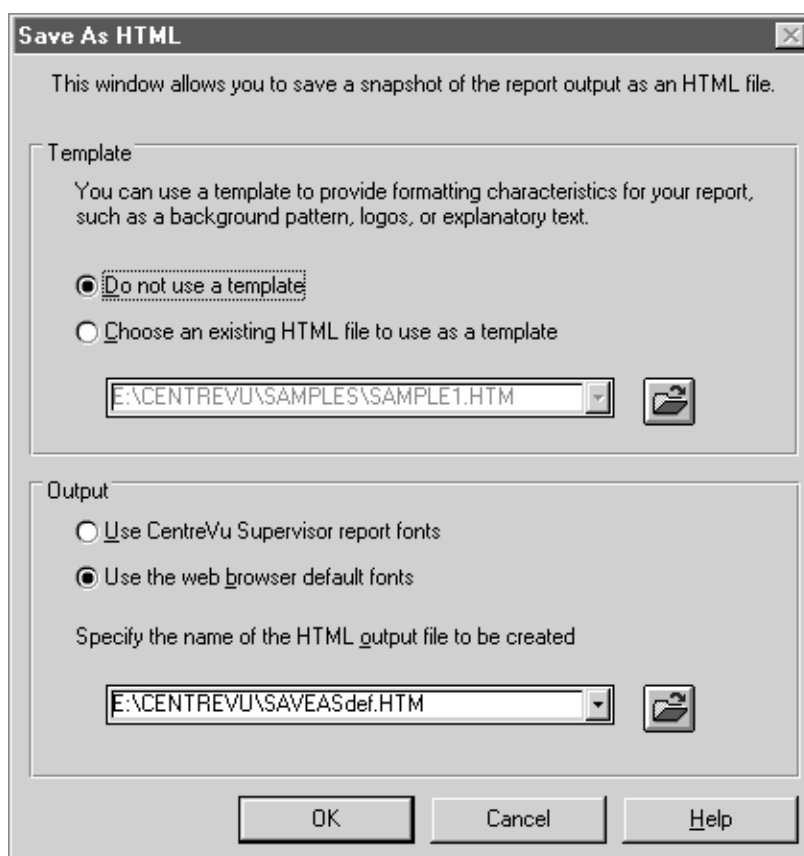

## Using Save as HTML

To save a report as an HTML file, use the following steps:

1. While running the report you want to save, select Save as HTML from the Report menu.
2. Select a template option.
  - Type the template file name in the template field, select the template from the pull-down history list, or select the Browse button and browse for a template.
  - If you do not want to use a template, select the Do not use a template radio button.
3. Select an output option.
  - Selecting Use Avaya CMS Supervisor report fonts preserves the report fonts as you see them in Supervisor.
  - Selecting Use the web browser default fonts displays the output file using Internet browser default fonts.

4. Type the name of the output file in the file name field, select the file name from the pull-down history list, or select the Browse button and browse for a file name.
5. Select the OK button to save the report in HTML file format.

### Results:

The report is now saved as an HTML file for viewing with an Internet browser.

The HTML file that has been generated can be modified to fit your specific need using an HTML or text editor.

## Output files

---

You must select a name for the HTML file you are creating. You must specify the full file path (for example, c:\temp\myrpt.htm) to save the file in a directory other than the current directory.

If there are charts associated with the file, they are converted into GIF files and numbered in the order created. For example, c:\temp\myrpt1.gif and c:\temp\myrpt2.gif.

The output file is created using the templates and fonts you have specified. After the HTML is saved, you can move or copy it and all associated graphics files to a web server directory for viewing on the Internet or an Intranet.

## Templates

---

A template can be used to provide company logos, background color, specific fonts, or surrounding text to the HTML file. If you do not select a template, the HTML file displays only the report.

Note the following:

- Templates are HTML files that can be created or edited using an HTML or text editor.
- The templates are limited by what your web browser supports.

## Not using templates

---

If you choose not to use existing templates, Save as HTML generates basic HTML tags in order for your report to be converted to HTML.

Note the following:

- The standard surround tags <HTML> and <BODY> are generated.
- The background color is set to white and font color is set to black.
- The title of the page is the same as the report title.

## Using existing templates

---

Supervisor provides you with Sample templates which can be found in the samples directory of the Supervisor directory where the executable files were installed. Use these installed templates when saving a report as an HTML file.

## Save as HTML template tags

---

The following describes the tags used by Save as HTML and which can be used to create templates:

HTML Tag	Description
<CVSUP_TITLE>	This tag is replaced with the title of report in the HTML file. If this tag is used within the <TITLE> tags, the title of the report will be used as a heading to the page. Multiple uses of this tag are allowed.
<CVSUP_BODY>	This tag is replaced by the report body in the HTML file. However, only the first occurrence of this tag is replaced. If a template is used and the <CVSUP_BODY> tag is not in the template, an error occurs, and the Save as HTML operation is aborted.

## Fonts

---

If you choose to use the Supervisor fonts, the font face and size are preserved in the HTML file.


- The fonts used in Supervisor are Arial, Courier New and Times New Roman.
- In the event these fonts are not available on the computer viewing the HTML file, backup fonts are used. The backup fonts are Helvetica for Arial, Courier for Courier New, and Times for Times New Roman.
- If you choose to use the web browser's default fonts, the HTML file will not specify any fonts.
- Note the following:
  - If you choose not to preserve the Supervisor fonts, the appearance of the report in the HTML file may change.
  - If you choose to use a template, do not preserve the Supervisor fonts if the template specifies the fonts.

# Edit

## Edit menu

---

The Edit menu has standard Windows editing options:

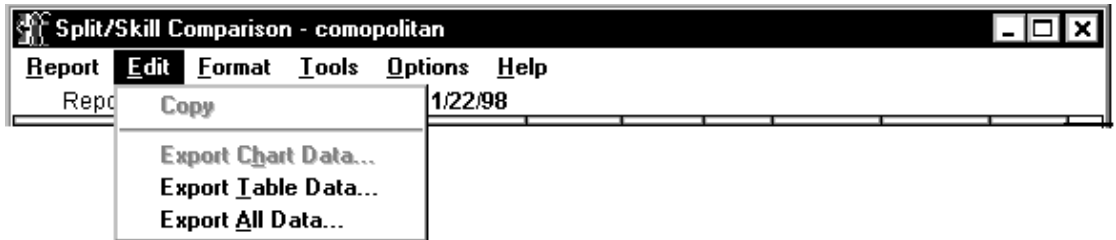

## Menu item functions

---

This table describes the action that each menu item performs.


Menu Item	Action
Copy	The image of the currently selected chart is copied to the clipboard in Windows metafile format. This allows you to paste the chart picture into most Windows applications, such as a word processor. You can also access Copy from the right mouse button pop-up menu. See <a href="#">Copying chart reports</a> on page 84 for instructions on using Copy.
Export Chart Data	The Data Export Options window is shown to allow you to export the data in the currently selected chart. If the report is a real-time report, only one refresh of the data will be exported. You can also access the Data Export Options window from the right mouse button pop-up menu. If there is more than one chart on this report, this option will be grayed out until you select a chart. For more information on exporting data, see <a href="#">Exporting report data</a> on page 82.
Export Table Data	The Data Export Options window is shown to allow you to export the table data. If the report is a real-time report, only one refresh of the data will be exported. You can also access the Data Export Options window from the right mouse button pop-up menu. If there is more than one table on the report, this option will be grayed out until you select a table. For more information on exporting data, see <a href="#">Exporting report data</a> on page 82.
Export All Data	The Data Export Options window is shown to allow you to export all data in the report. You will also be allowed to include labels and headers in the data that are exported. If the report is a real-time report, only one refresh of the data will be exported. You can also access the Data Export Options window from the right mouse button pop-up menu. For more information on exporting data, see <a href="#">Exporting report data</a> on page 82.

# Format

## Format menu

---

The Format menu contains actions for modifying the display format of the currently selected object. If one (or more) of the actions does not apply to the selected object, it will be grayed out:

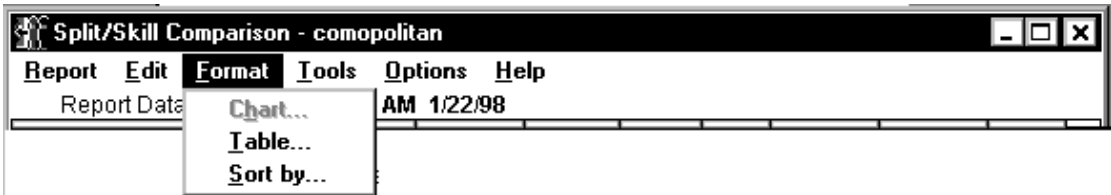

## Menu item functions

---


This table describes the action that each menu item performs:

Menu Item	Action
Chart	Allows you to format a chart. You can also access the Format Chart window from the right mouse button pop-up menu.
Table	Allows you to format a table. You can also access the Format Table window from the right mouse button pop-up menu.
Sort By	Allows you to sort the table by several parameters specific to the information in the selected table. You can also access the Sort by window from the right mouse button pop-up menu.

# Tools

## Tools menu

The Tools menu contains additional actions that affect the currently selected object. You can also access the Tools actions from the right mouse button:

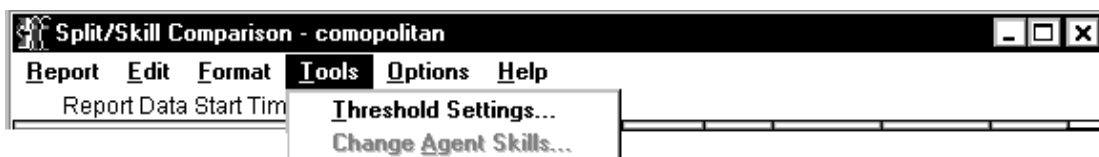

## Menu item functions

This table describes the action that each menu item performs.

Menu Item	Action
Available Drill-Down reports	If you are running a report that allows you to access one or more drill-down reports, the available drill-down reports will be accessible from the Tools menu.
Threshold settings	<p>Opens a window that allows you to view or modify threshold highlight settings. Threshold highlight settings apply only to some real-time data items in real-time and integrated reports.</p> <p>For information on setting threshold highlights, see <a href="#">Setting report threshold highlights</a> on page 86.</p>
Change Agent Splits/Skills	<p>If the current ACD supports Expert Agent Selection (EAS), this menu item reads Change Agent Skills; otherwise, it reads Change Agent Splits. This menu item is enabled only when the selected table cell in a report is an agent name or agent login ID; otherwise, it is disabled. If you do not have write permission for Agent Administration, then this menu item is not shown. This action opens the Change Agent Skills window (EAS) or Change Agent Split Assignments window (non-EAS) for the selected agent. You can then modify the split/skill assignments for the agent. See the Avaya Call Management System Administration document for more information.</p>

# Options

## Options menu

The Options menu contains actions that affect the basic display of the report:



## Menu item functions

This table describes the action that each menu item performs:

Menu Item	Action
Thresholds	<p>Turns threshold highlighting on or off for this real-time report. When threshold highlighting is on (there is a check by the menu item), the report shows the colors (icons if the report is minimized) specified in the Threshold Settings window. When threshold highlighting is off (there is no check by the menu item), the report shows none of the threshold highlights (or icons if the report is minimized).</p> <p>See <a href="#">Setting report threshold highlights</a> on page 86 for additional information on Threshold Highlights.</p>
Status bar	<p>Shows or hides the status bar. When the status bar is hidden, the window remains the same size but the contents are resized to fill the window. You would choose this to get a larger viewing area for the report. When the status bar is made visible, the window remains the same size but the contents are resized to fill the smaller window area. The status bar setting is saved in the report view.</p>
Restore Original View	<p>Restores the Report View to the original settings. All changes made to the format of this report are discarded.</p>



---

# Editing and viewing reports

This section describes the various formatting and display options for reports. It also includes some procedures for manipulating reports.

## Report layouts

### Report types

---

There are two types of report layouts in Supervisor:

- Tables — the presentation of standard reports
- Charts — the presentation of graphical reports

### What constitutes a report?

---

A report can consist of only a table/tables, only a chart/charts, or a combination of tables and charts.

In addition to the tables and charts that make up the main body of reports, reports can include text and field names that are followed by single data items. Text and data fields are used on both table and chart reports.

### Tables

---

Most standard reports (reports that are not prefaced by **graphical**) are displayed in tables.

## Using reports

The information on a standard report window is organized as follows:


Agent Split/Skill Weekly - Agent 54001												
Report Edit Format Tools Options Help												
Agent: Agent 54001												
Week Starting	Split/Skill	ACD Calls	ACD Time	ACW Time	Extn In Calls	Extn In Time	Extn Out Calls	Extn Out Time	Assists	Held Calls	Hold Time	Trans Out
<b>Totals</b>		<b>1701334</b>	<b>43:18</b>	<b>:00:00</b>	<b>0</b>	<b>:00:00</b>	<b>0</b>	<b>:00:00</b>	<b>0</b>	<b>0</b>	<b>:00:00</b>	<b>0</b>
7/28/96	s53 ,+*AbCd	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 401	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 402	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	403	56	:06:52	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	tarts group 4	0	:00:07	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 405	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 406	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 407	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 408	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 409	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 410	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 411	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 412	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 413	1	:00:08	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
7/28/96	Skill 414	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
Double Click To Run Format Grid										BullG3V5pe		

### More information

Standard real-time reports can be sorted. See [Formatting table reports](#) on page 60.

## Charts

The graphical reports are displayed in charts:

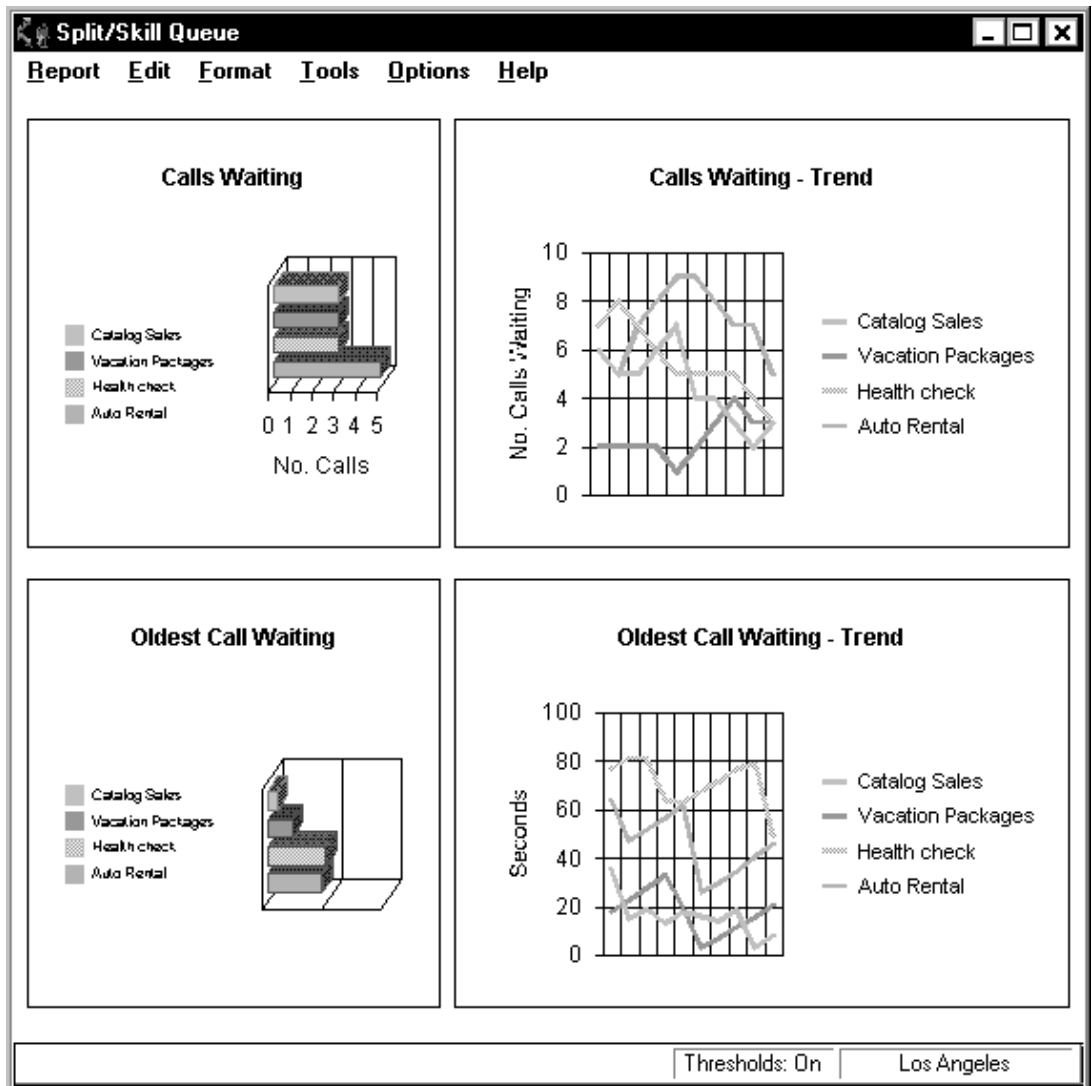

### More information

There are several options for formatting the appearance of the charts (graphical reports). See [About the Chart Format Options window](#) on page 63 for more information.

## Formatting table reports

If you are in a report containing a table, you can format how the report is displayed using the Table Format Options window.

The changes you make to a report's format affect only your view of the report. The changes do not affect how other users see the report.

### Accessing the Table Format Options window

To access the Table Format Options window, use one of the following steps:


- Double click on a column heading in the report.
- Select Format Table or Sort by from the Format menu or the right mouse button pop-up menu.

If you select Sort by, the Table Format Options window displays with the Sort tab active. If you select Format Table, the Table Format Options window displays with the General tab active. Descriptions of these tabs follow.

The Table Format Options window allows you to make layout changes to a table. All changes you make are saved as part of the report view when the report exits.

### General tab

The General tab allows you to make format changes to a table:

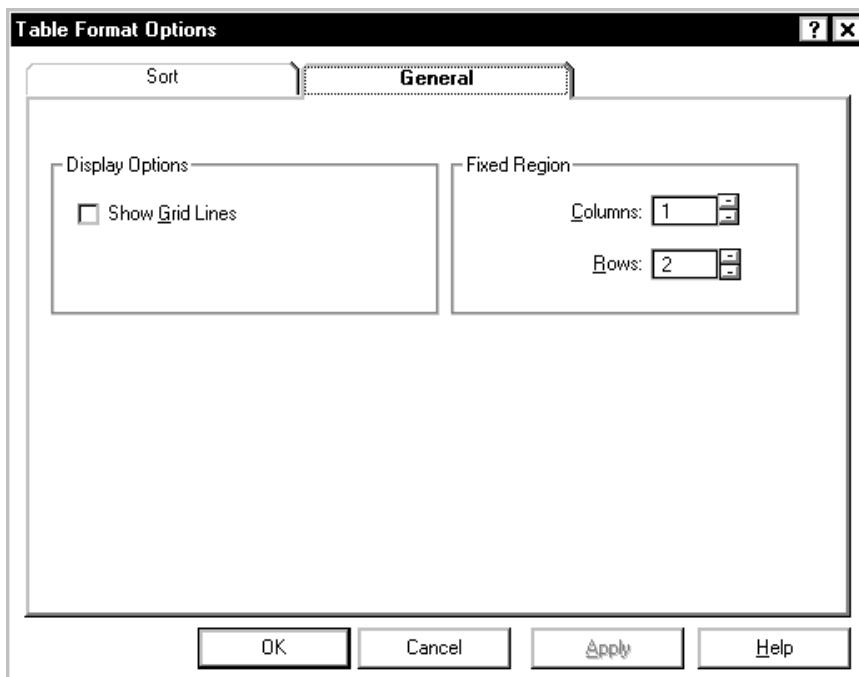

## General tab parameters

---


The following table parameters can be changed:

Parameter	Function
Show Gridlines	Specifies whether or not table lines are to be shown in the table.
Fixed Region, Columns	Specifies the number of columns from the left of the table that are fixed in place and do not scroll. Valid values are in the range of 0 through 99. You can use the spin boxes to select a valid value or type the value in.
Fixed Region, Rows	Specifies the number of rows from the top of the table that are fixed in place and do not scroll. Valid values are in the range of 0 through 99. You can use the spin boxes to select a valid value or type the value in.

## Sort tab

---

The Sort tab allows you to specify the order in which the information on the real-time table report is displayed:

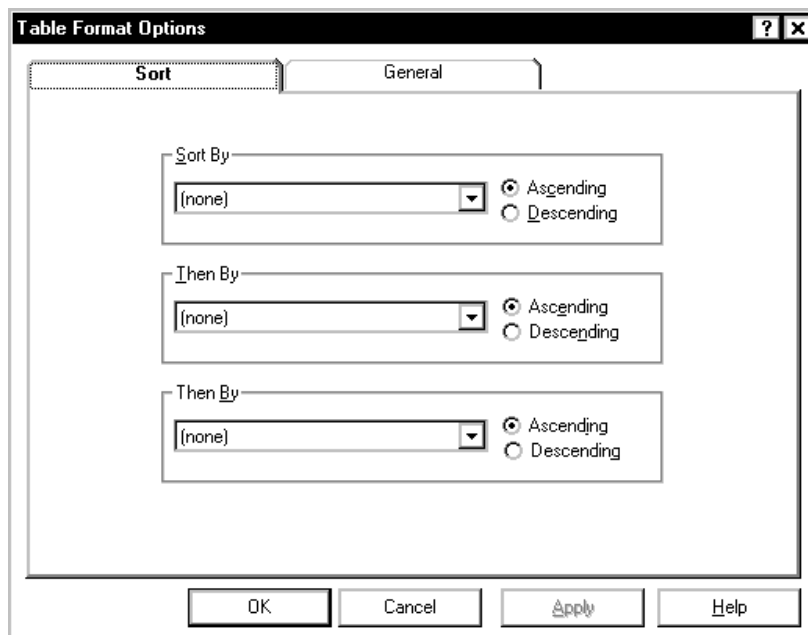

### Using the Sort tab

---

When you are setting up display order for a real-time report, specify the sort column (Sort By) and the sort order (Ascending or Descending). The drop-down list for the Sort By lists all of the database table and item names used in the report.

Sorting may cause report refreshes to take longer. If you wish to speed up the refresh rate, turn off the sort options by selecting **(none)** for all of the Sort By criteria.

### Examples

Here are two examples of how you might use the Sort tab:

- Viewing a list of agents alphabetically — select Agent Name from the first Sort By drop-down list, select Ascending as the sort order, and leave the other two Then By boxes set to **(none)**.
- Searching for agents who have been in a certain state for too long — select State from the first Sort By drop-down list, then select Time from the second Then By drop-down list, and then select Descending as the sort order for the second Then By.

# About the Chart Format Options window

If you are in a report that contains a chart, you can change the layout of the chart using the Chart Format Options window.

## About charts

---

Charts (found in graphical reports) provide a graphical representation of data. Values or data points are displayed in formats such as bars, lines, filled areas, and pie charts. These data points are grouped into series that are identified with unique colors.

In many chart types, one data point from each series is grouped together by category across an axis. Categories are plotted along the x-axis, while values are plotted along the y-axis. A two-dimensional chart shows series next to each other, while a three-dimensional chart plots series along the z-axis. A chart can also have a title and a legend.

## Accessing the Chart Format Options window

---

To format a chart report, select Format Chart or Sort by from the Format menu list or the right mouse button pop-up menu. The Chart Format Options window opens.

## How your changes affect others

---

The changes you make to the report's format affect only your view of the report. The changes do not affect how other users see the report.

## Related topic

---

For information about the differences between tables and reports, see [Report layouts](#) on page 57.

## General tab window and fields

Use the General tab to change the format of a chart.

### Navigation path

---

From a graphical report, go to Format | Chart | General.

### General tab example

---

The following screen displays when you select the General tab from the Chart Format Options window:

The screenshot shows the 'Chart Format Options' dialog box with the 'General' tab selected. The dialog has a title bar with a close button. Inside, there are four tabs: 'Type', 'Title', 'Legend', and 'Data Labels'. The 'General' tab is active, showing options for 'Background Color' and 'Real-Time'. The 'Background Color' section has three radio buttons: 'Report Background' (selected), 'Solid', and 'Gradient'. Below 'Gradient' is a dropdown menu showing 'Rectangle'. There are also 'Background Color' and 'Gradient Colors' (two color swatches) options. The 'Real-Time' section has a checkbox for 'Rolling Chart' and a 'Number of Data Points' field set to '10'. At the bottom are 'OK', 'Cancel', 'Apply', and 'Help' buttons.

Type	Title	Legend	Data Labels
3D Effects	<b>General</b>	Axis	

**Background Color**

☒ Report Background

☐ Solid

☐ Gradient:

Rectangle

Background Color

Gradient Colors

**Real-Time**

☐ Rolling Chart

Number of Data Points: 10

OK Cancel Apply Help



## General tab fields

---

This table describes the following fields:

Field	Description
Background Color	Specifies whether the backdrop of the chart is a solid color or whether it is displayed as a gradient, a smooth transition from one color to another. The gradient transition can be one of the following: Horizontal, Vertical, Rectangle, or Oval. The quality of the gradient effect will vary depending on the video card installed in the PC, or the capabilities of the printer for printed reports.
Real-Time	If the chart is a rolling chart, you can specify the number of data points to be displayed in the chart. Permitted values are 2 through 100, with 10 being the default. A rolling chart is a line chart that is initially displayed with no data points. For each refresh of the report, a data point is added. As data points are added, the chart rolls from left to right. When enough refreshes have occurred so that the chart is displaying the number of specified data points, at the next refresh, the oldest data point is dropped from the display and the newest data point is displayed.

# 3D Effects tab window and fields

Use the 3D Effects tab to control the 3 Dimensional (3D) appearance of the chart. If the current chart is a 2D chart, this tab is disabled.

## Related topic


For an easy way to change the elevation and rotation of a chart using the mouse, see [Rotating a 3D chart](#) on page 81.

## Navigation path

From a graphical report, go to Format | Chart | 3D.

## 3D Effects tab example

The following screen displays when you select the 3D tab from the Chart Format Options window:

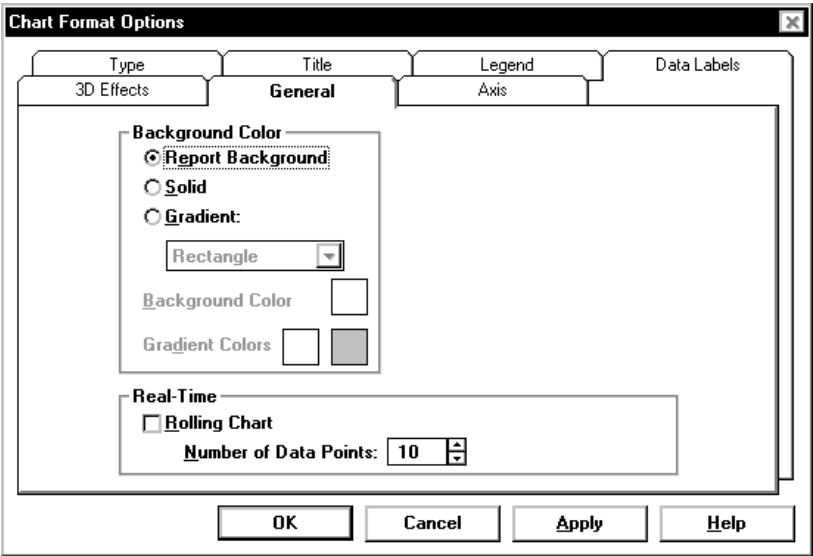

## 3D tab fields

---

This table describes the following fields:

Field	Description
Elevation	A number from 0 through 90 degrees that describes the relative height from which a chart is viewed. An elevation of 90 looks directly down on the top of the chart, while an elevation of 0 looks directly at the side of the chart. The example charts throughout this document use an elevation of 30 degrees.
Rotation	A number from -360 through 360 degrees that specifies the angle that the chart is turned relative to the viewing position. The example charts throughout this document use a rotation of 60 degrees. Rotation does not apply to 3D pie charts.
Projection	<p>Selects one of three mathematical algorithms used to give a 3D appearance on a 2D sheet of paper or computer screen.</p> <p>You can choose any of the following values:</p> <ul style="list-style-type: none"> <li>● Oblique: The chart has depth but the X-Y plane does not change when the chart is rotated or elevated.</li> <li>● Orthogonal: Perspective is not applied to the chart, resulting in less of a 3D effect. The advantage of using this type of projection is that vertical lines remain vertical, making some charts easier to read.</li> <li>● Perspective: This provides the most realistic 3D appearance. Objects farther away from you converge toward a vanishing point.</li> </ul>
Viewing Distance	A number from 50 through 1000 that represents the distance from which the chart is viewed as a percentage of the depth of the chart.
Width to Height	A number from 5 through 2000 that represents the percentage of the chart's height that is used to draw the chart's width.
Depth to Height	A number from 5 through 2000 that represents the percentage of the chart's height that is used to draw the chart's depth.

# Axis tab window and fields


Use the Axis tab to specify the title that will display on each axis of the chart.

## Navigation path

From a graphical report, go to Format | Chart | Axis.

## Axis tab example

The following screen displays when you select the Axis tab from the Chart Format Options window:

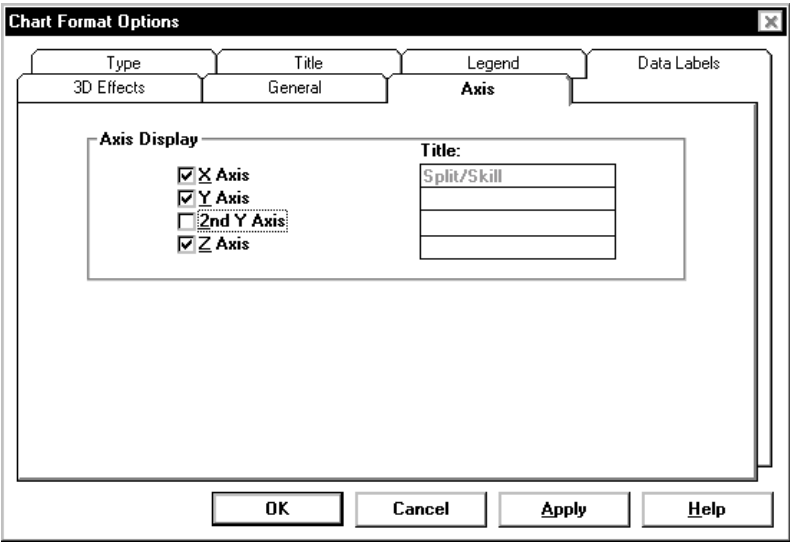

## Axis tab fields

This table describes the following fields:

Field	Description
Axis Display	Makes each of the axes visible or invisible. The choices are X Axis, Y Axis, 2nd Y Axis, and Z Axis.

# Type tab window and fields

Use the Type tab to change the chart type.

## Navigation path


---

From a graphical report, go to Format | Chart | Type.

## Type tab example

---

The following screen displays when you select the Type tab from the Chart Format Options window:

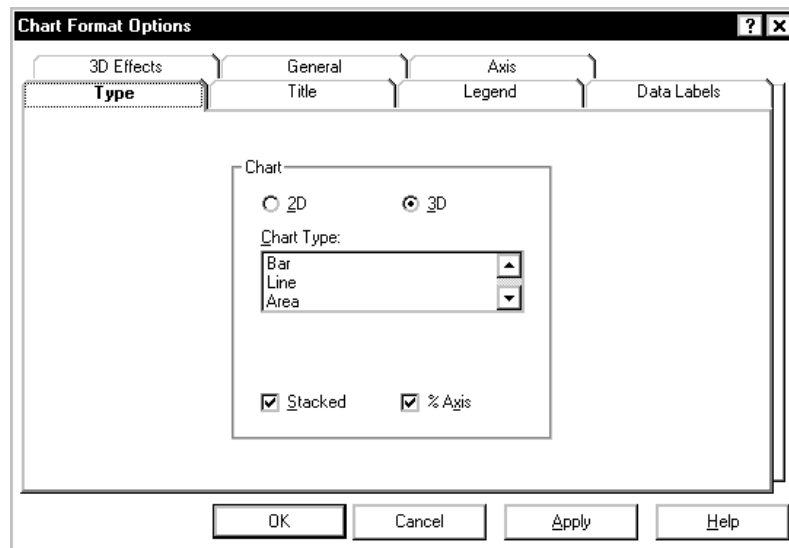

## Type tab fields

---

This table describes the following fields:

Field	Description
2D and 3D	Changes the chart between 2-dimensional and 3-dimensional views. 2D charts update faster than 3D charts, so if the drawing speed seems too slow, you may want to display charts as 2D.
Chart Type	<p>Specifies how the data is presented. You choose a chart type from the list. The types of charts available vary slightly depending on whether a 2D or 3D chart has been selected.</p> <p>All possible chart types are as follows:</p> <ul style="list-style-type: none"><li>● Bar Chart (2D and 3D)</li><li>● Line Chart (2D and 3D)</li><li>● Area Chart (2D and 3D)</li><li>● Step Chart (2D and 3D)</li><li>● Horizontal Bar Chart (2D and 3D)</li><li>● Clustered Bar Chart (3D only)</li><li>● Pie Chart (2D and 3D)</li></ul>
Stacked check box	Causes the data for all series to be stacked rather than shown separately. This check box is disabled for pie charts.
% Axis check box	Causes the value axis (y-axis) to be displayed as percentages rather than as actual data values. This can be combined with the stacked check box to produce a percentage stacked chart.

# Title tab window and fields

Use the Title tab to control the location of the chart title.

## Navigation path


---

From a graphical report, go to Format | Chart | Title.

## Title tab example

---

The following screen displays when you select the Title tab from the Chart Format Options window:

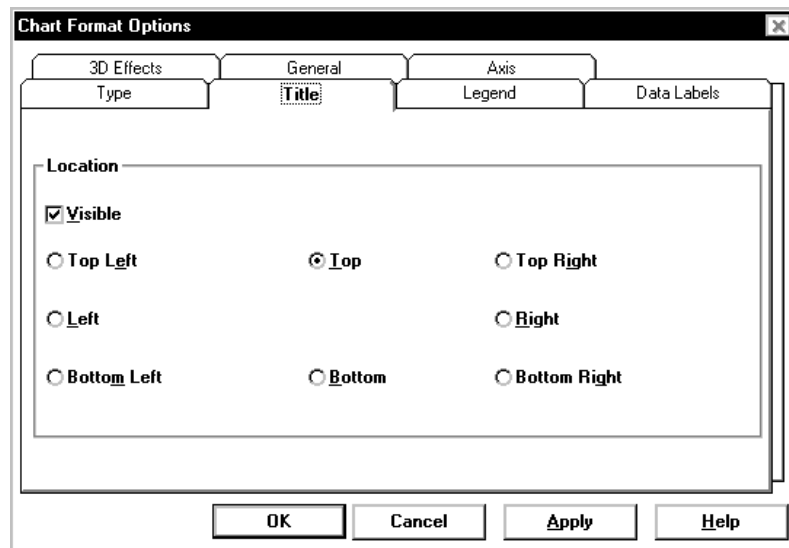

Title tab fields

---

This table describes the following fields:

Field	Description
Visible check box	Allows you to display or not display report titles. Since the title takes up space, the drawn chart will be smaller if you have selected Visible. If you wish to increase the size of the chart, do not select the Visible option.
Location of title	If you elect to have report titles visible, you can select where the titles display. The available options are Top left, Top (center), Top right, Left, Right, Bottom left, Bottom (center), and Bottom right.



# Legend tab window and fields

Use the Legend tab to control the location of the chart title.

## Navigation path


---

From a graphical report, go to Format | Chart | Legend.

## Legend tab example

---

The following screen displays when you select the Legend tab from the Chart Format Options window:

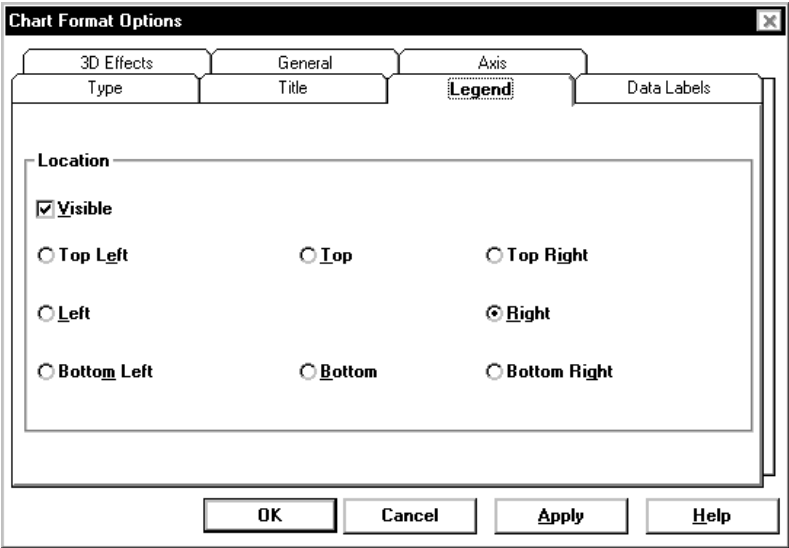

## Legend tab fields

---

This table describes the following fields:

Field	Description
Visible check box	Allows you to display or not display report legends. Since legends take up space, the drawn chart will be smaller if you have selected Visible. If you wish to increase the size of the chart, do not select the Visible option.
Location of legend	If you elect to have report legends visible, you can select where the legend displays. The available options are Top left, Top (center), Top right, Left, Right, Bottom left, Bottom (center), and Bottom right.

## Data Labels tab window and fields

Use the Legend Data Labels tab to control the location of the chart title.

### Navigation path


---

From a graphical report, go to Format | Chart | Data Labels.

### Data Labels tab example

---

The following screen displays when you select the Data Labels tab from the Chart Format Options window:

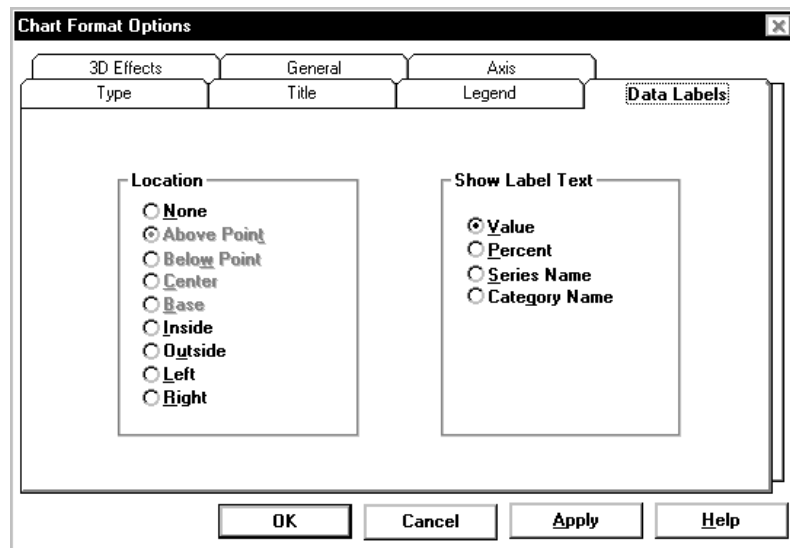

## Data Labels tab fields

---

This table describes the following fields:

Field	Description
None	Labels are not displayed.
Above Point	Displays the label above the data point. This location is valid only for bar, line, area, and step charts.
Below Point	Displays the label below the data point. This location is valid only for bar, line, area, and step charts.
Center	Displays the label centered on the data point. This location is valid only for bar, line, area, and step charts.
Base	Displays the label along the category axis, directly beneath the data point. This location is valid only for bar, line, area, and step charts.
Inside	Displays the label inside a pie slice. This location is valid only for pie charts.
Outside	Displays the label outside a pie slice. This location is valid only for pie charts.
Left	Displays the label at the left of a pie slice. This location is valid only for pie charts.
Right	Displays the label at the right of a pie slice. This location is valid only for pie charts.
Value	The value of the data point appears in the label.
Percent	The value of the data point appears in the label as a percentage.
Series Name	The series name is used to label the data point.
Category Name	The category name is used to label the data point.

## Minimizing report output windows












To minimize a report window, select the minimize button which is located in the upper right-hand corner of the window.

### Icons associated with minimized report windows

---

When a report output window is minimized, the report's icon is displayed.

Depending on the category of the report, one of the following icons will be displayed:

Report Type	Icon
Agent administration reports	
Call Center administration reports	
Agent real-time, historical, and integrated reports	
Dictionary reports	
Exceptions reports	
Maintenance reports	
Other, queue/agent, and custom real-time and historical reports	
Split/skill real-time, historical, and integrated reports	
Trunk/trunk group real-time and historical reports	
VDN real-time, historical, and integrated reports	
Vector real-time and historical reports	

Icons associated with minimized report thresholds

---

If Report Thresholds are enabled, real-time and integrated reports continue to update while they are minimized. If no Caution or Warning threshold condition is currently being met, the report's normal icon, as shown on the previous table, displays on the toolbar and in the system tray. If thresholds are being met, the report's icon on the toolbar remains the same, but the Caution or Warning threshold symbol appears in the system tray.

The threshold symbols are as follows:




Threshold Type	Icon
Caution Threshold	
Warning Threshold	



## Right mouse button pop-up menus

The right mouse button pop-up menu is available only in running reports. When you click the right mouse button, a pop-up menu displays. The menu that displays is dependent on where your cursor is located. It can include options from the Edit, Format, and Tools menus on the Reports menu bar. The applicable menu items for the input field are enabled. If a report object is not selected, a menu is not displayed when you hold down the right mouse button.

To deselect a selected object, click anywhere else on the report.

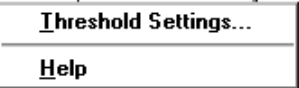The right mouse button pop-up menu is available when you do any of the following actions:

When you ...	This pop-up menu displays ...	And ...
Select a cell in a table and hold down the right mouse button.		A dotted border is drawn around the cell. If you select a cell that displays an agent name, agent number, or work mode, the available drill-down reports for that cell display at the top of the right mouse button menu. See examples of these later in this section.
Select an output field or label and hold down the right mouse button.		The data point is highlighted using selection handles (dots along the edges of the data point). If you selected a data point that allows report threshold highlighting to be set, the menu item will not be grayed out.
Select a data point in a chart and hold down the right mouse button.		A dotted border is drawn around the field. The Threshold Settings menu item is enabled if the highlighted field has related threshold settings.

When you ...	This pop-up menu displays ...	And ...
Select an agent name or agent number in a table and hold down the right mouse button.		<p>A dotted border is drawn around the agent name.</p> <p>If you do not have the EAS feature on your Enterprise Communications Server (ECS) or switch, the drill-down reports available will be the Real-Time Agent Information report and the Integrated Agent Information report.</p> <p>From this menu, you can access either the Real-Time or the Integrated Agent Graphical Information report. If you double click on the agent name and you are running a real-time report, the default drill-down report is the Real-Time Agent Graphical Information report.</p> <p>You can change an agent's splits/skills while you are in a report using this method of selection. See the appropriate chapter in the <i>Avaya Call Management System Administration</i> guide for more information.</p>
Select a cell on a table or a point on a chart that displays agent work state information and hold down the right mouse button.		<p>The data point is highlighted using selection handles (dots along the edges of the data point).</p> <p>If you have the ECS or switch with the EAS feature, the Real-Time AUX Agent drill-down report will also be available.</p> <p>From this menu, you can access the Real-Time Split/Skill Top Agent Work State report, which also displays when you double click on the work state in the report.</p>



## Rotating a 3D chart

The rotation and elevation of any 3D chart can be changed interactively using the mouse. This is easier than using the 3D Effects tab of the Chart Format window (see [3D Effects tab window and fields](#) on page 66 for information on using the 3D Effects tab).

To change the rotation and elevation of a 3D chart, do the following steps:

1. Place the pointer over a 3D chart.
2. Press and hold the CTRL key. The pointer changes to indicate that the chart can be rotated.
3. Click and hold the left mouse button. A dotted 3D outline appears around the chart.
4. Move the pointer up and down to change the chart elevation, and left and right to change the chart rotation. The dotted 3D outline shows the position of the chart as you move the mouse.
5. When you find the rotation and elevation you want, release the mouse button. The chart is redrawn in the new position.

### Result:

The 3D rotation and elevation of each chart is saved as part of the report view.

## Exporting report data

You can export the data from both standard (table) and graphical (chart) reports, either to a file or to the Windows clipboard. Once you have exported report data, you can copy the report information into another application (for instance, a spreadsheet).

### Defaults

---

By default, only the data from the chart or table is exported. You can select the Include Labels and Headers check box on the Export Data window to include that information in the export of data.

### Report format

---

Reports are exported from Supervisor in the following format:

- Data is exported as ASCII characters.
- For table reports, each row of data is written as one line, terminated by a carriage return (ASCII value 13).
- The field separator character is written between fields.
- The field separator does not follow the last character in the line.
- Text strings are delineated according to the specified text delimiter.

### How to export a data report

---

To export the data from a report, do the following:

1. Click on the table or chart within a report.
2. Select Export Table Data or Export Chart Data or Export All Data, as appropriate, from the Edit menu or the right mouse button pop-up menu.

The Export Data window appears. The Export Data window allows you to copy the data from a report to the clipboard or a file.

3. Complete the following parts of the Export Data window:
  - Destination selection box—choose to export the report to the clipboard or to a file. If you are exporting the report to a file, you need to type in a name for the file.
  - You can select the File button to browse the files on your PC, or use the history list to select a file you previously used.

- Export Format selection box—define the export format of the report. The character you choose from the drop- down list in the Field Separator text box is what will be placed between each field in the report. The character you choose for the Text Delimiter determines what is used around text strings in the exported file. If a text delimiter is specified, no special checks are done to ensure that the data does not contain that character and the data is written unmodified.

If you want to export data to Microsoft Excel<sup>TM</sup>, choose Tab as the field separator and None as the text delimiter.

- Export Null Values as Zero—select this check box to include data that is null as a zero in the export of information. This is helpful if you are exporting a table report because a null value that is not included in the export of the data could disrupt the order of the rows/columns in the data.
  - Include Labels and Headers check box—select this check box to include the text information (such as column headers in table reports) in the export of the report's data.
  - Export Time Durations in Seconds—select this check box to include the time duration in the export of information.
4. If you want to automatically export data on a schedule, select the Script button to display the Save as Script dialog box. This dialog box will create a script to export data from the report.
  5. Select OK in the Export Data window.

## Copying chart reports

You can copy chart reports to the Windows clipboard. The copy of the selected chart report is copied to the clipboard in the Windows metafile (WMF) format. This allows you to paste the chart image into any Windows application that can read the metafile format. For instance, you can copy chart reports and import the files into word processing files to be used as viewgraphs.

To copy a chart report to the metafile format, do the following steps:

1. Run a chart (graphical) report.
2. Select the image that you want to copy by clicking on it.
3. Select Copy from the Edit menu or use the right mouse button menu to select Copy.

### Results:

The chart you selected is copied to the clipboard.

# Resizing report windows and columns

## Resizing a window

---

You can resize report windows by moving the cursor to the edge of the window and, when the resize arrow appears, holding down the left mouse button and moving the mouse to size the window. When the window is the size you want it, release the mouse button.

You can also use the maximize and minimize buttons at the top of the window to size the window.

When you resize a report output window, the resulting effect depends on the type of report (standard or graphical) you are running. The following paragraphs outline the effects of resizing each type of report window.

## Standard report window

---

When you resize the window of a standard report, the contents of the window do not change in size to reflect the new window size.

If you made the window smaller than the size of the report, scroll bars will appear to allow you to view the entire contents of the report.

## Graphical report window

---

When you resize the window of a graphical report, the contents of the window will change in size to reflect the new window size.

If a window is made too small, some elements may shrink in such a way to become unreadable. If this happens, resize the window to a more appropriate size. You may also choose to turn chart legends or data labels off to make more room for the chart itself.

The window size is saved as part of the report view.

## Changing a column width

---

You can change the width of an individual table column in a table or chart report by positioning the mouse pointer between the column headers. The pointer will change to indicate that a resize is possible, and you can then drag the mouse to change the column size.

## Setting report threshold highlights

Report threshold highlights let you set visual flags to key you when a real-time data item is out of acceptable bounds. This feature enables you to run a minimized report and be notified (through color/icon changes) when an item has passed a specific threshold.

### Reports

---

You can set threshold highlights only for real-time data items in real-time or integrated reports. The threshold highlights you set will tell you when data for an entity (split/skill, agent, agent group, or VDN) has reached a certain level (threshold), as defined by you.

### Entities

---

Threshold highlight settings apply to a single entity on a specific ACD. For example, if you run a real-time split report for split 17 on ACD 1 and set the threshold highlights, the threshold settings apply to split 17 on ACD 1 for all reports you run for that split and ACD. Also, the threshold highlight settings are saved on the PC you are currently using. So, if you move to another PC, you need to set up the threshold highlights on that PC. If multiple users log into the same PC, each user's threshold highlight settings are saved individually.

### Turn highlights on and off

---

By default, the thresholds for each report are turned on, but the threshold highlight settings are empty and the sample size threshold is zero. Therefore, no threshold highlights show on any reports until you create them using the Threshold Settings window. You can turn thresholds on and off for each report by selecting/deselecting the Thresholds Settings check box in the report input window, or by selecting Threshold Settings from the Options menu in the report output window.

## Example

---

An example of setting report threshold highlights is to set thresholds for Time on ACD Calls in the skill named Sales. You might set the High Caution threshold to 50 seconds and the High Warning threshold to 60 seconds. If an agent spends more than 50 seconds, but less than 60 seconds, on an ACD call in the Sales skill, the item on the report will highlight with the High Caution threshold color. If the time exceeds 60 seconds, the item on the report will highlight with the High Warning threshold color. However, if the agent spends more than 50 seconds on an ACD call in any other skill (that does not have the same thresholds), the item on the report will not display any threshold highlighting.

**Important:**

Report threshold highlights are not the same as Avaya CMS Exceptions Thresholds. The threshold highlighting you can do with this feature is available through the Supervisor interface only.

## Set report threshold highlights

### Before you start

The procedure in this section are used to set report threshold highlights.


#### Important:

When a data item/items for which threshold highlights can be set is selected, the Threshold Settings menu item is enabled. When the data item that is selected does not allow thresholds, an error message will display. See the tables later in this section for a list of the report outputs that allow threshold highlighting.

Depending on which data item you have selected, the Sample Size box at the bottom of the Threshold Settings window may or may not be visible. If you selected a data item that is a percentage or an average, the Sample Size box is present.

### Threshold Settings example

The following is an example of the Threshold Settings window:

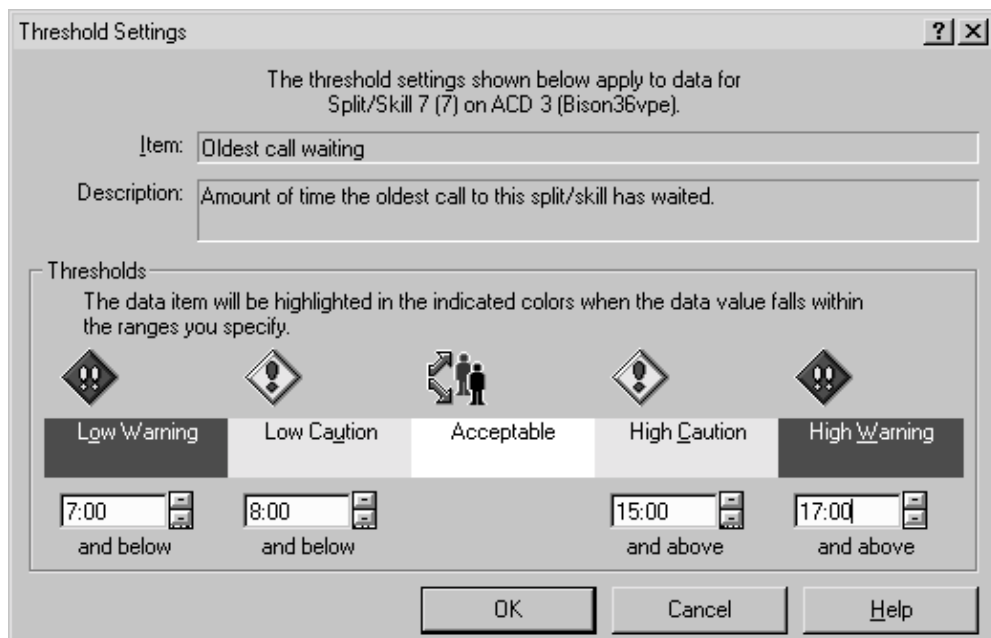

Threshold Settings

The threshold settings shown below apply to data for Split/Skill 7 (7) on ACD 3 (Bison36vpe).

Item: Oldest call waiting

Description: Amount of time the oldest call to this split/skill has waited.

Thresholds

The data item will be highlighted in the indicated colors when the data value falls within the ranges you specify.

Low Warning	Low Caution	Acceptable	High Caution	High Warning
7:00 and below	8:00 and below		15:00 and above	17:00 and above

OK Cancel Help



## Procedure

---

To set report threshold highlights do the following steps:

1. Run a report that contains real-time data (a real-time or integrated report).
2. Select on a data item in the report for which you can set threshold highlights.
3. Select Threshold Settings from the right mouse button or from the Tools menu.
4. Complete the Threshold Settings window.

The Threshold Settings window includes the following information and text boxes:

- **Item** — shows the name of the report threshold that applies to the selected data value. In most cases, this box contains a single entry. If the data value is agent Time in State or Time in Workmode, or agent group Time in State or Time in Workmode, then this list box contains multiple names, one for each possible agent state or workmode. Threshold highlights can be set for each individual state and workmode.
- **Description** — shows a description of the threshold currently selected.
- **Thresholds** — shows the colors (as defined in the Options Threshold Colors tab, accessed from the Tools menu), icons, and current numerical settings for the threshold highlights of this item. For thresholds that are time-related, the numbers you enter are in seconds. For example, if you are entering a High Caution threshold for three minutes, type 180 (for 180 seconds) in the High Caution field.
- **Sample Size** — contains the current value for the Sufficient Sample Size value. You can set this to any value from 0 to 999. When you set Sufficient Sample Size value, you are defining a minimum number of items that must be currently tracked before the threshold highlighting is enabled. You will only see Sample Size if the data item you selected is a percentage or an average.
- There are four types of thresholds available on the Threshold Settings window:
  - **Low Warning** — contains the current value for the Low Warning threshold for the selected data item. If no value is defined, the field is blank. You can set the value to any positive integer from 0 to 999,999,999 or leave it blank. If the field is blank, no threshold is set.
  - **Low Caution** — contains the current value for the Low Caution threshold for the selected data item. If no value is defined, the field is blank. You can set the value to any positive integer from 0 to 999,999,999 or leave it blank. If the field is blank, no threshold is set.
  - **High Caution** — contains the current value for the High Caution threshold for the selected data item. If no value is defined, the field is blank. You can set the value to any positive integer from 0 to 999,999,999 or leave it blank. If the field is blank, no threshold is set.
  - **High Warning** — contains the current value for the High Warning threshold for the selected data item. If no value is defined, the field is blank. You can set the value to any positive integer from 0 to 999,999,999 or leave it blank. If the field is blank, no threshold is set.

## Tips for setting report threshold highlights

Use the tips in this section when setting report threshold highlights.

Keep the following tips in mind when you are setting report threshold highlights:

- Before you can administer threshold highlights for a data item, you must first click on the data item in the report to select it. When a data item is highlighted in a table (standard) report, it is outlined with a dotted line. When a data item is highlighted in a chart (graphical) report, it has pull-bars around the perimeter.
- See the [Available agent threshold settings](#) on page 92, [Available Split/Skill threshold settings](#) on page 95, and [Available VDN threshold settings](#) on page 98 for more information on the real-time data items in reports for which you can set threshold highlights.
- In standard reports, you can select items from the table or from the output information at the top of the report.
- In chart reports, you can select items from the pie charts, bar charts, graphical reports, or tables.
- When you set threshold highlights for an entity (split/skill, agent, agent group, or VDN), that set of threshold highlights applies to every report that is run specifically for that entity.
- The report threshold highlights are updated with each refresh of the report, but not between report refreshes.
- The numbers you define for the threshold highlights must increase from left to right (the number you use for Low Warning must be less than the number you use for High Warning).
- You can set the label colors by choosing Options from the Tools menu on the Controller.
- Depending on how you define the colors, the sample size threshold can behave in the following ways:
  - If you want to be alerted to the fact that a particular calculation is not statistically significant, set the Insufficient color to a different color than any other threshold condition. This causes data with insufficient sample size to be highlighted in a special color.
  - If you want to ignore values with insufficient sample sizes, set the Insufficient color to be black text on a gray background. This causes the value with insufficient sample size to not be highlighted.

- You can set report thresholds to affect how report data is displayed.
- There are two ways data is affected:
  - If the data calculation contains a non-zero Sample Size threshold, the denominator of the specified calculation is compared to the Sample Size threshold. If the denominator is less than the Sample Size threshold, the value displays in the Insufficient color, indicating that the sample size is insufficient for the value to be significant.
  - If the sample size is sufficient or if there is no sample size associated with the data, then the data value is compared to the Low Warning, Low Caution, High Caution, and High Warning threshold values to determine which band applies. The value is displayed in the color associated with the appropriate threshold.

## Available agent threshold settings

Use the data items in this section when setting agent threshold highlights.

All of the data that Supervisor uses for agent threshold highlights are retrieved from the cagent (current interval agent) database table. See the Avaya Call Management System Database Items and Calculations document for more information on the database tables.

The Average Talk Time data item includes Sample Size thresholds.

The agent threshold highlights you can set are as follows:

Threshold	Description/database item or calculation
Time in AUX State	Description — Amount of time the agent is in the Auxiliary Work state. Measures — DURATION while AGSTATE = AUX
Time in AUX-IN State	Description — Amount of time the agent is on an incoming call while in the Auxiliary Work state. Measures — DURATION while AGSTATE = AUX-IN
Time in AUX-OUT State	Description — Amount of time the agent is on an outgoing call while in the Auxiliary Work state. Measures — DURATION while AGSTATE = AUX-OUT
Time in ACW State	Description — Amount of time the agent is in the After Call Work state. Measures — DURATION while AGSTATE = ACW
Time in ACW-IN State	Description — Amount of time the agent is on an incoming call while in the After Call Work state. Measures — DURATION while AGSTATE = ACW-IN
Time in ACW-OUT State	Description — Amount of time the agent is on an outgoing call while in the After Call Work state. Measures — DURATION while AGSTATE = ACW-OUT
Time in AVAIL State	Description — Amount of time the agent is in the AVAIL state. Measures — DURATION while AGSTATE = AVAIL
Time in ACD State	Description — Amount of time the agent is in the ACD state. Measures — DURATION while AGSTATE = ACD
Time in ACD-IN State	Description — Amount of time the agent is in the ACD-IN state. Measures — DURATION while AGSTATE = ACD-IN
Time in ACD-OUT State	Description — Amount of time the agent is in the ACD-OUT state. Measures — DURATION while AGSTATE = ACD-OUT

Time in DACD State	Description — Amount of time the agent is in the DACD state. Measures — DURATION while AGSTATE = DACD
Time in DACD-IN State	Description — Amount of time the agent is in the DACD-IN state. Measures — DURATION while AGSTATE = DACD-IN
Time in DACD-OUT State	Description — Amount of time the agent is in the DACD-OUT state. Measures — DURATION while AGSTATE = DACD-OUT
Time in DACW State	Description — Amount of time the agent is in the DACW state. Measures — DURATION while AGSTATE = DACW
Time in DACW-IN State	Description — Amount of time the agent is in the DACW-IN state. Measures — DURATION while AGSTATE = DACW-IN
Time in DACW-OUT State	Description — Amount of time the agent is in the DACW-OUT state. Measures — DURATION while AGSTATE = DACW-OUT
Time in RING State	Description — Amount of time the agent is in the RING state. Measures — DURATION while AGSTATE = RING
Time AUX Workmode	Description — Amount of time the agent is in the AUX workmode, including incoming and outgoing calls. This time measures the time the agent remains in AUX, regardless of any incoming or outgoing calls handled. Measures — AGTIME while WORKMODE = AUX.
Time in ACD Workmode	Description — Amount of time the agent is in the ACD workmode, including incoming and outgoing calls. This time measures the time the agent remains in ACD, regardless of any incoming or outgoing calls handled. Measures — AGTIME while WORKMODE = ACD
Time in ACW Workmode	Description — Amount of time the agent is in the ACW workmode, including incoming and outgoing calls. This time measures the time the agent remains in ACW, regardless of any incoming or outgoing calls handled. Measures — AGTIME while WORKMODE = ACW
Time in AVAIL Workmode	Description — Amount of time the agent is in the AVAIL workmode, including incoming and outgoing calls. This time measures the time the agent remains in AVAIL, regardless of any incoming or outgoing calls handled. Measures — AGTIME while WORKMODE = AVAIL

Time in DACD Workmode	Description — Amount of time the agent is in the DACD workmode. This time measures the time the agent remains in DACD, regardless of any incoming or outgoing calls handled. Measures — AGTIME while WORKMODE = DACD
Time in DACW Workmode	Description — Amount of time the agent is in the DACW workmode, including incoming and outgoing calls. This time measures the time the agent remains in DACW, regardless of any incoming or outgoing calls handled. Measures — AGTIME while WORKMODE = DACW
Calls in Direct Agent Queue	Description — Number of Direct Agent calls that are queued to the agent. DA_INQUEUE is the current number of Direct Agent calls waiting in any split/skill queue for a specific agent. Measures — DA_INQUEUE
Time call waiting in Direct Agent Queue	Description — Amount of time the caller has waited in the Direct Agent queue. DA_OLDESTCALL is the length of time that the oldest Direct Agent call has waited in any split/skill queue for this agent. Measures — DA_OLDESTCALL
Average Talk Time	Description — Average length of time the agent spends talking on ACD calls. Measures — AVG_AGENT_TALK_TIME calculation.

## Available Split/Skill threshold settings

Use the data items in this section when setting split/skill threshold highlights.

### About split/skill threshold settings

---

All of the data that Supervisor uses for split/skill threshold highlights are retrieved from the csplit (current interval split) database table. See the Avaya Call Management System Database Items and Calculations document for more information on the database tables.

The following data items include Sample Size thresholds:

- Average Speed of Answer
- Average Talk Time
- Average Time to Abandon
- Percent of Calls Answered in Service Level
- Percent of Calls Abandoned
- Percent of Calls Answered

## Split/Skill table

---

The split/skill threshold highlights you can set are as follows:

Threshold	Description/database item or calculation
Oldest Call Waiting	Description — Amount of time the oldest call to this split/skill has waited in queue. OLDESTCALL is the number of seconds the oldest split/skill ACD call has waited in queue or ringing. Measures — OLDESTCALL
Number of Calls Waiting in Queue	Description — Number of calls queued to this split/skill. The computation measures the number of calls in queue or ringing at an agent position. Measures — INQUEUE + INRING
Number of Calls Abandoned	Description — Number of calls that were queued to this split/skill and then abandoned. ABNCALLS is the number of calls offered to a split/queue which were subsequently abandoned by the caller. Measures — ABNCALLS
Average Speed of Answer	Description — Number of seconds, on average, before a call to this split/skill is answered. Average speed of answer is the ANSTIME (time spent by callers in queue or ringing before being answered) divided by the ACDCALLS (number of calls queued to the split/skill that were answered by an agent at this split/skill). Measures — AVG_ANSWER_SPEED
Average Talk Time	Description — Average length of time spent on ACD calls to the split/skill. Measures — AVG_ACD_TALK_TIME
Average Time to Abandon	Description — Average length of time callers waited before abandoning calls to the split/skill. Measures — AVG_ABANDON_TIME
Full Time Equivalent Agents Staffed	Description — Number of total full-time equivalent agents currently staffed for the skill. Measures — FTE_AGENTS
Number of Calls Forced Busy	Description — Number of calls to the split/skill that were given a busy signal by the switch. Measures — BUSYCALLS
Number of Calls Disconnected	Description — Number of calls to the split/skill that were disconnected by the switch. Measures — DISCCALLS



Percent of Calls Answered in Service Level	Description — Percentage of ACD calls to the split/skill that were answered within the service level. Measures — PERCENT_SERV_LVL_SPL
Percent of Calls Abandoned	Description — Percentage of ACD calls to the split/skill that were abandoned. Measures — PERCENT_CALL_ABAN
Number of Agents Staffed	Description — Number of agents logged into the split/skill. Measures — STAFFED
Percent of Calls Answered	Description — Percent of ACD calls offered to the split/skill that were answered. Measures — PERCENT_CALL_ANS
Call Profile Abandon per Service Level Increment	Description — Number of abandoned calls to the split/skill for any service level increment. A single report threshold applies to all of the values. If the number of abandoned calls for the split/skill reaches the threshold for any of the service level increments, the value for that service level increment is highlighted. Measures — ABNCALLS1 through ABNCALLS10
Rolling Average Speed of Answer	Description — Switch-based Rolling Average Speed of Answer for this split/skill. The Rolling Average Speed of Answer is the average speed of answer across intervals. Measures — ASA
Expected Wait Time (Low)	Description — Expected Wait Time for a call queued to this split/skill at a low priority level. Measures — EWTLOW
Expected Wait Time (Medium)	Description — Expected Wait Time for a call queued to this split/skill at medium priority level. Measures — EWTMEDIUM
Expected Wait Time (High)	Description — Expected Wait Time for a call queued to this split/skill at high priority level. Measures — EWTHIGH
Expected Wait Time (Top)	Description — Expected Wait Time for a call queued to this split/skill at top priority level. Measures — EWTTOP

## Available VDN threshold settings

Use the data items in this section when setting VDN threshold highlights.

All of the data that Supervisor uses for VDN threshold highlights are retrieved from the cvdn (current interval VDN) database table. See the Avaya Call Management System Database Items and Calculations document for more information on the database tables.

The following data items include Sample Size thresholds:

- Percent of Calls Answered in Service Level
- Percent of Calls Abandoned
- Percent of Calls Answered
- Average Speed of Answer
- Average Talk Time
- Average Time to Abandon

The VDN threshold highlights you can set are as follows:

Threshold	Description/database item or calculation
Number of Calls Abandoned During the Interval	Description — Number of calls that were queued to this VDN and then abandoned. Measures — ABNCALLS
Number of Calls Forced Busy During the Interval	Description — Number of calls to the VDN that were given a busy signal by the switch. Measures — BUSYCALLS
Number of Calls Disconnected During the Interval	Description — Number of calls to the VDN that were disconnected by the switch via the vector disconnect command. Measures — DISCCALLS
Oldest Call Waiting	Description — Number of seconds the oldest call has waited in this VDN. Measures — OLDESTCALL
Number of Calls Waiting	Description — Number of calls queued to this VDN that have not been answered by an agent. Measures — INPROGRESS - ATAGENT
Percent of Calls Answered in Service Level	Description — Percentage of ACD calls to the VDN that were answered within the service level. Measures — $100 * (\text{ACCEPTABLE} / \text{INCALLS})$
Percent of Calls Abandoned	Description — Percentage of ACD calls to the VDN that were abandoned. Measures — $100 * (\text{ABNCALLS} / \text{INCALLS})$

Percent of Calls Answered	Description — Percentage of ACD calls offered to the VDN that were answered. Measures — $100 * [(ACDCALLS + CONNECTCALLS) / INCALLS]$
Call Profile Abandon per Service Level Increment	Description — Number of abandoned calls to this VDN for any service level increment. A single report threshold applies to all of the values. If the number of abandoned calls for the VDN reaches the threshold for any of the service level increments, the value for that service level increment is highlighted. Measures — ABNCALLS1 through ABNCALLS10
Average Speed of Answer	Description — Number of seconds, on average, before a call to this VDN is answered. This value is the time callers spent in queue or ringing before being answered divided by the number of calls queued to the VDN that were answered by an agent at this VDN. Measures — AVG_ANSWER_SPEED
Average Talk Time	Description — Average length of time spent on ACD calls to the VDN. Measures — AVG_ACD_TALK_TIME
Average Time to Abandon	Description — Average length of time callers waited before abandoning calls to the VDN. Measures — AVG_ABANDON_TIME
Rolling Average Speed of Answer	Description — Switch-based Rolling Average Speed of Answer for this VDN. The Rolling Average Speed of Answer is the average speed of answer across intervals. Measures — ASA

## Report options

Use the Options tab to do the following actions:

- Set the ACD and other general options that Supervisor will default to when you log in (General tab).
- Set up the colors that will be used in your graphical reports (Report Colors tab).
- Set up the colors that will be used in reports to tell you when threshold highlights (not exceptions thresholds) have been reached. See [Set report threshold highlights](#) on page 88 for more information on threshold highlights.
- Choose or create a name format using {name} for Dictionary Name, {entity} for entity type, and {number} for entity number. The name format determines how items will be displayed in reports. For instance, if you select the name format of {entity} {number}, then all of the entities (splits/skills, ACDs, VDNs, vectors, trunks, trunk groups, call work codes, and AUX codes) that can be named in the Dictionary will display as the entity type and number instead of the Dictionary name. If you selected {name} as the name format, then the names that have been assigned to the entities in the Dictionary will display.

## Options General tab

Use the General tab to set your first calendar day, default ACD, and other general options.


### ! Important:

The General tab is accessible when you are connected to a CMS server.

Threshold highlighting does not use sound. It uses color only as an indicator of a threshold being met.

## Options General tab example

The following graphic shows the Options General tab (with default settings):

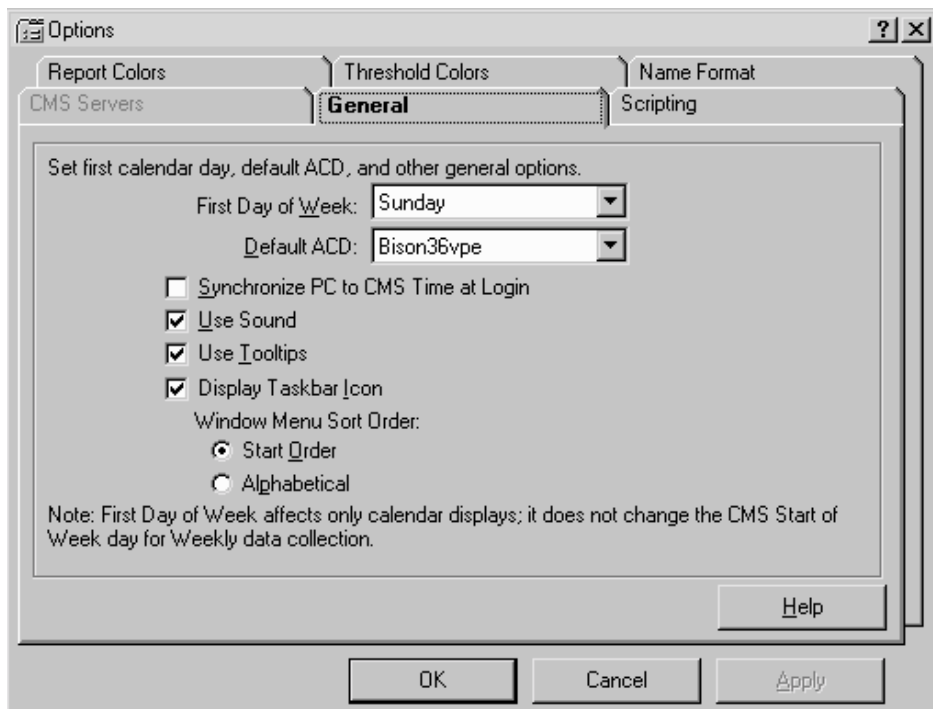

### Options

---

The options are described as follows:

- **First Day of Week** — this option affects only how the calendar displays; it does not change the CMS Start of Week day for weekly data collection (the CMS Start of Week day is set through the System Setup: Storage Intervals window). For example, if you browse for a date, the calendar will start the week based on the day that you choose.

Use the drop-down list to make your selection.

- **Default ACD** — when you select the ACD, this ACD will be the default listed in the functions windows and drop-down list options.

Use the drop-down list to make your selection.

- **Synchronize PC and CMS Time at Login** — activate the check box for this selection to set the PC's clock to read the same time as the CMS clock. If you do not activate this selection, your PC clock and the CMS clock may not read the same time. This does not affect the CMS clock.
- **Use Sound** — activate the check box for this selection to be alerted, by sound, when the Exceptions Indicator box is updated. The Exceptions Indicator box is on the Controller status bar. The sound you hear is the sound you have chosen for the exclamation event associated with your PC.
- **Use Tooltips** — activate the check box to make tooltips visible. For example, when you are working on the Controller window, you may place your mouse cursor over a toolbar button and a yellow box will appear with a brief description of that button.
- **Use Taskbar Icon** — activate the check box for this selection to use the Supervisor system tray icon feature.
- **Window Menu Sort Order** —if you activate the Use Tray Icon, you need to determine how the items that display in the system tray icon menu will be sorted.
- The following sort options are available:
  - **Start Order** — select this radio button and the items in the system tray icon menu will display in the order in which you started them from Supervisor.
  - **Alphabetical** — select this radio button and the items in the system tray icon menu will display in alphabetical order, regardless of the order in which you started them.

## Options Report Colors tab

Use the Report Colors tab to set up the colors that will be used in your graphical reports.


### ⚠ Important:

The Report Colors tab is accessible when you *are* connected to a CMS server.

### Options Report Colors tab example

---

The following graphic shows the Options Report Colors tab (with default settings).

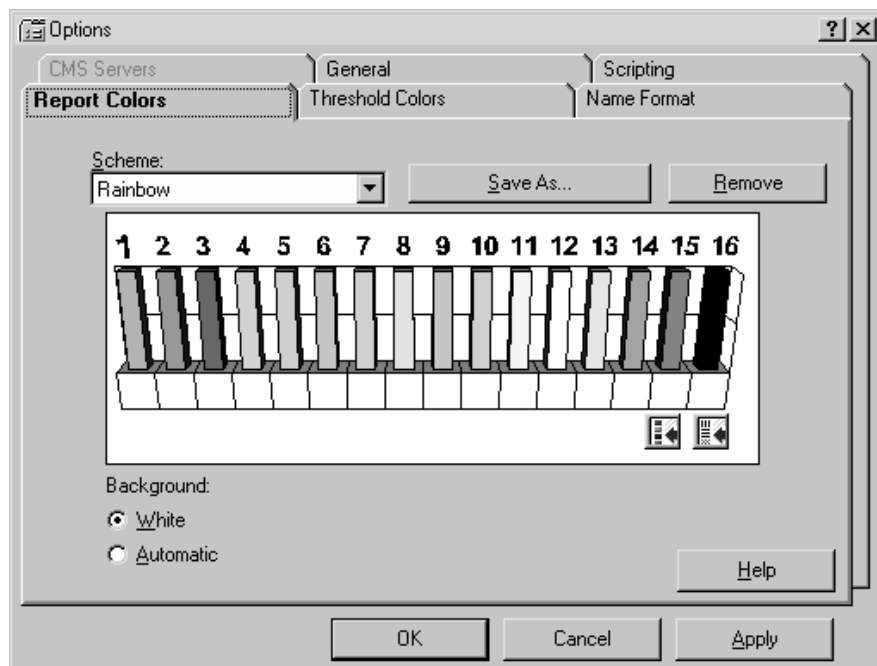

### Scheme

---

You can select the report color scheme that you want to use for reports. Select one of the following two ways:

- From a series of predefined color schemes, which are listed in the Scheme field. Use the drop-down list to select a different scheme from the one that is currently displayed.
- By creating a new color scheme. See the [Create a new report color scheme](#) on page 108 section in this chapter for instructions on creating report color schemes.
- Background — Supervisor allows a choice of report background color. Use one of the following two choices:
  - White — Select this radio button to make the background of all reports white.
  - Automatic — Select this radio button to make the background of all reports match the color that you have set up for your system in Windows.



## Options Threshold Colors tab


Use the Threshold Colors tab to set up the colors that will be used in reports to tell you when exceptions thresholds have been reached.

### ! Important:

The Threshold Colors tab is accessible when you are connected to a CMS server.

## Options Threshold Colors tab example

The following graphic shows the Options Threshold Colors tab (with default settings):

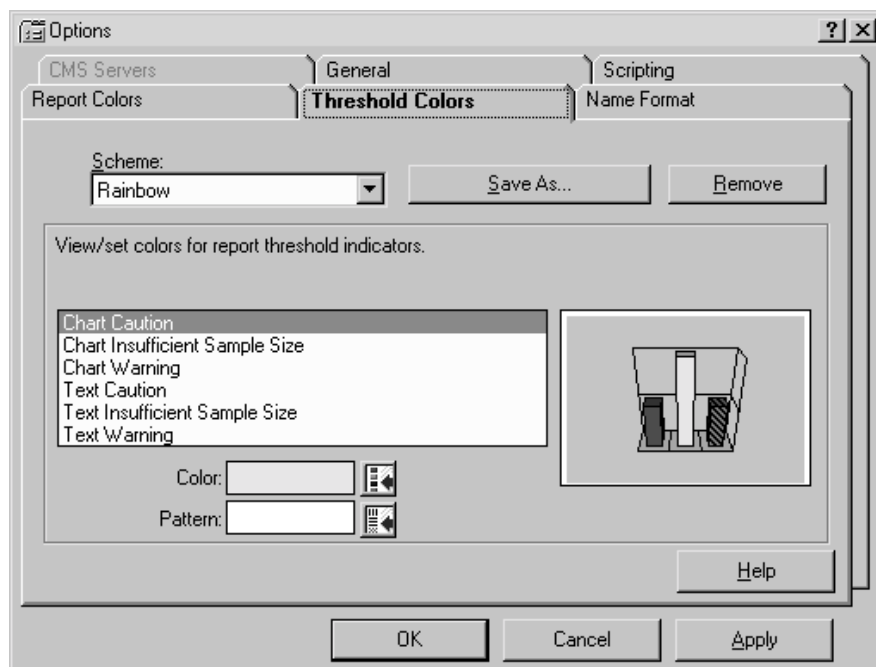

## Procedure

You can select report color schemes in the following ways:

- From a series of predefined color schemes, which are listed in the Scheme field. Use the drop-down list to select a different scheme from the one that is currently displayed.
- By creating a new color scheme. See the [Create a new threshold color scheme](#) on page 110 for instructions on creating report color schemes.

## Options Name Format tab

This section describes the Options Name Format tab. Use the Name Format tab to choose or create formats for how CMS entities (splits/skills, ACDs, VDNs, vectors, trunks, trunk groups, call work codes, and AUX codes) will display in Supervisor. The display can be set to any one or a combination of {name} for Dictionary Name, {entity} for entity type, and {number} for entity number.


**Important:**

The Name Format tab is accessible when you are connected to a CMS server.

### Options Name Format tab example

---

The following graphic shows the Options Name Format tab (with default settings).

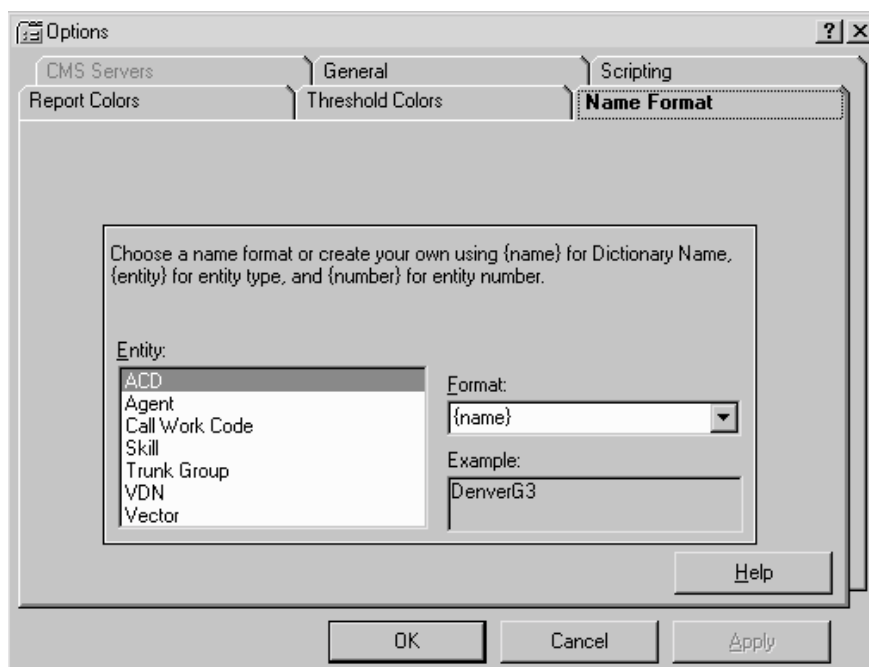

## Procedure

---

To define the name format for entities, do the following steps:

1. Select the item for which you want to set formats from the Entity box.

2. In the Format text box, do either of the following actions:

- Type the format that you want ({name}, {entity}, or {number})
- Use the drop-down list to choose from a set of preformatted options.

For example, if you want to display agent names and extension numbers on reports, enter {name} {number} in the Format box.

The Example box provides an example of what the format will look like based on your current definition of the name format.

3. Select OK to save your changes. Select Cancel to clear your changes.

See [Create a new name format](#) on page 112 for information on creating a new report name format.


## Create a new report color scheme

The procedure in this section describes how to create a new report color scheme.

If you do not save the new color scheme using the Save As button, the changes that you made will overwrite the default color scheme that you modified.

### Report Colors tab example

---

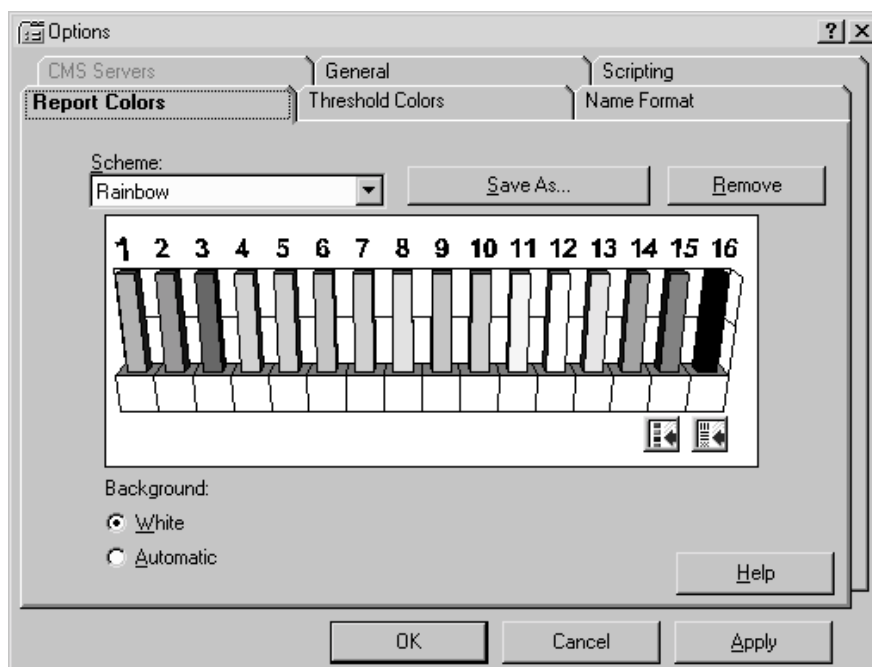

## Procedure

---

Use the following procedure to create a new report color scheme:

1. Choose Options from the Tools menu, or select the Options button from the toolbar.
2. Select the Report Colors tab.
3. Select the color scheme with which you want to begin from the Scheme drop-down list.  
The view of the scheme displays.
4. Choose the Background color for reports by selecting White or Automatic.
5. Click on the color bar (1 through 16) you want to modify.
6. Select either the Color Selector or the Pattern Selector button.
7. To select a new color, choose from the Basic colors palette, or create a custom color using standard Windows procedures.
8. To select a new pattern, click on the pattern you want to use.
9. Repeat Steps 5 through 7 until you have updated all of the color bars that you want to modify.
10. When you are done modifying color bars, select Save As.
11. Type the name of the report color scheme that you created in the text box.
12. Select OK to save the scheme and the scheme name.



**Important:**


You can view the changes that you made to a color scheme at any point in the modification by selecting Apply. When you do this, the current color scheme is applied to any reports that are running.

## Create a new threshold color scheme

The procedure in this section describes how to create a new threshold color scheme.

### Threshold Colors tab example

---

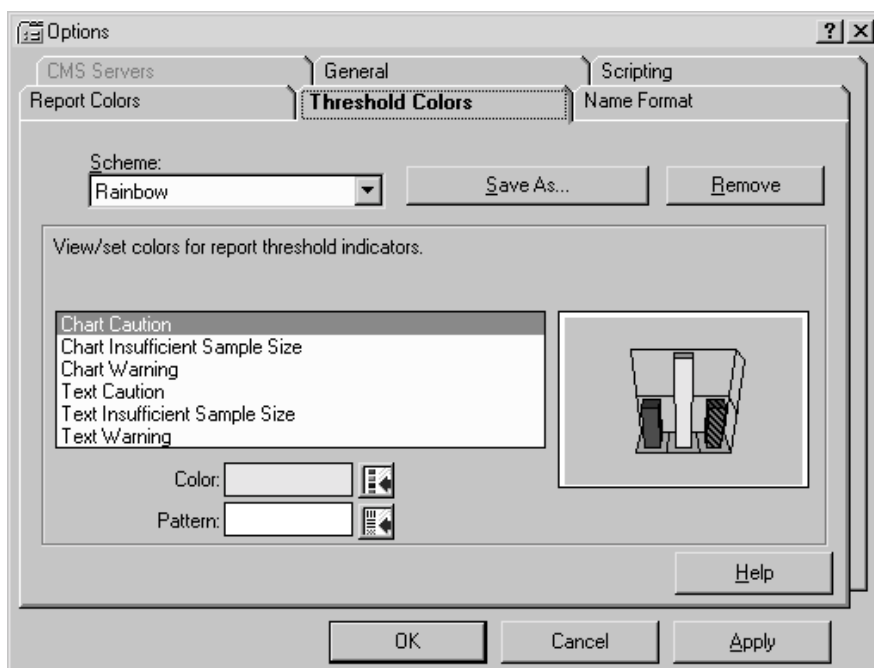

## Procedure

---

To create a new threshold color scheme for reports, do the following steps:

1. Choose Options from the Tools menu, or select the Options button on the toolbar.
2. Select the Threshold Colors tab.
3. Select the color scheme with which you want to begin from the Scheme drop-down list.

The view of the scheme displays.

4. Select the element of threshold highlighting that you want to modify colors for from the list box (Chart Caution, Chart Insufficient Sample Size, Chart Warning, Text Caution, Text Insufficient Sample Size, Text Warning).

The current setting for the element displays to the right of the list box.

5. Select the Color Selector button next to the Text display box to set the color that will be displayed as text.
6. Choose a color from the Basic colors palette, or create a custom color using standard Windows procedures.
7. Select OK when you are done.

The Options window displays.

8. Select the Color Selector button next to the Background display box to set the color that will be displayed as the background on the threshold element.

The Color palette displays.

9. Choose a color from the Basic colors palette or create a custom color using standard Windows procedures.
  10. Select OK when you are done.
- The Options window displays.
11. Repeat Steps 4 through 6 until you have updated all of the threshold element colors that you want to modify.

12. When you are done modifying the threshold element colors, select Save As.
13. Type the name of the threshold color scheme that you created in the text box.
14. Select OK to save the scheme and the scheme name.



### **Important:**

You can view the changes that you made to a color scheme at any point in the modification by selecting Apply. When you do this, the current color scheme is applied to any threshold highlights that are displayed on running reports.

## Create a new name format

The procedure in this section describes how to create a new report name format.

To create a new name format, do the following steps:

1. Choose Options from the Tools menu, or select the Options button on the toolbar.
2. Select the Name Format tab.
3. Select the Entity for which you want to change the name format.
4. In the Format text box, use the drop-down list to select one of the standard formats, or type in a name combination.
5. Select OK.
6. If you typed a nonstandard name format in Step 4, the format is not saved in the Format list as a standard option.
7. To select another name format, go to the Name Format tab, select the format, and then select OK.



# Real-time reports

This chapter gives a brief description of each available real-time report and definitions of the input fields. It provides the information needed to complete any real-time report input screen.

## Organization of real-time reports

---

The following topics are covered:

- [About real-time reports](#) on page 114
- [Agent reports](#) on page 116
- [Other reports](#) on page 137
- [Queue/Agent reports](#) on page 157
- [Split/Skill reports](#) on page 175
- [Trunk Group report](#) on page 274
- [VDN reports](#) on page 278
- [Vector report](#) on page 295
- [Drill-down reports](#) on page 300

---

# About real-time reports

## Introduction

---

Real-time reports give supervisors snapshots of the call center's performance and status. Abandoned calls, for example, can be monitored to determine the waiting-for-service tolerance of callers and compared to the number of calls in queue. Additionally, agent productivity can be compared at a glance to determine who may need help in speeding after call work.

Standard real-time reports:

- Show the current status of Automatic Call Distribution (ACD) activity. The types of data for reports are status, cumulative, and administrative. (See the Avaya Call Management System Database Items and Calculations document for a description of these data types.)
- Display data for the current interval for agent, split/skill, trunk/trunk group, vector, and Vector Directory Number (VDN) activities, such as number of ACD calls, abandoned calls, average talk time, and so on. All database items and calculations that are used for real-time reports are taken from the current interval tables.
- You assign the length of the current interval for real-time ACD data in the System Setup: Storage Intervals window. See the Avaya Call Management System Administration document for more information.

The Expert Agent Selection (EAS), Vectoring, and Graphics reports are also included in this chapter. If you do not have the EAS feature, Vectoring feature, or Graphics package, those report items do not appear on your menu. The reports you see depend on your switch type, permissions, and system performance.

## Presentation


---

This chapter gives a brief description of each available report and definitions of the input fields. It provides you with the information you need to complete any real-time report input screen.

A short summary and example of each real-time report is included in this chapter. When you generate a real-time report, the totals for the report columns are on the top line of the report under the headings.

## Diagram of real-time reporting system

The following diagram shows how the real-time reporting system is structured. This section follows the report structure outlined in this diagram-agent reports are described first, followed by other reports, etc.

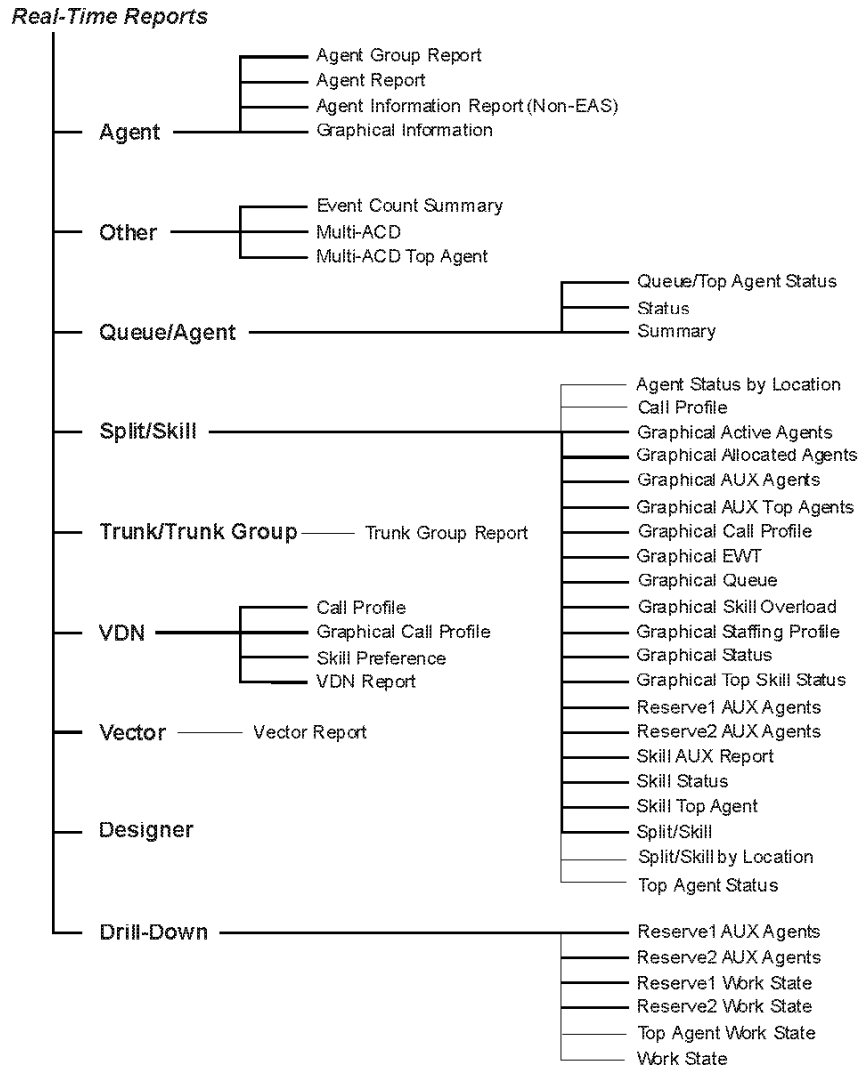

# Agent reports

This section discusses Agent reports.

## General information about Agent reports

### What an Agent report contains

---

The Agent reports give you the following specific information about agents:

- The agents according to groups you have created in the Dictionary subsystem
- The current activities of all agents assigned to a split or skill
- Real-time information and statistics for a specified agent

### Organization of Agent reports


---

The following list shows how the Agent reports are organized in Supervisor:

- [Agent Group report](#) on page 120
- [Agent report](#) on page 123
- [Agent Information report](#) on page 126
- [Graphical Information report](#) on page 131

## Agent report selector example

The following figure is an example of the Agent report selector window. The reports are explained in the same order as listed in the window.

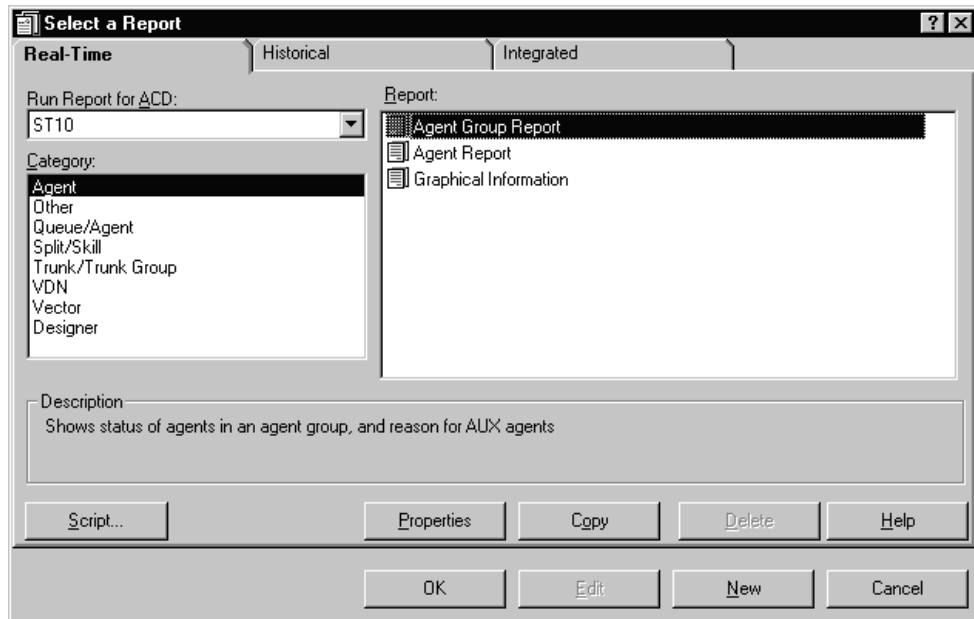

## Agent report selector windows and input fields

The reports in this section use the Agent report selector windows and its input fields. Specific input information is included with the reports.

### Agent report input fields

---

Not all reports use all fields; refer to information for the specific report you are running to determine what you want to view. For example, you may enter an agent group, agent name, or split/skill to run the report.

## Input fields

---

The following table describes the input fields on real-time agent report input windows:

Field	Definition
Agent group	Enter the name of the group that you want to view. Any names that you want to appear on the report must have been previously defined and entered in the Dictionary subsystem.
Agent or Agent Name	Enter the name of the agent. The agent's name must be defined in the Dictionary subsystem; otherwise, you will see the agent Login IDs.
Split/Skill	Enter the split or skill name or number that you want to view in this report. Any names that you want to appear on the report must have been previously defined and entered in the Dictionary subsystem.
Refresh Every <#> Seconds	Enter the number of seconds (3 to 600) to specify how rapidly Avaya Call Management Center (CMS) should update the report data. The default for the Refresh Every <#> Seconds field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check the Enable Report Thresholds option to start the report with report thresholds running. Uncheck the option if you do not want to run report thresholds.
Run Minimized	Click the Run Minimized option to run the report in a minimized window. Uncheck the option to run the report at full size.

# Agent Group report

The Agent Group report allows you to view agents according to groups you have created in the Dictionary subsystem. For example, these groups could be new agents, agents with specific extension numbers, or any grouping that fits your call center's needs.


## Things to know about this report

Here are some things you need to know about this report:

- Only one agent group displays on this report. If you want to compare groups, you can bring up two reports separately and toggle between the reports.
- Only the agents logged in and assigned to the group display in the report.
- The database items used for the Agent Group report are stored in the cagent table.
- This report uses the Agent Group input window. Select an agent group to view on the report. See [Agent report selector windows and input fields](#) on page 118 for more information.

## Agent Group report example

The following figure provides an example of the Agent Group report:

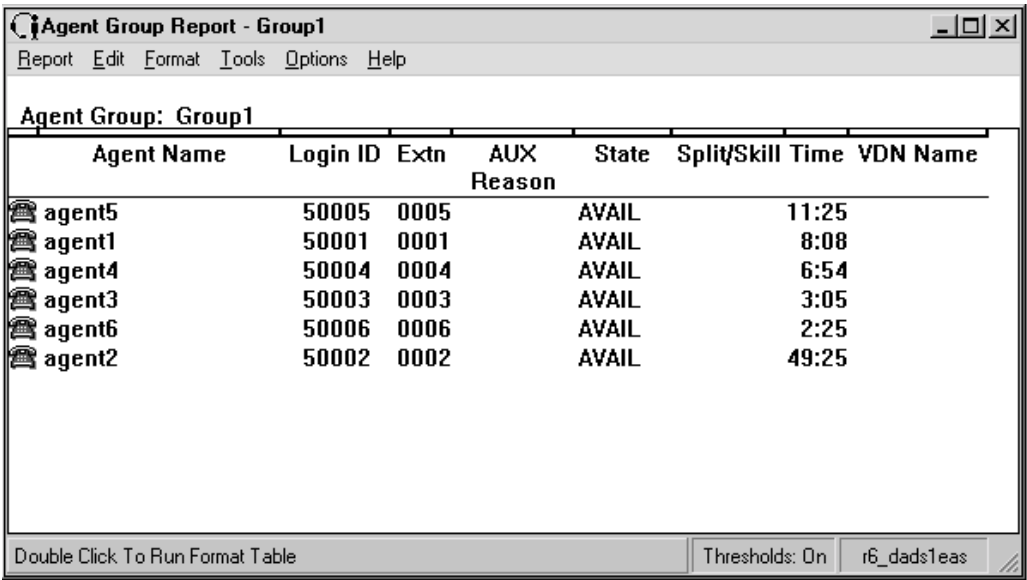

The screenshot shows a window titled "Agent Group Report - Group1" with a menu bar (Report, Edit, Format, Tools, Options, Help). Below the menu bar, it says "Agent Group: Group1". The main area contains a table with the following data:

Agent Name	Login ID	Extn	AUX Reason	State	Split/Skill Time	VDN Name
agent5	50005	0005		AVAIL	11:25	
agent1	50001	0001		AVAIL	8:08	
agent4	50004	0004		AVAIL	6:54	
agent3	50003	0003		AVAIL	3:05	
agent6	50006	0006		AVAIL	2:25	
agent2	50002	0002		AVAIL	49:25	

At the bottom of the window, there is a status bar with the text "Double Click To Run Format Table" on the left and "Thresholds: On r6\_dads1eas" on the right.



## Agent Group report description

---

The following table describes the report fields:

Field	Definition	Database item, calculation, or <calculation name>
Agent Group	The name of the group of agents. You can make this selection in the report input window.	No database item or calculation.
Agent Name	The names of the agents assigned to this split/skill and logged in (or their login IDs if names have not been assigned to them in Dictionary).	syn(LOGID)
Login ID	The login identification of the agent.	LOGID
Extn	The extension the agent logged in from.	EXTENSION
AUX Reason	The reason associated with the auxiliary work state of this agent (for example, lunch, break, meeting, or training). This field is blank if the agent is not in the AUX state.	AUXREASON
State	The current work mode (state) that the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN or OUT).	AWORKMODE and DIRECTION

Field	Definition	Database item, calculation, or <calculation name>
Split/Skill	<p>When an agent is on a split/skill call, a direct agent call, or in After Call Work associated with the call or the ACW, WORKSKILL is the OLDEST_LOGON:</p> <ul style="list-style-type: none"> <li>• When an agent is on an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold</li> <li>• When an agent is on an AUXIN call with an ACD call on hold</li> <li>• When an agent is on an AUXOUT call with an ACD call on hold, this is the split/skill associated with the ACD call.</li> <li>• When an agent is available, in AUX, or in OTHER, this is blank.</li> </ul>	WORKSKILL
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME
VDN Name (Shows data only if you have the Vectoring feature)	The number or name of the VDN for which the report shows data. The VDN is associated with the ACD call in progress. If a name has been assigned to the VDN in the Dictionary, the name displays instead of the number.	syn(VDN)

## Agent report

The Agent report displays the current activities of all agents assigned to a split or skill. It shows the extension from which the agent logged in, the agent's work state, how long the agent has been in that work state, and the split or skill in which the agent is currently working. This report also gives you VDN information (if you have the Vectoring feature).


### Things to know about this report

Here are some things you need to know about this report:

- Only the agents currently assigned and logged into the split/skill display on this report.
- The database items used for the Agent report are stored in the cagent table.
- This report uses the Agent input window. Select a split/skill that you want to view on the report. See [Agent report selector windows and input fields](#) on page 118 for more information.

### Agent report example

The following figure provides an example of the Agent report.

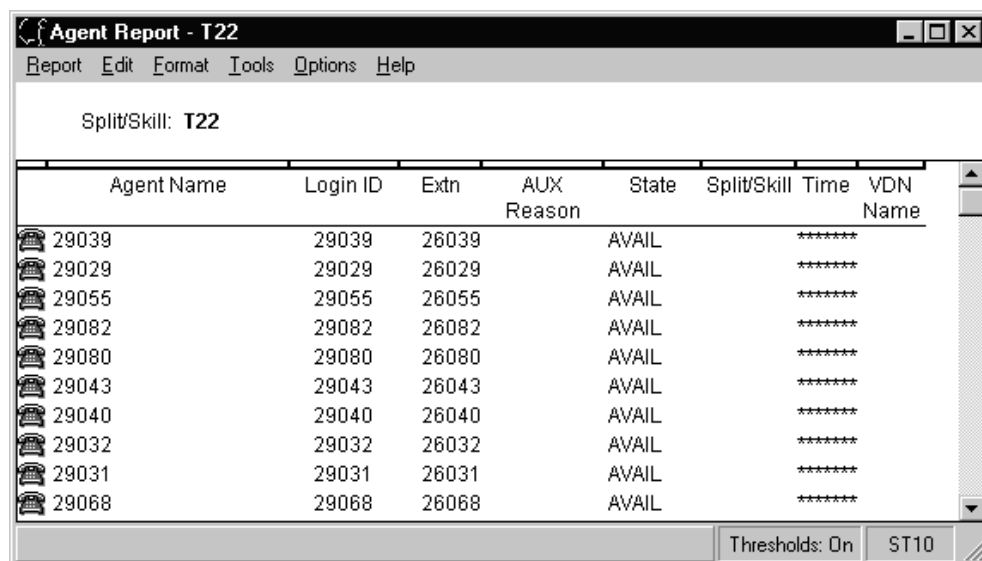

The screenshot shows a window titled "Agent Report - T22" with a menu bar (Report, Edit, Format, Tools, Options, Help). Below the menu bar, it says "Split/Skill: T22". The main area contains a table with the following columns: Agent Name, Login ID, Extn, AUX Reason, State, Split/Skill, Time, and VDN Name. The table lists 10 agents, all with a state of "AVAIL" and a time of "\*\*\*\*\*". At the bottom right, there are buttons for "Thresholds: On" and "ST10".

Agent Name	Login ID	Extn	AUX Reason	State	Split/Skill	Time	VDN Name
29039	29039	26039		AVAIL		*****	
29029	29029	26029		AVAIL		*****	
29055	29055	26055		AVAIL		*****	
29082	29082	26082		AVAIL		*****	
29080	29080	26080		AVAIL		*****	
29043	29043	26043		AVAIL		*****	
29040	29040	26040		AVAIL		*****	
29032	29032	26032		AVAIL		*****	
29031	29031	26031		AVAIL		*****	
29068	29068	26068		AVAIL		*****	

Thresholds: On ST10

## Agent report description

---

The following table describes the report fields:

Field	Definition	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the split/skill selected for this report.	syn(SPLIT)
Agent Name	The names of the agents assigned to this split/skill and logged in (or their login IDs if names have not been assigned to them in Dictionary).	syn(LOGID)
Login ID	The login identification of the agent.	LOGID
Extn	The extension that the agent logged in from.	EXTENSION
AUX Reason	The reason associated with the auxiliary work state of this agent (for example, lunch, break, meeting, or training). This field is blank if the agent is not in the AUX state.	AUXREASON
State	The current work mode (state) that the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN or OUT).	AWORKMODE and DIRECTION

Field	Definition	Database item, calculation, or <calculation name>
Split/Skill	<p>When an agent is on a split/skill call, a direct agent call, or in After Call Work associated with the call or the ACW. WORKSKILL is the OLDEST_LOGON:</p> <ul style="list-style-type: none"> <li>• When an agent is on an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold</li> <li>• When an agent is on an AUXIN call with an ACD call on hold</li> <li>• When an agent is on an AUXOUT call with an ACD call on hold, this is the split/skill associated with the ACD call.</li> <li>• When an agent is available, in AUX, or in OTHER, this is blank.</li> </ul>	WORKSKILL
Time	<p>The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.</p>	AGTIME
VDN Name (Shows data only if you have the Vectoring feature)	<p>The number or name of the VDN for which the report shows data. The VDN associated with the ACD call in progress. If a name has been assigned to the VDN in the Dictionary, the name displays instead of the number.</p>	VDN

## Agent Information report

The Agent Information report displays real-time information and statistics for the specified agent.

This version of the Agent Information report is for non-EAS users.

### Things to know about this report

---

Here are some things you need to know about this report:

- Whenever you drill down to the Real-Time Agent Information report, you can also drill down to the Integrated Agent Information report by clicking the right mouse button.
- This report includes a table that shows all the splits which the agent is logged into. If the agent is assigned to additional splits, but is not logged into those splits, these will not be reflected in this table.
- When this report is accessed from the report selector menu, you need to enter the Agent Name and Login ID input fields.
- When this report is accessed from another report by drilling down, the input fields will be defaulted from the report you are drilling down from.
- The database items used for the Agent Information report are stored in the cagent table.
- This report uses the Agent Information input window. Select an agent that you want to view on the report. See [Agent report selector windows and input fields](#) on page 118.

You can access this report as follows:

- From the Real-Time Agent Category selector menu.
- By drilling down from the Agent Name or Login ID fields on other reports (for example, Agent, Agent Group, Graphical AUX Agents report, Graphical AUX Top Agents report, or other real-time and integrated reports).

## Agent Information report example

The following figure provides an example of the Agent Information report:

**Agent Information Report - agent 32001**

Report Edit Format Tools Options Help

Agent: **agent 32001** Login ID: **32001** Extn: **32001**

State: **AVAIL** AVAIL: **:04:23**  
 Time: **:00:09** ACD: **:01:58**  
 Active Split: ACW: **:00:00**  
 ACD Calls: **14** AUX: **:00:00**  
 Move Pending?: **NO** RING: **:00:28**  
 Direct Agent Calls: **0** OTHER: **:00:00**

Split  
split 51

Double Click To Run Format Grid Thresholds: On NonameG3V5

## Agent Information report description

The following table describes the report fields:

Field	Definition	Database item, calculation, or <calculation name>
Agent Name	The names of the agents assigned to this split/skill and logged in (or their login IDs if names have not been assigned to them in Dictionary).	syn(LOGID)
Login ID	The login identification of the agent.	LOGID
Extn	The extension that the agent logged in from.	EXTENSION
State	The current work mode (state) that the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN or OUT).	AWORKMODE and DIRECTION
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME

Field	Definition	Database item, calculation, or <calculation name>
Active Split	<p>The split is active when the agent is:</p> <ul style="list-style-type: none"> <li>● On a split/skill, on a direct agent ACD call, or in ACW, this is the split/skill associated with the call or ACW.</li> <li>● Available, in AUX or in OTHER states, this is null (blank).</li> <li>● On an AUXIN/AUXOUT call, this is the OLDEST_LOGON split/skill.</li> <li>● On an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold, this is the OLDEST_LOGON split/skill.</li> <li>● On an AUXIN call with an ACD call on hold, this is the OLDEST_LOGON split/skill.</li> <li>● On an AUXOUT call with an ACD call on hold, this is the split/skill associated with the ACD call.</li> </ul> <p>WORKSKILL differs from WORKSPLIT only in the case that the agent is available. In this case, WORKSKILL will be blank and WORKSPLIT will contain one of the splits/skills in which the agent is available.</p>	syn(WORKSKILL)
ACD Calls	The ACD calls that were queued to the split/skill and answered by an agent during the current interval. This does not include direct agent calls, but it does include ACD calls placed by an adjunct (also called outbound predictive dialing).	sum(ACDCALLS)
Move Pending?	A move to a new split or skill or a change of skill is pending for this agent. This is available only for switch releases with the Move Agent While Staffed feature. Values for MOVEPENDING are 0= NO, 1 = YES.	MOVEPENDING



Field	Definition	Database item, calculation, or <calculation name>
Direct Agent Calls	The total number of split and direct agent calls that have been answered by the agent during the current interval. This is the number of calls that the agent answered, not the number of calls for which the agent counted an event.	sum(DA_SKILL)
AVAIL	The time during the collection interval that the agent was in the available state for split or direct agent ACD calls in any split.	sum(TI_AVAILTIME)
ACD	The time during the collection interval that the agent was talking on ACD calls for the SPLIT.	sum (<TOTAL_I_ACDTIME>)
ACW	The time during the collection interval that the agent was in after call work (ACW). This includes ACW for split ACD calls and ACW not associated with the call.	sum(<TOTAL_I_ACWTIME>)
AUX	The time during the collection interval that the agent was in the AUX work state in all splits/skills or on AUXINCALLS or AUXOUTCALLS.	sum(TI_AUXTIME)
RINGING	The time during the collection interval that the agent had split and direct agent ACD calls ringing.	sum(I_RINGTIME)

Field	Definition	Database item, calculation, or <calculation name>
OTHER	The time during the collection interval that the agent was doing other work in all splits. While in Auto-in or Man-In the agent put any call on hold and performed no further action, the agent dialed to place a call or to activate a feature, or an extension call rang with no other activity. For all switches, TI_OTHERTIME is collected for the time period after the switch comes up or after the agent logs in and before the CMS receives notification of the agent's state from the switch. The TI_ time is stored only for the split/skill logged into the longest. TI_ time needs to be summed across the splits/skills the agents may log into, in case the logon order changes during the collection interval.	sum(TI_OTHERTIME)
Split	The split number or name that this extension is assigned to or the split number or name that the agent logged into.	syn(SPLIT)

# Graphical Information report

The Graphical Information report displays real-time information and statistics for the specified agent.

## Things to know about this report

---

Here are some things you need to know about this report:

- Supervisors can use this report to access further information on one particular agent without having to execute several steps and several different reports to get the pertinent information. This report enables the supervisor to quickly make a more educated decision on whether an agent should be added to or removed from a skill.
- This report is available for all switch releases. The contents of this report depends upon the switch release for which it is being run.
- The database items used for the Graphical Information report are stored in the cagent table.
- This report uses the Agent Information Input window. Select an agent that you want to view on the report. See [Agent report selector windows and input fields](#) on page 118.

You can access this report in the following ways:

- From the Real-Time Agent Category selector menu.
- By drilling down to this report from the Agent Name or Login ID fields on other reports (for example, Agent Information, Work State, or Graphic AUX Agent reports).

The following example of this report shows the information it will contain for the switch:

- Graphical information:

A three-dimensional vertical bar chart, with time (in minutes) along the y-axis, and agent work states along the x-axis. The chart shows how much time (in minutes) during the current interval the agent spent in each of the work states. By default, no legend accompanies the chart.

- Table information:


A table shows the skill that is assigned to the agent, and the skill level of 1-16 or R1 or R2 (if switch has EAS) or the priority level with **1** representing the primary level, and **2** representing the secondary level (if using a pre-ECS switch with the EAS feature).

A scroll bar is displayed only if the number of skills to which the agent is assigned exceeds what can be displayed in the table.

- Real-time report status

## Graphical Information report example

The following figure provides an example of the Graphical Information report:

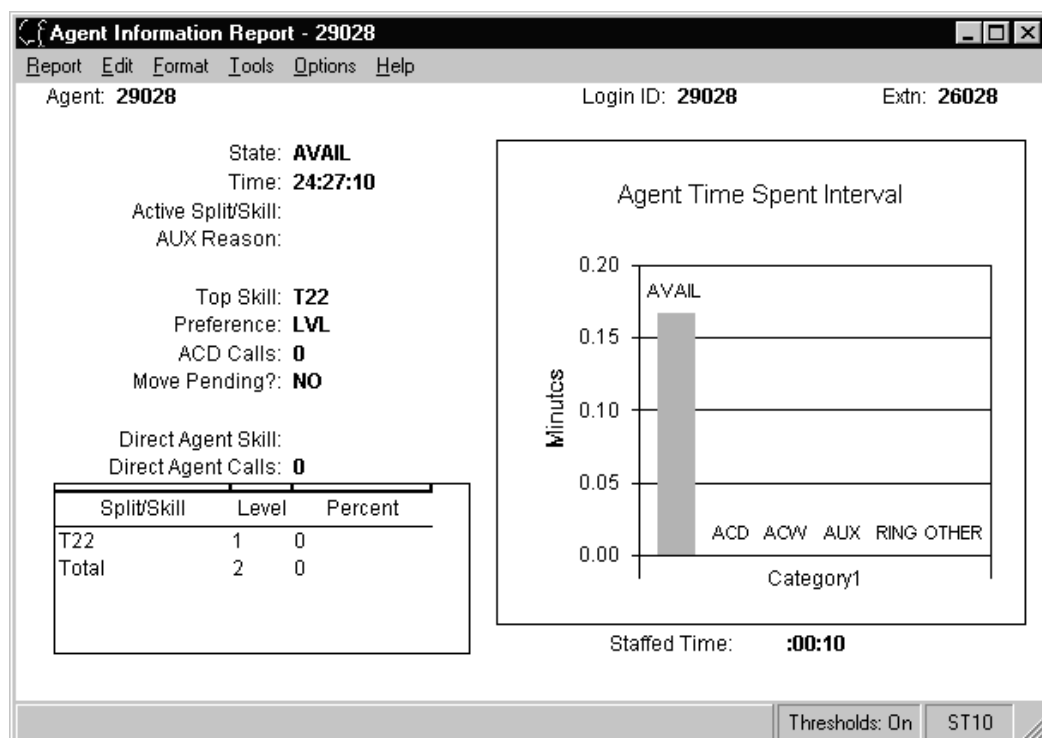

## Graphical Information report description

The following table describes the report fields:

Field	Definition	Database item, calculation, or <calculation name>
Agent	The names of the agents assigned to this split/skill and logged in (or their login IDs if names have not been assigned to them in Dictionary).	syn(LOGID)
Login ID	The login identification of the agent.	LOGID
Extn	The extension that the agent logged in from.	EXTENSION

Field	Definition	Database item, calculation, or <calculation name>
State	The current work mode (state) that the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN or OUT).	AWORKMODE and DIRECTION
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME
Active Skill	<p>The skill is active when the agent is:</p> <ul style="list-style-type: none"> <li>● On a split/skill, on a direct agent ACD call, or in ACW. This is the split/skill associated with the call or ACW.</li> <li>● Available, in AUX or in OTHER states. This is null (blank).</li> <li>● On an AUXIN/AUXOUT call. This is the OLDEST_LOGON split/skill.</li> <li>● On an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold. This is the OLDEST_LOGON split/skill.</li> <li>● On an AUXIN call with an ACD call on hold. This is the OLDEST_LOGON split/skill.</li> <li>● On an AUXOUT call with an ACD call on hold. This is the split/skill associated with the ACD call.</li> </ul> <p>WORKSKILL differs from WORKSPLIT only in the case that the agent is available. In this case, WORKSKILL will be blank and WORKSPLIT will contain one of the splits/skills in which the agent is available.</p>	syn(WORKSKILL)

Field	Definition	Database item, calculation, or <calculation name>
AUX Reason	For the switch, this is the reason code associated with the auxiliary work state (on a break, in a meeting, and so on) of this agent. This field is blank if the agent is not in the AUX state.	syn(AUXREASON)
Top Skill	The agent's first-administered, highest-level, measured skill, where skill level 1 is the highest, skill level 16 is the lowest. The TOPSKILL of an agent will be 0 except when PREFERENCE is a skill level (LVL). This means that an agent will not have a top skill or be counted in any split table TOPSKILL items if their call handling preference is Greatest Need (NEED) or percent allocation (PCNT). In addition, agents who have skill level preference, but only reserve levels for all their skills, will not have a TOPSKILL.	syn(TOPSKILL)
Call Handling Preference	The agent's call handling preference. Values are blank, skill level (LVL) or greatest need (NEED), or percent allocation (PCNT).	syn(PREFERENCE)
ACD Calls	The ACD calls that were queued to the split/skill and answered by an agent during the current interval. This does not include direct agent calls, but it does include ACD calls placed by an adjunct (also called outbound predictive dialing).	sum(ACDCALLS)
Move Pending?	A move to a new split or skill or a change of skills is pending for this agent. This is available only for switch releases with the Move Agent While Staffed feature. Values for MOVEPENDING are 0= NO, 1 = YES.	MOVEPENDING
Direct Agent Skill	The skill currently assigned as the agent's direct agent skill. Direct agent calls to the agent are queued to this skill.	syn(DA_SKILL)

Field	Definition	Database item, calculation, or <calculation name>
Direct Agent Calls	The total number of split/skill and direct agent calls that have been answered by this agent during the current interval. This is the number of calls that the agent answered, not the number of calls for which the agent counted an event.	sum(DA_ACDCALLS)
Skill	The name or number of the skill that is selected for this report.	syn(SPLIT)
Level	The skill level (1-16, R1 or R2) associated with the SKILL.	syn(LEVEL)
Percent	Agent's percent allocation for this SPLIT. Requires Avaya Business Advocate.	PERCENT
AVAIL	The time during the collection interval that the agent was in the available state for split/skill or direct agent ACD calls in any split/skill.	sum(TI_AVAILTIME)
ACD	The total time during the collection interval that the agent was talking on ACD calls for the split.	sum (<TOTAL_I_ACDTIME>)
ACW	The total time during the collection interval that the agent was in after call work (ACW). This includes ACW for split/skill ACD calls and ACW not associated with the call.	sum(<TOTAL_I_ACWTIME>)
AUX	The total time during the collection interval that the agent was in the AUX work state in all splits/skills or on AUXINCALLS or AUXOUTCALLS.	sum(TI_AUXTIME)
RINGING	The time during the collection interval that the agent had split/skill and direct agent ACD calls ringing.	sum(I_RINGTIME)

Field	Definition	Database item, calculation, or <calculation name>
OTHER	<p>The time during the collection interval that the agent was doing other work in all splits/skills. While in Auto-in or Man-In the agent put any call on hold and performed no further action, the agent dialed to place a call or to activate a feature, or an extension call rang with no other activity. For all switches, TI_OTHERTIME is collected for the time period after the link to the switch comes up or after the agent logs in and before the CMS receives notification of the agent's state from the switch. The TI_ time is stored only for the split/skill logged into the longest. TI_ time needs to be summed across the splits/skills the agents may log into, in case the logon order changes during the collection interval.</p>	sum(TI_OTHERTIME)
Staffed Time	<p>The time during the collection interval that the agent was staffed in any split/skill. TI_ time is recorded only for the split/skill logged into the longest amount of time. TI_ time needs to be summed across the splits/skills the agents may log into, in case the login order changes during the collection interval.</p>	sum(TI_STAFFTIME)



---

# Other reports

This section discusses other reports.

## General information about other reports

### What other reports contain

---

The real-time other reports give you the following specific information about:

- A summary of the number of times during the current interval that an agent in a split/skill pressed any of the nine event count keys while on an ACD call or in call-related after call work.
- Real-time call-handling information
- Skill information for skills from multiple ACDs

### Organization of other reports


---

The following list shows how the other reports are structured:

- [Event Count Summary report](#) on page 139
- [Multi-ACD report](#) on page 142
- [Multi-ACD Top Agent report](#) on page 150

## Other report selector window

The following figure is an example of the other report selector window. The reports are explained in the same order as listed in the window.

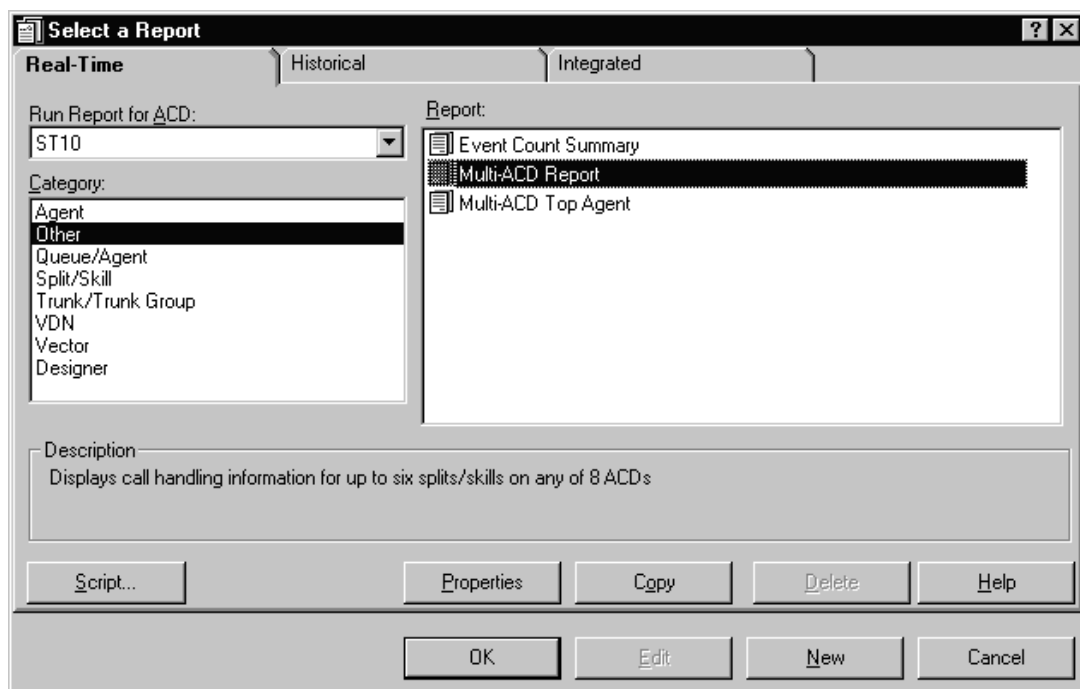

## Event Count Summary report

The Event Count Summary report displays the number of times during the current interval that an agent in a split/skill pressed any of the nine event count keys while on an ACD call or in call-related ACW.

### Things to know about this report

Here are some things you need to know about this report:

- You can define event keys to represent any kind of event you want (for example, the number of calls generated from an advertisement, promotion, or geographic area).
- Event counts are only recorded while an agent is on an ACD call or in call-related ACW. If an agent is in AUTO-IN mode, the ACD call terminates when the caller hangs up, and an event count cannot be recorded after the caller hangs up. To track event counts, it is recommended that agents use the MANUAL-IN mode because the agent goes to ACW when the caller hangs up, allowing the agent to enter an event count.
- The database items used for the Trunk Group report are stored in the csplit table

### Relationships to other subsystems

Event 0, audio difficulty, is used in the trunk and trunk group exception reports.

### Event Count Summary input window

The following figure shows an example of the Event Count Summary input window. You must fill in the report input window to run the report.

The screenshot shows the 'Event Count Summary' input window. It features a title bar with the text 'Event Count Summary' and standard window controls (minimize, maximize, close). The window is divided into two main sections. The top section, labeled 'Inputs', contains a 'Split/Skill' dropdown menu with the value '1' selected, and a button with a right-pointing arrow. The bottom section, labeled 'Real-Time Options', contains a 'Refresh Every' field with the value '18' and a 'Seconds' label, a checked checkbox for 'Enable Report Thresholds', and an unchecked checkbox for 'Run Minimized'. At the bottom of the window are three buttons: 'OK', 'Cancel', and 'Help'. A status bar at the very bottom of the window displays 'ST10'.


### Event Count Summary input fields

The following table describes the input fields on real-time Event Count Summary report input windows:

Field	Definition
Split/Skill	Fill in the split or skill name or number for which you want to run the report. You can enter a split/skill name only if the name has been defined in Dictionary.
Refresh Every <#> Seconds	Enter the number of seconds (3 to 600) to specify how rapidly CMS should update the report data. The default for the Refresh Every <#> Seconds field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check the Enable Report thresholds option to start the report with report thresholds running. Uncheck the option if you do not want to run report thresholds.
Run Minimized	Check the Run Minimized option to run the report in a minimized window. Uncheck the option to run the report at full size.

### Event Count Summary report example

The following figure provides an example of the Event Count Summary report:

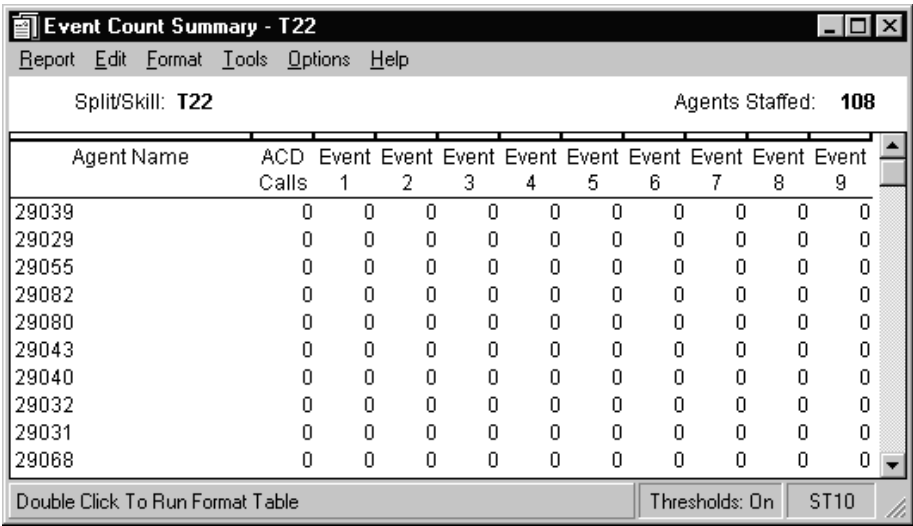

## Event Count Summary report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the splits/skills that is selected for this report.	syn(SPLIT)
Agents Staffed	The total number of agents that are logged into each split/skill.	STAFFED
Agent Name	The names of the agents assigned to this split/skill and logged in (or their login IDs if names have not been assigned to them in Dictionary).	syn(LOGID)
ACD Calls	The total number of split/skill and direct agent calls that were answered by this agent. This is the number of calls that the agent answered, not the number of calls for which the agent counted an event.	ACDCALLS + DA_ACDCALLS < TOTAL_ACDCALLS>
Event 1 ...9	The number of times during the specified time period that this agent entered each event count (1 - 9) while on ACD calls or in ACW associated with an ACD call for this split/skill recorded during this interval.	EVENT1 ...9

## Multi-ACD report

This report displays real-time call-handling information. This information can be requested simultaneously for up to eight splits/skills and up to eight ACDs. This report allows you to evaluate and compare similar splits/skill information in different ACDs. With this information you can determine workload and call-handling performance, agent reassignment, or other ACD configuration alternatives to balance workloads and reduce abandoned calls

### Things to know about this report

---

Here are some things you need to know about this report:

- The Multi-ACD report appears on the real-time reports menu even if you have only one real ACD installed on your CMS.
- The database items used for the Multi-ACD report are stored in the csplit table.
- This report can include information on up to eight ACDs.

## Multi-ACD report input window

The following figure shows an example of the Multi-ACD report input window. You must fill in the report input window to run the report.

**Multi-ACD Report**

Inputs

ACD: ST10

Split/Skill: sp998

ACD(2): ST11

Split/Skill(2): BSR

ACD(3): ST10

Split/Skill(3): T26

ACD(4): (none)

Split/Skill(4):

ACD(5): (none)

Split/Skill(5):

ACD(6): (none)

Split/Skill(6):

ACD(7): (none)

Split/Skill(7):

Real-Time Options

Refresh Every 18 Seconds

☒ Enable Report Thresholds

☐ Run Minimized

OK Cancel Help

rinters Paint Shop... Lucent Cen... IrfanView - ... Exploring - ... Agent I...

## Multi-ACD report input fields

---

The following table describes the input fields on real-time Multi-ACD report input windows:

Field	Definition
First through Eighth ACD	Fill in the names or numbers of the First through Sixth ACDs for which you want to run the report. You can enter an ACD name only if the name has been defined in Dictionary.
Split/Skill	Fill in the names or numbers of the Split/Skills for which you want to run the report. You can enter a split/skill name only if the name has been defined in Dictionary.
Refresh Every <#> Seconds	Enter the number of seconds from 3 to 600, to specify how rapidly CMS should update the report data. The default for the Refresh Every <#> Seconds field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check the Enable Report thresholds option to start the report with report thresholds running. Uncheck the option if you do not want to run report thresholds.
Run Minimized	Check the Run Minimized option to run the report in a minimized window. Uncheck the option to run the report at full size.



## Multi-ACD report example

The following figure provides an example of the Multi-ACD report:

The screenshot shows a window titled "Multi-ACD Report" with a menu bar (Report, Edit, Format, Tools, Options, Help). The report displays data for seven agents, all with ACD: ST10 and Split/Skill: sp998. All agents have a Skill State of NORMAL. The metrics shown are:

	ST10	ST10	ST10	ST10	ST10	ST10	ST10
Split/Skill:	sp998	sp998	sp998	sp998	sp998	sp998	sp998
Skill State:	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL
Calls Waiting:	0	0	0	0	0	0	0
Oldest Call Waiting:	:00	:00	:00	:00	:00	:00	:00
Avg Speed Ans:							
EWT Top:							
EWT High:							
EWT Medium:							
EWT Low:							
ACD Calls:	0	0	0	0	0	0	0
Avg ACD Time:							
Aban Calls:	0	0	0	0	0	0	0
Avg Aban Time:							
Agents Avail:	0	0	0	0	0	0	0
Agents Ringing:	0	0	0	0	0	0	0
Agents on ACD Calls:	0	0	0	0	0	0	0
Agents in ACW:	0	0	0	0	0	0	0
Agents in Other:	0	0	0	0	0	0	0
Agents in AUX:	0	0	0	0	0	0	0
Agents Staffed:	0	0	0	0	0	0	0

At the bottom right, there are buttons for "Thresholds: On" and "ST10".

## Multi-ACD report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The names or numbers of the splits/skills selected for this report.	syn(SPLIT)
ACD	The name or number of the ACD for which the data was selected.	syn(ACD)

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report. Requires Avaya Business Advocate.	SKSTATE
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	The length of time (in seconds) the oldest ACD call has waited in queue or ringing before being answered. This does not include direct agent calls.	OLDESTCALL
Avg Speed Answer	The average time calls waited in queue and ringing before an agent answered. This does not include direct agent calls, but it does include outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ANSTIME/ACDCALLS/ <AVG_ANSWER_SPEED>
EWT Top	This heading contains EWT for the split/skill at top priority. EWT is the wait time for the call when it is queued to the split/skill at the top priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exceptions command.	EWTTOP

Report heading	Description	Database item, calculation, or <calculation name>
EWT High	This heading contains EWT for the split/skill at high priority. EWT is the wait time for the call when it is queued to the split/skill at high priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exceptions command.	EWTHIGH
EWT Medium	This heading contains EWT for the split/skill at medium priority. EWT is the wait time for the call when it is queued to the split/skill at medium priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exceptions command.	EWTMEDIUM
EWT Low	This heading contains EWT for the split/skill at low priority. EWT is the wait time for the call when it is queued to the split/skill at low priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exceptions command.	EWTLOW
ACD Calls	The ACD calls that were queued to the split/skill and answered by an agent. This does not include direct agent calls, but it does include ACD calls placed by an adjunct (also called outbound predictive dialing), for switches with the ASAI feature only.	ACDCALLS

Report heading	Description	Database item, calculation, or <calculation name>
Avg ACD Time	The average talk time for all ACD calls to this split/skill. This does not include hold time or time on direct agent calls, but it does include talk time of all outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ACDTIME/ACDCALLS <AVG_ACD_TALK_TIME>
Aban Calls	The total number of queued calls for each split/skill that was abandoned before an agent answered. This includes calls that are ringing at a voice terminal but does not include direct agent calls. It also includes the number of outbound calls for each split/skill that abandoned at the far end before the agent answered.	ABNCALLS
Avg Aban Time	The average time a caller waited (in split/skill or VDN) before hanging up.	ABNTIME /ABNCALLS <AVG_ABANDON_TIME>
Agents Available	The total number of agents who are available to receive ACD calls in each split/skill.	AVAILABLE
Agents Ringing	The current number of agents that are available and have ACD calls (including direct agent calls) ringing at their voice terminal but have not yet answered. If the agent places a call or answers an extension call, the agent is shown in the AUX work state, rather than in the ringing state.	AGINRING
Agents on ACD Calls	The total number of agents that are connected to inbound and outbound ACD calls in each split/skill. This does not include direct agent calls.	ONACD
Agents in ACW	The number of agents who are in the after call work mode for each split/skill. This includes agents on ACWIN/ACWOUT calls and agents in ACW not associated with an ACD call.	INACW

Report heading	Description	Database item, calculation, or <calculation name>
Agents in Other	The current number of agent positions that are doing other work. Agent positions show up as OTHER directly after the link to the switch comes up and directly after the agents log in before the CMS is notified of the agent's work state. The agent did one of the following activities while in the Auto-in or Manual-In state The agent put any call on hold and performed no further action. The agent is on a direct agent call or in ACW for a direct agent call. The agent is dialing to place a call or to activate a feature. The agent has a ringing personal call queued through another split or skill, with no other activity. For a switch without EAS, agents are logged into multiple splits and doing work for a split other than this one.	OTHER
Agents in Aux	The current number of agents who are in the AUX work mode for all splits/skills including agents who are handling AUXIN or AUXOUT calls.	INAUX
Agents Staffed	The number of agents logged into each split/skill.	STAFFED

## Multi-ACD Top Agent report

This report displays skill information for skills from multiple ACDs. Agent counts show top and backup agents. This report allows you to enter skills from multiple ACDs connected to the CMS.

The Multi-ACD report appears on the real-time reports menu even if you have only one real ACD installed on your CMS.

### Things to know about this report

---

Here are some things you need to know about this report:

- This report shows the number of agents with this skill as their top skill.
- This report shows the number of agents with this split as OLDEST\_LOGON for non-EAS switches.
- The menu items for this report appear only if EAS is activated. The report can be run for any live ACD on the CMS.
- Top Agents are agents for whom the skill is their highest-level skill. If agents have more than one skill at the highest level, then the first one administered is the top skill.
- The database items used for the Multi-ACD Top Agent report are stored in the csplit table.
- The standard report can only include information on six ACDs. This report must be customized with Report Designer to view information on eight ACDs.

## Multi-ACD Top Agent report input window

The following figure shows an example of the Multi-ACD Top Agent input window. You must fill in the report input window to run the report.

**Multi-ACD Top Agent Report**

Inputs

ACD: ST10

Split/Skill: Total

ACD(2): ST11

Split/Skill(2): BSR

ACD(3): ST10

Split/Skill(3): T26

ACD(4): (none)

Split/Skill(4):

ACD(5): (none)

Split/Skill(5):

ACD(6): (none)

Split/Skill(6):

Real-Time Options

Refresh Every 18 Seconds

☒ Enable Report Thresholds

☐ Run Minimized

OK Cancel Help

## Multi-ACD Top Agent report input fields

---


The following table describes the input fields on real-time Multi-ACD Top Agent report input windows:

Field	Definition
Skill (for First through Sixth Skill)	Fill in the names or numbers of the First through Sixth Split/Skills for which you want to run the report. You can enter a split/skill name only if the name has been defined in Dictionary.
Refresh Every <#> Seconds	Enter the number of seconds from 3 to 600, to specify how rapidly CMS should update the report data. The default for the Refresh Every <#> Seconds field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check the Enable Report thresholds option to start the report with report thresholds running. Uncheck the option if you do not want to run report thresholds.
Run Minimized	Check the Run Minimized option to run the report in a minimized window. Uncheck the option to run the report at full size.



## Multi-ACD Top Agent report example

The following figure provides an example of the Multi-ACD Top Agent report:

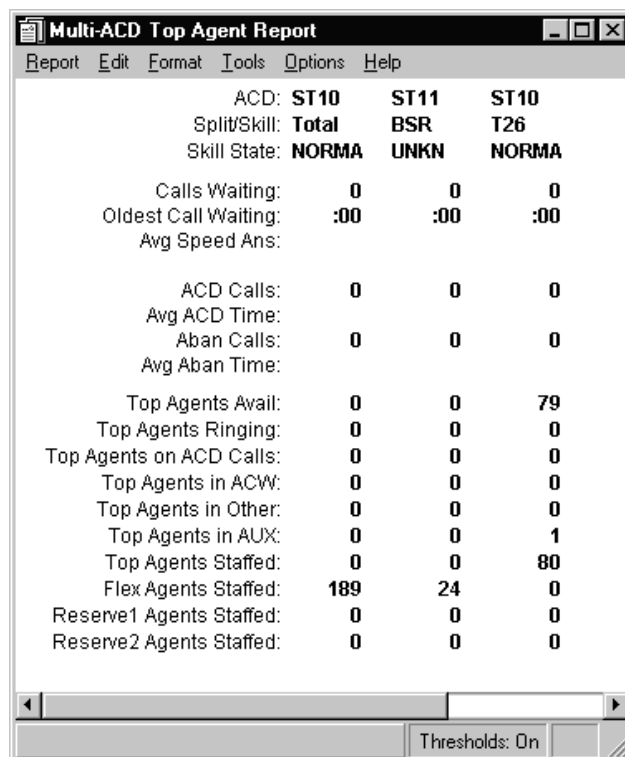

## Multi-ACD Top Agent report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skill	The name or number of the splits/skills selected for this report.	syn(SPLIT)
ACD	The name or number of the ACD for which the data was collected.	syn(ACD)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report. Requires Avaya Business Advocate.	SKSTATE

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	The length of time (in seconds) that the oldest ACD call has waited in queue or ringing (at an agent voice terminal for each split/skill in the report) before being answered. This does not include direct agent calls.	OLDESTCALL
Avg Speed Ans	The average time that calls waited in queue and ringing before an agent answered. This does not include direct agent calls, but it does include outbound ACD calls placed by an adjunct (outbound predictive dialing).	ANSTIME/ACDCALLS <AVG_ANSWER_SPEED>
ACD Calls	The ACD calls that were queued to the split/skill and answered by an agent in the split/skill. This does not include direct agent calls. It does include outbound ACD calls placed by an adjunct (outbound predictive dialing).	ACDCALLS
Avg ACD Time	The average talk time for all ACD calls to this split/skill. This does not include hold time or time on direct agent calls. It does include outbound ACD calls placed by an adjunct (outbound predictive dialing).	ACDTIME/ACDCALLS <AVG_ACD_TALK_TIME>

Report heading	Description	Database item, calculation, or <calculation name>
Aban Calls	<p>The number of calls that are abandoned by the caller when calls are in queue or when calls are ringing for this split/skill. This includes calls with talk times less than the phantom abandoned call timer value, if it is set.</p> <p><b>Note:</b> When a call is queued to multiple splits/skills and abandons from the queue, only the primary split/skill increments ABNCALLS. (Calls that are ringing at an agent's voice terminal and then abandoned count as abandons for the split/skill for which they were ringing.)</p>	ABNCALLS
Avg Aban Time	The average time a caller waited (in split/skill or VDN) before hanging up.	ABNTIME/ABNCALLS <AVG_ABANDON_TIME>
Top Agents Avail	The number of top agents that are logged into the skill who are available in the skill.	TAVAILABLE
Top Agents Ringing	The number of top agents that are logged into the skill who have ACD calls (including direct agent calls) ringing at their voice terminals.	TAGINRING
Top Agents on ACD Calls	The number of top agents connected to inbound and outbound ACD calls in each split/skill. This does not include direct agent calls.	TONACD
Top Agents in ACW	The number of top agents who are in the after call work state for each skill. This includes agents on ACWIN or ACWOUT calls and agents in ACW not associated with an ACD call.	TINACW
Top Agents in AUX	The number of top agents logged into the skill who are in the AUX work mode for all skills or are on AUXIN/AUXOUT calls. Does not apply to direct agents in ACW.	TINAUX

Report heading	Description	Database item, calculation, or <calculation name>
Top Agents in Other	<p>The agent did one of the following activities while in the Auto-in or Manual-In state:</p> <ul style="list-style-type: none"> <li>● The agent put any call on hold and performed no further action</li> <li>● The agent was on a direct agent call or in ACW for a direct agent call</li> <li>● The agent was dialing to place a call or to activate a feature</li> <li>● The agent had a personal call ringing with no other activity</li> </ul> <p>Agents are logged into multiple splits and doing work for a split other than this one (on an ACD call or in ACW). For the switches with EAS, agents are logged into multiple skills and doing work for a skill other than this one (on an ACD call or in call-related ACW). Agent positions show up as OTHER directly after the link to the switch comes up and directly after the agents log in before the CMS is notified of the agent's work state.</p>	TOTHER
Top Agents Staffed	Current number of top agents that are staffed in the skill.	TSTAFFED
Flex Agents Staffed	Number of agents who are staffing the skill, but are neither top or reserve agents. Requires Avaya Business Advocate.	FSTAFFED
Reserve1 Agents Staffed	Number of agents staffing this skill as reserve1. Requires Avaya Business Advocate.	R1STAFFED
Reserve2 Agents Staffed	Number of agents staffing this skill as reserve2. Requires Avaya Business Advocate.	R2STAFFED

---

# Queue/Agent reports

The Queue/Agent reports give you the following specific information about Queues and Agents:

- The overall skill information along with information about agents for whom the requested skill is the top skill
- The overall split/skill information such as the number of calls waiting, oldest call waiting, and percent answered within service level
- A summary of the split's/skill's queue status

## General information about Queue/Agent reports

### What Queue/Agent reports contain

---

The Queue/Agent reports give you the following specific information about Queues and Agents:

- The overall skill information along with information about agents for whom the requested skill is the top skill
- The overall split/skill information such as the number of calls waiting, oldest call waiting, and percent answered within service level
- A summary of the split's/skill's queue status

### Organization of Queue/Agent reports

---

The following list shows how the Queue/Agent reports are structured:

- [Queue/Top Agent Status report](#) on page 159
- [Queue/Agent Status report](#) on page 165
- [Queue/Agent Summary report](#) on page 172

## Queue/Agent report selector window and input fields

The queue/agent report selector window and its input fields are used to run the queue/agent reports described in this section.

### Queue/Agent report input fields

---

The following table describes the input fields on real-time Queue/Agent report input windows:

Field	Definition
Skill or Split/Skill	Enter the skill name or number that you want to view in this report. Any names that you want to appear on the report must have been previously defined and entered in the Dictionary subsystem.
Refresh Every <#> Seconds	Enter the number of seconds (3 to 600) to specify how often you want the report to refresh. The default for the Refresh Every <#> Seconds field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check the Enable Report Thresholds option to start the report with report thresholds running. Uncheck the option if you do not want to run report thresholds.
Run Minimized	Check the Run Minimized option to run the report in a minimized window. Uncheck the option to run the report at full size.

## Queue/Top Agent Status report

This report displays overall skill information along with information about agents for whom the requested skill is the top skill. This report resembles the Queue/Agent Status report, but this report also displays the number of top agents staffed, available, ringing, on ACD calls, in ACW, in AUX, and in Other, plus the number of flex agents staffed. The number of calls answered and abandoned also appear on the report.

### Things to know about this report


---

Here are some things you need to know about this report:

- This report is available only for switches with EAS.
- Top Agents are agents for whom the skill is their highest-level skill. If agents have more than one skill at the highest level, then the first one administered is the top skill.
- The database items used for the Queue/Top Status report are stored in csplit and cagent tables.
- This report uses the Queue report input window. Select a skill that you want to view on the report. See [Queue/Agent report selector window and input fields](#) on page 158 for more information.

## Queue/Top Agent Status report example

The following figure provides an example of a Queue/Top Agent Status report:

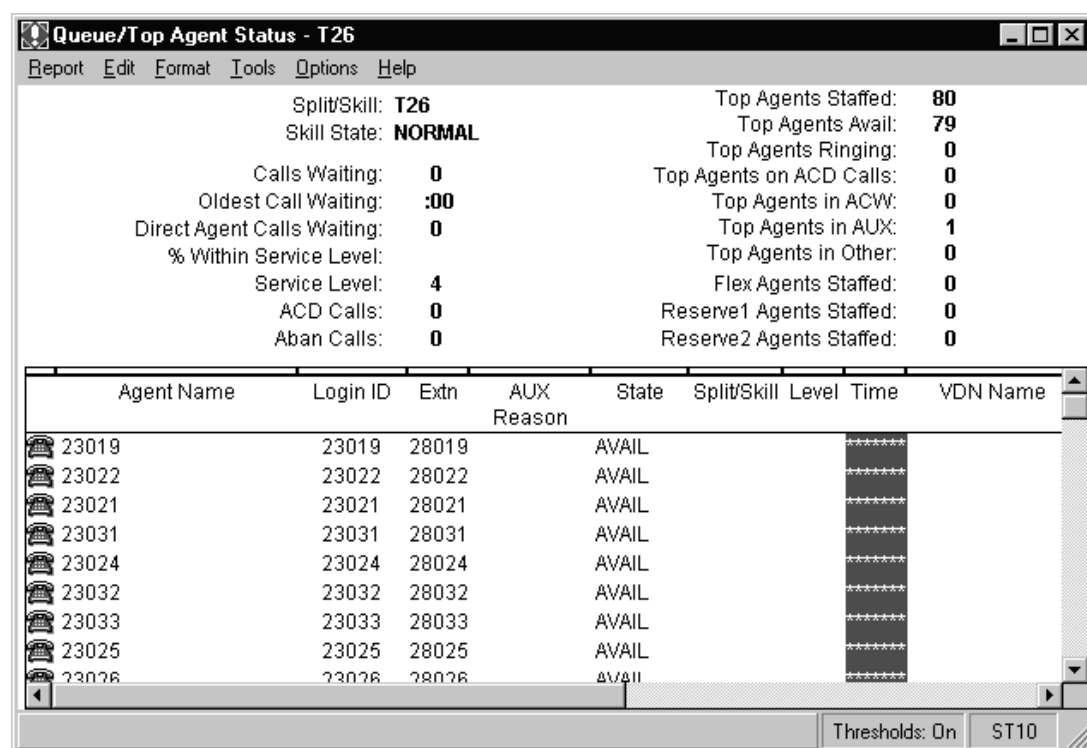

## Queue/Top Agent Status report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skill	Name or number of the skill selected for this report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report. Requires Avaya Business Advocate.	SKSTATE



Report heading	Description	Database item, calculation, or <calculation name>
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	The length of time (in seconds) the oldest ACD call has waited in queue or ringing (at an agent voice terminal for each split/skill in the report) before being answered. This does not include direct agent calls.	OLDESTCALL
Direct Agent Calls Waiting	The current number of direct agent calls that are waiting in this skill's queue or ringing at agent positions.	DA_INQUEUE+DA_INRING
% Within Service Level	The percentage of skill ACD calls that were answered by an agent within the predetermined time.	100*(ACCEPTABLE/CALLSOFRED) <PERCENT_SERV_LVL_SPL>
Secs	Shows the current setting for the Acceptable Service Level, in seconds, as defined on the Call Center Administration Split/Skill Call Profile Setup window.	SERVICELEVEL
ACD Calls	The number of calls that were queued to the skill and answered by this agent in this skill (includes O_ACDCALLS).	ACDCALLS
Aban Calls	The number of calls that are abandoned by the caller when calls are in queue or when calls are ringing for this split/skill. This includes calls with talk times less than the phantom abandoned call timer value, if it is set.	ABNCALLS
Top Agents Staffed	The current number of top agents that are staffed in this skill.	TSTAFFED
Top Agents Avail	The current number of top agents logged into the skill and available in the skill to take calls.	TAVAILABLE
Top Agents Ringing	The number of top agents logged into the skill who have ACD calls (including direct agent calls) ringing at their voice terminals.	TAGINRING

Report heading	Description	Database item, calculation, or <calculation name>
Top Agents on ACD Calls	The total number of top agents connected to inbound and outbound ACD calls in each skill. This does not include direct agent calls.	TONACD
Top Agents in ACW	The number of top agents who are in the after call work state for each skill. This includes agents on ACWIN/ACWOUT calls and agents in ACW not associated with an ACD call.	TINACW
Top Agents in AUX	The number of top agents logged into the skill who are in the AUX work mode for all skills or are on AUXIN/AUXOUT calls. Does not apply to direct agents in ACW.	TINAUX
Top Agents in Other	<p>The current number of top agent positions that are doing other work.</p> <p>The agent did one of the following activities while in the Auto-in or Manual-In state:</p> <ul style="list-style-type: none"> <li>● The agent put any call on hold and performed no further action.</li> <li>● The agent is on a direct agent call or in ACW for a direct agent call.</li> <li>● The agent is dialing to place a call or to activate a feature.</li> <li>● The agent has a personal call ringing with no other activity.</li> </ul> <p>For switches with EAS, agents are logged into multiple skills and doing work for a skill other than this one (on an ACD call or in call-related ACW). For switches without EAS, agents are logged into multiple splits and doing work for a split other than this one (on an ACD call or in call-related ACW). Agent positions show up as OTHER directly after the link to the switch comes up and directly after the agents log in before the CMS is notified of the agent's work state.</p>	TOTHER

Report heading	Description	Database item, calculation, or <calculation name>
Flex Agents Staffed	Number of agents who are staffing the skill, but are neither top or reserve agents. Requires Avaya Business Advocate.	FSTAFFED
Reserve1 Agents Staffed	Number of agents staffing this skill as reserve1. Requires Avaya Business Advocate.	R1STAFFED
Reserve2 Agents Staffed	Number of agents staffing this skill as reserve2. Requires Avaya Business Advocate.	R2STAFFED
Agent Name	The name (or agent IDs if the names have not been assigned in the Dictionary) of the agents assigned to this split/skill and logged in.	syn(LOGID)
Login ID	The login identification of the agent	LOGID
Extn	The extension that the agent logged in from.	EXTENSION
AUX Reason	The reason associated with the auxiliary work state of this agent (for example, lunch, break, meeting, or training). This field is blank if the agent is not in the AUX state.	AUXREASON
State	The current work mode (state) that the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN or OUT).	AWORKMODE and DIRECTION

Report heading	Description	Database item, calculation, or <calculation name>
Skill/Level	<p>The skill and level associated with the split/skill or direct agent ACD call that the agent is on or the ACW session.</p> <p>WORKSKILL is the OLDEST_LOGON:</p> <ul style="list-style-type: none"> <li>• When an agent is on an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold</li> <li>• When an agent is on an AUXIN call with an ACD call on hold</li> <li>• When an agent is on an AUXOUT call with an ACD call on hold, this is the split/skill associated with the ACD call.</li> <li>• When an agent is available, in AUX, or in OTHER, this is blank. The level is either a skill level (1-16) for a normal skill or a reserve level (R1 or R2) for a reserve skill. This WORKSKLEVEL applies to WORKSKILL.</li> </ul>	WORKSKILL/syn (WORKSKLEVEL)
Time	<p>The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.</p>	AGTIME
VDN Name (Shows data only if you have purchased the Vectoring feature)	<p>The number or name of the VDN for which the report shows data. The VDN is associated with the ACD call in progress.</p>	VDN

## Queue/Agent Status report

This report is a combination of the Agent report and the Queue/Agent Summary report. It displays overall split/skill information such as the number of calls waiting, oldest call waiting, and percent answered within service level. It also shows the number of agents available, on ACD calls, staffed, with calls ringing, and on after call work. It also shows what each agent in the split/skill is currently doing.

### Things to know about this report


---

Here are some things you need to know about this report:

- Direct agent calls waiting are displayed in this report because direct agent calls occupy split/skill queue slots.
- The database items used for the Queue/Agent Status report are stored in csplit and cagent tables.
- This report uses the Queue report input window. Select a split/skill that you want to view on the report. See [Queue/Agent report selector window and input fields](#) on page 158 for more information.

## Queue/Agent Status report example

The following figure provides an example of a Queue/Agent Status report:

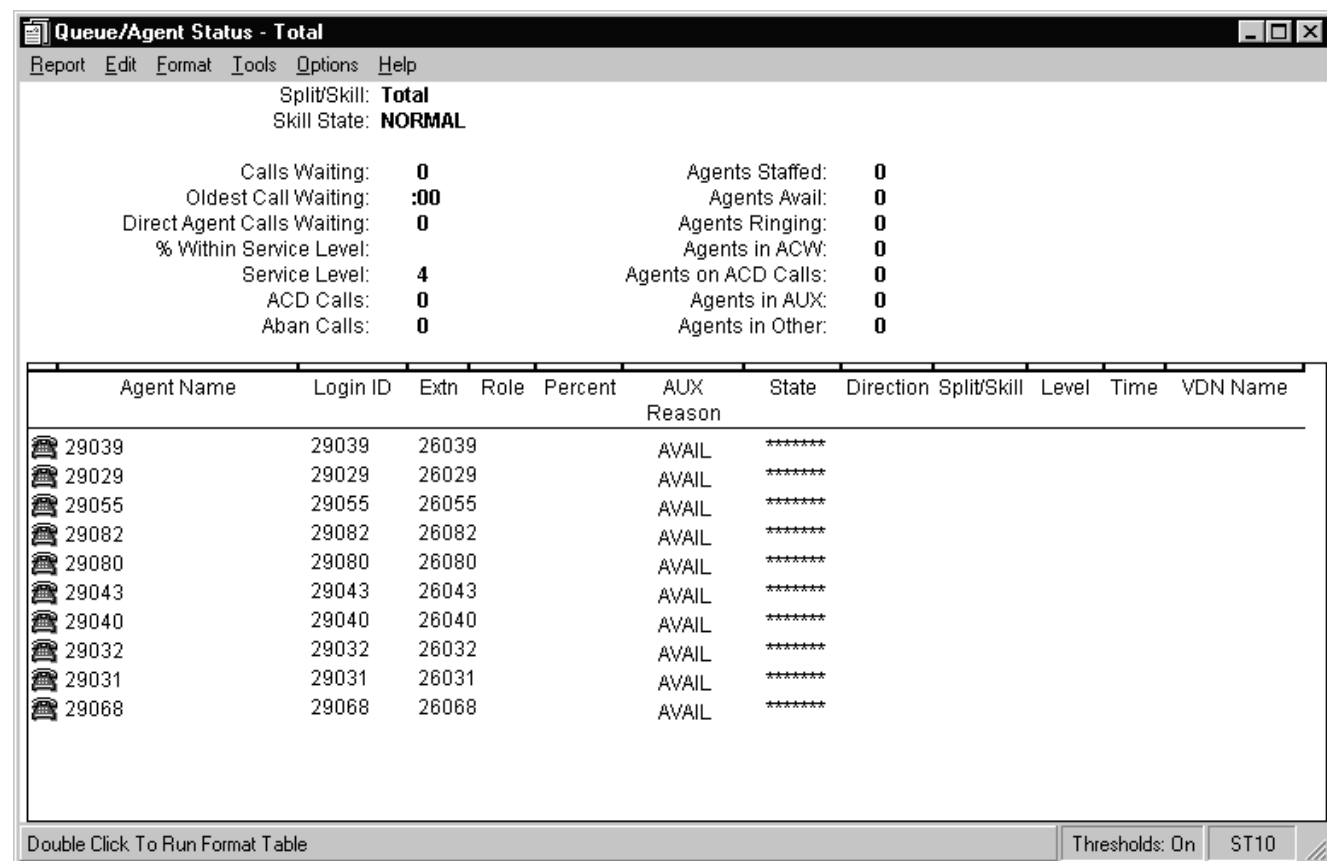

## Queue/Agent Status report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the split or skill selected for this report.	syn(SPLIT)
Skill State	Current state of this skill, compared to the administered thresholds. Requires Avaya Business Advocate.	syn(SKSTATE)

Report heading	Description	Database item, calculation, or <calculation name>
Calls Waiting	The total number of split or skill ACD calls waiting to be answered for each split/skill in the report. This includes calls that are in queue and are ringing at an agent's voice terminal. It also includes outbound ACD calls placed by an adjunct (also called outbound predictive dialing). It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	The length of time (in seconds) the oldest call has waited in queue or ringing (at an agent voice terminal for each split/skill in the report) before being answered. This does not include direct agent calls.	OLDESTCALL
Direct Agent Calls Waiting	The current number of direct agent calls that are waiting in this split's/skill's queue or ringing at agent positions.	DA_INQUEUE+DA_INRING
% Within Service Level	The percentage of split/skill ACD calls that were answered by an agent within the predetermined time.	100*(ACCEPTABLE/ CALLSOFFERED) <PERCENT_SERV_LVL_SPL>
Secs	Shows the current setting for the Acceptable Service Level, in seconds, as defined on the Call Center Administration Split/Skill Call Profile Setup.	SERVICELEVEL
ACD Calls	The number of calls that were queued to this split/skill and answered by an agent in this split/skill (includes O_ACDCALLS).	ACDCALLS
Aban Calls	The number of calls that are abandoned by the caller when calls are in queue or when calls are ringing for this split/skill. This includes calls with talk times less than the phantom abandoned call timer value, if it is set.  <b>Note:</b> When a call is queued to multiple splits/skills and abandons from the queue, only the primary split/skill increments ABNCALLS. (Calls that are ringing at an agent's voice terminal and then abandon count as abandons for the split/skill for which they were ringing.)	ABNCALLS

Report heading	Description	Database item, calculation, or <calculation name>
Agents Staffed	The total number of agents logged into each split/skill.	STAFFED
Agents Avail	The current number of agents that are available to receive ACD calls in each split/skill.	AVAILABLE
Role	The Agent's service role for this SPLIT, as defined in the Dictionary. Requires Avaya Business Advocate.	syn(ROLE)
Percent	The Agent's percent allocation for this SPLIT. Requires Avaya Business Advocate.	PERCENT
Agents Ringing	The current number of agents that are available and have ACD calls (including direct agent calls) ringing at their voice terminal, but have not yet answered. If the agent places a call or answers an extension call, the agent is shown in the AUX work state, rather than in the ringing state.	AGINRING
Agents on ACD Calls	The total number of agents that are connected to inbound and outbound ACD calls in each split/skill. This does not include direct agent calls.	ONACD
Agents in ACW	The number of agents that are in the after call work mode for each split/skill. This includes agents on ACWIN/ACWOUT calls and agents in ACW not associated with an ACD call.	INACW
Agents in AUX	The current number of agents who are in the AUX work mode for all splits/skills, including agents who are handling AUXIN/AUXOUT calls.	INAUX



Report heading	Description	Database item, calculation, or <calculation name>
Agents in Other	The current number of agent positions that are doing other work. The agent did one of the following activities while in the Auto-in or Manual-In state. The agent put any call on hold and performed no further action. The agent is on a direct agent call or in ACW for a direct agent call. The agent is dialing to place a call or to activate a feature. The agent has a ringing personal call with no other activity. Agents are logged into multiple splits and doing work for a split other than this one.	OTHER
Agent Name	The names of the agents assigned to this split/skill and logged in (or their login IDs if names have not been assigned to them in Dictionary).	syn(LOGID)
Login ID	The login identification of the agent.	LOGID
Extn	The extension that the agent logged in from	EXTENSION
Role	The Agent's service role for this SPLIT, as defined in the Dictionary. Requires Avaya Business Advocate.	syn(ROLE)
Percent	The Agent's percent allocation for this SPLIT. Requires Avaya Business Advocate.	PERCENT
AUX Reason	The reason associated with the auxiliary work state of this agent (for example, lunch, break, meeting, or training). This field is blank if the agent is not in the AUX state.	AUXREASON
State	The current work mode (state) that the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN or OUT).	syn(WORKMODE) and syn(DIRECTION)

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	<p>The skill and level associated with the split/skill or direct agent ACD call that the agent is on or the ACW session.</p> <p>WORKSKILL is the OLDEST_LOGON:</p> <ul style="list-style-type: none"> <li>● When an agent is on an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold</li> <li>● When an agent is on an AUXIN call with an ACD call on hold</li> <li>● When an agent is on an AUXOUT call with an ACD call on hold, this is the split/skill associated with the ACD call.</li> <li>● When an agent is available, in AUX, or in OTHER, this is blank. The level is either a skill level (1-16) for a normal skill or a reserve level (R1 or R2) for a reserve skill. This WORKSKLEVEL applies to WORKSKILL.</li> </ul>	syn(WORKSKLEVEL)
Level	<p>The skill level associated with the agent's current WORKSKILL, when WORKSKILL is not null. Requires a switch with the EAS feature. For Avaya Business Advocate, in the cagent table, WORKSKLEVEL contains either a skill level (1-16) for a normal skill, or a reserve level (1 or 2) for a reserve skill. This WORKSKLEVEL applies to WORKSKILL.</p>	syn(WORKSKLEVEL)

Report heading	Description	Database item, calculation, or <calculation name>
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME
VDN Name (Shows data only if you have purchased the Vectoring feature)	The number or name of the VDN for which the report shows data. The VDN is associated with the ACD call in progress.	VDN

# Queue/Agent Summary report

This report summarizes the split's/skill's queue status (for example, how many calls are waiting in queue). It also summarizes the status of all agents (for example, how many agents are currently staffed or in after call work for the split or skill).


## Things to know about this report

Here are some things you need to know about this report:

- Direct agent calls waiting are displayed in this report because direct agent calls occupy split/skill queue slots.
- The database items used for the Queue/Agent Summary report are stored in the csplit and cagent tables.
- This report uses the Queue report input window. Select a split/skill that you want to view on the report. See [Queue/Agent report selector window and input fields](#) on page 158 for more information.

## Queue/Agent Summary report example

The following figure provides an example of a Queue/Agent Summary report:

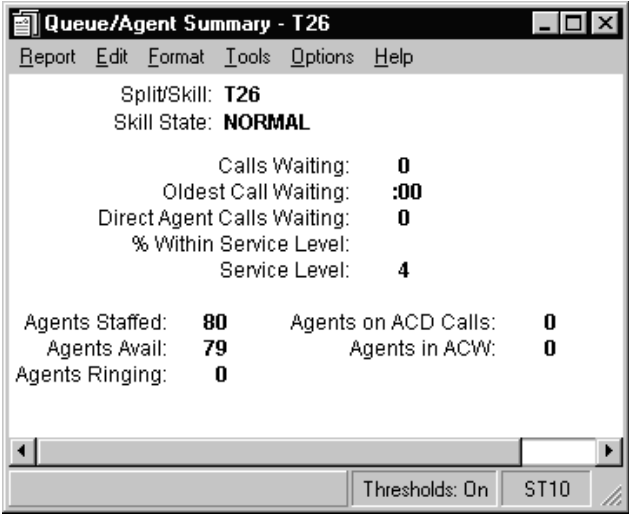

## Queue/Agent Summary report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the splits/skills selected for this report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report. Requires Avaya Business Advocate.	SKSTATE
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	The length of time (in seconds) the oldest call has waited in queue or ringing (at an agent voice terminal for each split/skill in the report) before being answered. This does not include direct agent calls.	OLDESTCALL
Direct Agent Calls Waiting	The current number of direct agent calls that are waiting in this split's/skill's queue or ringing at agent positions.	DA_INQUEUE+DA_INRING
% Within Service Level	The percentage of split/skill ACD calls that were answered by an agent within the predetermined time.	100*(ACCEPTABLE/ CALLSOFFERED) <PERCENT_SERV_LVL_SPL>
Secs.	The size of each service level increment is measured in seconds. Each increment of seconds represents a progressively longer wait time segment during which calls may be answered or abandoned, and each increment can be a different length. These increments are defined in the Call Center Administration - Split/Skill Call Profile Setup window or VDN Call Profile Setup window.	PERIOD1-9

Report heading	Description	Database item, calculation, or <calculation name>
Agents Staffed	The total number of agents that are logged into each split/skill.	STAFFED
Agents Avail	The current number of agents that are available to receive ACD calls in this split/skill.	AVAILABLE
Agents Ringing	The current number of agents that are available and have ACD calls (including direct agent calls) ringing at their voice terminal but have not yet answered. If the agent places a call or answers an extension call, the agent is shown in the AUX work state, rather than in the ringing state.	AGINRING
Agents on ACD Calls	The total number of agents that are connected to inbound and outbound ACD calls in each split/skill. This does not include direct agent calls.	ONACD
Agents in ACW	The number of agents who are in the after call work mode for each split/skill. This includes agents on ACW-IN/ACW-OUT calls and agents in ACW not associated with an ACD call.	INACW

---

# Split/Skill reports

From the Real-Time Split/Skill menu you can select Split Status (non- EAS) or Skill Status (EAS), Split/Skill report, or Call Profile. Additionally, if you have the EAS feature, you can select Top Agent Status, Top Agent report, and Skill AUX report.

The Split Status report or Skill Status report shows the status of one split or one skill. If you have the EAS feature, your system displays the Skill Status report. If you do not have the EAS feature, your system displays the Split Status report.

## General information about Split/Skill reports

### Organization of Split/Skill reports

---

The following list shows how the Split/Skill reports are organized:

- [Split/Skill Call Profile report](#) on page 180
- [Real-time Graphical Active Agents report](#) on page 184
- [Real-time Graphical Allocated Agents report](#) on page 188
- [Split/Skill Graphical AUX Agents report](#) on page 192
- [Split/Skill Graphical AUX Top Agents report](#) on page 196
- [Split/Skill Graphical Call Profile report](#) on page 199
- [Split/Skill Graphical EWT report](#) on page 203
- [Split/Skill Graphical Queue report](#) on page 207
- [Split/Skill Graphical Skill Overload report](#) on page 210
- [Split/Skill Graphical Staffing Profile report](#) on page 213
- [Split/Skill Graphical Status report](#) on page 218
- [Split/Skill Graphical Top Skill Status report](#) on page 223
- [Reserve1 AUX Agents report](#) on page 228
- [Reserve2 AUX Agents report](#) on page 232
- [Skill AUX report](#) on page 236
- [Skill Status report](#) on page 238
- [Skill Top Agent report](#) on page 246
- [Split Status report](#) on page 252
- [Split/Skill report](#) on page 257

## Real-time reports

- [Split/Skill by Location report](#) on page 261
- [Split/Skill Top Agent Status report](#) on page 264
- [Split/Skill Agent Status by Location report](#) on page 269




## Split/Skill report selector window and input fields

The split/skill report selector window and the split/skill report input window are used to run the split/skill reports described in this section.

### Split/Skill report selector window

The following figure is an example of the Split/Skill report selector window. The reports are explained in the same order as listed in the window:

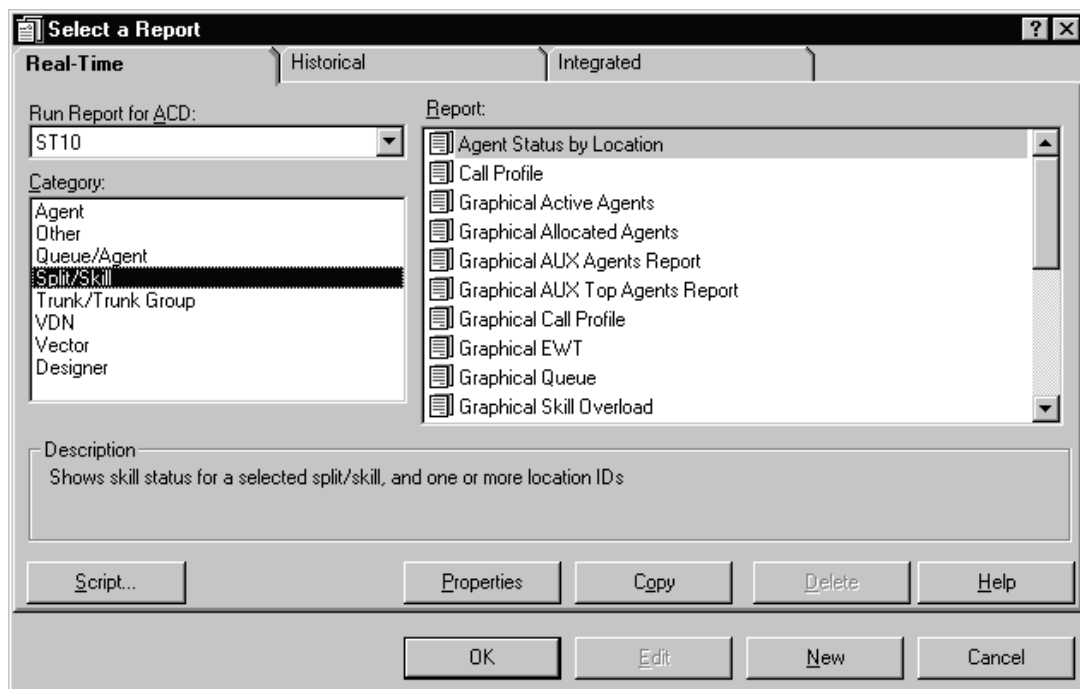

### Split/skill report input fields

The reports in this section use the Split/Skill reports input window. The following table describes the input fields on real-time Split/Skill report input windows. Not all reports use all fields; refer to information for the specific report you are running to determine what you want to view. For example, you may enter a skill or split/skill to run the report.

All possible fields on this window are described here:

Field	Definition
Skill, Split. Split/Skill, or Splits/Skills	Fill in the Skill (or split) input name or number for which you want to run the report. You can enter a split/skill name only if the name has been defined in Dictionary.
Multi-Location ID	Select a location ID for which to run the report. The location ID is an ID number of 1 – 44 digits assigned to a switch port network location and the equipment assigned to that port location.  For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.
Refresh Every <#> Seconds	Enter the number of seconds (3 to 600) to specify how rapidly CMS should update the report data. The default for the Refresh Every <#> Seconds field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check the Enable Report Thresholds option to start the report with report thresholds running. Uncheck the option if you do not want to run report thresholds.
Run Minimized	Check the Run Minimized option to run the report in a minimized window. Uncheck the option to run the report at full size.

## Split/skill report input fields

---

The reports in this section use the Split/Skill reports input window. The following table describes the input fields on real-time Split/Skill report input windows. Not all reports use all fields; refer to information for the specific report you are running to determine what you want to view. For example, you may enter a skill or split/skill to run the report.

All possible fields on this window are described here:

Field	Definition
Skill, Split, Split/Skill, or Splits/Skills	Fill in the Skill (or split) input name or number for which you want to run the report. You can enter a split/skill name only if the name has been defined in Dictionary.
Multi-Location ID	Select a location ID for which to run the report. The location ID is an ID number of 1 – 44 digits assigned to a switch port network location and the equipment assigned to that port location.  For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.
Refresh Every <#> Seconds	Enter the number of seconds (3 to 600) to specify how rapidly CMS should update the report data. The default for the Refresh Every <#> Seconds field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check the Enable Report Thresholds option to start the report with report thresholds running. Uncheck the option if you do not want to run report thresholds.
Run Minimized	Check the Run Minimized option to run the report in a minimized window. Uncheck the option to run the report at full size.

# Split/Skill Call Profile report

This report shows the wait times of incoming calls that are answered and abandoned in a split or skill during the current interval.


## Things to know about this report

Here are some things you need to know about this report:

- Calls are displayed in ten columns, with each column representing a progressively longer wait time (increment).
- The database items used for the Split/Skill Call Profile report are stored in the csplit table.
- You must have administered service level and wait time increments for this report to be meaningful.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 177 for more information.

## Split/Skill Call Profile report example

The following figure provides an example of a Split/Skill Call Profile report:

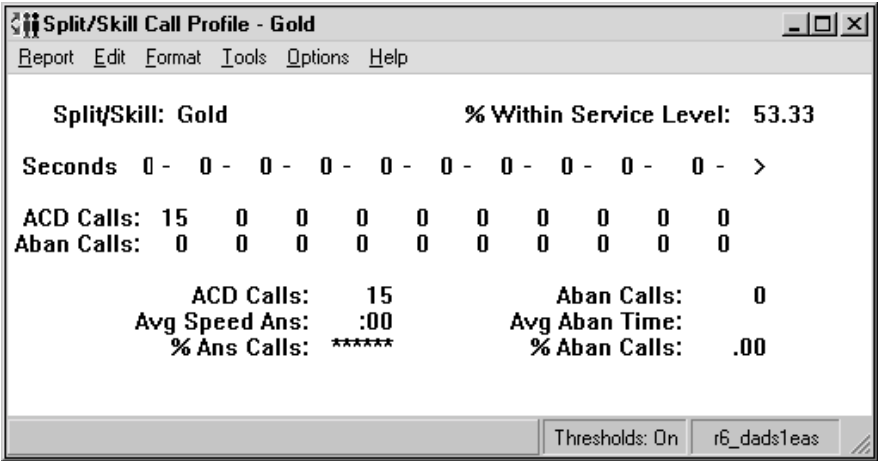

## Split/Skill Call Profile report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the split/skill selected for this report.	syn(SPLIT)
% Within Service Level	The percentage of split/skill ACD calls that were answered by an agent within the predefined time. Calls offered to the split/skill include calls that were abandoned and calls that were not answered, but do not include direct agent calls. Calls that were not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one split/skill and answered in another split/skill.	100*(ACCEPTABLE/ CALLSOFFERED) <PERCENT_SERV_LVL_SPL>
Seconds	The size of each increment is measured in seconds. Each increment of seconds represents a progressively longer wait time segment during which calls may be answered or abandoned, and each increment can be a different length. These increments are defined in the Call Center Administration Split/Skill Call Profile Setup window.	PERIOD1-9
ACD Calls	This is the number of calls that were sent to the split/skill that were answered by an agent within each increment. This includes outbound ACD calls placed by an adjunct (also called outbound predictive dialing). It does not include direct agent calls.	ACDCALLS1-10

Report heading	Description	Database item, calculation, or <calculation name>
Aban Calls	The number of calls to the split/skill that were abandoned within each increment. If calls are queued to multiple splits/skills, only the first split/skill queued to records an abandon. This includes outbound ACD calls placed by an adjunct (also called outbound predictive dialing). It does not include direct agent calls.	ABNCALLS
(Total) ACD Calls	The total number of ACD calls that were sent to the split/skill that were answered by an agent in the split/skill. This includes outbound ACD calls placed by an adjunct (also called outbound predictive dialing). It does not include direct agent calls.	ACDCALLS
Avg Speed Ans	The average time calls waited in queue and ringing before an agent answered. This does not include direct agent calls, but it does include outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ANSTIME/ ACDCALLS <AVG_ANSWER_SPEED>
% Ans Calls	The percentage of calls queued to the split/skill that were answered by an agent. Calls to the split/skill include abandoned calls and calls not answered. Calls not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one split/skill and answered in another split/skill. It does not include direct agent calls.	100*(ACDCALLS/ CALLSOFFERED) <PERCENT_CALL_ANS>
(Total) Aban Calls	The total number of calls queued for each split/skill that abandoned before an agent answered. This includes calls that abandon from ringing at a voice terminal. Direct agent calls are not included. This includes outbound calls where the far end abandoned as well.	ABNCALLS

Report heading	Description	Database item, calculation, or <calculation name>
Avg Aban Time	The average time calls waited in split/skill before hanging up.	ABNTIME/ABNCALLS <AVG_ABANDON_TIME>
% Aban Calls	The percentage of queued calls to the split/skill that were abandoned before being answered by an agent. Calls to the split/skill include outbound ACD calls placed by an adjunct (outbound predictive dialing). It does not include direct agent calls.	100*(ABNCALLS/ CALLSOFFERED) <PERCENT_CALL_ABAN>

## Real-time Graphical Active Agents report

This report, which is available only for customers who have switches with EAS and have purchased Avaya Business Advocate, displays how many agents of different types are active for a selected skill.

If Avaya Business Advocate is not activated, the fields of the report which pertain to Avaya Business Advocate will not be populated.

### Things to know about this report

---


Here are some things you need to know about this report:

- You can access this report from the Real-Time Split/Skill Category selector menu.
- Call center supervisors can use this report to see the number of Top, Flex, Reserve1, and Reserve2 agents staffed. The supervisor will also be able to see the number of each of those categories of agents who are active for the skill.
- This report consists of two charts, as well as individual data items and field labels.
- This report has a two-dimensional bar chart.
- The chart contains the following information:
  - The title of the chart is Top Agents Active, and is centered above the bar chart.
  - The x-axis contains the labels, **This Skill** and **Other Skills**, while the y-axis shows the number of agents.
- This report has a three-dimensional pie chart,
- The pie chart contains the following information for the number of agents active for the specified skill:
  - The title of the chart is **Active Agents for xxx**, where xxx is the specified skill, and is centered above the pie chart.
  - The pie chart's legend will be displayed by default, and shows Top, Flex, Reserve1, and Reserve2 agents.
  - The number of agents for each category are displayed.
- The database items used in the Graphical Active Agents report are stored in the csplit table.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 177 for more information.



## Graphical Active Agents report example

The following figure provides an example of a Graphical Active Agents report:

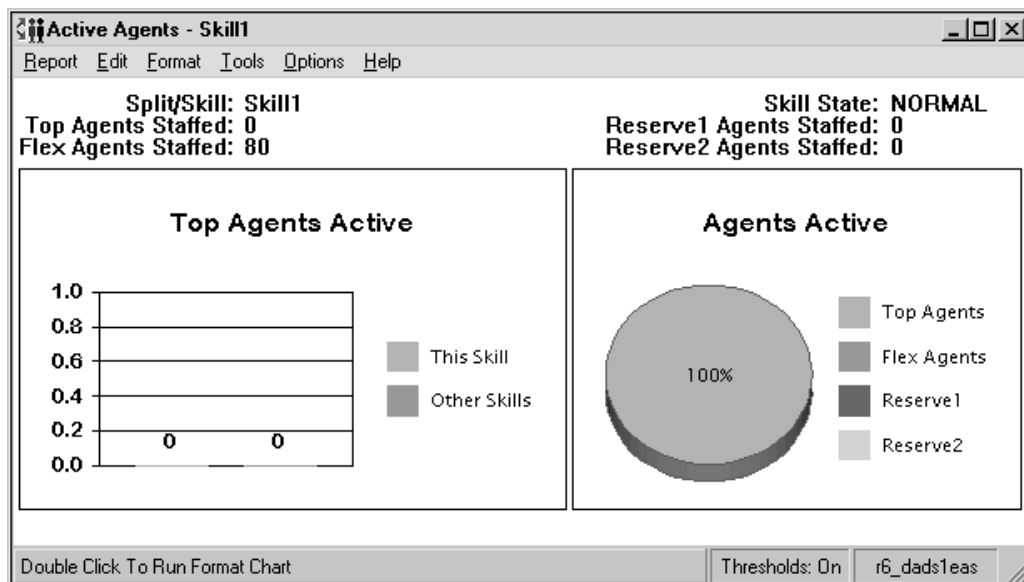

## Graphical Active Agents report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the split/skill selected for this report.	syn(SPLIT)
Top Agents Staffed	The current number of top agents that are staffed in SPLIT. Available with switches with the EAS feature. However, top database items are significant only for switches with EAS. TSTAFFED = TAVAILABLE + TAGINRING	TSTAFFED

Report heading	Description	Database item, calculation, or <calculation name>
Flex Agents Staffed	The number of agents who are staffing the skill, but are neither top or reserve agents. This field will contain backup agents if the Avaya Business Advocate feature is not used, because the database item consists of agents whose roll in the skill is backup (regardless of the administration of Avaya Business Advocate), allocation, or roving.	FSTAFFED
Skill State	The current state of the skill, compared to the administered thresholds.	syn(SKSTATE)
Reserve1 Agents Staffed	The number of agents staffing this skill as reserve1.	R1STAFFED
Reserve2 Agents Staffed	The number of agents staffing this skill as reserve2.	R2STAFFED
—Top Agents Active chart— This Skill	The number of top agents logged into the skill, who are on inbound and outbound ACD calls, plus the number of top agents who are in ACW for ACD calls, plus the number of top agents who have ACD calls ringing and are not doing anything else.	TONACD + TINACW + TAGINRING
—Top Agents Active chart— Other Skills	The number of top agents that are doing other work. Agents are logged into multiple splits/skills other than this one (on an ACD call or in ACW, or ACD calls ringing). While in Auto-in or Manual-in mode, the agent put any call on hold and has performed no further action; the agent is on a direct call or in ACW for a direct agent call; the agent is dialing to place a call or to activate a feature; an extension call or a direct agent ACD call is ringing with no other activity. Agents are available for other, multiple call handling skills. Agent POSITIONS will show up in TOTHER directly after the link to the switch comes up and directly after the agents log in before the CMS is notified of the agent's work state. Available with switches with the EAS feature. TOTHER includes TDA_INACW and TDA_ONACD.	TOTHER

Report heading	Description	Database item, calculation, or <calculation name>
—Agents Active chart—Top Agents	The number of top agents logged into the skill, who are on inbound and outbound ACD, plus the number of top agents who are in ACW for ACD calls, plus the number of top agents who have ACD calls ringing and are not doing anything else.	TONACD + TINACW + TAGINRING
—Agents Active chart—Flex Agents	The number of flex agents on ACD calls, plus the number of flex agents in ACW, plus the number of flex agents with this skill that have an ACD call ringing.	FONACD + FINACW + FAGINRING
—Agents Active chart—Reserve1 Agents	The number of reserve1 agents on ACD calls, plus the number of reserve1 agents in ACW, plus the number of reserve1 agents with this skill that have an ACD call ringing.	R1ONACD + R1INACW + R1AGINRING
—Agents Active chart—Reserve2 Agents	The number of reserve2 agents on ACD calls, plus the number of reserve2 agents in ACW, plus the number of reserve2 agents with this skill that have an ACD call ringing.	R2ONACD + R2INACW + R2AGINRING

## Real-time Graphical Allocated Agents report

This report, which is available only for customers who have switches with Expert Agent Selection (EAS) and have purchased Avaya Business Advocate, displays the number of active and staffed percent allocation agents who are staffing a selected skill.

If Avaya Business Advocate is not activated, the fields of the report which pertain to Avaya Business Advocate will not be populated.

### Things to know about this report


---

Here are some things you need to know about this report:

- You can access this report from the Real-Time Split/Skill Category selector menu.
- The Graphical Allocated Agents report will show the total number of active agents and full-time equivalent agents, for a selected skill. This report will also show the number of Standard, Reserve1, and Reserve2 agents staffed and the number of each of those categories of agents who are active for the skill.
- The call center manager or supervisor can use this report to determine how many agents are active from each agent pool and compare that to the number of total staffed agents.
- The charts contain the following information:
  - The chart on the left side of the report displays the agents active for the specified skill, and has a bar for the number of standard agents active, a bar for the number of reserve1 agents active and a bar for the number of reserve 2 agents active.
  - The chart on the right side of the report displays staffed agents and has a bar each for the number of standard agents staffed, number of reserve1 agents staffed, and number of reserve2 agents staffed.
- The database items used in the report are stored in the csplit table.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 177 for more information.

## Graphical Allocated Agents report example

The following figure provides an example of a Graphical Allocated Agents report:

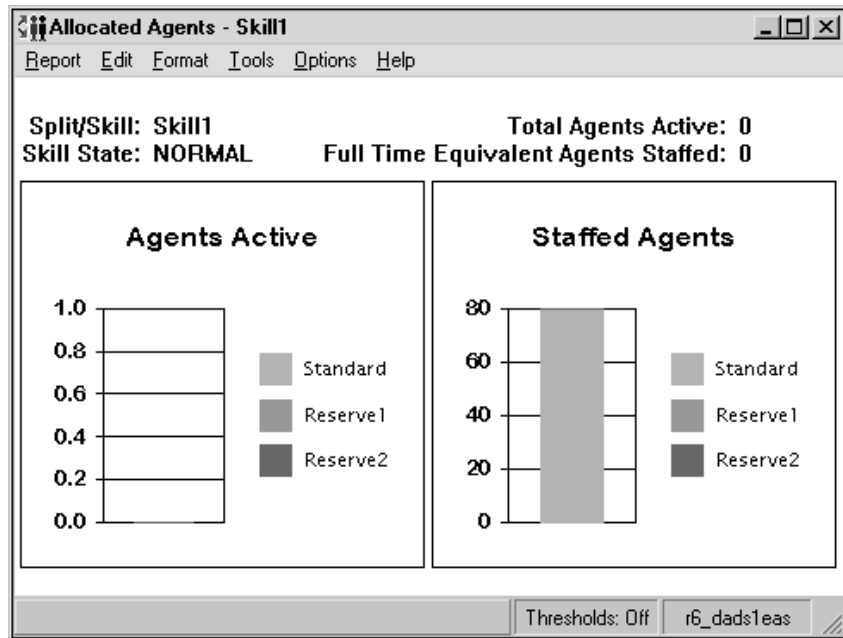

## Graphical Allocated Agents report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skill	The name or number of the split/skill selected for this report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds.	syn(SKSTATE)

Report heading	Description	Database item, calculation, or <calculation name>
Total Agents Active	The current number of POSITIONS that are on inbound and outbound ACD calls; plus the current number of POSITIONS that are in after call work (ACW), including agents on ACWIN/ACWOUT calls as well as agents in ACW not associated with an ACD call; plus the current number of POSITIONS at which skill or direct agent calls are ringing.	ONACD + INACW + AGRING
Full Time Equivalent Agents Staffed	Avaya Business Advocate full-time equivalent number of agents staffed for this skill. Full Time Equivalent Agents Staffed = TOT_PERCENTS / 100.	FTE_AGENTS
Standard Agents (active)	The current number of POSITIONS that are on inbound and outbound ACD calls; plus the current number of POSITIONS that are in ACW, including agents on ACWIN/ACWOUT calls as well as agents in ACW not associated with an ACD call. This also includes the current number of POSITIONS at which skill or direct agent calls are ringing, minus the reserve1 agents (active); or the number of reserve1 agents on ACD calls, plus the number of reserve1 agents in ACW, plus the number of reserve1 agents with this skill that have an ACD call ringing. This field is minus the reserve2 agents (active); or the number of reserve2 agents on ACD calls, plus the number of reserve2 agents in ACW, plus the number of reserve2 agents with this skill that have an ACD call ringing.	(ONACD + INACW + AGINRING) - (R1ONACD + R1INACW + R1AGINRING) - (R2ONACD + R2INACW + R2AGINRING)
Standard Agents (staffed)	The current number of POSITIONS that are staffed (logged in), minus the number of agents staffing this skill as reserve1, minus the number of agents staffing this skill as reserve2.	STAFFED - R1STAFFED - R2STAFFED

Report heading	Description	Database item, calculation, or <calculation name>
Reserve1 Agents (active)	The number of reserve1 agents on ACD calls, plus the number of reserve1 agents in ACW, plus the number of reserve1 agents with this skill that have an ACD call ringing.	(R1ONACD + R1INACW + R1AGINRING)
Reserve1 Agents Staffed	The number of agents staffing this skill as reserve1.	R1STAFFED
Reserve2 Agents (active)	The number of reserve2 agents on ACD calls, plus the number of reserve2 agents in ACW, plus the number of reserve2 agents with this skill that have an ACD call ringing.	(R2ONACD + R2INACW + R2AGINRING)
Reserve2 Agents Staffed	The number of agents staffing this skill as reserve2.	R2STAFFED

## Split/Skill Graphical AUX Agents report

This report shows all agents with this skill who are in AUX, the reason, and the time in AUX.

### Things to know about this report

---

You can access this report in the following ways:

- From the Real-Time Split/Skill Category selector menu.
- By drilling down from the AUX work state fields on other reports to this report (only available with a MultiVantage™ system). All other switch or EAS configurations drill down to the Work State report.

### Report formats

---

This report shows the following two-dimensional pie chart information for the number of agents in AUX for each reason code for that skill:

- The pie chart's legend shows the synonym for each reason code and its corresponding color of the pie.
- The legend is sorted in ascending order by the reason code number, with the customer-defined synonym for reason code 0 at the bottom.
- The number of agents are shown inside each slice of the pie.

This report includes the following table information:

- A row for each agent currently in the AUX work state for that skill.
- The agent's name, login ID, reason code, and the time in AUX since the agent entered AUX for that reason code.
- You can specify how you want to sort the agent's name, login ID, reason code, and time.
- You can use the scroll bar to see additional agents who are in the AUX state.
- Call center supervisors can use this report to see which staffed agents are unavailable to take calls, and for what reason. The supervisor can also see how long each agent has been unavailable for each of the reason codes. This will help show the supervisor who can be pulled to answer calls if call volumes increase, and will also help to identify agents who are taking too long for breaks, lunch, etc.
- From this report, you can drill-down to the Agent Information report from the Agent Name field.
- The chart type can be changed. See [Using reports](#) on page 35 for more information.




- The database items used for the Split/Skill Graphical AUX Agents report are stored in the csplit and cagent tables.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

This report shows the following two-dimensional pie chart information for the number of agents in AUX for each reason code for that skill:

- The pie chart's legend shows the synonym for each reason code and its corresponding color of the pie.
- The legend is sorted in ascending order by the reason code, with the customer-defined synonym for reason code 0 at the bottom.
- The number of agents are shown inside each slice of the pie.

## Split/Skill Graphical AUX Agents report example

The following figure provides an example of a Split/Skill Graphical AUX Agents report:

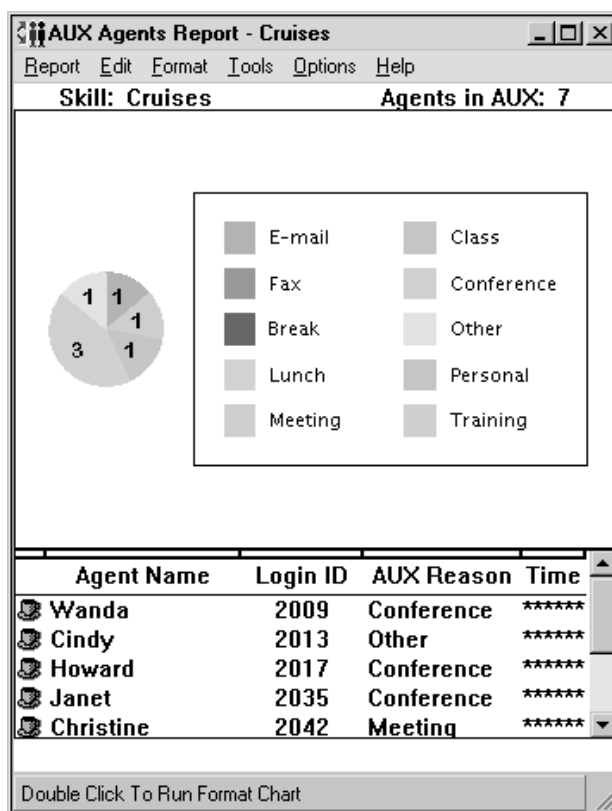

## Split/Skill Graphical AUX Agents report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skill	The name or number of the skill (up to 20 characters) that is selected for this report.	syn(SPLIT)
Agents in AUX	The current number of agent positions that are in AUX mode for this skill or on AUX-IN/AUX- OUT calls.	INAUX
Reason Code 0	The current number of positions that are in auxiliary work with reason code zero (0) for this skill or on AUXIN/AUXOUT calls. Reason code 0 is for system AUX work when reason codes are active.	INAUX0
Reason Code 1-9	The current number of positions that are in auxiliary work with each of the reason codes 1-9 for this skill or on AUXIN/AUXOUT calls.	INAUX1-9
Agent Name	The names (or agent IDs if the names have not been assigned in Dictionary) of the agents assigned to this split/skill and logged in.	syn(LOGID)
Login ID	The login identification of the agent.	LOGID
Location ID	<p>The location IDs associated with the agent. This ID is not associated with the agent personally, but rather with the terminal the agent is logged into. It is also associated with a port network location ID on a switch. If the Agent Site Tracking feature is not available on your system, the field will not display meaningful data. This field is available only when you drill down from a custom report that has Location ID as an input.</p> <p>For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.</p>	LOC_ID

Report heading	Description	Database item, calculation, or <calculation name>
AUX Reason	For the switch, this is the reason associated with the auxiliary work state (on a break, in a meeting, and so on) of this agent. This field is blank if the agent is not in the AUX work state.	syn(AUXREASON)
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME

## Split/Skill Graphical AUX Top Agents report

This report shows top agents with this skill who are in AUX, the reason, and the time in AUX.

### Things to know about this report

---

Here are some things to know about this report:

- Call center supervisors can use this report to see which top agents are unavailable to take calls, and for what reason. The supervisor will also be able to see how long each top agent has been unavailable for each of the reason codes. This will help the supervisor figure out who could be pulled in to answer calls if call volumes increase, and will also help to identify top agents who are taking too long for breaks, lunch, etc.
- Top agents are agents for whom this measured skill is their highest priority. The skill level 1 is the highest priority and 16 is the lowest.
- The chart type can be changed. See [Using reports](#) on page 35 for more information.
- The database items used for the Split/Skill Graphical AUX Top Agents report are stored in the csplit and cagent tables.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

You can access this report in the following ways:

- From the Real-Time Split/Skill Category selector menu
- By drilling down from the AUX or Top Agent AUX (csplit.TINAUX) work states on other top agent reports to this top agent report. This occurs only with a switch with EAS; otherwise, you drill down to the Work State report.

This report includes the following table information:


- A row for each top agent that is currently in the AUX work state for that skill.
- The top agent's name, login ID, reason code, and the time in AUX since the agent entered AUX for that reason code.
- You can specify how you want to sort the agent's name, login ID, reason code, and time.
- You can use the scroll bar to see additional top agents that are in the AUX state.

This report shows the following 2-D pie chart information for the number of agents in AUX for each reason code for that skill:

- The pie chart's legend shows the synonym for each reason code and its corresponding color of the pie.
- The number of agents are shown inside each slice of the pie.
- The legend is sorted in ascending order by reason code number, with the customer-defined synonym for reason code 0 at the bottom.

## Split/Skill Graphical AUX Top Agents report example

The following figure provides an example of a Split/Skill Graphical AUX Top Agents report:

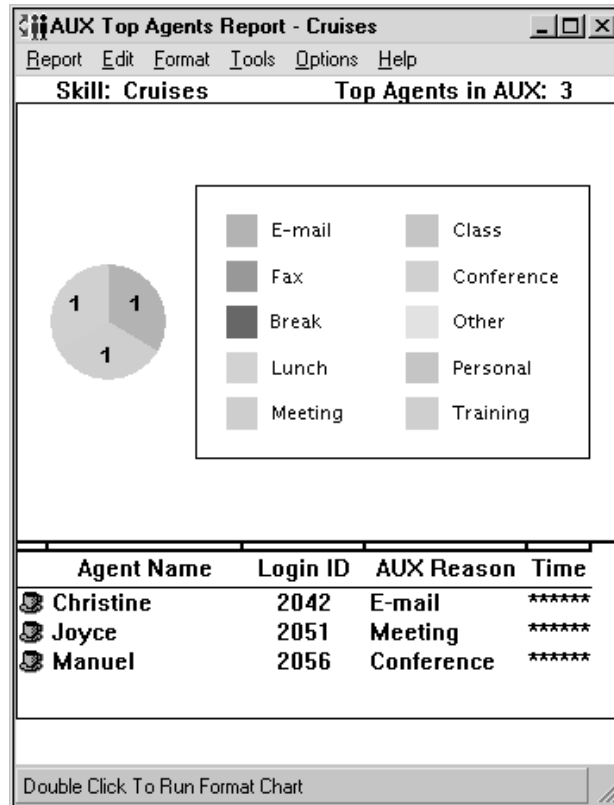

## Split/Skill Graphical AUX Top Agents report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skill	The name or number of the skill (up to 20 characters) that is selected for this report.	syn(SPLIT)
Top Agents in AUX	The number of top agents logged into the skill who are in the AUX work mode. This includes agents on AUXIN/AUXOUT calls.	INAUX
Reason Code 0	The current number of positions that are in auxiliary work with reason code zero (0) for this skill or on AUXIN/AUXOUT calls. Reason code 0 is for system AUX work when reason codes are active.	NAUX0
Reason Code 1-9	The current number of positions that are in auxiliary work with each of the reason codes 1-9 for this skill or on AUXIN/AUXOUT calls.	INAUX1-9
Agent Name	The names (or agent IDs if the names have not been assigned in Dictionary) of the agents assigned to this skill and logged in.	syn(LOGID)
Login ID	The login identification of the agent. LOGID	
Location ID	<p>The location IDs associated with the agent. This ID is not associated with the agent personally, but rather with the terminal the agent is logged into. It is also associated with a port network location ID on a switch. If the Agent Site Tracking feature is not available on your system, the field will not display meaningful data. This field is available only when you drill down from a custom report that has Location ID as an input.</p> <p>For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.</p>	LOC_ID

Report heading	Description	Database item, calculation, or <calculation name>
AUX Reason	For the switch, this is the reason code associated with the auxiliary work state (on a break, in a meeting, and so on) of this agent. This field is blank if the agent is not in the AUX state.	syn(AUXREASON)
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME

## Split/Skill Graphical Call Profile report

This report shows how well the split or skill you specify is performing compared to your call center's predefined acceptable service level.

### Things to know about this report

Here are some things to know about this report:


- You can access this report from the Real-Time Split/Skill Category selector menu.
- The split/skill selected for the report and the predefined acceptable service level are displayed above the top graph. Legends appear to the right of each chart.
- On the bottom graph, the horizontal axis represents the service interval in seconds, and the vertical axis represents the number of ACD calls answered/abandoned within the acceptable service level.
- The number displayed for each service interval is the upper limit of the interval. For example, if the first two intervals are 3 and 5, the first data point on the graph indicates the number of calls answered/ abandoned within 0-3 seconds, and the second data point indicates the number of calls answered/abandoned within 4-5 seconds.
- The chart type can be changed. See [Using reports](#) on page 35 for more information.
- The database items used for this report are stored in the csplit table.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

This report has two charts:

- The top chart, a three-dimensional pie chart, shows the percentage of ACD calls answered within the predefined Acceptable Service Level and the percentage of ACD calls answered outside this level.
- The bottom chart, a stacked area graph, shows the number of ACD calls answered and abandoned within each service interval.

**Split/Skill Graphical Call Profile report example**

The following figure provides an example of a Split/Skill Graphical Call Profile report:

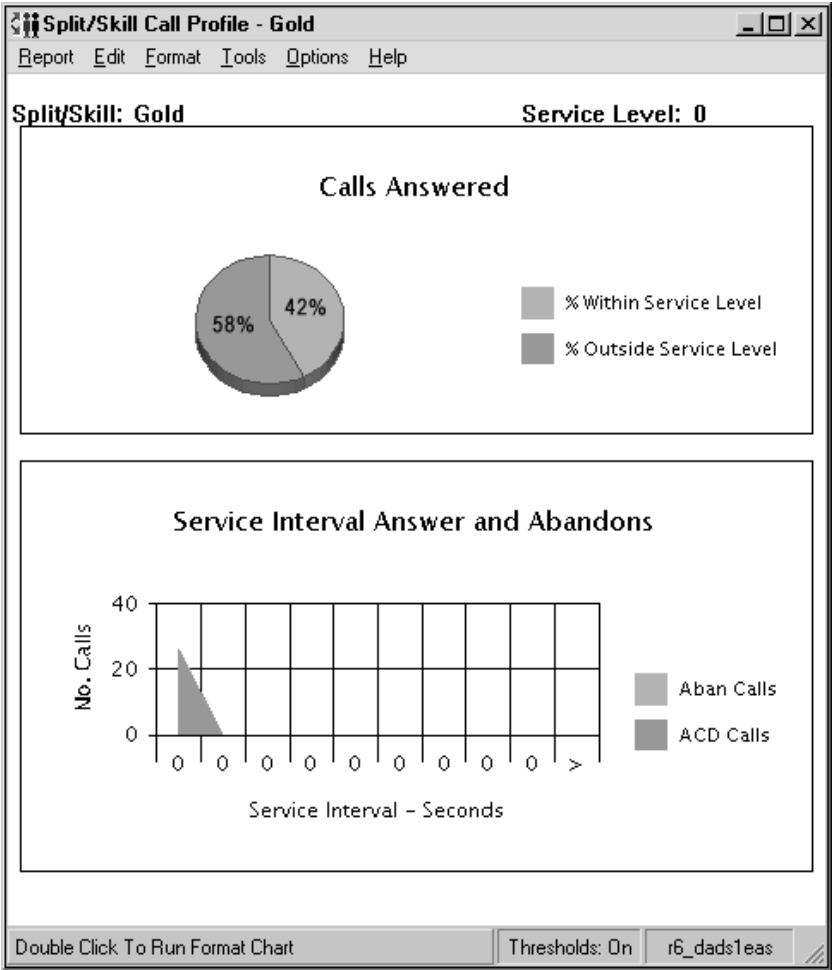



## Split/Skill Graphical Call Profile report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the split/skill selected for this report.	syn(SPLIT)
Secs	The size of each increment is measured in seconds. Each increment of seconds represents a progressively longer wait time segment during which calls may be answered or abandoned, and each increment can be a different length. These increments are defined in the Call Center Administration Split/Skill Call Profile Setup window.	PERIOD1-9
% Within Service Level	<p>The percentage of split/skill ACD calls that were answered by an agent within the predefined service level. Calls offered to the split/skill include calls that were abandoned and calls that were not answered, but do not include direct agent calls. Calls that were not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one split/skill and answered in another split/skill.</p> <p>For the call vectoring feature, calls that were not answered may include:</p> <ul style="list-style-type: none"> <li>● Forced Busy calls</li> <li>● Forced disconnect calls</li> <li>● Calls redirected to another destination</li> <li>● Calls queued to more than one split/skill and answered in another split/skill</li> </ul>	<p>100*(ACCEPTABLE/CALLS-OFFERED)</p> <p>&lt;PERCENT_SERV_LVL_SPL&gt;</p>

Report heading	Description	Database item, calculation, or <calculation name>
% Outside Service Level	Percentage of split/skill ACD calls that were not answered by an agent within the predefined acceptable service level. Calls to the split/skill include abandoned calls, calls not answered, and outbound ACD calls placed by an adjunct (for example, Outbound predictive dialing). Calls that were not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one split and answered in another split/skill. Percent Within Service Level does not include direct agent calls.	< <100-PERCENT_SERV_LVL_SPL>
Aban Calls	The number of calls to the split/skill that were abandoned within each increment. If calls are queued to multiple splits/skills, only the first split/skill queued to records an abandon. This includes outbound ACD calls placed by an adjunct (also called outbound predictive dialing). It does not include direct agent calls.	ABNCALLS1-10
ACD Calls	This is the number of calls that were sent to the split/skill that were answered by an agent within each increment. This includes outbound ACD calls placed by an adjunct (also called outbound predictive dialing). It does not include direct agent calls.	ACDCALLS1

# Split/Skill Graphical EWT report

## Overview

---

This report shows the current Expected Wait Time (EWT) for one or more of the splits or skills you specify.

## Things to know about this report


---

Here are some things you need to know about this report:

- This report is available only if you have a later version switch with the EWT option.
- You can access this report from the Real-Time Split/Skill Category selector menu.
- The vertical axis of the chart is labeled with the names or numbers of the splits or skills selected for the report.
- A legend appears to the right of the chart.
- The database items used for the report are stored in the csplit table.
- The chart type can be changed. See [Using reports](#) on page 35 in this document for more information.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Split/Skill Graphical EWT report example

The following figure provides an example of a Split/Skill Graphical EWT report:

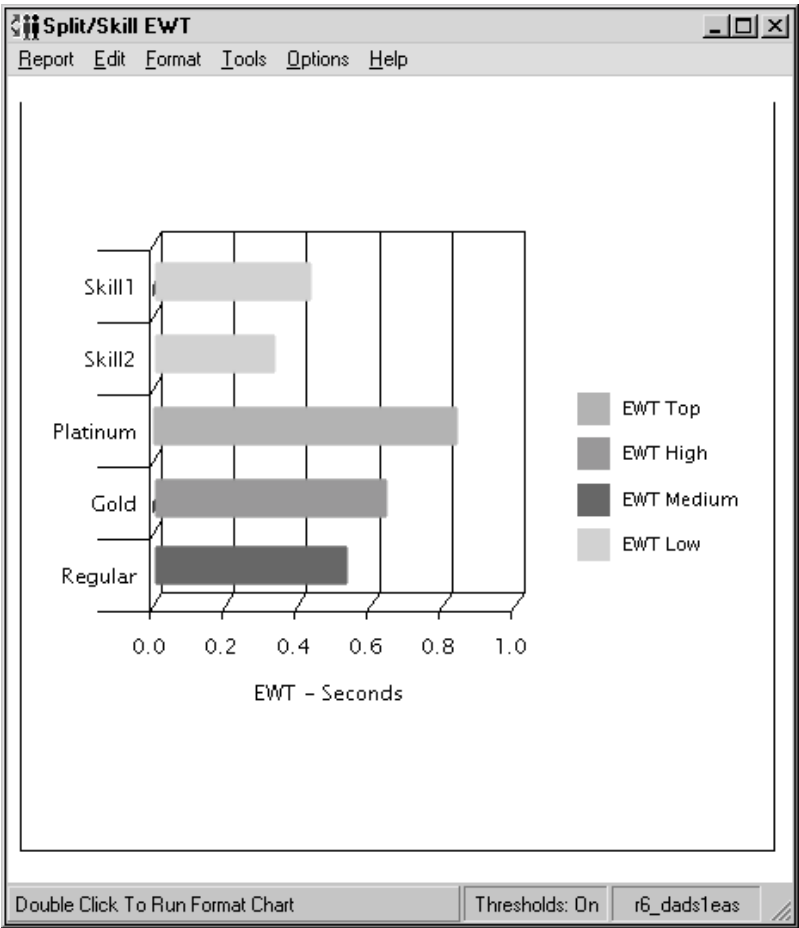

## Split/Skill Graphical EWT report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skill	The name or number of the skill that is selected for this report.	syn(SPLIT)
Top	This heading contains EWT for the split/skill at top priority. EWT is the wait time for the call when it is queued to the split/skill at the top priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exceptions command.	EWTTOP
High	This heading contains EWT for the split/skill at high priority. EWT is the wait time for the call when it is queued to the split/skill at high priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exceptions command.	EWTHIGH

Report heading	Description	Database item, calculation, or <calculation name>
Medium	This heading contains EWT for the split/skill at medium priority. EWT is the wait time for the call when it is queued to the split/skill at medium priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exceptions command.	EWTMEDIUM
Low	This heading contains EWT for the split/skill at low priority. EWT is the wait time for the call when it is queued to the split/skill at low priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exceptions command.	EWTLOW

# Split/Skill Graphical Queue report

This report shows the number of calls waiting in queue, the amount of time that the oldest call has waited in queue, and trending for one or more splits/skills.

## Things to know about this report


---

Here are some things you need to know about this report:

- You can access this report from the Real-Time Split/Skill Category selector menu.
- You can use this report to view trends of calls waiting for several splits/skills.
- The chart type can be changed. See [Using reports](#) on page 35 for more information.
- This report has four graphs. The two graphs on the left side of the report show the number of Calls Waiting (upper left quadrant) and the Oldest Call Waiting (lower left quadrant). The two graphs on the right side of the report show the trends for the last ten refresh intervals for the same data items. The legend shows which line corresponds to which split/skill.
- Each bar graph has a horizontal bar, on the left quadrant of the report, for each split/skill selected for the report. Each graph's x-axis dynamically scales to the largest value of the items being reported. The x-axis of the Calls Waiting bar graph displays the number of calls (No. Calls) waiting in the split/skill queue. The x-axis of the Oldest Call Waiting bar graph displays the number of seconds the oldest call in the split/skill queue has waited.
- The database items used for this report are stored in the csplit table.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Split/Skill Graphical Queue report example

The following figure provides an example of a Split/Skill Graphical Queue report:

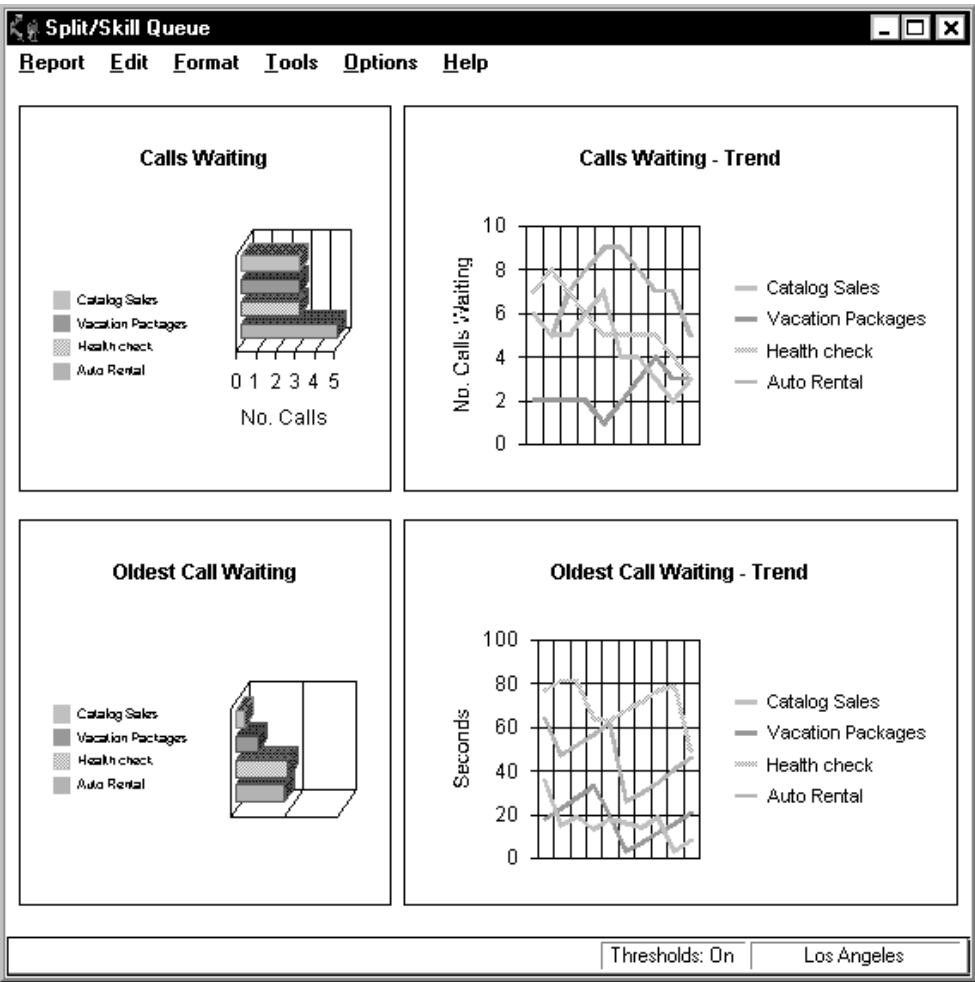



## Split/Skill Graphical Queue report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the splits/skills selected for this report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report.	SKSTATE
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	The length of time (in seconds) the oldest ACD call has waited in queue or ringing (at an agent voice terminal for each split/skill in the report) before being answered. This does not include direct agent calls.	OLDESTCALL

## Split/Skill Graphical Skill Overload report

This report is only available for customers who have switches with EAS and have purchased Avaya Business Advocate. It shows the skill state (normal, unknown, overload1, overload 2) and trends for a selected skill.

If Avaya Business Advocate is not activated, the fields of the report which pertain to Avaya Business Advocate will not be populated.

### Things to know about this report


---

Here are some things you need to know about this report:

- You can access this report from the Real-Time Split/Skill Category selector menu.
- The report caption displayed when the report is run reads **Skill Overload: xxx** where xxx is the skill name string specified by the Name Formats window of Tools/Options.
- This report has two sections: a vertical bar chart and a rolling line chart.
- The vertical bar chart consists of:
  - A vertical bar for each skill input for the report, showing the current skill state.
  - The y-axis of the report will display, from the bottom up, Normal, Overload1, and Overload2.
  - The title: Skill Overload report
  - By default, a legend displays. The legend will show the synonym for every skill specified in the input, or the skill number if no skill name has been defined.
- The rolling line chart consists of:
  - When the report is started, only one data point (whether unknown, normal, overload1 or overload2) is displayed for each skill. With each refresh, the new status will be added to the previous refresh. This continues for 20 refreshes, at which time the oldest data will roll off the chart.
  - The x-axis of the chart displays a tick mark for each report refresh.
  - The y-axis of the chart displays, from the bottom up, Normal, Overload1, and Overload2.
- The database items used for this report are stored in the csplit table.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Split/Skill Graphical Skill Overload report example

The following figure is an example of a Graphical Skill Overload report:

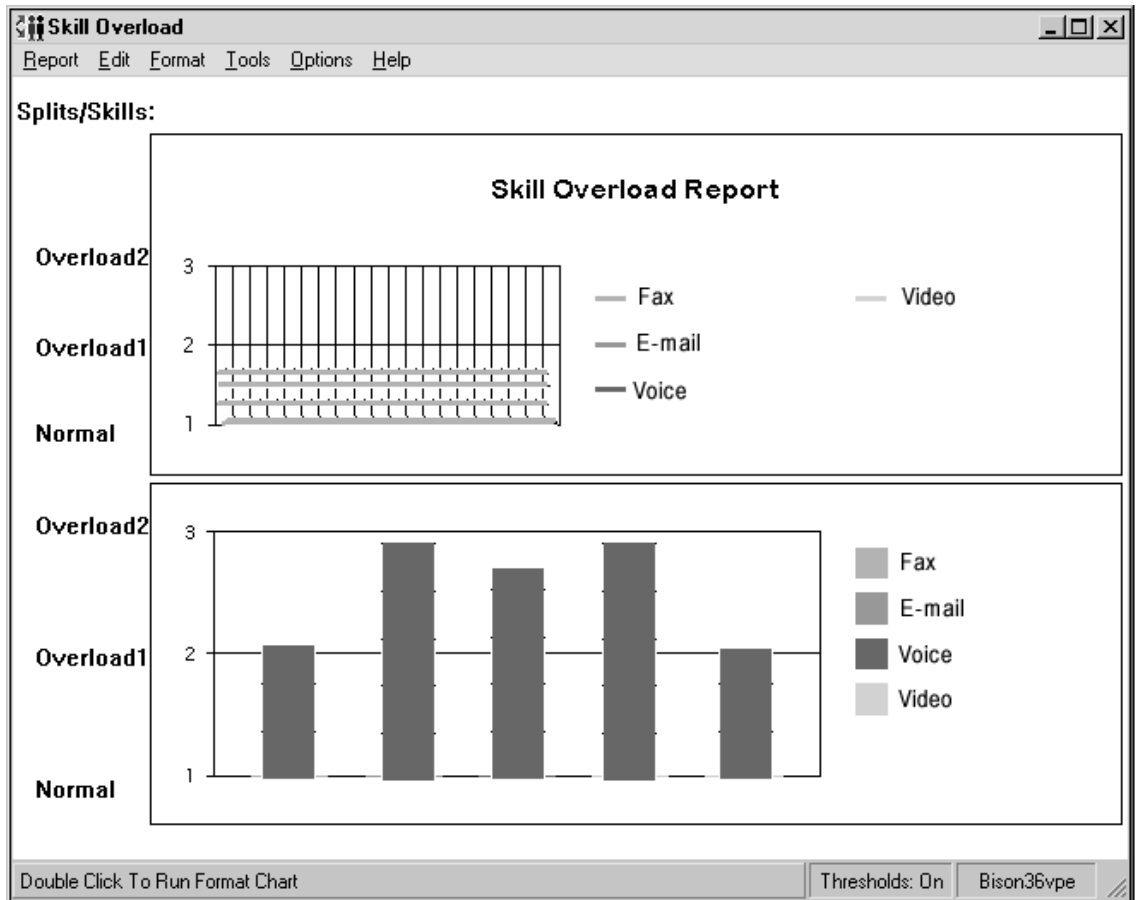

Split/Skill Graphical Skill Overload report  
description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the splits/skills selected for this report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report.	SKSTATE

# Split/Skill Graphical Staffing Profile report

This report is available only for customers who have switches with EAS and have purchased Avaya Business Advocate. It shows how many of what type of agents are staffing a specified skill as Active, in Other, or in AUX.

If Avaya Business Advocate is not activated, the fields of the report which pertain to Avaya Business Advocate will not be populated.

## Things to know about this report


---

Here are some things you need to know about this report:

- You can access this report from the Real-Time Split/Skill Category selector menu.
- Call center supervisors can use this report to see how many agents are active, in Other or in auxiliary work (AUX). This report will also show the supervisor what type of agents are in those fields.
- This report has four charts.
- The charts contain the following information:
  - The upper left quadrant chart shows Top agents staffed, active, in AUX, and in Other for the specified skill.
  - The upper right quadrant chart shows Flex agents staffed, active, in AUX, and in Other for the specified skill.
  - The lower right quadrant chart shows Reserve2 agents staffed, active, in AUX, and in Other for the specified skill.
  - The lower left quadrant chart shows Reserve1 agents staffed, active, in AUX, and in Other for the specified skill.
- The database items used for this report are stored in the csplit table.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.
- You may change the report in Report Designer to display information on agents who are available (AVAIL).

## Split/Skill Graphical Staffing Profile report example

The following figure is an example of a Graphical Staffing Profile report:

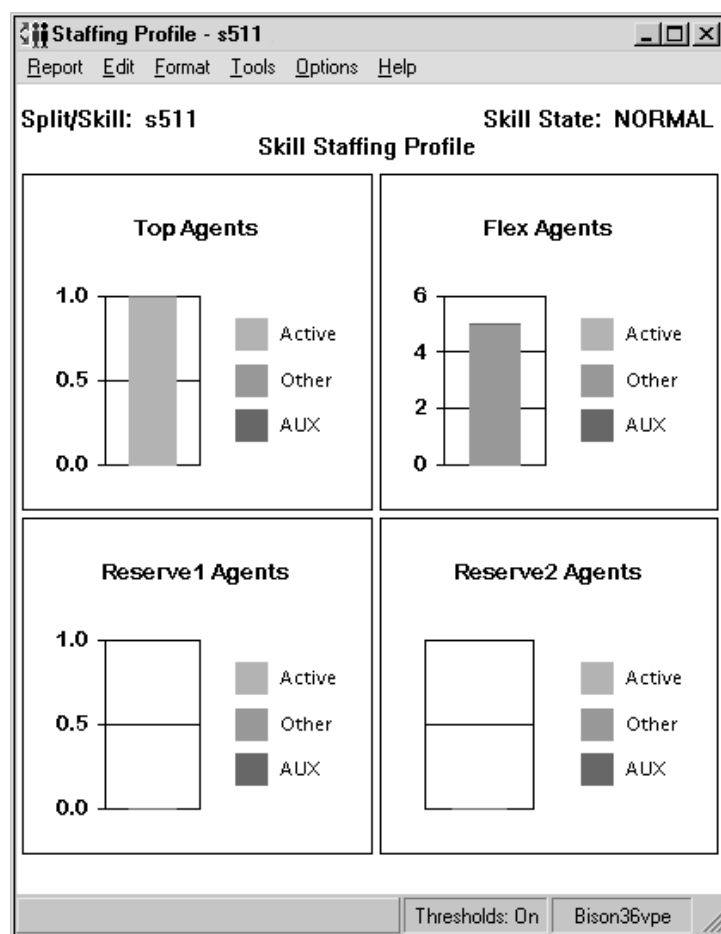

## Split/Skill Graphical Staffing Profile report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the splits/skills selected for this report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report.	SKSTATE
Top Agents (AUX)	The number of top agents logged into the skill who are in the AUX work mode. This includes agents on AUXIN/AUXOUT calls. Available on switches with the EAS feature for top skills. However, top database items are only significant for C switches and the ECS with EAS. TINAUX includes TINAUX0, TINAUX1-9, TONACDAUXOUT, TONAUXIN, and TONAUXOUT.	TINAUX

Report heading	Description	Database item, calculation, or <calculation name>
Top Agents (Other)	The number of top agents that are doing other work. Agents are logged into multiple skills and doing work for a skill other than this one (on an ACD call or in after call work [ACW], or ACD calls ringing). While in Auto-in or Manual-in mode; the agent put any call on hold and has performed no further action; the agent is on a direct agent call or in ACW for a direct agent call; the agent is dialing to place a call or to activate a feature; an extension call or a direct agent ACD call is ringing with no other activity. For EAS with multiple call handling, agents are available for other, multiple call handling skills. Agent POSITIONS will show up in TOTHER directly after the link to the switch comes up and directly after the agents log in before the CMS is notified of the agent's work state. Available with switches with the EAS feature. TOTHER includes TDA_INACW and TDA_ONACD.	TOTHER
Top Agents (Active)	The number of top agents logged into the skill, who are on inbound and outbound ACD calls, plus the number of top agents who are in ACW for ACD calls, plus the number of top agents who have ACD calls ringing and are not doing anything else.	$\text{6TONACD} + \text{TINACW} + \text{TAGINRING}$
Flex Agents (AUX)	The number of flex agents in AUX.	FINAUX
Flex Agents (Other)	The number of flex agents in the OTHER state.	FOTHER
Flex Agents (Active)	The number of flex agents on ACD calls, plus the number of flex agents in ACW, plus the number of flex agents with this skill that have an ACD call ringing.	$\text{FONACD} + \text{FINACW} + \text{FAGINRING}$
Reserve1 Agents (AUX)	The number of reserve1 agents in AUX.	R1INAUX



Report heading	Description	Database item, calculation, or <calculation name>
Reserve1 Agents (Other)	The number of reserve 1 agents in the OTHER state.	R1OTHER
Reserve1 Agents (Active)	The number of reserve1 agents on ACD calls, plus the number of reserve1 agents in ACW, plus the number of reserve1 agents with this skill that have an ACD call ringing.	R1ONACD + R1INACW + R1AGINRING
Reserve2 Agents (AUX)	The number of reserve2 agents in AUX.	R2INAUX
Reserve2 Agents (Other)	The number of reserve2 agents in the OTHER state.	R2OTHER
Reserve2 Agents (Active)	The number of reserve2 agents on ACD calls, plus the number of reserve2 agents in ACW, plus the number of reserve2 agents with this skill that have an ACD call ringing.	R2ONACD + R2INACW + R2AGINRING

## Split/Skill Graphical Status report

This report shows the status of the agent, the amount of time in an agent state, and the split/skill statistics for individual agents.

### Things to know about this report


---

Here are some things you need to know about this report:

- You can access this report from the Real-Time Split/Skill Category selector menu.
- From this report, you can drill down to the Real-Time or Integrated Agent Information, Work State, and Graphical AUX Agent (for a switch with EAS) reports.
- The chart type can be changed. See [Using reports](#) on page 35 in this document for more information.
- The database items used for the report are stored in the csplit, hsplit, and cagent tables.
- This report is available in both graphical and tabular formats.
- The table on the left side of the report lists the staffed (logged in) agents in the split/skill you specify, the state (workmode) each agent is currently in, the amount of time the agent has been in the current state, and the split/skill that the agent is in currently. If the Split/Skill column is empty, the agent is not currently on a call. The split/skill selected for the report is displayed above the table.
- By default, agent names are sorted alphabetically. If there are more staffed agents than can be displayed, a scroll bar appears on the right side of the table. To the left of each agent name (or login id, if names are not assigned) is an icon representing the agent's state.
- The three-dimensional pie chart in the upper-right quadrant shows the number of agents in each agent state (Avail, ACD, AUX, ACW, Ring, Other) for the selected split/skill. The number of agents in each agent state is displayed on the corresponding piece of pie. A legend is displayed to the right of the chart.
- The fields in the lower-right quadrant of the report display real-time split/skill information.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Split/Skill Graphical Status report example

The following figure provides an example of a Split/Skill Graphical Status report:

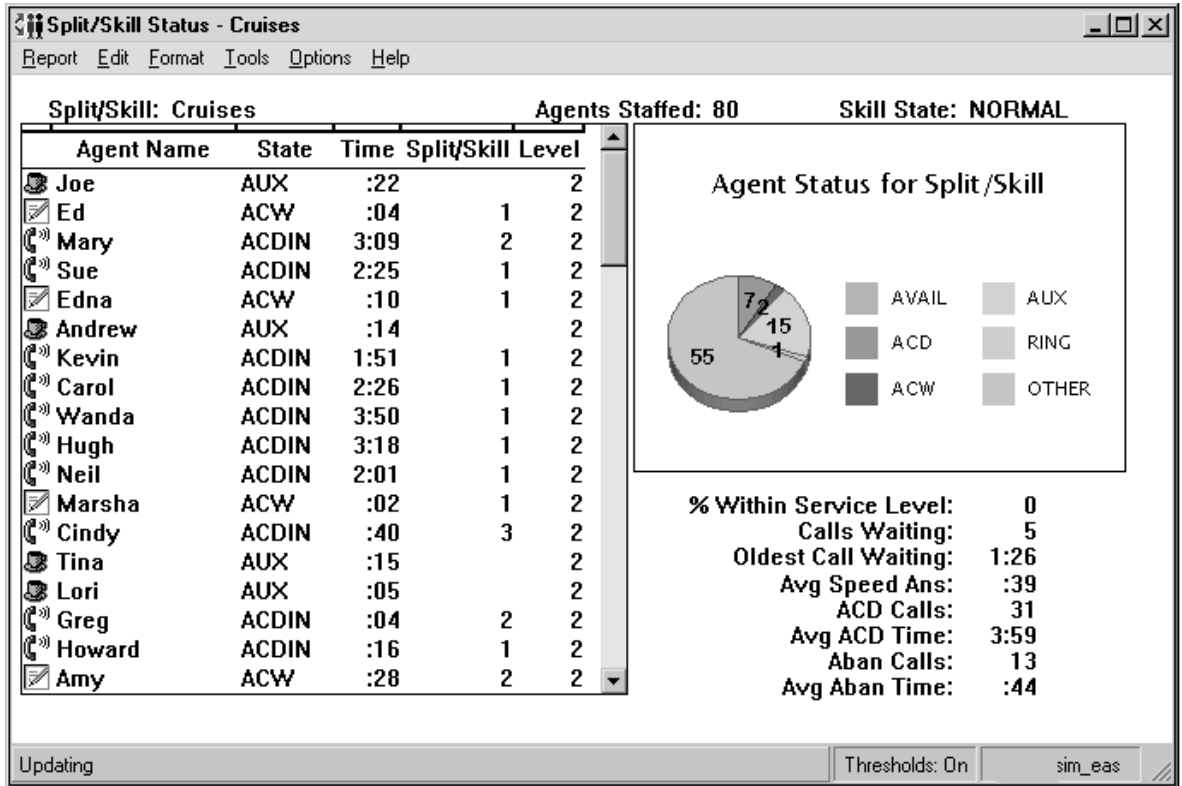

## Split/Skill Graphical Status report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the splits/skills selected for this report.	syn(SPLIT)
Level	The skill level associated with the agent's current WORKSKILL, when WORKSKILL, is not null. Requires a switch with the EAS feature. For Avaya Business Advocate, in the cagent table, WORKSKLEVEL contains either a skill level (1-16) for a normal skill, or a reserve level (1 or 2) for a reserve skill. This WORKSKLEVEL applies to WORKSKILL.	syn(WORKSKLEVEL)
Agents Staffed	The total number of agents that are logged into each split/skill.	STAFFED
Skill State	Current state of this skill, compared to the administered thresholds. Requires Avaya Business Advocate.	syn(SKSTATE)
Agent Name	The names of the agents assigned to this split/skill and logged in (or their login IDs if names have not been assigned to them in Dictionary).	syn(LOGID)
State	The current work mode (state) the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN, or OUT).	syn(WORKMODE) and syn(DIRECTION)
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The split associated with the call or the ACW state when an agent is either on a split or direct agent ACD call, or in the ACW state. If an agent puts an ACD call on hold and makes an AUX call, this is the split of the ACD call on hold. For AUXIN calls and AUXOUT calls made without an ACD call on hold, this is the split the agent has been logged into the longest. When the agent is available, all of the splits the agent is available in are listed.	WORKSPLIT, WORKSPLIT2...4
% Within Service Level	The percentage of split/skill ACD calls that were answered by an agent within the predefined time. Calls offered to the split/skill include calls that were abandoned and calls that were not answered, but do not include direct agent calls. Calls that were not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one split/skill and answered in another split/skill.	100*(ACCEPTABLE/ CALLSOFFERED) <PERCENT_SERV_LVL_SPL>
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	The length of time (in seconds) the oldest ACD call has waited in queue or ringing (at an agent voice terminal for each split/skill in the report) before being answered. This does not include direct agent calls.	OLDESTCALL
Avg Speed Ans	The average time calls waited in queue or ringing before an agent answered. This does not include direct agent calls, but it does include outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ANSTIME /ACDCALLS < AVG_ANSWER_SPEED>

## Real-time reports

Report heading	Description	Database item, calculation, or <calculation name>
ACD Calls	The ACD calls that were queued to the split/skill and answered by an agent. This does not include direct agent calls, but it does include ACD calls placed by an adjunct (also called outbound predictive dialing).	ACDCALLS
Avg ACD Time	The average talk time (does not include hold time) is calculated for all ACD calls to this split/skill. This does not include direct agent calls, but it does include talk time of all outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ACDTIME /ACDCALLS <AVG_ACD_TALK_TIME>
Aban Calls	The total number of queued calls for each split/skill that were abandoned before an agent answered. This includes calls that are ringing at a voice terminal but does not include direct agent calls. It also includes the number of outbound calls for each split/skill that abandoned at the far end before an agent answered.	ABNCALLS
Avg Aban Time	The average time calls waited before hanging up.	ABNTIME /ABNCALLS <AVG_ABANDON_TIME>

# Split/Skill Graphical Top Skill Status report

This report, available only with EAS, contains a table of top agents and their work state, a pie chart showing the composite top agent status, and a pie chart showing the composite reason codes for top agents who are in AUX.

## Things to know about this report

---

Here are some things to know about this report:

- You can access this report from the Real-Time Split/Skill Category selector menu.
- The table on the left bottom half of the report contains a row for each staffed agent for whom this skill is their top skill. The row shows an icon representing agent state, the agent names as defined in the Dictionary, the agent state for this skill, time in current state, and a reason code (as defined in the Dictionary) for the AUX work state. The Reason column is blank except for those agents who are in AUX work. This table also contains the skill in which the agent is active. This field is blank if the agent is in AVAIL, AUX, or OTHER work modes.
- Call center supervisors can use this report for skill level distribution and to keep agents on ACD calls. In addition, this report shows what is happening with agents who are taking calls for this skill. This report is available for switches with EAS.
- From this report, you can drill down to the Real-Time and Integrated Agent Information, Top Agents Work State, and Graphical Top AUX Agent reports.
- Even though a skill may be staffed by many agents, it is likely that only those for whom this is their top skill will be available to answer calls to this skill.
- The database items used for the report are stored in the csplit and cagent tables.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

The two dimensional pie chart contains data only for switches with EAS. The two dimensional pie chart contains the following information:


- The composite status of top agents for the skill who are in AUX for each reason code.
- A legend displays the synonyms for reason codes that have been defined in the Dictionary. The legend is sorted in ascending order by reason code number, with the customer- defined synonym for reason code 0 at the bottom.

The three-dimensional pie chart contains the following information:

- The composite status of top agents for the skill in each of the work states.
- A legend in which a different color corresponds to each of the work states.
- Above the chart is the Top Agents in AUX heading.

## Split/Skill Graphical Top Skill Status report example

The following figure provides an example of the Split/Skill Graphical Top Skill Status report:

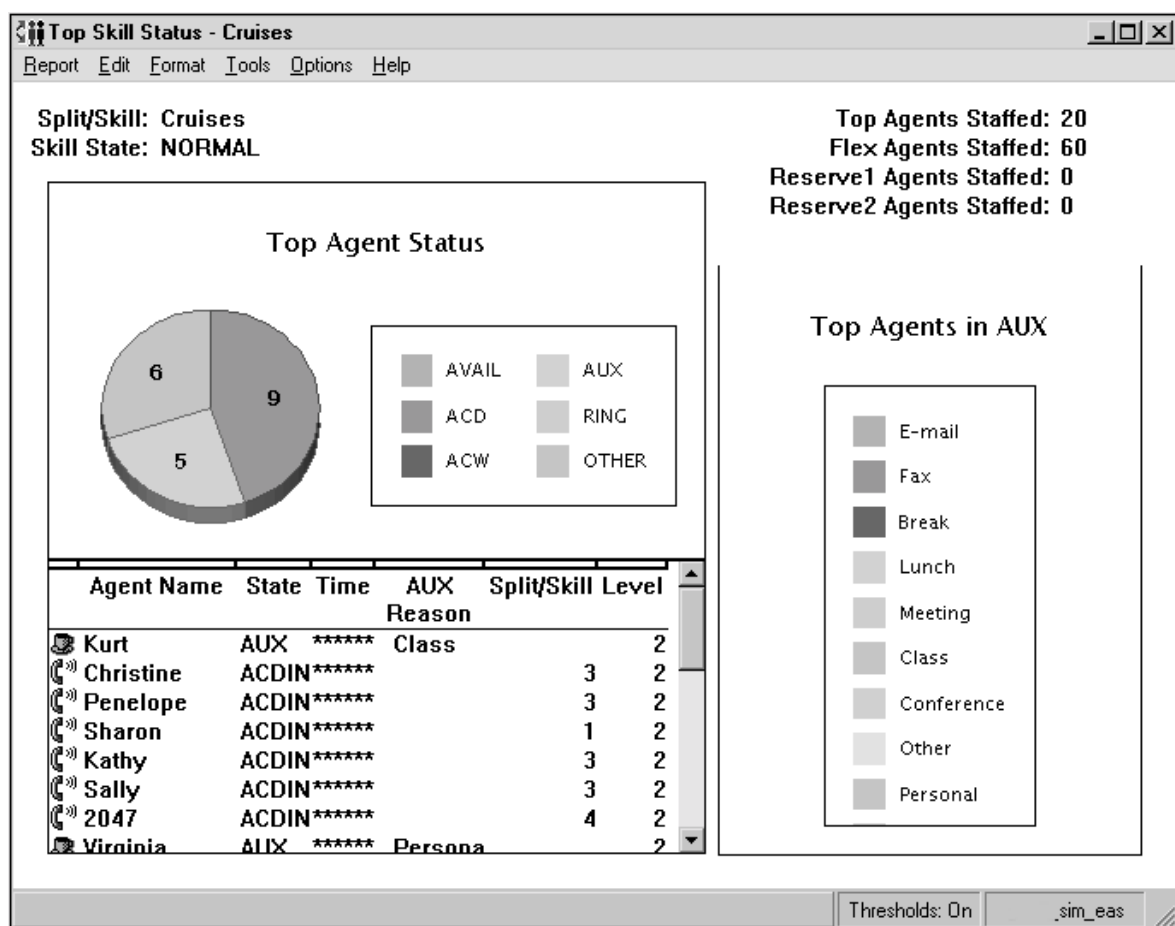



## Split/Skill Graphical Top Skill Status report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skill	The name or number of the skill (up to 20 characters) that is selected for this report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report.	SKSTATE
Top Agents Staffed	The current number of top agents that are staffed in this skill.	TSTAFFED
Flex Agents Staffed	Number of agents who are staffing the skill, but are neither top or reserve agents. Requires Avaya Business Advocate. This field will contain backup agents if the Avaya Business Advocate feature is not used, since the database item consists of agents whose role in the skill is backup (applicable regardless of whether Avaya Business Advocate is administered), allocation, or roving.	FSTAFFED
Reserve1 Agents Staffed	Number of agents staffing this skill as reserve1. Requires Avaya Business Advocate.	R1STAFFED
Reserve2 Agents Staffed	Number of agents staffing this skill as reserve2. Requires Avaya Business Advocate.	R2STAFFED
AVAIL	The current number of agents that are available to receive ACD calls in this split/skill.	AVAILABLE
ACD	The total time during the collection interval that the agent was talking on ACD calls for the Split.	sum(<TOTAL_I_ACDTIME>)

Report heading	Description	Database item, calculation, or <calculation name>
ACW	The total time during the collection interval that the agent was in after call work (ACW). This includes ACW for split/skill ACD Calls and ACW not associated with the call.	sum(<TOTAL_I_ACWTIME>)
AUX	The total time during the collection interval that the agent was in the AUX work state in all splits/skills or in AUXINCALLS or AUXOUTCALLS.	sum(TI_AUXTIME)
RINGING	The time during the collection interval that the agent had split/skill and direct agent ACD calls ringing.	sum(I_RINGTIME)
OTHER	The time during the collection interval that the agent was doing other work in all split/skills. While in Auto-in or Man-in, the agent put any call on hold and performed no further action, the agent dialed to place a call or to activate a feature, or an extension call rang with no other activity. For all switches, TI_OTHERTIME is collected for the time period after the line to the switch comes up or after the agent logs in and before the CMS receives notification of the agent's state from the switch. The TI_ time is only stored for the split/skill logged into the longest. TI_ time needs to be summed across the split/skills the agents may log into, in case the logon order changes during the collection interval.	sum(TI_OTHERTIME)
Agent Name	The names (or agent IDs if the names have not been assigned in the Dictionary) of the top agents assigned to this skill and logged in.	syn(LOGID)
State	The current work mode (state) the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN, or OUT).	syn(WORKMODE) and syn(DIRECTION)

Report heading	Description	Database item, calculation, or <calculation name>
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME
AUX Reason	For the switch, this is the reason code associated with the auxiliary work state (on a break, in a meeting, and so on) of this agent. This field is blank if the agent is not in the AUX state.	syn(AUXREASON)
Skill	The name or number of the skill (up to 20 characters) that is selected for this report.	syn(SPLIT)
Level	The skill level associated with the agent's current WORKSKILL, when WORKSKILL, is not null. Requires a switch with the EAS feature.	syn(WORKSKLEVEL)
Reason Code 0	The current number of positions that are in auxiliary work with reason code zero (0) for this skill or on AUXIN/AUXOUT calls. Reason code 0 is for system AUX work when reason codes are active (only with EAS).	INAUX0
Reason Code 1...9	The current number of positions that are in auxiliary work with each of the reason codes 1-9 for this skill or on AUXIN/AUXOUT calls.	TINAUX1-9

## Reserve1 AUX Agents report

This report is available only for customers who have switches with EAS and have purchased Avaya Business Advocate. This report displays the Reserve1 agents who are in AUX and the time in AUX, for a specified skill.

### Things to know about this report

---

Here are some things you need to know about this report:

- You can access this report the following ways:
  - From the Real-Time Split/Skill Category selector menu
  - By drilling down from the AUX work state of Reserve1 agents
  - By drilling down from a report (for example, the Split/Skill Graphical Staff Profile report) that shows the number of R1 agents in AUX using the R1INAUX database item.
- Call center managers can use this report to see the Reserve1 agents in each AUX work state, for a specified skill. For each agent, the manager will also be able to see information such as the length of time in the AUX work state.
- This report consists of a table and two data fields. The report table contains a row for each agent who is in the specified state for the specified skill.
- The report caption will read **Reserve1 AUX Work State Report—xxx**, where xxx is the skill name string specified by the user.
- The database items used for the report are stored in the csplit and cagent table.

## Reserve1 AUX Agents report description

---

The following table describes the report fields:

Field	Definition	Database item, calculation, or <calculation name>
Skill	The name or number of the skill (up to 20 characters) that is selected for this report.	syn(SPLIT)
Reserve1 Agents in AUX	The number of reserve1 agents in AUX.	R1INAUX
Agent Name	The name of the agent.	syn(LOGID)
Login ID	The Login ID that was used to staff the EXTENSION. Agents in multiple splits/skills have one LOGID.	LOGID
Location ID	<p>The location IDs associated with the agent. This ID is not associated with the agent personally, but rather with the terminal the agent is logged into. It is also associated with a port network location ID on a switch. If the Agent Site Tracking feature is not available on your system, the field will not display meaningful data.</p> <p>This field is available only when you drill down from a custom report that has Location ID as an input.</p> <p>For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.</p>	LOC_ID
Role	Agent's service role for this SPLIT, as defined in the Dictionary.	syn(ROLE)
AUX Reason	For the switch, this is the reason code associated with the auxiliary work state (on a break, in a meeting, and so on) of this agent. This field is blank if the agent is not in the AUX state.	syn(AUXREASON)

Field	Definition	Database item, calculation, or <calculation name>
Active Split/Skill	<p>Use WORKSKILL for the following call conditions:</p> <ul style="list-style-type: none"> <li>● When an agent is on a skill or direct agent ACD call or in ACW (this is the skill associated with the call or ACW)</li> <li>● When an agent is available, in AUX or in OTHER (this is null [blank])</li> <li>● When an agent is on an AUXIN/AUXOUT call (this is OLDEST_LOGON skill)</li> <li>● When an agent is on an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold (this is OLDEST_LOGON skill)</li> <li>● When an agent is on an AUXOUT call with an ACD call on hold (this is the skill associated with the ACD call)</li> </ul> <p>Note that WORKSKILL differs from WORKSPLIT only in the case that the agent is available. In this case, WORKSKILL will be blank and WORKSPLIT will contain one of the skills in which the agent is available. For releases with the EAS feature active, it is recommended to use WORKSKILL instead of WORKSPLIT in reports.</p> <p>Requires a switch with the EAS feature.</p>	syn(WORKSKILL)

Field	Definition	Database item, calculation, or <calculation name>
Level	The skill level associated with the agent's current WORKSKILL, when WORKSKILL is not null. Requires a switch with the EAS feature. For Avaya Business Advocate, in the cagent table, WORKSKLEVEL contains either a skill level (1-16) for a normal skill, or a reserve level (1 or 2) for a reserve skill. This WORKSKLEVEL applies to WORKSKILL.	syn(WORKSKLEVEL)
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME

## Reserve2 AUX Agents report

This report, which is available only for customers who have switches with EAS and have purchased Avaya Business Advocate, displays the Reserve2 agents who are in AUX and the time in AUX, for a specified skill.

### Things to know about this report

---

Here are some things you need to know about this report:

- You can access this report the following ways:
  - From the Real-Time Split/Skill Category selector menu
  - By drilling down to this report from the AUX work state of Reserve2 agents
  - By drilling down from a report (for example, the Split/Skill Graphical Staff Profile report) that shows the number of R2 agents in AUX using the R2INAUX database item.
- Call center managers can use this report to see the Reserve2 agents in each AUX work state, for a specified skill. For each agent, the manager will also be able to see information such as the length of time in the AUX work state.
- This report consists of a table and two data fields. The report table contains a row for each agent who is in the specified state for the specified skill.
- The report caption will read **Reserve2 AUX Work State Report—xxx**, where xxx is the skill name string specified by the user.
- The database items used for the report are stored in the csplit and cagent table.



## Reserve2 AUX Agents report description

---

The following table describes the report fields:

Field	Definition	Database item, calculation, or <calculation name>
Skill	The name or number of the skill (up to 20 characters) that is selected for this report.	syn(SPLIT)
Reserve2 Agents in AUX	The number of reserve2 agents in AUX.	R2INAUX
Agent Name	The name of the agent.	syn(LOGID)
Login ID	The Login ID that was used to staff the EXTENSION. Agents in multiple splits/skills have one LOGID.	LOGID
Location ID	<p>The location IDs associated with the agent. This ID is not associated with the agent personally, but rather with the terminal the agent is logged into. It is also associated with a port network location ID on a switch. If the Agent Site Tracking feature is not available on your system, the field will not display meaningful data.</p> <p>This field is available only when you drill down from a custom report that has Location ID as an input.</p> <p>For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.</p>	LOC_ID
Role	Agent's service role for this SPLIT, as defined in the Dictionary.	syn(ROLE)

Field	Definition	Database item, calculation, or <calculation name>
Active Split/Skill	<p>Use WORKSKILL for the following call conditions:</p> <ul style="list-style-type: none"> <li>● When an agent is on a skill or direct agent ACD call or in ACW (this is the skill associated with the call or ACW)</li> <li>● When an agent is available, in AUX or in OTHER (this is null [blank])</li> <li>● When an agent is on an AUXIN/AUXOUT call (this is OLDEST_LOGON skill)</li> <li>● When an agent is on an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold (this is OLDEST_LOGON skill)</li> <li>● When an agent is on an AUXOUT call with an ACD call on hold (this is the skill associated with the ACD call)</li> </ul> <p>Note that WORKSKILL differs from WORKSPLIT only in the case that the agent is available. In this case, WORKSKILL will be blank and WORKSPLIT will contain one of the skills in which the agent is available. For releases with the EAS feature active, it is recommended to use WORKSKILL instead of WORKSPLIT in reports.</p> <p>Requires a switch with the EAS feature.</p>	syn(WORKSKILL)

Field	Definition	Database item, calculation, or <calculation name>
Level	The skill level associated with the agent's current WORKSKILL, when WORKSKILL is not null. Requires a switch with the EAS feature. For Avaya Business Advocate, in the cagent table, WORKSKLEVEL contains either a skill level (1-16) for a normal skill, or a reserve level (1 or 2) for a reserve skill. This WORKSKLEVEL applies to WORKSKILL.	syn(WORKSKLEVEL)
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME

# Skill AUX report

This report shows, for one or more skills, the number of agents in AUX work with each reason code.


## Things to know about this report

Here are some things you need to know about this report:

- You must have a switch with EAS.
- You must be using reason codes. You can run the report without using the reason codes, but all agents will be in reason code zero (0) when in AUX.
- The database items used for the Skill AUX report are stored in the csplit table.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Skill AUX report example

The following figure provides an example of the Skill AUX report:

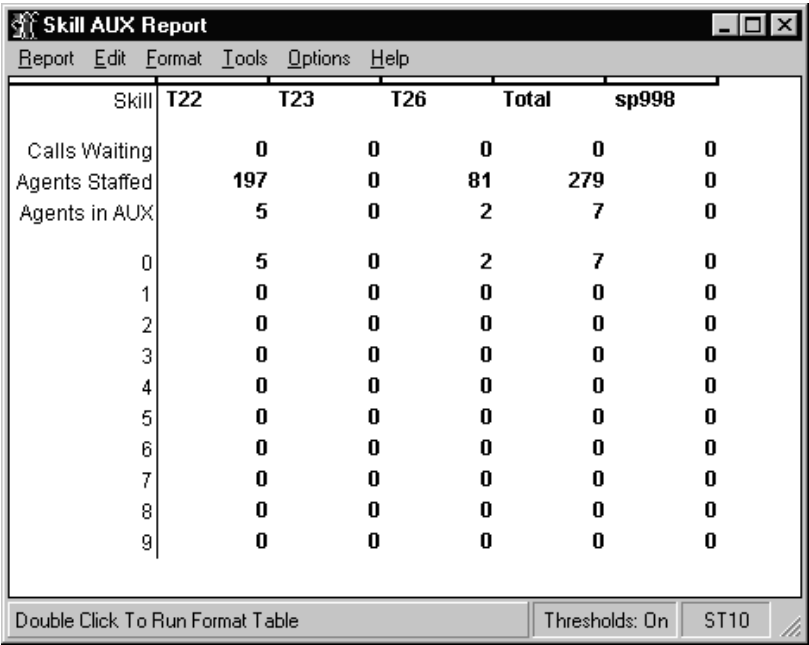

Skill	T22	T23	T26	Total	sp998
Calls Waiting	0	0	0	0	0
Agents Staffed	197	0	81	279	0
Agents in AUX	5	0	2	7	0
0	5	0	2	7	0
1	0	0	0	0	0
2	0	0	0	0	0
3	0	0	0	0	0
4	0	0	0	0	0
5	0	0	0	0	0
6	0	0	0	0	0
7	0	0	0	0	0
8	0	0	0	0	0
9	0	0	0	0	0

## Skill AUX report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skills	The names or numbers of the skills selected for the report.	syn(SPLIT)
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Agents Staffed	The total number of agents that are logged into each skill.	STAFFED
Agents in AUX	The current number of agent positions that are either in AUX work mode for this skill or on AUX-IN/AUX- OUT calls.	INAUX
Reason Code 0...9	The number of agents in each AUX reason code (0 to 9).	INAUX0...9

## Skill Status report

This report shows how long the oldest call has been waiting in queue, how many calls are currently waiting to be answered, the agent names, the agent states, the agent's skill level, and the number of the skill for which the agent is handling the call or is in after call work.

### Things to know about this reports

---

If you have a switch with the EAS feature activated, you will see the report displayed in this section. This new report:

- Provides agent AUX reason codes
- Provides the agent login identification and the agent name
- Provides the level for the agent's currently active skill (ACD call or ACW session). This level can be any level from 1 to 16, or R1 or R2
- The Login Skills columns have been removed from this report.

If you have a switch release earlier than DEFINITY ECS Release 5 with the EAS feature activated, a slightly different Skill Status report than the one described in this section is displayed. This report:

- Provides the agent login skills, including whether a skill is *p* (primary) or *s* (secondary)
- Does not provide agent AUX reason codes
- With the some switches, all the skills the agent is logged into are shown in the Login Skills column of the report. These skills are designated with a *p* or *s* to indicate if the skill is a primary or secondary skill.
- If you have an early switch, the Expected Wait Time (EWT) fields are blank.
- All agents who are logged into a particular skill are displayed. You can page or scroll to view agents not shown in the window.
- The EWT value is updated whenever a call queues to the skill. If no call has queued for 2 minutes, CMS will request the switch to send the current EWT values for the skill.

The EWT fields may be blank for one of the following reasons:

- The EWT is unknown at this time.
- The EWT is infinity (for example, no agents are logged in).
- The priority is inactive, such as TOP, HIGH, MEDIUM, or LOW.
- The queue for the priority is full.

Expected Wait Time (EWT) may be different than you anticipate. The following factors can affect EWT:

- A low volume of calls are coming into a skill, or very few are coming in at one or more of the priorities. This causes EWT to show larger fluctuations than when there is heavier call volume.
- A skill has only one or two agents logged in.
- A combination of the low call volume and a small number of agents logged in.
- The number of agents logged into a given skill suddenly increases or decreases substantially. EWT adjusts immediately, and you will see a big jump or fall in the EWT.
- A significant percentage of callers who are queued drop from queue, either from hanging up or from being answered, and no new calls are queued. For example, in a vector with time-of-day routing, after a specified time, no more calls are routed to a particular skill. Calls in queue to this skill continue to be serviced, but no new calls are coming into the queue. The EWT remains unchanged until the specified time interval from the timer expires and the audit takes place.
- Calls may be queued to more than one skill.
- Agents may be logged into multiple skills.
- The switch may have the Multiple Call Handling feature enabled.
- A new skill is created or the switch reboots. No history exists, and 30 to 50 queued calls must accrue for an accurate EWT.
- The average handling times for calls changes suddenly.
- The call traffic is varying significantly.
- The queuing times are erratic.
- If calls are HIGH or MEDIUM priority call redirected, via intraflow to a skill that does not queue calls at this priority, the priority does not change.
- Agents are in multiple skills and distribution of calls for those agents changes suddenly.
- EWTs are displayed for the priorities for which calls are queuing. However, if you change the routing for a skill so that calls are not being queued at a priority, the EWT for that priority continues to be shown until all agents in the skill log out or until a translation pump- up is forced.
- The database items used for the Skill Status report are stored in the csplit and cagent tables.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Skill Status report example

The following figure provides an example of a Skill Status report:

Agent Name	Login ID	AUX Reason	State	Split/Skill Level Time	VDN Name
50207	50207		AVAIL	18:53	
50214	50214		AVAIL	14:36	
50208	50208		AVAIL	15:19	
50213	50213		AVAIL	13:54	
50234	50234		AVAIL	44:11	
50233	50233		AVAIL	59:39	
50226	50226		AVAIL	18:01	
50224	50224		AVAIL	12:32	
50216	50216		AVAIL	13:03	
50221	50221		AVAIL	10:27	

## Skill Status report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skill	The name or number of the skill selected for the report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report.	SKSTATE
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING



Report heading	Description	Database item, calculation, or <calculation name>
Oldest Call Waiting	The length of time (in seconds) the oldest ACD skill call has waited in queue or ringing before being answered. This does not include direct agent calls.	OLDESTCALL
Expected Wait Time (Pri): Top	This heading contains EWT for the skill at top priority. EWT is the wait time for the call when it is queued to the skill at top priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exception command.	EWTTOP
Expected Wait Time (Pri): High	This heading contains EWT for the skill at high priority. EWT is the wait time for the call when it is queued to the skill at high priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time.  If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exception command.	EWTHIGH
Expected Wait Time (Pri): Medium	Contains EWT for the skill at medium priority. EWT is the wait time for the call when it is queued to the skill at medium priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exception command.	EWTMEDIUM

Report heading	Description	Database item, calculation, or <calculation name>
Expected Wait Time (Pri): Low	This heading contains EWT for the skill at low priority. EWT is the wait time for the call when it is queued to the skill at low priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exception command.	EWTLOW
Agent Name	The names of the agents assigned to this skill and logged in (or their login IDs if names have not been assigned to them in Dictionary).	syn(LOGID)
Login ID	The login identification of the agent.	LOGID
AUX Reason	The reason associated with the auxiliary work state of this agent, (for example, lunch, break, meeting, or training). This field is blank if the agent is not in the AUX state.	syn(AUXREASON)
State	The current work mode (state), that the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF), and the call direction (BLANK IN, or OUT).	syn(WORKMODE) syn(DIRECTION)

Report heading	Description	Database item, calculation, or <calculation name>
Skill/Level	<p>When an agent is on a skill call, a direct agent call, or in ACW mode, this is the skill associated with the call or the ACW, and the level associated with the skill.</p> <p>WORKSKILL is the OLDEST_LOGON:</p> <ul style="list-style-type: none"> <li>• When an agent is on an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold</li> <li>• When an agent is on an AUXIN call with an ACD call on hold</li> <li>• When an agent is on an AUXOUT call with an ACD call on hold, this is the skill associated with the ACD call.</li> <li>• When an agent is available, in AUX, or in OTHER, this is blank.</li> </ul> <p>WORKSKLEVEL is the skill level (ranging from 1 to 16) or the reserve skill level (R1 or R2) associated with WORKSKILL.</p>	WORKSKILL/syn (WORKSKLEVEL)
Time	<p>The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.</p>	AGTIME
VDN Name (Shows data only if you have purchased the Vectoring feature.)	<p>The number or name of the VDN for which the report shows data. the VDN is associated with the ACD call in progress. If a name has been assigned to the VDN in the Dictionary, the name displays instead of the number.</p>	VDN

## Skill Top Agent report

This report is similar to the Split/Skill report, but shows counts of agents for whom the skill is the top skill. It also shows a count of agents for whom the skill is a backup skill.

### Things to know about this report

---

Here are some things you need to know about this report:

- You must have a switch with EAS.
- The agent's top skill is the highest priority skill the agent is logged into. If the agent is logged into more than one skill that are listed as highest priority, then the top skill is the first skill listed.
- The database items used for the Skill Top Agent report are stored in the csplit table.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Skill Top Agent report example

The following figure provides an example of a Skill Top Agent report:

Skill Top Agent Report					
Report Edit Format Tools Options Help					
Split/Skill	T22	T23	T26	Total	sp998
Skill State	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL
Calls Waiting	0	0	0	0	0
Oldest Call Waiting	:00	:00	:00	:00	:00
Avg Speed Ans					
ACD Calls	0	0	0	0	0
Avg ACD Time					
Aban Calls	0	0	0	0	0
Avg Aban Time					
Top Agents Avail	192	0	79	0	0
Top Agents Ringing	0	0	0	0	0
Top Agents on ACD Calls	0	0	0	0	0
Top Agents in ACW	0	0	0	0	0
Top Agents in Other	0	0	0	0	0
Top Agents in AUX	5	0	2	0	0
Top Agents Staffed	197	0	81	0	0
Flex Agents Staffed	0	0	0	279	0
Reserve1 Agents Staffed	0	0	0	0	0
Reserve2 Agents Staffed	0	0	0	0	0

Double Click To Run Format Table

Thresholds: On

ST10

## Skill Top Agent report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skills	The name or number of the skill selected for this report.	syn(SPLIT)
Skill State	Current state of this skill, compared to the administered thresholds. Requires Avaya Business Advocate.	syn(SKSTATE)
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	The length of time (in seconds) the oldest call has waited in queue or ringing (at an agent voice terminal for each skill in the report) before being answered. This does not include direct agent calls.	OLDESTCALL
Avg Speed Ans	The average time calls waited in queue and ringing before an agent answered. This does not include direct agent calls, but it does include outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ANSTIME/ ACDCALLS <AVG_ANSWER_SPEED>
ACD Calls	The ACD calls that were queued to the skill and answered by an agent. This does not include direct agent calls, but it does include ACD calls placed by an adjunct (also called outbound predictive dialing).	ACDCALLS
Avg ACD Time	The average talk time (does not include hold time) is calculated for all ACD calls to this skill. This does not include direct agent calls, but it does include talk time of all outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ACDTIME/ ACDCALLS <AVG_ACD_TALK_TIME>

Report heading	Description	Database item, calculation, or <calculation name>
Aban Calls	The total number of queued calls for each skill that were abandoned before an agent answered. This includes calls that are ringing at a voice terminal but does not include direct agent calls. It also includes the number of outbound calls for each skill that abandoned at the far end before an agent answered.	ABNCALLS1-10
Avg Aban Time	The average time calls waited in split before hanging up.	ABNTIME /ABNCALLS <AVG_ABANDON_TIME>
Top Agents Avail	The number of top agents logged into the skill who are available in the skill to take calls.	TAVAILABLE
Top Agents Ringing	The current number of top agents logged into the skill who have ACD calls (including direct agent calls) ringing at their voice terminals.	TAGINRING
Top Agents on ACD Calls	The total number of top agents connected to inbound and outbound ACD calls in each skill. This does not include direct agent calls.	TONACD
Top Agents in ACW	The number of top agents who are in the after call work state for each skill. This includes agents on ACWIN or ACWOUT calls and agents in ACW not associated with an ACD call.	TINACW

Report heading	Description	Database item, calculation, or <calculation name>
Top Agents in Other	<p>The current number of top agent positions that are doing other work.</p> <p>The agent did one of the following activities while in the Auto-in or Manual-In state:</p> <ul style="list-style-type: none"> <li>● The agent put any call on hold and performed no further action.</li> <li>● The agent is on a direct agent call or in ACW for a direct agent call.</li> <li>● The agent is dialing to place a call or to activate a feature.</li> <li>● The agent has a personal call ringing with no other activity.</li> </ul> <p>For switches without EAS, agents are logged into multiple splits and doing work for a split other than this one (on an ACD call or in call-related ACW).</p> <p>For switches with EAS, agents are logged into multiple skills and doing work for a skill other than this one (on an ACD call or in call-related ACW).</p> <p>Agent positions show up as OTHER directly after the link to the switch comes up and directly after the agents log in before the CMS is notified of the agent's work state.</p>	TOTHER
Top Agents in Aux	The total number of top agents logged into the skill who are in the AUX Work mode for all skills or are on AUXIN/AUXOUT calls.	TINAUX
Top Agents Staffed	The current number of top agents that are staffed in the skill.	TSTAFFED



Report heading	Description	Database item, calculation, or <calculation name>
Flex Agents Staffed	Number of agents who are staffing the skill, but are neither top or reserve agents. Requires Avaya Business Advocate. This field will contain non-top agents if the Avaya Business Advocate feature is not used, since the database item consists of agents whose role in the skill is backup (applicable regardless of whether Avaya Business Advocate is administered), allocation, or roving.	FSTAFFED
Reserve1 Agents Staffed	Number of agents staffing this skill as reserve1. Requires Avaya Business Advocate.	R1STAFFED
Reserve2 Agents Staffed	Number of agents staffing this skill as reserve2. Requires Avaya Business Advocate.	R2STAFFED

## Split Status report

This report shows how long the oldest call in queue has been waiting, how many calls are currently waiting to be answered, the agent names, the agent states, the length of time an agent has been in the state, and the split associated with the call the agent is currently handling.

**Note:**

The Split Status report is available on switches that do not have the EAS feature. If you have the EAS feature, this report is replaced with the Skill Status report.

### Things to know about this report

---

Here are some things to know about this report:

- All agents logged into the selected split are displayed. You can scroll to view agents that you cannot see on the report.
- If an agent is on an ACD call or in the ACW state, a single split is displayed that corresponds to the ACD call or ACW.
- If the agent is available, all of the splits are displayed.
- If the agent is in AUX in all splits, all splits are displayed.
- For a switch without the EAS feature, an agent can be logged into a total of four splits.
- If you have an early switch, the Expected Wait Time (EWT) fields are blank. EWT is only available on some switches.
- The EWT value is updated whenever a call queues to the split. If no call has queued for 2 minutes, CMS will request the switch to send the current EWT values for the split.

The EWT fields may be blank for one of the following reasons:

- The EWT is unknown at this time.
- The EWT is infinity (for example, no agents are logged in).
- The priority (TOP, HIGH, MEDIUM, LOW) is inactive.
- The queue for this split is full.
- Please refer to the Vectoring/EAS Guide for more information on EWT and causes of the field blanking out.

EWT may not be what you anticipate. These factors can affect EWT:

- A low volume of calls coming into a split, or very few coming in at one or more of the priorities. This causes EWT to show larger fluctuations than when there is heavier call volume.
- A split has only one or two agents logged in.
- A combination of the low call volume and a small number of agents logged in.
- The number of agents logged into a given split suddenly increases or decreases substantially. EWT adjusts immediately, and you will see a big jump or fall in the EWT.
- A significant percentage of callers who are queued drop from queue, either from hanging up or from being answered, and no new calls are queued. For example, in a vector with time-of-day routing, after a specified time no more calls are routed to a particular split. Calls in queue to this split continue to be serviced, but no new calls are coming into the queue. The EWT remains unchanged until the specified time interval from the timer has expired and the audit has taken place.
- Calls may be queued to more than one split.
- Agents may be logged into multiple splits.
- The switch may have the Multiple Call Handling (MCH) feature enabled.
- A new split is created or the switch reboots. No history exists, and 30 to 50 queued calls must accrue for an accurate EWT.
- The average handling time for calls changes suddenly.
- The call traffic is varying significantly.
- The queuing times are erratic.
- EWTs are displayed only for the priorities for which calls are queuing. However, if you change the routing for a split so that calls are not being queued at a priority, the EWT for that priority continues to be shown until all agents in the split log out or a translation pump-up is forced.
- The database items used for the Split Status report are stored in the csplit and cagent tables.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Split Status report example

The following figure provides an example of the Split Status report:

The screenshot shows a window titled "Split Status - s1" with a menu bar (Report, Edit, Format, Tools, Options, Help). The report displays summary statistics for split 's1' and a detailed table of agent wait times.

Split: s1		Expected Wait Time	
Calls Waiting:	14	EWT Top:	
Oldest Call Waiting:	1:54	EWT High:	
		EWT Medium:	
		EWT Low:	

Agent Name	State	Split 1	Split 2	Split 3	Split 4	Time	VDN Name
a2001	ACW	1				1:59	v1005
a2002	ACDIN	1				1:57	v1005
a2003	ACDIN	1				1:35	v1007
a2004	ACW	1				2:29	v1005
a2005	ACW	1				:44	v1007
a2006	ACW	1				1:18	v1005
a2007	ACW	1				2:35	v1006
a2008	ACW	1				1:10	v1005
a2009	ACW	1				2:18	v1007
a2010	ACW	1				2:49	v1005

At the bottom, there is a status bar with the text "Double Click To Run Format Table", "Thresholds: On", and the user name "Jaeger1G32".

## Split Status report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split	The name or number of the split selected for the report.	syn(SPLIT)
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	The length of time (in seconds) the oldest ACD call has waited in queue or ringing (at an agent voice terminal) before being answered. This does not include direct agent calls.	OLDESTCALL

Report heading	Description	Database item, calculation, or <calculation name>
Expected Wait Time (Pri): Top	<p>This heading contains EWT for the split at top priority. EWT is the expected wait time for a new call when it is queued to the split at top priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time.</p> <p>If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank.</p>	EWTTOP
Expected Wait Time (Pri): High	<p>This heading contains EWT for the split at high priority. EWT is the expected wait time for a new call when it is queued to the split at high priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time.</p> <p>If CMS is connected to an early switch or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank.</p>	EWTHIGH
Expected Wait Time (Pri): Medium	<p>This heading contains EWT for the split at medium priority. EWT is the expected wait time for a new call when it is queued to the split at medium priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank.</p>	EWTMEDIUM
Expected Wait Time (Pri): Low	<p>This heading contains EWT for the split at low priority. EWT is the wait time for the call when it is queued to the split at low priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank.</p>	EWTLOW

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Agent Name	The names of the agents assigned to the split and logged in (or their login IDs if names have not been assigned to them in Dictionary).	syn(LOGID)
State	The current work mode (state) the agent is in, such as AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, or UNSTAFF, and the call direction (BLANK, IN, or OUT).	WORKMODE and DIRECTION
Splits	The split associated with the call or the ACW state when an agent is either on a split or direct agent ACD call, or in the ACW state. If an agent puts an ACD call on hold and makes an AUX call, this is the split of the ACD call on hold. For AUXIN calls and for AUXOUT calls made without an ACD call on hold, this is the split the agent has been logged into the longest. When the agent is available, all of the splits the agent is available in are listed.	WORKSPLIT WORKSPLIT2 WORKSPLIT3 WORKSPLIT4
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME
VDN (Shows data only if you have purchased the Vectoring feature.)	The vector directory number is associated with the ACD call in progress. If a name has been assigned to the VDN in the Dictionary, the name displays instead of the number.	VDN

# Split/Skill report

The Split/Skill report simultaneously displays real-time call-handling information on a number of splits or skills. It allows the supervisor to evaluate and compare the workload and call-handling performance between splits/skills, and to determine agent reassignment. Additionally, the supervisor can evaluate other ACD configuration alternatives which can be used to balance workloads and reduce abandoned calls.

## Things to know about this report

---

Here are some things you need to know about this report:

- You can enter a range or a list of splits/skills which the report will cover. If you only want to view one split or skill, you may size the window smaller.
- In this report, the OTHER state displays for agents who are on calls or in after call work state for other splits or skills.
- For agents in split/skills with the many forced option of Multiple Call Handling, a queued call is not delivered to an agent position if there is no available call appearance. If the agent has no available call appearance, then the agent is either on a call or has all calls on hold. In either case, the agent is not available.
- The database items used for the report are stored in the csplit table.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Split/Skill report example

The following figure provides an example of the Split/Skill report:

Split/Skill	T22	T23	T26	Total	sp998
Skill State	NORMAL	NORMAL	NORMAL	NORMAL	NORMAL
Calls Waiting	0	0	0	0	0
Oldest Call Waiting	:00	:00	:00	:00	:00
Avg Speed Ans					
ACD Calls	0	0	0	0	0
Avg ACD Time					
Aban Calls	0	0	0	0	0
Avg Aban Time					
Agents Avail	192	0	79	272	0
Agents Ringing	0	0	0	0	0
Agents on ACD Calls	0	0	0	0	0
Agents in ACW	0	0	0	0	0
Agents in Other	0	0	0	0	0
Agents in AUX	5	0	2	7	0
Agents Staffed	197	0	81	279	0

Double Click To Run Format Table      Thresholds: On      ST10

## Split/Skill report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Splits/Skills	The name or number of the splits/(skills selected for the report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report.	SKSTATE
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING



Report heading	Description	Database item, calculation, or <calculation name>
Oldest Call Waiting	The length of time (in seconds) the oldest ACD call has waited in queue or ringing (at an agent voice terminal for each split/skill in the report) before being answered. This does not include direct agent calls.	OLDESTCALL
Avg Speed Ans	The average time calls waited in queue and ringing before an agent answered. This does not include direct agent calls, but it does include outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ANSTIME/ACDCALLS <AVG_ANSWER_SPEED>
ACD Calls	The ACD calls that were queued to the split/skill and answered by an agent. This does not include direct agent calls, but it does include ACD calls placed by an adjunct (also called outbound predictive dialing).	ACDCALLS
Avg ACD Time	The average talk time (does not include hold time) is calculated for all ACD calls to this split/skill. This does not include talk time on direct agent calls, but it does include talk time of all outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ACDTIME/ACDCALLS <AVG_ACD_TALK_TIME>
Aban Calls	The total number of queued calls for each split/skill that abandoned before an agent answered. This includes calls that are ringing at a voice terminal but does not include direct agent calls. It also includes the number of outbound calls for each split/skill that abandoned at the far end before an agent answered.	ABNCALLS1-10
Avg Aban Time	The average time a caller waited (in split/skill) before hanging up.	ABNTIME /ABNCALLS <AVG_ABANDON_TIME>
Agents Avail	The current number of agents that are available to receive ACD calls in each split/skill.	AVAILABLE

Report heading	Description	Database item, calculation, or <calculation name>
Agents Ringing	The current number of agents that are available and have ACD calls (including direct agent calls) ringing at their voice terminal but have not yet answered. If the agent places a call or answers an extension call, the agent is shown in the AUX work state, rather than in the ringing state.	AGINRING
Agents on ACD Calls	The total number of agents that are connected to inbound and outbound ACD calls in each split/skill. This does not include agents on direct agent calls.	ONACD
Agents in ACW	The number of agents who are in the after call work state for each split/skill. This includes agents on ACWIN or ACWOUT calls and agents in ACW not associated with an ACD call.	INACW
Agents in Other	<p>The current number of agent positions that are doing other work.</p> <p>For switches with EAS, the agent did one of the following activities while in the Auto-in or Manual-In state:</p> <ul style="list-style-type: none"> <li>● The agent put any call on hold and performed no further action.</li> <li>● The agent is on a direct agent call or in ACW for a direct agent call.</li> <li>● The agent is dialing to place a call or to activate a feature.</li> <li>● The agent has a ringing personal call, with no other activity.</li> </ul> <p>For switches without EAS, agents are logged into multiple splits and doing work for a split other than this one.</p> <p>Agent positions show up as OTHER directly after the link to the switch comes up and directly after the agents log in before the CMS is notified of the agent's work state.</p>	OTHER

Report heading	Description	Database item, calculation, or <calculation name>
Agents in AUX	The current number of agents who are in the AUX work mode for all splits/skills including agents who are handling AUXIN or AUXOUT calls.	INAUX
Agents Staffed	The total number of agents that are logged into each split/skill.	STAFFED

## Split/Skill by Location report

### Overview

The Split/Skill by Location report supports the Agent Site Tracking feature. This report tracks agents by their split/skill location ID.

The Split/Skill by Location report displays real-time agent call-handling information on a single split or skill. It allows the supervisor to evaluate the workload and call-handling performance on the split/skill, and to determine agent reassignment.


### Things to know about this report

Here are some things you need to know about this report:

- This report displays information on a single split/skill. Select the split/skill location ID through the input window.
- This report shows the agents logged into a single split/skill.
- The database items used for the report are stored in the cagent table.
- This report is in table format.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Split/Skill by Location report example

The following figure provides an example of the Split/Skill by Location report:

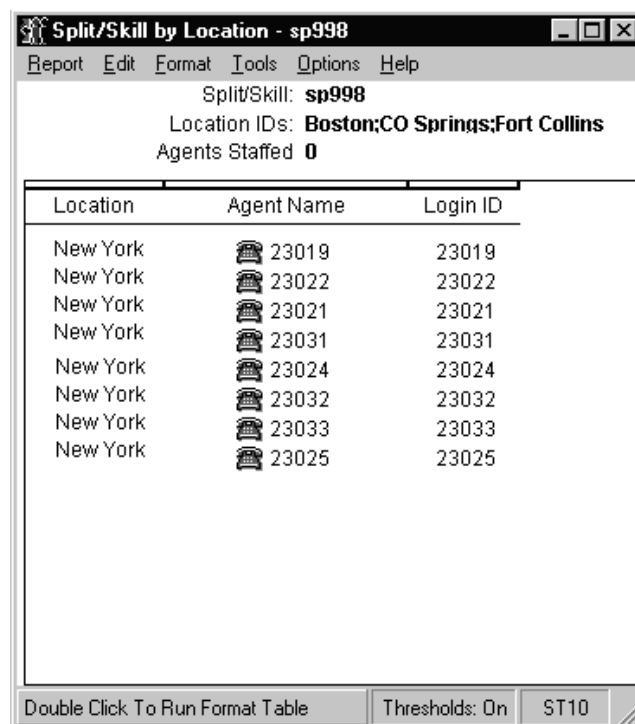

Location	Agent Name	Login ID
New York	23019	23019
New York	23022	23022
New York	23021	23021
New York	23031	23031
New York	23024	23024
New York	23032	23032
New York	23033	23033
New York	23025	23025

## Split/Skill by Location report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Location ID	<p>The location IDs associated with the agent. This ID is not associated with the agent personally, but rather with the terminal the agent is logged into. It is also associated with a port network location ID on a switch. If the Agent Site Tracking feature is not available on your system, the field will not display meaningful data.</p> <p>For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.</p>	LOC_ID
Agent Name	The names or login IDs of the agents that logged into the split/skill selected in the report input window.	syn(LOGID)
Login ID	The login ID of the agent.	LOGID
Agents Staffed	The total number of agents that are logged into each split/skill.	select count(*) where split = \$input and LOC_ID = \$input

# Split/Skill Top Agent Status report

This report is the same as the Skill Status report, except that it only shows status for agents for whom the selected skill is the top skill.


## Things to know about this report

Here are some things you need to know about this report:

- This report shows information for agents with this skill as top skill only.
- Top Agents are agents for whom the skill is their highest-level skill. If agents have more than one skill at the highest level, then the first one administered is the top skill.
- The EWT value is updated whenever a call queues to the skill. If no call has queued for 2 minutes, CMS will request the switch to send the current EWT values for the skill.
- You must have a switch with the EAS feature.
- The database items used for the Split/Skill Top Agent Status report are stored in the csplit and cagent tables.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/skill report input fields](#) on page 177 for more information.

## Split/Skill Top Agent Status report example

The following figure provides an example of the Split/Skill Top Agent Status report:

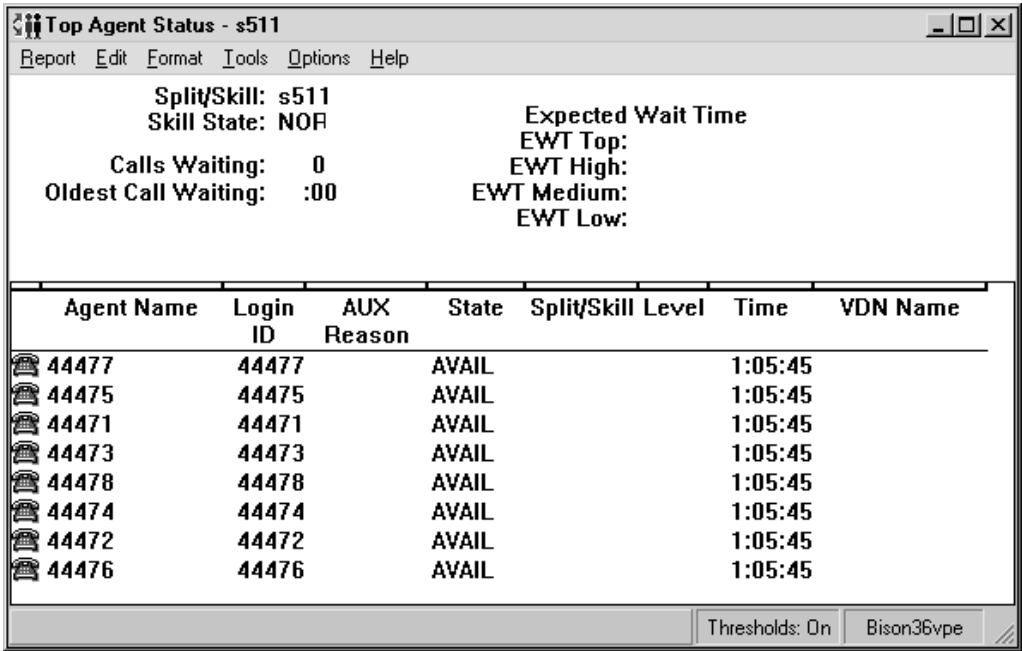

## Split/Skill Top Agent Status report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skill	The name or number of the skill selected for this report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report.	SKSTATE
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	The length of time (in seconds) the oldest ACD call has waited in queue or ringing (at an agent voice terminal for each split/skill in the report) before being answered. This does not include direct agent calls.	OLDESTCALL
Expected Wait Time (Pri): Top	This heading contains EWT for the skill at top priority. EWT is the wait time for the skill when a call is queued at top priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exception command.	EWTTOP

Report heading	Description	Database item, calculation, or <calculation name>
Expected Wait Time (Pri): High	This heading contains EWT for the skill at top priority. EWT is the wait time for the skill when a call is queued at high priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exception command	EWTHIGH
Expected Wait Time (Pri): Medium	This heading contains EWT for the skill at top priority. EWT is the wait time for the skill when a call is queued at medium priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed, but the fields are blank. Exception thresholds for EWT can be set from the Exception command	EWTMEDIUM
Expected Wait Time (Pri): Low	This heading contains EWT for the skill at top priority. EWT is the wait time for the skill when a call is queued at low priority. EWT measures only the time it takes to deliver the call to an agent. It does not include ringing time. If CMS is connected to an early switch version or if vectoring is not activated, the EWT headings and columns are displayed. Exception thresholds for EWT can be set from the Exception command, but the fields are blank.	EWTLOW
Agent Name	The names of the top agents assigned to this split/skill and logged in (or their login IDs if names have not been assigned to them in Dictionary).	syn(LOGID)
Login ID	The login identification of the agent.	LOGID



Report heading	Description	Database item, calculation, or <calculation name>
AUX Reason	The reason associated with the auxiliary work state of this agent (for example, lunch, break, meeting, or training). This field is blank if the agent is not in the AUX state.	syn(AUXREASON)
State	The current work mode (state) the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN, or OUT).	syn(WORKMODE) and syn(DIRECTION)
Skill/Level	<p>When an agent is on a skill call, a direct agent call, or in ACW mode, this is the skill associated with the call or the ACW, and the level associated with the skill. WORKSKILL is the OLDEST_LOGON:</p> <ul style="list-style-type: none"> <li>● When an agent is on an AUXIN/AUXOUT call from the available state, while in AUX, or with an AUXIN/AUXOUT call on hold</li> <li>● When an agent is on an AUXIN call with an ACD call on hold</li> <li>● When an agent is on an AUXOUT call with an ACD call on hold, this is the skill associated with the ACD call.</li> <li>● When an agent is available, in AUX, or in OTHER, this is blank.</li> </ul> <p>WORKSKLEVEL is the skill level (ranging from 1 to 16) or the reserve level (R1 or R2) associated with WORKSKILL.</p>	WORKSKILL/syn (WORKSKLEVEL)

## Real-time reports

Report heading	Description	Database item, calculation, or <calculation name>
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME
VDN Name (Shows data only if you have purchased the Vectoring feature.)	The number or name of the VDN for which the report shows data. The VDN is associated with the ACD in progress. If a name has been assigned to the VDN in the Dictionary, the name displays instead of the number.	syn(VDN)

# Split/Skill Agent Status by Location report

This report shows the agent status on a selected skill, by location ID. This report supports the agent site tracking feature, and this feature must be enabled to view meaningful data on the report

## Things to know about this report


---

Here are some things you need to know about this report:

- This report shows information for agents in this skill by their terminal location ID.
- This report includes information on agent roles, skill state, agent extensions, location IDs, and skill level or percent allocation per agent.
- You must have a switch with the EAS feature.
- The database items used for the Split/Skill Top Agent Status report are stored in the cagent tables.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report and a location ID to sort by. See [Split/skill report input fields](#) on page 177 for more information.

# Split/Skill Agent Status by Location report example

The following figure provides an example of the Split/Skill Agent Status by Location report:

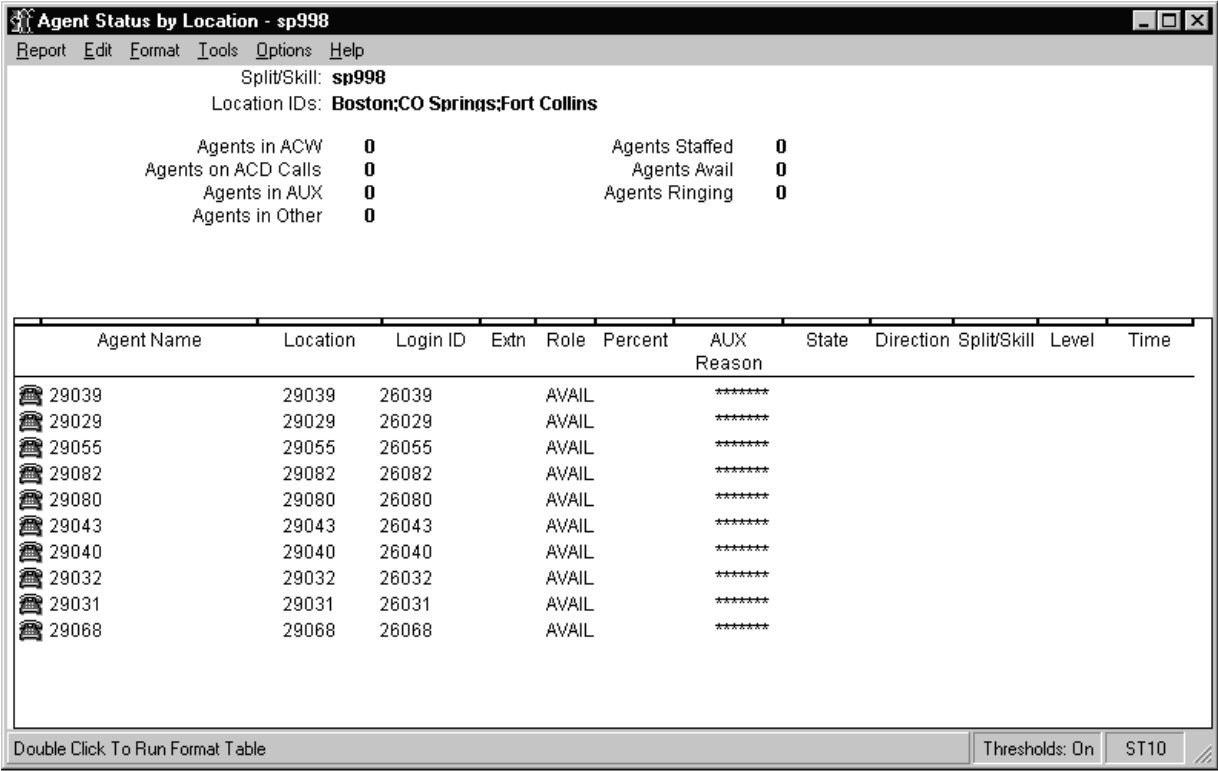

## Split/Skill Agent Status by Location report description

---

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
Location ID	The location IDs associated with the agent. This ID is not associated with the agent personally, but rather with the terminal the agent is logged into. It is also associated with a port network location ID on a switch. If the Agent Site Tracking feature is not available on your system, the field will not display meaningful data. For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.	LOC_ID
Agents in ACW	The total number of agents currently in ACW for this skill.	select count(*) where split = \$input and LOC_ID = \$input and WORKMODE = ACW
Agents on ACD Calls	The total agents currently on ACD calls in this skill.	select count(*) where split = \$input and LOC_ID = \$input and WORKMODE = ACD
Agents in AUX	The total agents currently in AUX work in this skill.	select count(*) where split = \$input and LOC_ID = \$input and WORKMODE = AUX

Report heading	Description	Database item, calculation, or <calculation name>
Agents in Other	<p>The total number of agents doing other work in this skill.</p> <p>For all switches, <b>Other</b> time is accumulated when:</p> <ul style="list-style-type: none"> <li>● An agent first logs into the switch. CMS tracks the agent time as <b>Other</b> time until the switch notifies CMS of the agent's state.</li> <li>● The link between CMS and the switch becomes operational. The switch notifies CMS of all agents who are logged in. CMS assumes these agents are in the <b>Other</b> state until the switch sends it notification of each agent's current state.</li> <li>● <b>Other</b> time is accumulated when agents in Auto-In or Manual-In</li> <li>● Put any call on hold while not doing any other activity</li> <li>● Dialed to place a call or to activate a feature</li> <li>● Had a personal call ringing with no other activity</li> <li>● Were available for other, multiple call handling skills, but not for this skill</li> <li>● Were logged into multiple splits/skills and were doing work for a split/skill other than this split/skill (on an ACD call or in call-related ACW)</li> </ul>	select count(*) where split = \$input and LOC_ID = \$input and WORKMODE = OTHER
Agents Staffed	The total number of agents currently staffed for this skill.	select count(*) where split = \$input and LOC_ID = \$input
Agents Avail	The total number of agents currently available in this split/skill	select count(*) where split = \$input and LOC_ID = \$input and WORKMODE = AVAIL
Agents Ringing	The total number of agents in this skill with calls currently ringing.	select count(*) where split = \$input and LOC_ID = \$input and WORKMODE = RING

Report heading	Description	Database item, calculation, or <calculation name>
Agent Name	The names or login IDs of the agents that logged into the split/skill selected in the report input window.	syn(LOGID)
Login ID	The login ID of the agent.	LOGID
Extn	The agent's terminal extension number.	EXTENSION
Role	The Agent's service role for this SKILL, based on call handling preference and skill level.	ROLE
Percent	The Agent's percent allocation for this SPLIT.	PERCENT
AUX Reason	The reason the agent is in AUX on this skill.	AUXREASON
State	The agent's state on this skill; for example, in AUX, in ACW, in OTHER.	AWORKMODE, WORKSKILL
Direction	The agent's direction on this skill, IN or OUT.	DIRECTION
Level	The agent's skill level on this skill, 1–16, r1 or r2.	WORKSKLEVEL
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME

---

## Trunk Group report

The Trunk Group report gives you the current status of each trunk in a selected trunk group.


## Trunk Group report selector window and input fields

The trunk/trunk group selector window is where you specify which trunks or trunk groups will appear in the report

### Trunk Group report selector window

---

This figure is an example of the Trunk Group report selector window:

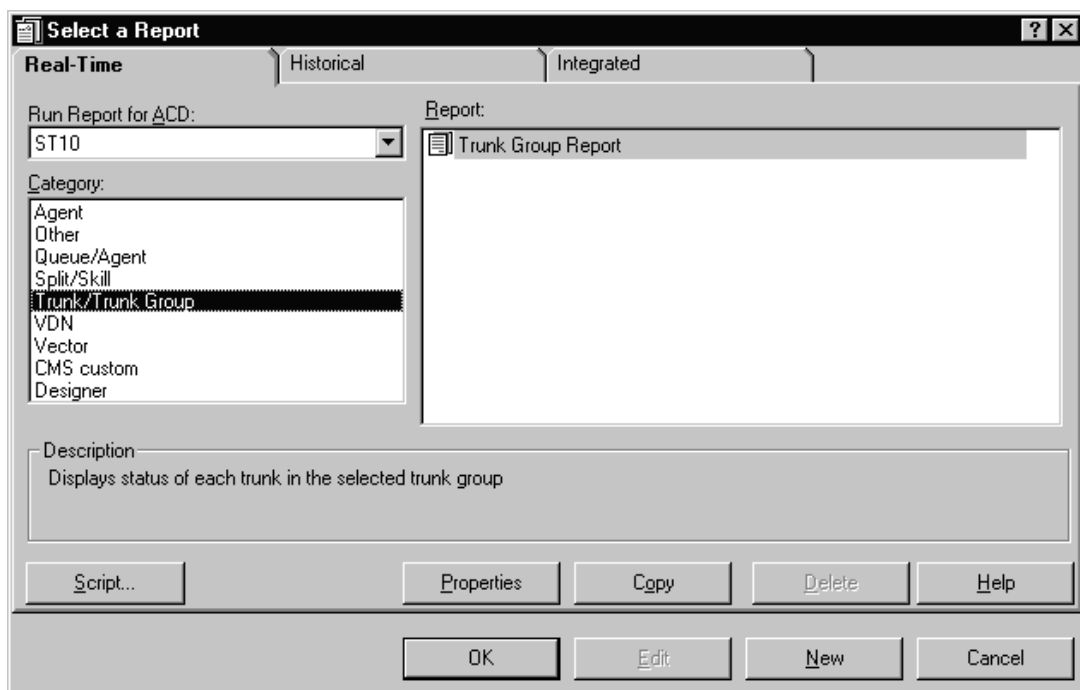



## Trunk Group report input fields

---

The following table describes the input fields on real-time Trunk Group report input windows. The report input window must be filled in to run the report:

Field	Definition
Trunk group	Enter the trunk group name or number that you want to view in this report. Any names that you want to appear on the report must have been previously defined and entered in the Dictionary subsystem.
Refresh Every <#> seconds	Enter the number of seconds (3 to 600) to specify how rapidly CMS should update the report data. The default for the Refresh Every <#> Seconds field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check the Enable Report Thresholds option to start the report with report thresholds running. Uncheck the option if you do not want to run report thresholds.
Run Minimized	Check the Run Minimized option to run the report in a minimized window. Uncheck the option to run the report at full size.

## Trunk Group report

The Trunk Group report displays the current status of each trunk in a selected trunk group. This information is useful in identifying overused or underused facilities and in general troubleshooting.

### Things to know about this report

Here are some things you need to know about this report:

- The database items used for the Trunk Group report are stored in the `ctgrp` table.
- This report uses the Trunk Group input window. See [Trunk Group report input fields](#) on page 275 for more information.

### Trunk Group report example

The following figure provides an example of a Trunk Group report:

Trunk	State	Direction	Time	Agent Name	Extn	Split/Skill	VDN Name
Tkgrp 1	IDLE	OUT	1:40	Agent 1	2001	Skill1	Orders
Tkgrp 2	CONN	IN	1:24	Agent 12	2012	Skill2	Orders
Tkgrp 3	CONN	IN	:30	Agent 32	2032	Regular	Orders
Tkgrp 4	HOLD	IN	1:07	Agent 16	2016	Gold	Orders
Tkgrp 5	RINGING	IN	1:32	Agent 3	2003	Platinum	Orders

ACD link is down      Thresholds: On      Los Angeles

## Trunk Group report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Trunk Group Name	The trunk group name or number for which the report was requested.	syn(TKGRP)
Trunk	The trunk equipment location assigned to this trunk.	EQLOC
State	The current state of the trunk (IDLE, CONN, QUEUED, SEIZED, MBUSY, HOLD, UNKNOWN, DABN, FBUSY, FDISC, RING).	TKSTATE
Direction	The direction in which the trunk is carrying the current call (in or out).	DIRECTION
Time	The time that the trunk has spent in the current state.	DURATION
Agent Name	The name of the agent handling the current call on the trunk.	syn(LOGID)
Extn	The extension number that is associated with the current call on the trunk.	EXTENSION
Split/Skill	The split/skill number that is associated with the current call on the trunk.	SPLIT
VDN Name (Shows data only if you have the Vectoring feature)	The number or name of the VDN for which the report shows data. The VDN is associated with the ACD call in progress. If a name has been assigned to the VDN in the Dictionary, the name displays instead of the number.	VDN

## VDN reports

The VDN reports give you the following specific information about VDNs:

- The wait times of incoming calls answered/connected and abandoned for a VDN during the current interval
- How calls to the specified VDN are being handled
- The number of calls handled by each of the VDN skill preferences and information about call handling
- The current overall status of the VDNs you select

## General information about VDN reports

### Organization of VDN reports

---

The following list shows how the VDN reports are organized:


- [VDN Call Profile report](#) on page 281
- [VDN Graphical Call Profile report](#) on page 285
- [VDN Skill Preference report](#) on page 289
- [VDN report](#) on page 292

## VDN report selector window and input fields

The VDN report selector window and the VDN report input window are used to run the VDN reports described in this section.

### VDN report selector window

The following figure is an example of the VDN report selector window. The reports are explained in the same order as listed in the window:

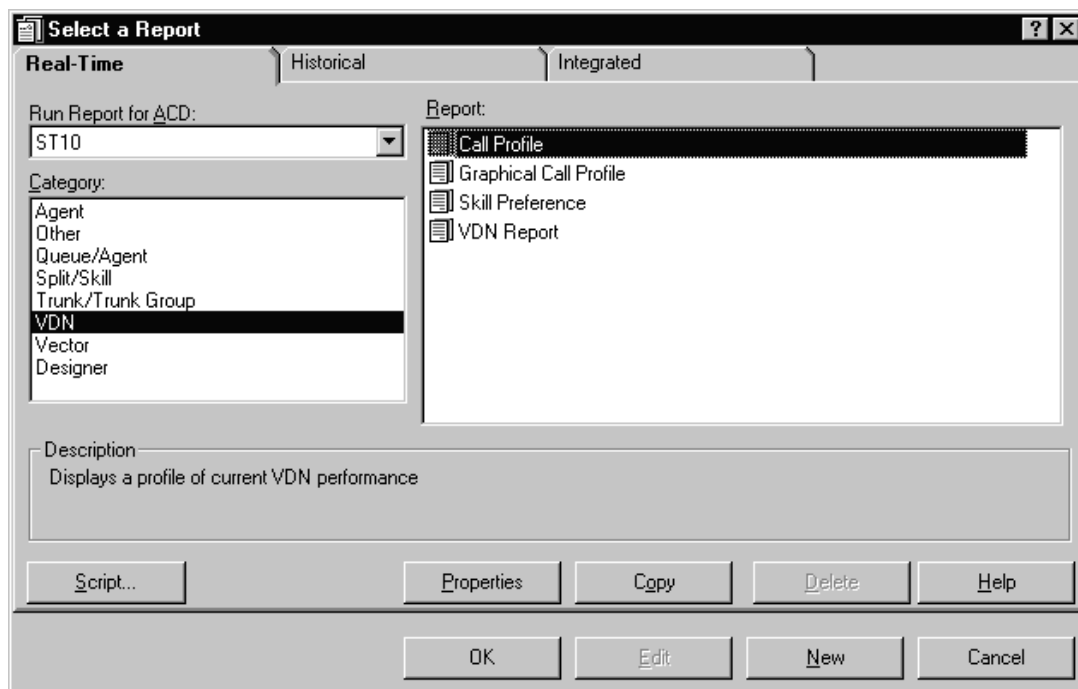

## VDN report input fields

---

The reports in this section use the VDN reports input window. Specific input information is included with the reports. The report input window must be filled in to run the report. The following table describes the input fields on real-time VDN report input windows:

Field	Definition
VDN	Fill in the VDNs names or numbers for which you want to run the report. You can enter a VDN name only if the name has been defined in the Dictionary.
Refresh Every <#> seconds	Enter the number of seconds (3 to 600) to specify how frequently CMS should update the report data. The default for the Refresh Every <#> Seconds field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check the Enable Report Thresholds option to start the report with report thresholds running. Uncheck the option if you do not want to run report thresholds.
Run Minimized	Check the Run Minimized option to run the report in a minimized window. Uncheck the option to run the report at full size.

## VDN Call Profile report

This report, which is available only for customers who have the Vectoring feature, displays the numbers of answered/connected and abandoned calls to the specified VDN within the administered service level increments. It also displays the percentage of calls answered or connected within the acceptable service level.

In order to run this report the Vectoring feature must be enabled.

### Things to know about this report

---

Here are some things you need to know about this report:

- Calls are displayed in ten separate columns, with each column representing a progressively longer wait time for the call. For example, the first field shows calls that were answered in less than or equal to PERIOD1 seconds, the second field shows calls that were answered in less than or equal to PERIOD2 seconds, but greater than PERIOD1 seconds, and so on.
- You can only run this report if the Vectoring feature has been purchase and authorized for you to use.
- The database items used for the VDN Call Profile report are stored in the cvdn table.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. See [VDN report input fields](#) on page 280 for more information.

### Prerequisite System Administration

---


You must first define your acceptable service level and service level increments for this VDN in the VDN Call Profile Setup window. If you do not define your service level and increments, zero (0) is used for all increments (therefore, all calls appear in the first increment).

### Reference

For more information, see the Avaya Call Management System Administration document.

VDN Call Profile report example

The following figure provides an example of a VDN Call Profile report:

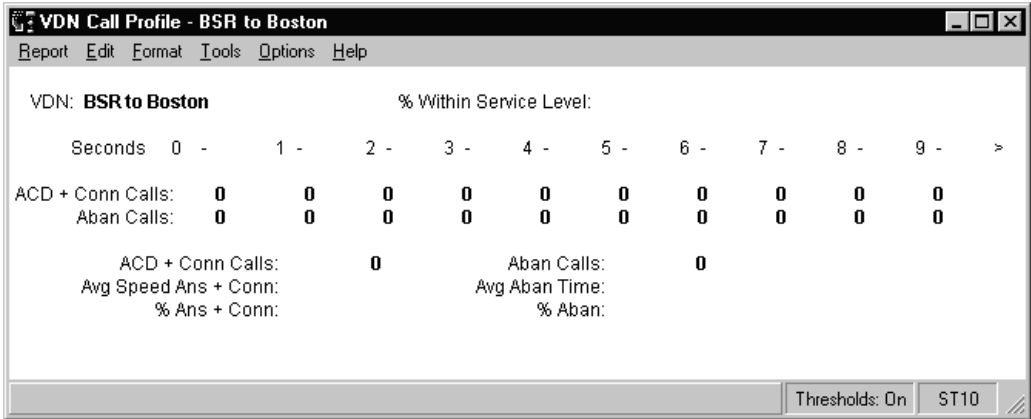

VDN Call Profile report description

This table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
VDN (Shows data only if you have purchased the Vectoring feature)	The number or name of the VDN for which the report shows data (selected in the report input window).	VDN
% Within Service Level	Percentage of calls to the VDN that were answered/connected within the service level (as specified in the VDN Call Profile Setup window). Calls to the VDN may result in ACD calls, direct agent calls, and non-ACD calls.	100 * (ACCEPTABLE/INCALLS) <PERCENT_SERV_LVL_VDN>



Report heading	Description	Database item, calculation, or <calculation name>
Seconds	The size of each service level increment is measured in seconds. Each increment of seconds represents a progressively longer wait time segment during which calls may be answered or abandoned, and each increment can be a different length. These increments are defined in the Call Center Administration VDN Call Profile Setup window.	PERIOD1-9
ACD + Conn Calls	Number of calls to the VDN that were answered by an agent or connected to a non-ACD destination within each of the service level increments. this includes direct agent calls. <b>Connected</b> means calls that are answered at a non-ACD destination.	ANSCONNCALLS1-10
Aban Calls	Number of calls to the VDN that were abandoned within each of the service level increments. This includes direct agent calls and calls that were abandoned while queued to a split/skill or while ringing a voice terminal. This includes all VDN calls abandoned. For switches with the ASAI feature, this also includes the number of outbound calls for each split/skill that abandoned before an agent answered at the far end.	ABNCALLS1-10
ACD + Conn Calls (total)	Total number of calls to the VDN (including direct agent calls) that were answered by an agent or were connected to a non-ACD destination. <b>Connected</b> means calls that are answered at a non-ACD destination.	ACDCALLS + CONNECTCALLS

Report heading	Description	Database item, calculation, or <calculation name>
Avg Speed of Ans + Conn	The average time, in minutes and seconds, that calls to the VDN completed during this interval waited before being answered by an agent or connected (to a non-ACD destination). This includes direct agent calls, non- ACD calls, and calls answered by AUDIX and Message Center agents, but only includes calls that were processed by the VDN.	$(\text{ANSTIME} + \text{CONNECTTIME}) / (\text{ACDCALLS} + \text{CONNECTCALLS})$
% Ans + Conn	Percentage of calls (which may includes direct agent calls) to the VDN completed during this interval that were answered or connected within the administered service level increments. This includes direct agent calls. <b>Connected</b> means calls that are answered at a non-ACD destination.	$100 * ((\text{ACDCALLS} + \text{CONNECTCALLS}) / \text{INCALLS})$
Aban Calls (total)	Total number of calls to the VDN that were abandoned. This includes direct agent calls and calls that were abandoned while queued to a split/skill or while ringing a voice terminal.	ABNCALLS
Avg Aban Time	The average time calls waited in VDN before hanging up.	$\text{ABNTIME} / \text{ABNCALLS}$ <AVG_ABANDON_TIME>
% Aban	Percentage of calls to the VDN that were abandoned.	$100 * (\text{ABNCALLS} / \text{INCALLS})$

# VDN Graphical Call Profile report

This report shows how calls to the VDN you specify are being handled compared to your call center's predefined acceptable service level. Call center supervisors can use this report to look at VDN calls answered within the acceptable service level and service interval answer and abandons.

This report is available on switches with the Call Vectoring feature.

## Things to know about this report

---

Here are some things to know about this report:

- You can access this report from the Real-Time VDN Category selector menu.
- This report contains two charts, a three-dimensional pie chart and a stacked area graph. A legend is located to the right of each chart.


The three-dimensional pie chart contains the percentage of ACD calls answered within the predefined acceptable service level and the percentage of ACD calls answered outside this level. The VDN selected for the report and the predefined acceptable service level are displayed above this chart.

The stacked area graph contains the following information:

- The number of ACD calls answered and abandoned within each service interval.
- The x-axis represents each of the defined service intervals in seconds, and the y-axis represents the number of ACD calls answered/abandoned within each of the defined service levels.
- The number displayed for each service interval is the upper limit of the interval. For example, if the first two intervals are 5 and 10, the first data point on the graph shows the number of calls answered/abandoned within 0-5 seconds, and the second data point shows the number of calls answered/abandoned within 6-10 seconds.
- The chart type can be changed. See [Using reports](#) on page 35 in this document for more information.
- The database items used for the VDN Graphical Call Profile report are stored in the `cvdn` table.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. See [VDN report input fields](#) on page 280 for more information.

## VDN Graphical Call Profile report example

The following figure provides an example of the VDN Graphical Call Profile report:

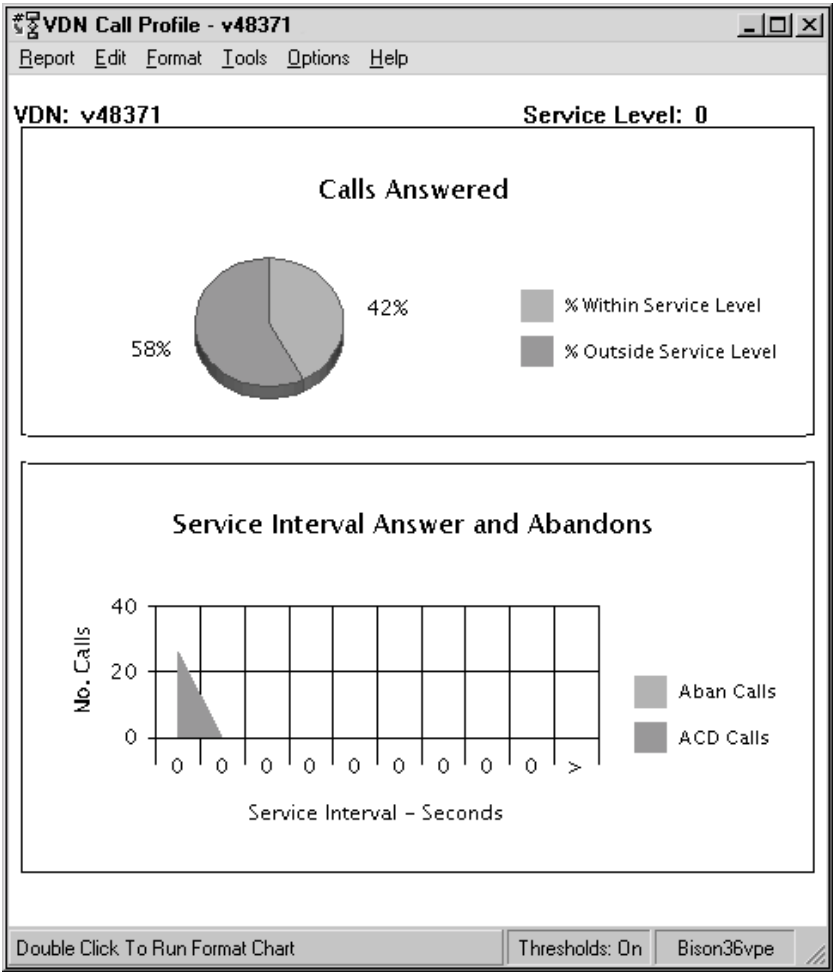

## VDN Graphical Call Profile report description

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
VDN (Shows data only if you have purchased the vectoring feature)	The number or name of the VDN for which the report shows data.	VDN or syn(VDN)
% Within Service Level	Percentage of calls to the VDN that were answered/connected within the service level (as specified in the VDN Call Profile Setup window). Calls to the VDN may result in ACD, direct agent calls, and non-ACD calls.	<PERCENT_SERV_LVL_VDN
% Outside Service Level	Percentage of VDN ACD calls that were not answered by an agent within the predefined acceptable service level. Calls that were not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one VDN and answered in another VDN.	< <100--PERCENT_SERV_LVL_VDN>
Service Interval - Seconds	The size of each service level increment is measured in seconds. Each increment of seconds represents a progressively longer wait time segments during which calls may be answered or abandoned, and each increment can be a different length. These increments are defined in the call Center Administration VDN Call Profile Setup window.	PERIOD1-9
ACD + Conn Calls	The number of calls to the VDN that were answered by an agent or connected to a non- ACD destination within each of the service level increments. Calls in each increment are represented by color-coded area (see legend).	ANSCONNCALLS1-10

Report heading	Description	Database item, calculation, or <calculation name>
Seconds	Shows the current setting for the Acceptable Service Level, in seconds, as defined on the Call Center Administration VDN Call Profile Setup window)	SERVICELEVEL
Aban Calls	The number of calls to the VDN that were abandoned within each of the service level increments. This includes direct agent calls and calls that were abandoned while queued to a split/skill or while ringing a voice terminal. For switches with the ASAI feature, this also includes the number of outbound calls for each split/skill that abandoned before an agent answered at the far end.	ABNCALLS1-10

## VDN Skill Preference report

This report, which is only available for customers who have the Vectoring and EAS features, displays information about call handling for the VDN as a whole and lists the number of calls handled by each of the VDN skill preferences.

In order to run this report, the Vectoring and EAS features must be enabled.

### Things to know about this report

Here are some things you need to know about this report:

- This report is only available if the Vectoring and EAS features have been purchased and authorized for you to use.
- This report displays data on the handling of calls to the VDNs by VDN skill preference.
- If a specific skill in the vector is also administered as a VDN skill preference for the associated VDN, data for that skill preference shows in this report.
- The database items used for the VDN Skill Preference report are stored in the cvdn table.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. See [VDN report input fields](#) on page 280 for more information.

### VDN Skill Preference report example

The following figure provides an example of the real-time VDN Skill Preference report:

VDN Name	Inbound Calls	ACD Calls	Avg Speed Ans	Avg ACD Time	Avg ACW Time	Aban Calls	Avg Aban Time	1st Skill ACD Calls	2nd Skill ACD Calls	3rd Skill ACD Calls
Design	0	0				0		0	0	0
BSR to	0	0				0		0	0	0

## VDN Skill Preference report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
VDN Name (Shows data only if you have purchased the Vectoring Feature.)	The number or name of the VDN for which the report shows data.	VDN
Inbound Calls	Number of calls offered to the VDN since the start of the interval and that completed during the interval.	INCALLS
ACD Calls	The number of split/skill and direct agent ACD calls to the VDN completed during the reporting period that were answered by an agent. This includes calls from <b>queue to main, check backup, messaging split/skill, route to split/skill, and adjunct routing</b> to split/skill or direct agent.	ACDCALLS
Avg Speed Ans	The average speed of the answer for split/skill and direct agent ACD calls to the VDN that were completed during the reporting period.	ANSTIME/ACDCALLS <AVG_ANSWER_SPEED>
Avg ACD Time	The average talk time (not including hold time) for all ACD calls (which may included direct agent calls) completed during this interval that were processed by the VDN.	ACDTIME/ACDCALLS <AVG_ACD_TALK_TIME>
Avg ACW Time	Average time agents spent in after call work associated with ACD calls to this VDN that were completed during this interval. (This does not include after call work time not associated with ACD calls.	ACWTIME/ACDCALLS <AVG_ACW_TIME>
Aban Calls	Number of calls to the VDN during this interval that hung up during this interval.	ABNCALLS



Report heading	Description	Database item, calculation, or <calculation name>
Avg Aban Time	The average time calls waited (in VDN) before hanging up.	ABNTIME/ABNCALLS <AVG_ABANDON_TIME>
(1st., 2nd., 3rd.) Skill ACD Calls	Number of completed ACD calls to the VDN answered by agents in each of the three VDN skill preferences.	SKILLCALLS1 SKILLCALLS2 SKILLCALLS3

# VDN report

This report, which is only available for customers who have the Vectoring feature, displays information about how calls to the specified VDNs are being handled during the current interval.

In order to run this report, the Vectoring feature must be enabled.

## Things to know about this report

Here are some things you need to know about this report:

- You can only run this report if the Vectoring feature has been purchased and authorized for you to use.
- The database items used for the VDN report are stored in the cvdn table.
- This report uses the VDN reports input window. See [VDN report input fields](#) on page 280 for more information.

## VDN report example

The following figure provides an example of a VDN report:

VDN Name	Calls Waiting	Oldest Call Waiting	Avg Speed Ans	Aban Calls	Avg Aban Time	ACD Calls	Avg ACD Time	Busy + Disc Calls	Flow In	Flow Out	Active VDN Calls
Design	0	:00		0		0		0	0	0	
Electron	0	:00		0		0		0	0	0	
Security	0	:00		0		0		0	0	0	14
BSR to	0	:00		0		0		0	0	0	

## VDN report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
VDN	The number or name of the VDN for which the report shows data.	VDN
Calls Waiting	The number of split or skill ACD calls waiting to be answered. This includes calls that are in queue and calls that are ringing at an agent voice terminal. It does not include direct agent calls.	INQUEUE+INRING
Oldest Call Waiting	Length of time the oldest call currently waiting in the VDN has been waiting.	OLDESTCALL
Avg Speed Ans	The average speed of answer for split/skill and direct agent ACD calls to the VDN that were completed during the reporting period.	ANSTIME/ACDCALLS <AVG_ANSWER_SPEED>
Aban Calls	The number of calls to the VDN that hung up during this interval.	ABNCALLS
Avg Aban Time	The average time calls waited (in split/skill or VDN) before hanging up.	ABNTIME/ABNCALLS <AVG_ABANDON_TIME>
ACD Calls	The number of calls to the VDN completed during the interval that were answered by an agent. This includes calls from <b>queue to main</b> , <b>check backup</b> , <b>messaging split/skill</b> , <b>route to split skill</b> , and <b>adjunct routing</b> to split/skill or direct agent.	ACDCALLS
Avg ACD Time	The average talk time (not including hold time) for all ACD calls (which may include direct agent calls) completed during the interval that were processed by the VDN.	ACDTIME /ACDCALLS <AVG_ACD_TALK_TIME>
Busy + Disc Calls	Number of calls offered to the VDN that received a forced busy signal or forced disconnect.	BUSYCALLS + DISCCALLS <BUSY_DISCONNECT>

Report heading	Description	Database item, calculation, or <calculation name>
Flow In	Number of calls that were redirected to this VDN via a <b>route to</b> VDN. Calls are counted regardless of whether they remained connected to the VDN, were abandoned, or were routed to some other destination.	INFLOWCALLS
Flow Out	The number of calls to this VDN that were redirected to another VDN or a destination outside the switch by way of a <b>route to</b> or <b>adjunct routing</b> command. This does not include calls redirected to another vector by way of a <b>go to vector</b> command, because those calls stay in the same VDN.	OUTFLOWCALLS
Active VDN Calls	Number of calls currently active in a VDN. This only includes incoming trunk calls directly to the VDN, but it does not include internal calls, transfers, or calls routed or redirected to the VDN through another VDN. A call is considered active in a VDN from the time that the call routes to the VDN until all parties on the call have been dropped and the call is released. If CMS is connected to an early switch version or the vectoring feature is not enabled, then the Active VDN Calls column is displayed, but the fields are blank.	ACTIVECALLS

---

# Vector report

The Vector report displays the information about how calls to the specified vectors are being handled during the current interval.

## Vector selector window and input fields

### Overview


---

The vector selector window is where you specify which vectors will appear in the report.

### Vector report selector window

---

The following figure is an example of the Vector report selector window:

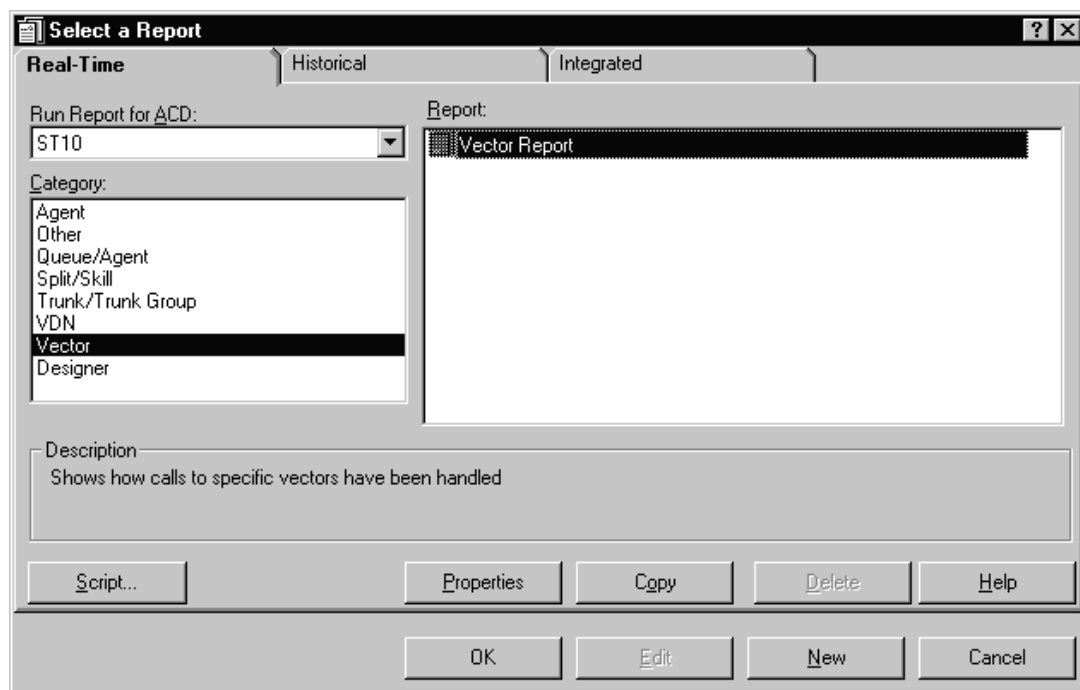

Vector report input fields

The following table describes the input fields on real-time Vector report input windows. The report input window must be filled in to run the report:

Field	Definition
Vector(s)	Enter the names or numbers of the vectors for which you want to run the report. You can enter a vector name only if the name has been defined in the Dictionary.
Refresh Every <#> seconds	Enter the number of seconds (3 to 600) to specify how frequently CMS should update the report data. The default for the Refresh Every <#> seconds field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check the Enable Report Thresholds option to start the report with report thresholds running. Uncheck the option if you do not want to run report thresholds.
Run Minimized	Check the Run Minimized option to run the report in a minimized window. Uncheck the option to run the report at full size.

# Vector report

The Vector report displays information about how calls to the specified vectors are being handled during the current interval.


## Things to know about this report

Here are some things you need to know about this report:

- The database items used for the Vector report are stored in the cvector table.
- This report uses the Vector report input window. Select the vectors that you want to view on the report. See [Vector selector window and input fields](#) on page 295 for more information.

## Vector report example

The following figure provides an example of a Vector report:

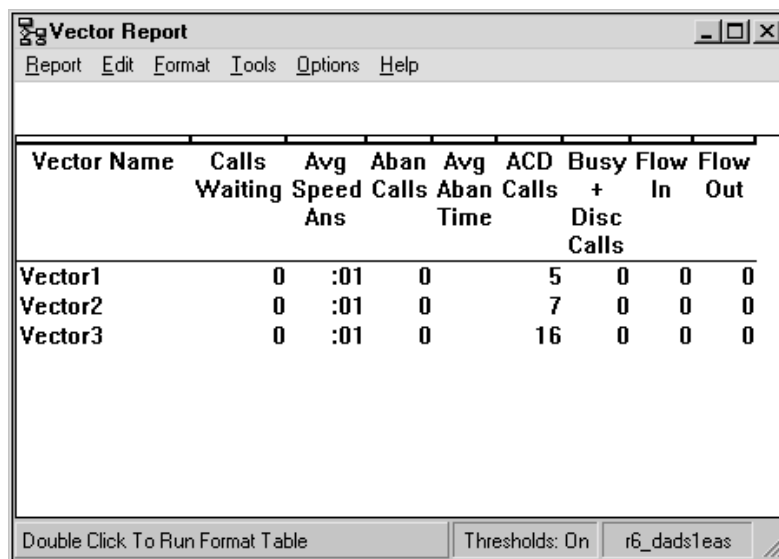

Vector Name	Calls Waiting	Avg Speed Ans	Aban Calls	Avg Aban Time	ACD Calls	Busy + Disc Calls	Flow In	Flow Out
Vector1	0	:01	0		5	0	0	0
Vector2	0	:01	0		7	0	0	0
Vector3	0	:01	0		16	0	0	0

Double Click To Run Format Table      Thresholds: On      r6\_dads1eas

## Vector report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Vector or Vector Name	Number or name of the vector for which the report shows data (selected in the report input window).	VECTOR
Calls Wait	Number of calls (which may include ACD and direct agent calls) that are currently being processed by the vector. This includes calls ringing a voice terminal.	INPROGRESS
Avg Speed Ans	The average time, in minutes and seconds, that split/skill and direct agent ACD calls waited before they were answered by an agent. This item includes only calls that were answered as a result of processing by this vector. It does not include hold time.	ANSTIME /ACDCALLS <AVG_ANSWER_SPEED>
Aban Calls	Number of calls that were abandoned while being processed by this vector. This includes direct agent calls and calls that were abandoned while queued to a split/skill or while ringing a voice terminal.	ABNCALLS
Avg Aban Time	The average time a caller waited before hanging up.	ABNTIME/ABNCALLS <AVG_ABANDON_TIME>
ACD Calls	The number of calls that were processed by the vector and answered by an agent. This includes direct agent calls, and it does includes ACD calls placed by an adjunct (also called outbound predictive dialing).	ACDCALLS
Busy + Disc Calls	Number of calls offered to the vector that received a forced busy signal or forced disconnect.	BUSYCALLS + DISCCALLS <BUSY_DISCONNECT>



Report heading	Description	Database item, calculation, or <calculation name>
Flow In	Number of calls that were redirected from within the switch to this vector. Calls are counted regardless of whether they were answered while being processed by the vector, were abandoned, or were routed to some other destination.	INFLOWCALLS
Flow Out	The number of calls to this vector that were redirected to another vector or a destination by way of a <b>route to, go to vector</b> or <b>adjunct routing</b> command. This includes calls routed to destinations within and outside the switch. Calls that route to a split/skill are not considered vector flow out calls, but are still tracked in the vector.	OUTFLOWCALLS

## Drill-down reports

Supervisor reports allow you to drill-down to very detailed information from a variety of places. A drill-down report is a report that gives you very specific information on an agent or a work state in a split/skill.

## General information about drill-down reports

### Drill-down report access

---

You can access drill-down reports in the following ways:

- Double click on an element in a report that allows you to access a drill-down report.
- Single click on an element in a report that allows you to access a drill-down report and then using the right mouse button menu to select a specific drill-down report.
- Single click on an element in a report that allows you to access a drill-down report and use the Tools menu to select any of the drill-down reports that are accessible from the currently-running report.

### Location ID as a report field

---

If you use a customer-created report to view information related to Avaya Business Advocate and that report uses Location ID as an input field, a completely new drill-down report will display. This report will differ from the current set of drill-down reports and will include agent location ID as a report field.

This field is available only when you drill down from a custom report that has Location ID as an input.

For more information, see [Location IDs on Supervisor and the switch](#) on page 25.

### Finding drill-down information

---

You can tell if the report you are currently running accesses a drill-down reports (and which drill-down reports are available) by moving the mouse cursor over information on the report and reading the status bar at the bottom left-hand side of the report window.

## Drill-down report types

---

There are two basic elements on reports from which you can access drill-down reports:

- Agent names or Login IDs drill-down to agent-specific information reports
- Agent work states (AWORKMODE, AUX, Avail, ACD, ACW, Ring, Other) - drill-down to work state reports or AUX Agents reports (ECS only)
- Database items (for example, TOTHER, TAVAILABLE, TINACW, TINAUX, TONACD, R1OTHER, R1AGINRING, R1AVAILABLE, RINACW, R1ONACD) which specify the number of agents in the given state.

## Modifying drill-down reports

---

Drill-down reports can only be modified if they can be run from the reports selector window. They cannot be modified if they are accessed from another report or agent work state.

## Drill-Down Top Agent Work State report

This report shows top agents who are in the specified work state and the time in the state. In addition, this report shows all of the agents that are staffed even if they are not in a particular state for the specified split/skill.

This report is available on all switch releases with EAS.

### Report contents

---

This report contains:

- A table with a row for each top agent currently in the selected work state.
- Top agent name, login ID, time in state, split/skill, and the skill level and role in the skill in which the agent is active in each row of the table.
- The user will be able to specify sort by agent name, login ID, time in state, split/skill, skill level and role.
- The user will be able to specify a primary and a secondary sort key.

### Report use

---

From this report, you can drill down to Real-Time or Integrated Agent Information reports.

Call center supervisors can use this report to look at all the top agents in a particular work state, and to see how long an agent has been in this work state, the skill for which they are occupied, the skill level assigned to the agent for this skill, and the role the agent has in this skill.

You cannot customize this report.

### Database items


---

The database items used for this report are stored in the csplit and cagent tables.

## Drill-down Top Agent Work State report example

---

The following figure provides an example of the Top Agent Work State report:

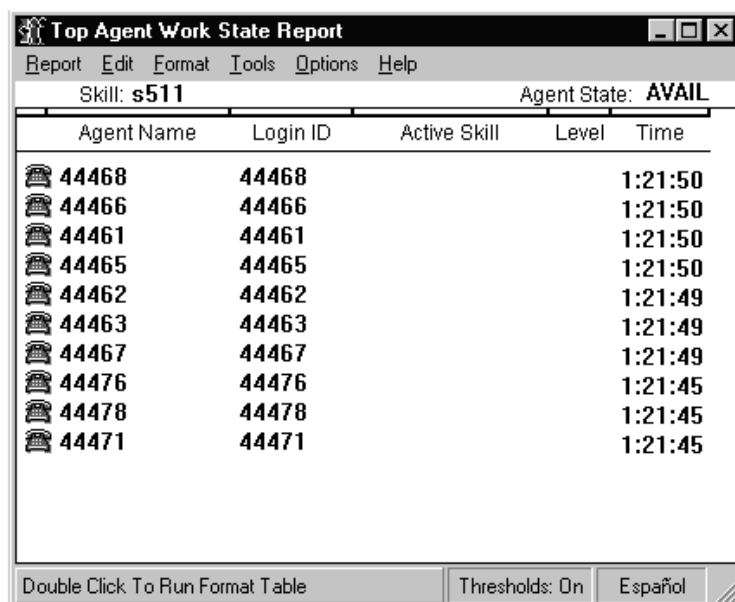

The screenshot shows a window titled "Top Agent Work State Report" with a menu bar (Report, Edit, Format, Tools, Options, Help). Below the menu bar, it displays "Skill: s511" and "Agent State: AVAIL". The main area contains a table with columns: Agent Name, Login ID, Active Skill, Level, and Time. The table lists 10 agents with their respective IDs and times. At the bottom, there are buttons for "Double Click To Run Format Table", "Thresholds: On", and "Español".

Agent Name	Login ID	Active Skill	Level	Time
44468	44468			1:21:50
44466	44466			1:21:50
44461	44461			1:21:50
44465	44465			1:21:50
44462	44462			1:21:49
44463	44463			1:21:49
44467	44467			1:21:49
44476	44476			1:21:45
44478	44478			1:21:45
44471	44471			1:21:45

## Drill-down Top Agent Work State report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Skill	The name or number of the skill (up to 20 characters) that is selected for this report.	syn(SPLIT)
Agent state	The current work mode for this agent. Values include Avail, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, AND UNSTAFF.	AWORKMODE + DIRECTION
Agent Name	The name (or agent IDs if the names have not been assigned in the Dictionary) of the agents assigned to this split/skill and logged in.	syn(LOGID)
Login ID	The login identification of the agents.	LOGID
Location ID	<p>The location IDs associated with the agent. This ID is not associated with the agent personally, but rather with the terminal the agent is logged into. It is also associated with a port network location ID on a switch. If the Agent Site Tracking feature is not available on your system, the field will not display meaningful data.</p> <p>This field is available only when you drill down from a custom report that has Location ID as an input.</p> <p>For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.</p>	LOC_ID

Report heading	Description	Database item, calculation, or <calculation name>
Active Skill	<p>This skill is active when the agent is:</p> <ul style="list-style-type: none"> <li>● On a split/skill, on a direct agent ACD call, or in ACW. This is the split/skill associated with the call or ACW.</li> <li>● Available, in AUX or in OTHER state. This is null (blank).</li> <li>● On an AUXIN/AUXOUT call. This is the OLDEST_LOGIN split/skill.</li> <li>● On an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold. This is the OLDEST_LOGON split/skill.</li> <li>● On an AUXIN call with an ACD call on hold. This is the OLDEST_LOGON split/skill.</li> <li>● On an AUXOUT call with an ACD call on hold. This is the split/skill associated with the ACD call.</li> </ul> <p>WORKSKILL differs from WORKSPLIT only in the case that the agent is available. In this case, WORKSKILL will be blank AND WORKSPLIT will contain one of the split/skills in which the agent is available.</p>	syn(WORKSKILL)
Level	The skill level (1-16, R1or R2) associated with the SKILL.	syn(LEVEL)
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME

## Drill-Down Work State report

This report shows all of the agents who are in the specified work state and the time in state.

This report is available on all switches.

### Report contents

---

This report contains:

- A table with a row for each top agent currently in the selected work state.
- Agent name, login ID, time in state, split/skill, and the skill level and role for the skill in which the agent is active in each row of the table.
- The user will be able to specify sort by agent name, login ID, time in state, split/skill, and skill level.
- The user will be able to specify a primary and a secondary sort key.

### Report use

---

When you drill down to this report from another report, this report shows all of the agents in that work state for that split or skill only.

Call center supervisors can use this report to look at all agents in a particular work state, and to see how long an agent has been in this work state, the split/skill for which they are occupied, the skill level assigned to the agent for this skill, and the role the agent has in this skill.

You cannot customize this report.




## Database Items

The database items used for this report are stored in the csplit and cagent tables.

## Drill-Down Work State report example

The following figure provides an example of the Work State report:

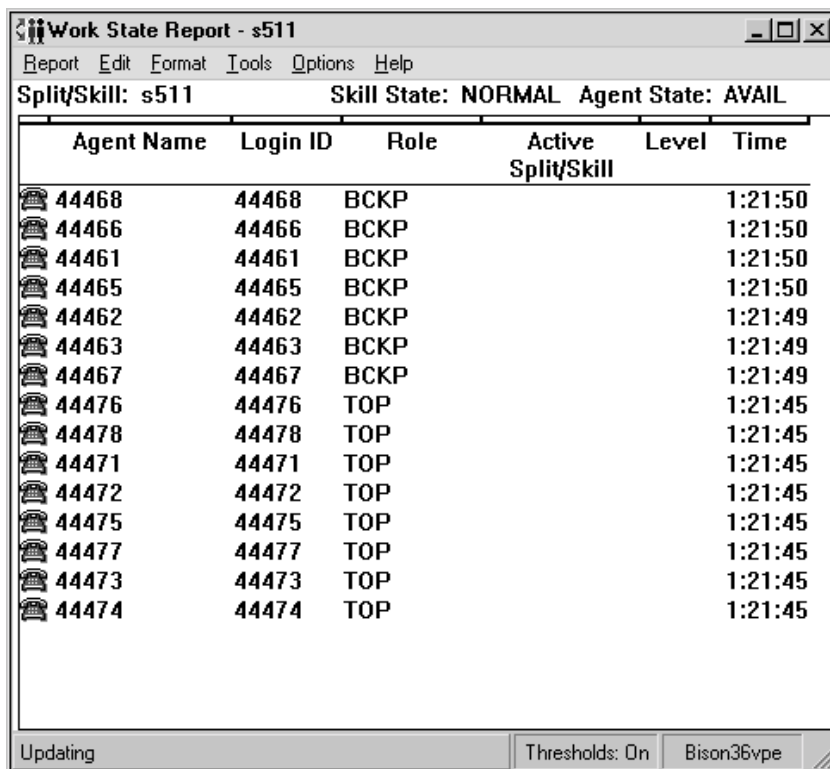

The screenshot shows a window titled "Work State Report - s511". The window has a menu bar with "Report", "Edit", "Format", "Tools", "Options", and "Help". Below the menu bar, it displays "Split/Skill: s511" and "Skill State: NORMAL Agent State: AVAIL". The main area contains a table with the following columns: "Agent Name", "Login ID", "Role", "Active Split/Skill", "Level", and "Time". The table lists 16 agents, with roles "BCKP" and "TOP". At the bottom of the window, there is a status bar with "Updating", "Thresholds: On", and "Bison36vpe".

Agent Name	Login ID	Role	Active Split/Skill	Level	Time
44468	44468	BCKP			1:21:50
44466	44466	BCKP			1:21:50
44461	44461	BCKP			1:21:50
44465	44465	BCKP			1:21:50
44462	44462	BCKP			1:21:49
44463	44463	BCKP			1:21:49
44467	44467	BCKP			1:21:49
44476	44476	TOP			1:21:45
44478	44478	TOP			1:21:45
44471	44471	TOP			1:21:45
44472	44472	TOP			1:21:45
44475	44475	TOP			1:21:45
44477	44477	TOP			1:21:45
44473	44473	TOP			1:21:45
44474	44474	TOP			1:21:45

## Drill-Down Work State report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the skill that is selected for this report.	syn(SPLIT)
Skill State	The current state of the skill, compared to the administered thresholds. This displays as Normal, Overload 1, and Overload 2 on the report. Requires Avaya Business Advocate.	SKSTATE
Agent state	The current work mode for this agent. Values include AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, AND UNSTAFF.	AWORKMODE + DIRECTION
Agent Name	The name (or agent IDs if the names have not been assigned in the Dictionary) of the agents assigned to this split/skill and logged in.	syn(LOGID)
Login ID	The login identification of the agents.	LOGID
Location ID	The location IDs associated with the agent. This ID is not associated with the agent personally, but rather with the terminal the agent is logged into. It is also associated with a port network location ID on a switch. If the Agent Site Tracking feature is not available on your system, the field will not display meaningful data. For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.	LOC_ID
Role	Agent's service role for this SPLIT, as defined in the Dictionary. Requires Avaya Business Advocate.	syn(ROLE)

Report heading	Description	Database item, calculation, or <calculation name>
Active Split/Skill	<p>This skill is active when the agent is:</p> <ul style="list-style-type: none"> <li>● On a split/skill, on a direct agent ACD call, or in ACW. This is the split/skill associated with the call or ACW.</li> <li>● Available, in AUX or in OTHER state. This is null (blank).</li> <li>● On an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold. This is the OLDEST_LOGIN split/skill.</li> <li>● On an AUXIN call with an ACD call on hold. This is the split/skill associated with the ACD call.</li> </ul> <p>WORKSKILL differs from WORKSPLIT only in the case that the agent is available. In this case, WORKSKILL will be blank AND WORKSPLIT will contain one of the split/skills in which the agent is available.</p>	syn(WORKSKILL)
Level	The skill level (1-16, R1 or R2) associated with the SKILL.	syn(LEVEL)
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME







# Historical reports

This chapter gives a brief description of each available historical report and definitions of the input fields. It provides the information needed to complete any historical report input screen.

## Organization of historical reports

---

The following topics are covered:

- [About historical reports](#) on page 312
- [Agent reports](#) on page 315
- [Other reports](#) on page 363
- [Split/Skill reports](#) on page 376
- [System reports](#) on page 432
- [Trunk/Trunk Group reports](#) on page 456
- [VDN reports](#) on page 474
- [Vector report](#) on page 507

# About historical reports

## Introduction

---

Historical reports display, report, and summarize the past performance of any measured subset of the Automatic Call Distribution (ACD). Historical reports display past data for various agent, split/skill, trunk/trunk groups, Vector Directory Number (VDN), and vector activities, such as number of ACD calls, abandoned calls, average talk time, and average speed of answer.

The information in historical reports will give you a sound basis for decisions concerning the following:

- Mix of trunk facilities
- Split or skill size
- Agent assignments
- Consistent and objective performance standards
- Performance evaluations

The Expert Agent Selection (EAS), Vectoring, and Graphics reports are also included in this chapter. If you do not have the EAS feature, Vectoring feature, or Graphics package, those report items do not appear on your menu. The reports you see depend on your switch type, permissions, and system performance.

## Presentation

---


This chapter gives a brief description of each available report, examples of the report input windows, and definitions of the input fields. It provides you with the information you need to complete any historical report input window.

A short summary and example of each historical report is included in this chapter.



## Diagram of historical reporting system

The following diagram shows how the historical reporting system is structured. This section follows the report structure outlined in this diagram-agent reports are described first, followed by other reports, such as call records and call work code reports.

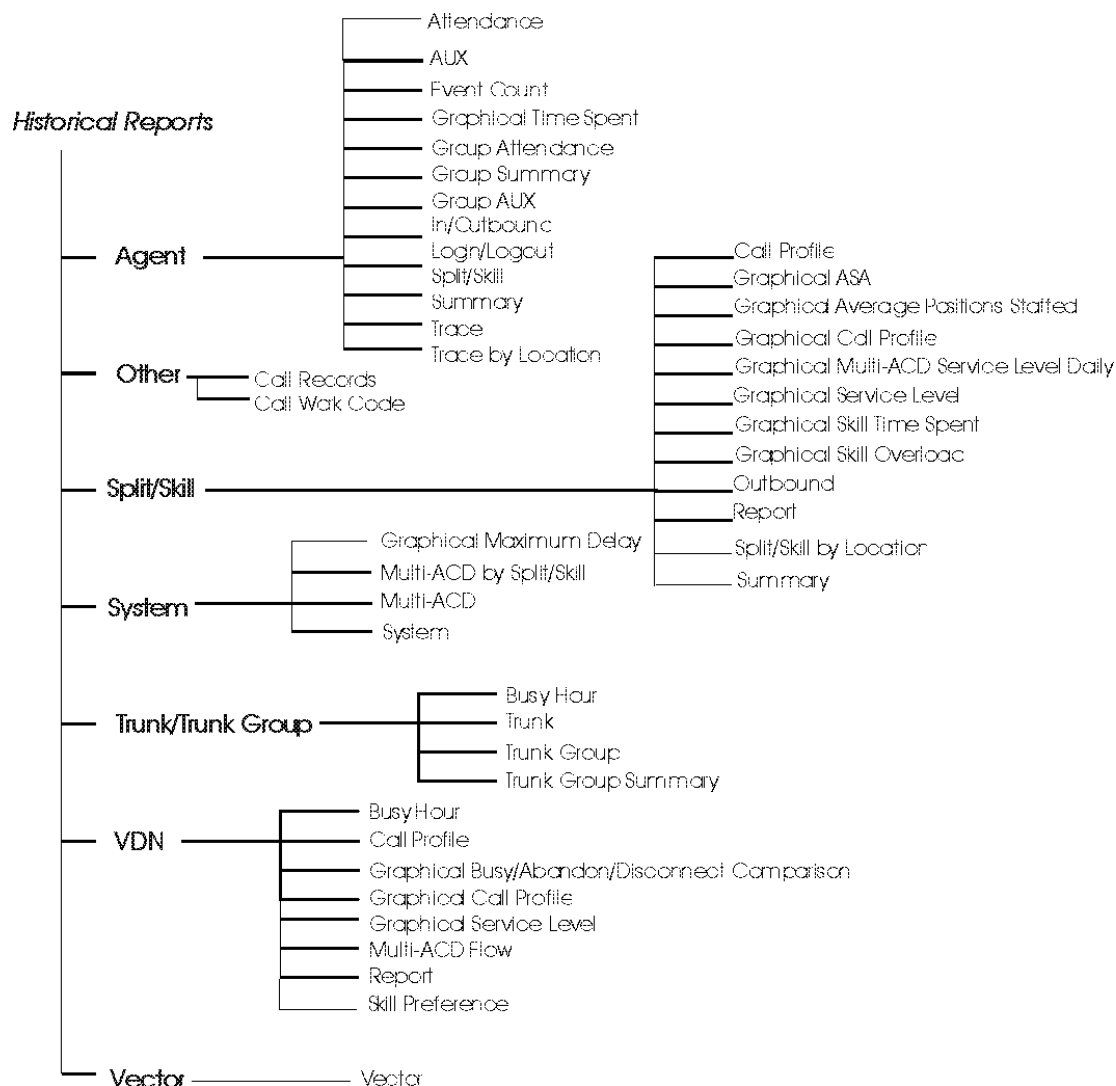

### Presentation of report information

---

When you generate a historical report, the totals for the report columns are on the top line of the report under the headings.

There are four types of historical reports:

- Interval reports contain breakdowns of data by the interval you have defined. The report intervals can be 15, 30, or 60 minutes. Interval reports can help you identify your high and low call volumes, and thereby manage your call center more easily.
- Daily reports display summarized interval data, one line for each day.
- Weekly reports display summarized daily data for the weeks specified, one line for each week.
- Monthly reports display summarized daily data for the months specified, one line for each month.

All four types are not available for each report. The Select a Report window lists reports based on which types are available (for example: Call Profile Daily, Call Profile Weekly, Call Profile Monthly).

### How long does CMS store data?

---

The Avaya Call Management System (CMS) can store intrahour data for up to 62 days, daily summary data for 5 years, and weekly/monthly summary data for 10 years. Disk storage space can quickly become an issue, as the volume of data you wish to store increases.

---

# Agent reports

This section describes Avaya Call Management System (CMS) Supervisor agent reports.

## General information about agent reports

### What an Agent report contains

---

The Agent reports give you the following specific information about agents:

- Every agent activity and the time it occurred for a particular agent in the Agent Trace by Location report
- An individual agent's performance by split or skill in the Agent Split/Skill report
- How a group of agents is performing in the Group Summary report

### Organization of Agent reports

---


The following list shows how the Historical Agent reports are organized in Supervisor:

- [Agent AUX report](#) on page 320
- [Agent Attendance report](#) on page 322
- [Agent Event Count report](#) on page 325
- [Agent Graphical Time Spent Daily report](#) on page 327
- [Agent Group Attendance report](#) on page 331
- [Agent Group AUX report](#) on page 334
- [Agent Group Summary report](#) on page 336
- [Agent Inbound/Outbound report](#) on page 341
- [Agent Login/Logout \(Skill\) report](#) on page 345
- [Agent Login/Logout \(Split\) report](#) on page 348
- [Agent Split/Skill report](#) on page 350
- [Agent Summary report](#) on page 354
- [Agent Trace by Location report](#) on page 359

### Agent report selector window

---

The following figure is an example of the Agent report selector window. The reports are explained in the same order as listed in the window.

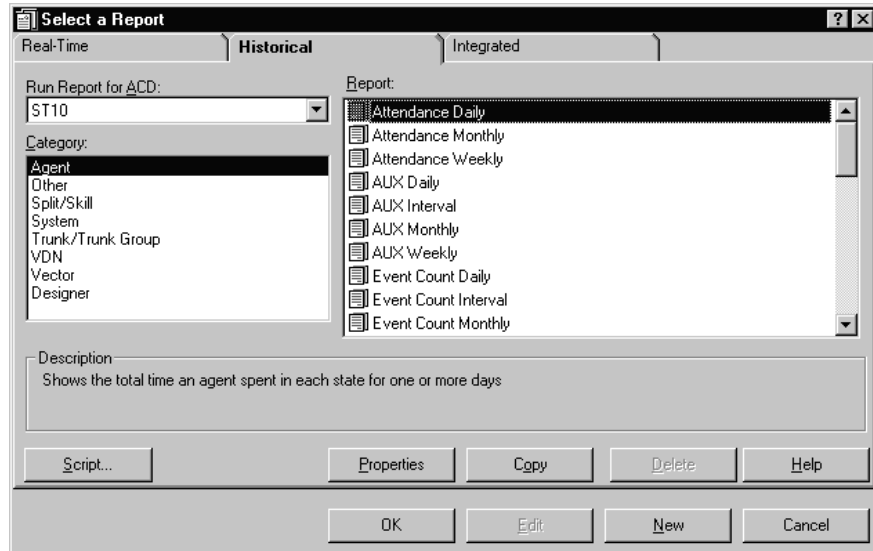

## Agent report input fields

The reports in this section use the Agent report selector window and input fields. Specific input information is included with the reports.

### Agent report input fields

---

The following table describes the input fields on historical Agent report input windows. Not all reports use all fields; refer to information for the specific report you are running to determine what you want to view. For example, you may enter an agent group, agent name or split/skill to run the report.

All possible fields on this window are described here:

Field	Definition
Agent	Enter the name of the agent. The agent's name must be defined in the Dictionary subsystem; otherwise, you will see the agent's ID number.
Agent group	Enter the appropriate group name. It is important to enter the agent group name correctly, because CMS does not check to see if the group name you entered exists in the Dictionary subsystem. Therefore, if you enter a name that is misspelled, the report runs but does not contain data because the group does not exist. You should enter the correct group name and run the report again.
Date (Interval)	Enter the date you would like the report to cover: <ul style="list-style-type: none"><li>● You can use the month/day/year (for example, 3/21/02).</li><li>● You can use a minus offset based on today's date (for example, -1 for yesterday).</li></ul>
Login Date	Enter the date that you would like the report to cover. This is the date on which agents in the skill logged in. <ul style="list-style-type: none"><li>● You can use the month/day/year (for example, 3/21/02).</li><li>● You can use a minus offset based on today's date (for example, -1 for yesterday).</li></ul>

Field	Definition
Date (daily, weekly, and monthly)	<p>Enter the dates for the days or the start dates for the weeks or the months that you would like the report to cover.</p> <ul style="list-style-type: none"> <li>● You can use the month/day/year (for example, 3/21/02).</li> <li>● You can use a minus offset based on today's date (for example, -1 for yesterday). You can also specify a range of dates (for example, 0 through - 7).</li> <li>● You can separate individual data entry items using a semicolon (for example, 3/21/02;3/23/02;3/25/02), and you can enter ranges by placing a hyphen between entries (for example, 3/21/02-3/25/02). For weekly and monthly reports, specifying a range produces all weeks and/or months that begin in the range.</li> </ul> <p>When you specify a date for a weekly report, that date or range of dates must correspond to the week start day selected in the System Setup-Storage Intervals window. If the date and day do not match, the message No records found displays in the status line. The month start date must be the first day of the month.</p>
Times (Interval)	<p>Enter the times you would like the report to cover:</p> <ul style="list-style-type: none"> <li>● You can use AM/PM format (for example, 7:30AM-5:00PM).</li> <li>● You can use military time format (for example, 7:30-17:00).</li> <li>● You can separate individual data entry items using a semicolon (for example, 3/21/02;3/23/02;3/25/02), and you can enter ranges by placing a hyphen between entries (for example, 3/21/02-3/25/02). For weekly and monthly reports, specifying a range produces all weeks and/or months that begin in the range.</li> </ul>
Destination	<p>Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows<sup>®</sup> printer. The default printer is shown.</p>

# Agent AUX report

The Agent AUX (Auxiliary Work) report is based on the Agent Summary and Agent Attendance reports. This report shows the total staffed time, total AUX time, and AUX time for each reason code for an agent.


## Things to know about this report

Here are some things you need to know about this report:

- The Agent AUX report is available in interval, daily, weekly, and monthly versions.
- The database items for the Agent AUX report are stored in the hagent (interval), dagent (daily), wagent (weekly), and magent (monthly) tables.
- This report is only available when the ACD and Expert Agent Selection (EAS) features have been enabled on a switch.
- You must be using AUX Reason Codes on the switch for this report to be meaningful.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

## Agent AUX report example

The following figure provides an example of an Agent AUX report:

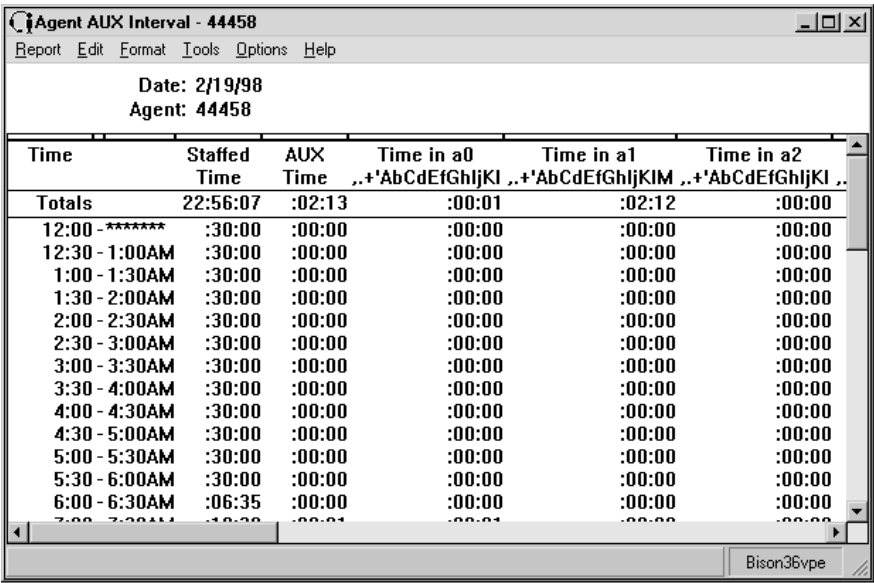

Agent AUX Interval - 44458						
Report Edit Format Tools Options Help						
Date: 2/19/98						
Agent: 44458						
Time	Staffed Time	AUX Time	Time in a0 ..'+AbCdEfGhIjKl	Time in a1 ..'+AbCdEfGhIjKlM	Time in a2 ..'+AbCdEfGhIjKl ..	
Totals	22:56:07	:02:13	:00:01	:02:12	:00:00	
12:00 - *****	:30:00	:00:00	:00:00	:00:00	:00:00	
12:30 - 1:00AM	:30:00	:00:00	:00:00	:00:00	:00:00	
1:00 - 1:30AM	:30:00	:00:00	:00:00	:00:00	:00:00	
1:30 - 2:00AM	:30:00	:00:00	:00:00	:00:00	:00:00	
2:00 - 2:30AM	:30:00	:00:00	:00:00	:00:00	:00:00	
2:30 - 3:00AM	:30:00	:00:00	:00:00	:00:00	:00:00	
3:00 - 3:30AM	:30:00	:00:00	:00:00	:00:00	:00:00	
3:30 - 4:00AM	:30:00	:00:00	:00:00	:00:00	:00:00	
4:00 - 4:30AM	:30:00	:00:00	:00:00	:00:00	:00:00	
4:30 - 5:00AM	:30:00	:00:00	:00:00	:00:00	:00:00	
5:00 - 5:30AM	:30:00	:00:00	:00:00	:00:00	:00:00	
5:30 - 6:00AM	:30:00	:00:00	:00:00	:00:00	:00:00	
6:00 - 6:30AM	:06:35	:00:00	:00:00	:00:00	:00:00	
7:00 - 7:30AM	:18:00	:00:00	:00:00	:00:00	:00:00	



## Agent AUX report description

---

The following table describes the report fields:

Field	Description	Database item, calculation, or <calculation name>
Date, Week Starting, or Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Agent Name	The name or login ID of the agent. You can make this selection in the report input window.	syn(LOGID)
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Time (for interval reports only)	The intrahour intervals for which the report shows data. You can make these selections in the report input window.	STARTTIME, STARTTIME + INTRVL
Staffed Time	The total time that the agent was logged in (staffed) for the specified time period in any split/skill. (This does not include time that the link was down.)	sum(TI_STAFFTIME)
AUX Time	The total time that the agent spent in AUX work in all splits/skills and on AUXIN/AUXOUT calls for the specified time period.	sum(TI_AUXTIME)
Time in 0	The time that the agent spent in AUX with the reason code of 0 (zero). This is the time in the system AUX for the switches using AUX reason codes. It is the same as TI_AUXTIME for switches not using AUX reason codes.	sum(TI_AUXTIME0)
Time in 1...9	The time that the agent spent in AUX with each of the reason codes 1–9.	sum(TI_AUXTIME1) ... sum(TI_AUXTIME9)

# Agent Attendance report

The Agent Attendance report gives the total staffed time, ACD time, ACW time, AUX time, time in the ringing state, extension time, available time, and the number of calls handled by an agent for the specified time period for all splits or skills the agent was logged into.

## Things to know about this report

Here are some things you need to know about this report:

- The Agent Attendance report is available in daily, weekly, and monthly versions.
- The database items for the Agent Attendance report are stored in the hagent (interval), dagent (daily), wagent and magent (monthly) tables.
- The report item Total Staff Time contains other time (TI\_OTHERTIME) which is not shown in the report but can cause the numbers to not add up.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

## Agent Attendance report example

The following figure provides an example of an Agent Attendance report:

Agent Attendance Daily - Georgia Gillian											
Report Edit Format Tools Options Help											
Agent: Georgia Gillian											
Date	Staffed Time	ACD Time	ACW Time	Agent Ring Time	Extn In Time	Extn Out Time	Avail Time	AUX Time	ACD Calls	Extn In Calls	Extn Out Calls
Totals	36:21:15	26:27:04	:00:00	1:34:40	:00:00	:00:00	8:17:28	:00:12	5718	0	0
8/9/99	12:25:41	4:43:01	:00:00	:24:32	:00:00	:00:00	7:16:25	:00:08	1743	0	0
8/16/99	23:55:34	21:44:03	:00:00	1:10:08	:00:00	:00:00	1:01:03	:00:04	3975	0	0

Double Click To Run Format Table ST10

## Agent Attendance report description

The following table describes the report fields:

Field	Description	Database item, calculation, or <calculation name>
Agent Name	The name or login ID of the agent. You can make this selection in the report input window.	syn(LOGID)
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Date, Week, or Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Staffed Time	The total time that the agent was logged in (staffed) for the specified time period in any split/skill. (This does not include time that the link was down.)	sum(TI_STAFFTIME)
ACD Time	The total time that the agent spent on all split/skill and direct agent ACD calls for the specified time period in any split/skill.	sum(I_DA_ACDTIME), sum(<TOTAL_I_ACDTIME>)
ACW Time	The total time that the agent spent in ACW for the specified time period in any split/skill for ACD calls and direct agent calls as well as time in ACW not associated with a call. Time on extension calls is also included.	sum(I_DA_ACWTIME), sum(<TOTAL_I_ACWTIME>)
Agent Ring Time	The total time during the collection interval that the agent had split/skill and direct agent ACD calls ringing. If the agent answers or makes another call instead of answering the ringing call, I_RINGTIME stops accumulating. RINGTIME is the time that the caller spends ringing and is independent of agent activity.	sum(I_RINGTIME)
Extn In Time	The total time that the agent spent talking on inbound extension calls for the specified time period.	sum(I_ACWINTIME + I_AUXINTIME), sum(<EXT_IN_TIME>)

<b>Field</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Extn Out Time	The total time that the agent spent talking on outbound extension calls for the specified time period.	sum(I_ACWOUTTIME + I_AUXOUTTIME), sum<EXT_OUT_TIME>
Avail Time	The total time for the specified time period that the agent was available to take ACD calls in any split/skill.	sum(TI_AVAILTIME)
AUX Time	The total time that the agent spent in AUX work in all splits/skills and on AUXIN/AUXOUT calls for the specified time period.	sum(TI_AUXTIME)
ACD Calls	The total number of split/skill and direct agent ACD calls answered by the agent.	sum(ACDCALLS + DA_ACDCALLS), sum(<TOTAL_ACDCALLS>)
Extn In Calls	<p>The number of inbound extension calls completed by the agent during the period covered. This includes calls received while the agent was in the following work modes:</p> <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	sum(ACWINCALLS + AUXINCALLS) and sum(<EXT_CALL_IN>)
Extn Out Calls	<p>The number of outbound extension calls that were completed by the agent during the period covered. This includes calls originated by the agent while the agent was in the following work modes:</p> <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	sum(ACWOUTCALLS) + sum(AUXOUTCALLS), <EXT_CALL_OUT>, sum<EXT_CALL_OUT>

## Agent Event Count report

The Agent Event Count report shows the total number of times that an individual agent pressed an Event Count (sometimes referred to as Stroke Count) key for all splits/skills. An Event Count key can represent any call event, including a successful sale, a call from a demographic category, or a response to a promotion. CMS records an event occurrence each time that an agent presses an Event Count key on his or her voice terminal while the agent is on an ACD call or in call-related ACW. This feature's operations is dependent on Stroke Count administration on the switch.

### Things to know about this report

Here are some things you need to know about this report:

- The Event Count report is available in interval, daily, weekly, and monthly versions.
- The database items for the Agent Event Count report are stored in the hagent (interval), dagent (daily), wagent and magent (monthly) tables.
- This report uses the Agent report input window. select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

### Agent Event Count report example

The following figure provides an example of an Agent Event Count report:

Date	ACD Calls	Event 1	Event 2	Event 3	Event 4	Event 5	Event 6	Event 7	Event 8	Event 9
<b>Totals</b>	<b>14</b>	<b>0</b>	<b>14</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>	<b>0</b>
3/27/98	11	0	11	0	0	0	0	0	0	0
3/28/98	3	0	3	0	0	0	0	0	0	0

## Agent Event Count report description

---

The following table describes the report fields:

Field	Description	Database item, calculation, or <calculation name>
Date, Week Starting, or Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Agent Name	The name or login ID of the agent. You can make this selection in the report input window.	syn(LOGID)
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Time (interval reports only)	The intrahour intervals for which the report shows data. You can make these selections in the report input window. <b>Note:</b> This is the interval for which counts were summed.	STARTTIME, STARTTIME + INTRVL
ACD Calls	The number of split/skill and direct agent ACD calls that were answered by this agent during the specified time period.	ACDCALLS + DA_ACDCALLS), sum(<TOTAL_ACDCALLS>)
Event Count 1...9	The number of key presses of the various Event Count keys by this agent during the specified time period.	sum(EVENT1)...sum(EVENT9)

# Agent Graphical Time Spent Daily report

This report shows historical information and statistics for the specified agent.

## Things to know about this report

---

Here are some things you need to know about this report:

- This report is available in daily version only.
- This report is available for all switch releases. The contents of this report depends upon the switch release for which it is being run.
- The database items for the Agent Graphical Time Spent Daily report are stored in the cagent (daily) table.
- Call center supervisors can use this report to get an idea of how much time an agent spent on ACD calls, in available state, in ACW, in AUX, and so on, for a particular day. This report enables the supervisor to tell how much time the agent spent in AUX work state for each of the reason codes defined for this call center.
- The following example of this report shows the information it will contain for a switch with EAS.
- This report is available only through the Supervisor interface.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

Agent Graphical Time Spent Daily report  
example

The following figure provides an example of an Agent Graphical Time Spent report.



Agent Graphical Time Spent Daily report  
description

The following table describes the report fields:

Field	Description	Database item, calculation, or <calculation name>
Agent	The name (or agent login ID if the names have not been assigned in Dictionary) of the agent.	syn(LOGID)
Date	The day for which the report was run (selected in the report input window).	ROW_DATE



Field	Description	Database item, calculation, or <calculation name>
AVAIL	The time during the collection interval that the agent was in the available state for split/skill or direct agent ACD calls in any split/skill.	sum(TI_AVAILTIME)
ACD	The time during the collection interval that the agent was talking on ACD calls for the SPLIT.	sum (<TOTAL_I_ACDTIME>)
ACW	The time during the collection interval that the agent was in after call work (ACW). This includes ACW for split/skill ACD calls and ACW not associated with the call.	sum(<TOTAL_I_ACWTIME>)
AUX	The time during the collection interval that the agent was in the AUX work state in all splits/skills or on AUXINCALLS or AUXOUTCALLS.	sum(TI_AUXTIME)
RING	The time during the collection interval that the agent had split/skill and direct agent ACD calls ringing.	sum(I_RINGTIME)
Reason Code 0	The time that the agent spent in AUX with reason code 0. This is the time in system AUX for the switches using AUX reason codes. It is the same as TI_AUXTIME for switches not using AUX reason codes. The TI_ stands for the time that is stored only for the split or skill that the agent is logged into for the longest amount of time. TI_ time needs to be summed across the skills the agents may log into, in case the login order changes during the collection interval.	sum(TI_AUXTIME)

Field	Description	Database item, calculation, or <calculation name>
Reason Codes 1-9	The time that the agent spent in AUX with each of the reason codes 1-9. The TI_ stands for the time that is stored only for the split or skill that the agent is logged into for the longest amount of time. TI_ time needs to be summed across the skills the agents may log into, in case the login order changes during the collection interval.	sum(TI_AUXTIME1-9)
OTHER	The time during the collection interval that the agent was doing other work in all splits/skills. TI_OTHERTIME accumulates while in Auto-in or Man-In the agent put any call on hold and performed no further action, the agent dialed to place a call or to activate a feature, or an extension call rang with no other activity. TI_OTHERTIME is collected for the time period after the line to the switch comes up or after the agent logs in and before the CMS receives notification of the agent's state from the switch. The TI_ stands for the time that is stored only for the split/skill that the agent is logged into for the longest amount of time. TI_ time needs to be summed across the splits/skills the agents may log into, in case the logon order changes during the collection interval.	sum(TI_OTHERTIME)

## Agent Group Attendance report

The Agent Group Attendance report summarizes staffed time, ACD time, ACW time, AUX time, time in the ringing state, extension time, available time, and number of calls handled for each agent in an agent group for the specified time period.

### Things to know about this report

Here are some things you need to know about this report:

- The Agent Group Attendance report is available in daily, weekly, and monthly versions.
- The database items for the Agent Group Attendance report are stored in the dagent (daily), wagent (weekly), and magent (monthly) tables.
- The Totals column in the reports displays the totals for all agents in the group you have selected. Individual agent entries in this report show the totals for a particular agent.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

### Agent Group Attendance report example

The following figure provides an example of an Agent Group Attendance report:

Agent Name	Login ID	Staffed Time	ACD Time	ACW Time	Agent Ring Time	Extn In Time	Extn Out Time	Avail Time	AUX Time	ACD Calls	Extn In Calls	Extn Out Calls
<b>Totals</b>		144:00:00	:13:49	:11:05	:00:37	:00:00	:00:00	143:34:28	:00:00	66	0	0
agent1	50001	24:00:00	:02:17	:01:47	:00:06	:00:00	:00:00	23:55:50	:00:00	11	0	0
agent2	50002	24:00:00	:02:13	:01:54	:00:06	:00:00	:00:00	23:55:47	:00:00	11	0	0
agent3	50003	24:00:00	:02:26	:01:32	:00:04	:00:00	:00:00	23:55:58	:00:00	11	0	0
agent4	50004	24:00:00	:02:12	:01:57	:00:07	:00:00	:00:00	23:55:44	:00:00	11	0	0
agent5	50005	24:00:00	:02:24	:02:03	:00:08	:00:00	:00:00	23:55:25	:00:00	11	0	0
agent6	50006	24:00:00	:02:17	:01:52	:00:06	:00:00	:00:00	23:55:44	:00:00	11	0	0

## Agent Group Attendance report description

The following table describes the report fields:

Field	Description	Database item, calculation, or <calculation name>
Date, Week Starting, or Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Agent Group	The name of the group of agents. You can make this selection in the report input window.	No database item or calculation.
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Agent Name	The name or login ID of the agent.	syn(LOGID)
Login ID	The login ID assigned to each agent.	LOGID
Agent	The name or login ID of the agent.	LOGID
Staffed Time	The total time that the agents were logged in (staffed) for the specified time period in any split/skill. This does not include time the link was down.	sum(TI_STAFFTIME)
ACD Time	The total time that the agents in the group talked on all split/skill and direct agent ACD calls for the specified time period.	I_ACDDTIME + I_DA_ACDDTIME), sum(<TOTAL_I_ACDDTIME>)
Agent Ring Time	The total time during the collection interval that agents had split/skill and direct agent ACD calls ringing. If the agent answers or makes another call instead of answering the ringing call, I_RINGTIME stops accumulating. RINGTIME is the time that the caller spends ringing and is independent of agent activity.	sum(I_RINGTIME)
Extn In Time	The total time that the agents in the group spent talking on inbound extension calls for the specified time period.	I_ACWINTIME + I_AUXINTIME), sum(<EXT_IN_TIME>)
Extn Out Time	The total time that the agents spent talking on outbound extension calls for the specified time period.	I_ACWOUTTIME + I_AUXOUTTIME), sum(<EXT_OUT_TIME>)

Field	Description	Database item, calculation, or <calculation name>
Avail Time	The total time that the agents were available to take ACD calls for any split/skill during the specified time period.	sum(TI_AVAILTIME)
AUX Time	The total time that the agents spent in AUX work in all splits/skills or on AUXIN/AUXOUT calls for the specified time period.	sum(TI_AUXTIME)
ACD Calls	The total number of split/skill and direct agent ACD calls answered by the agents in this group that completed during the specified time period.	sum(ACDCALLS + DA_ACDCALLS), sum(<TOTAL_ACDCALLS>)
Extn In Calls	The number of inbound extension calls that were completed by the agent during the period covered. This includes calls received while the agent was in the following work modes: <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	sum(ACWINCALLS + <EXT_CALL_IN>)
Extn Out Calls	The number of outbound extension calls that were placed by the agent during the period covered. This includes calls originated by the agent while the agent was in the following work modes: <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	sum(ACWOUTCALLS + AUXOUTCALLS) sum(<EXT_CALL_OUT>)

# Agent Group AUX report

The Agent Group AUX report shows the total staffed time, total AUX time, and AUX time for each reason code for all agents in an agent group.

## Things to know about this report

Here are some things you need to know about this report:

- The Agent Group AUX report is available in daily, weekly, and monthly versions.
- This report is available for all switch releases. The contents of this report depends upon the switch release for which it is being run.
- The database items for the Agent Group AUX report are stored in the dagent (daily), wagent (weekly), and magent (monthly) tables.
- You must have AUX Reason Codes enabled on the switch for this report to be meaningful.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

## Agent Group AUX report example

The following figure provides an example of an Agent Group AUX report:

Agent Group AUX Daily - Group1													
Report Edit Format Tools Options Help													
Date: 3/27/98													
Agent Group: Group1													
Agent Name	Login ID	Staffed Time	AUX Time	Time in 0	Time in 1	Time in 2	Time in 3	Time in 4	Time in 5	Time in 6	Time in 7	Time in 8	Time in 9
Totals		:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00
agent1	50001	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00
agent2	50002	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00
agent3	50003	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00
agent4	50004	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00
agent5	50005	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00
agent6	50006	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00	:00:00

## Agent Group AUX report description

The following table describes the report fields:

Field	Description	Database item, calculation, or <calculation name>
Date, Week Starting, or Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Date	The day for which the report was run (selected in the report input window).	ROW_DATE
Agent Group	The name of the group of agents. You can make this selection in the report input window.	No database item or calculation.
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Agent	The name or login ID of the agent.	syn(LOGID)
Login ID	The name or login ID of the agent.	LOGID
Staffed Time	The total time that the agents were logged in (staffed) for the specified time period in any split/skill. This does not include time the link was down.	sum(TI_STAFFTIME)
AUX Time	The total time that the agents spent in AUX work in all splits/skills for the specified time period.	sum(TI_AUXTIME)
Time in 0	The time that the agent spent in AUX with the reason code of 0 (zero). This is the time in the system AUX for the switches using AUX reason codes. It is the same as TI_AUXTIME for switches not using AUX reason codes.	sum(TI_AUXTIME0)
Time in 1...9	The time that the agent spent in AUX with each of the reason codes 1-9.	sum(TI_AUXTIME1)... sum(TI_AUXTIME9)

# Agent Group Summary report

The Agent Group Summary report summarizes the daily activities of every agent within a specific group. Agents in a group may share common characteristics, such as being newly hired or top performers, or they may simply be part of a more manageable subdivision of a skill. You can use this report to compare individuals within a group. This report lists the totals for each agent in the group summed over all splits/skills that the agent was logged into during the time period covered in the report. This report also contains information on the overall occupancy of the selected agent group, expressed as a percentage, both with and without ACW included.

## Things to know about this report

Here are some things you need to know about this report:

- The Agent Group Summary report is available in daily, weekly, and monthly versions.
- The database items for the Agent Group Summary report are stored in the dagent (daily), wagent (weekly), and magent (monthly) tables.
- This report uses the Agent report input window. Select an agent group that you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

## Agent Group Summary report example

The following figure provides an example of an Agent Group Summary report:

Date: 3/27/98 Agent Group: Group1														
Agent Name	ACD Calls	Avg ACD Time	Avg ACW Time	Extn In Calls	Avg Extn In Time	Extn Out Calls	Avg Extn Out Time	ACD Time	ACW Time	Agent Ring Time	Other Time	AUX Time	Avail Time	Staffed Time
Totals	66	:13	:10	0		0		:13:49	:11:05	:00:37	:00:01	:00:00	*****	*****
agent1	11	:12	:10	0		0		:02:17	:01:47	:00:06	:00:00	:00:00	*****	*****
agent2	11	:12	:10	0		0		:02:13	:01:54	:00:06	:00:00	:00:00	*****	*****
agent3	11	:13	:08	0		0		:02:26	:01:32	:00:04	:00:00	:00:00	*****	*****
agent4	11	:12	:11	0		0		:02:12	:01:57	:00:07	:00:00	:00:00	*****	*****
agent5	11	:13	:11	0		0		:02:24	:02:03	:00:08	:00:00	:00:00	*****	*****
agent6	11	:12	:10	0		0		:02:17	:01:52	:00:06	:00:01	:00:00	*****	*****



## Agent Group Summary report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, or Month Starting	The day, week, or month that the report was run (selected in the report input window).	ROW_DATE
Agent Group	The name of the group of agents. You can make this selection in the report input window.	No database item or calculation.
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Agent Name	The name or login ID of the agent.	syn(LOGID)
ACD Calls	The number of split/skill and direct agent ACD calls that were answered by the agent that completed during the interval. This total also includes O_ACDCALLS if you have the Outgoing Call Management application of ASAI. (O_ACDCALLS is the number of ACDCALLS that were placed by an adjunct [predictive dialing].)	sum(ACDCALLS + DA_ACDCALLS), sum<TOTAL_ACDCALLS>
Avg ACD Time	The average time that the agent spent talking on ACD calls (including direct agent calls) that completed during the period covered.	sum(TOTAL_ACDTIME)/ sum (TOTAL_ACDCALLS), <AVG_AGENT_TALK_SUM>
Avg ACW Time	The average time that the agent spent in ACW for ACD calls during the period covered. This includes direct agent call activities.	sum(TOTAL_ACWTIME)/ sum(TOTAL_ACDCALLS), <AVG_AGENT_ACW_SUM>

Report heading	Description	Database item, calculation, or <calculation name>
% Agent Occup w/ACW	The overall occupancy of the selected agent group, expressed as a percent, and including the group's time in after call work.	$- \frac{100 * (\text{sum}[\text{I\_RINGTIME} + \text{I\_ACD\_TIME} + \text{I\_ACD\_OTHER\_TIME} + \text{I\_ACD\_AUX\_OUT\_TIME} + \text{I\_ACD\_AUX\_IN\_TIME} + \text{I\_ACW\_TIME}])}{(\text{sum}[\text{TI\_STAFF\_TIME} - \text{TI\_AUX\_TIME} + \text{I\_ACD\_AUX\_OUT\_TIME} + \text{I\_ACD\_AUX\_IN\_TIME}])}$
% Agent Occup w/o ACW	The overall occupancy of the selected agent group, expressed as a percent, not including the group's time in after call work.	$- \frac{100 * (\text{sum}[\text{I\_RINGTIME} + \text{I\_ACD\_TIME} + \text{I\_ACD\_OTHER\_TIME} + \text{I\_ACD\_AUX\_OUT\_TIME} + \text{I\_ACD\_AUX\_IN\_TIME}])}{(\text{sum}[\text{TI\_STAFF\_TIME} - \text{TI\_AUX\_TIME} + \text{I\_ACD\_AUX\_OUT\_TIME} + \text{I\_ACD\_AUX\_IN\_TIME}])}$
Extn In Calls	<p>The number of inbound extension calls that were completed by the agent during the period covered.</p> <p>This includes calls received while the agent was in the following work modes:</p> <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	$\text{sumACWINCALLS} + \text{AUXINCALLS}, \text{sum} <\text{EXT\_CALL\_IN}>$
Avg Extn In Time	The average time of the agent's inbound extension calls.	$\frac{\text{sumACWIN\_TIME} + \text{AUXIN\_TIME}}{\text{sumACWINCALLS} + \text{AUXINCALLS}}, <\text{AVG\_TALK\_TIME\_IN\_SUM}>$

Report heading	Description	Database item, calculation, or <calculation name>
Extn Out Calls	<p>The number of outbound extension calls that were completed by the agent during the period covered.</p> <p>This includes calls originated by the agent while the agent was in the following work modes:</p> <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	<p>sum(ACWOUTCALLS + AUXOUTCALLS), sum&lt;EXT_CALL_OUT&gt;</p>
Avg Extn Out Time	<p>The average length of the agent's outbound extension calls.</p>	<p>sum(ACWOUTTIME+ AUXOUTTIME) / sum(ACWOUTCALLS + AUXOUTCALLS), &lt;AVG_TALK_TIM_OUT_SUM&gt;</p>
ACD Time	<p>The total time that the agent spent talking on all ACD calls during the time period.</p>	<p>sum(I_ACDTIME + I_DA_ACDTIME), sum(&lt;TOTAL_I_ACDTIME&gt;)</p>
ACW Time	<p>The total time that the agent spent in ACW for split/skill and direct agent ACD calls, as well as time in ACW not associated with a call. Includes time on extension calls.</p>	<p>sum(I_ACWTIME + I_DA_ACWTIME) sum(&lt;TOTAL_I_ACWTIME&gt;)</p>
Agent Ring Time	<p>The total time that the agent spent with split/skill and direct agent ACD calls ringing.</p>	<p>sum(_RINGTIME)</p>

Report heading	Description	Database item, calculation, or <calculation name>
Other Time	<p>The time that the agent spent doing other work in all splits/skills.</p> <p>Agents are doing other work while in Auto-in or Manual-In if they:</p> <ul style="list-style-type: none"> <li>● Put any call on hold while not doing any other activity</li> <li>● Dial to place a call or to activate a feature</li> <li>● Have a personal call ringing with no other activity</li> </ul> <p>Agent positions show up as OTHER directly after the link to the switch comes up and directly after the agents log in before the CMS is notified of the agent's work state.</p>	sum(TI_OTHERTIME)
AUX Time	The total time that the agents spent in AUX work in all splits/skills or on AUXIN/AUXOUT calls for the specified time period.	sum(TI_AUXTIME)
Avail Time	The total time that the agent spent waiting for an ACD call in any split/skill.	sum(TI_AVAILTIME)
Staffed Time	The total time that the agents were logged in (staffed) for the specified time period in any split/skill. This does not include time the link was down.	sum(TI_STAFFTIME)

## Agent Inbound/Outbound report

The Agent Inbound/Outbound Call report is a detailed breakdown of the inbound and outbound calls handled by an agent. The report sums the total over all the splits or skills the agent was logged into for the specific period covered.

### Things to know about this report

Here are some things you need to know about this report:

- This report is available in interval, daily, weekly, and monthly versions.
- The database items for the Agent Inbound/Outbound report are stored in the hagent (interval), dagent (daily), wagent (weekly), and magent (monthly) tables.
- You must have the Outgoing Call Management application of ASAI for data to appear in the Outbound ACD columns.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

### Agent Inbound/Outbound report example

The following figure provides an example of an Agent Inbound/Outbound report:

Agent In/Outbound Daily - agent12														
Agent: agent12														
Date	Inbound ACD Calls	Avg Inbound ACD Time	Avg ACW Time (Inbound ACD)	Outbound ACD Calls	Avg Outbound ACD Time	Avg ACW Time (Outbound ACD)	Extn In Calls	Avg Extn In Time	Extn Out Calls	Avg Extn Out Time	External Extn Out Calls	Avg External Extn Out Time	Assists	Trans Out
Totals	14	:12	:11	0			0		0		0		0	0
3/27/98	11	:11	:11	0			0		0		0		0	0
3/28/98	3	:13	:13	0			0		0		0		0	0

## Agent Inbound/Outbound report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Agent	The name or login ID of the agent. You can make this selection in the report input window.	syn(LOGID)
ACD	The ACD name or number for which the data was collected.	sum(ACD)
Time (interval reports only)	The intrahour intervals for which the report shows data. You can make these selections in the report input window.	STARTTIME, STARTTIME + INTRVL
Date, Week Starting, or Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Inbound ACD Calls	The total number of all inbound ACD calls answered by this agent that completed during the specified time period.	(sum(ACDCALLS + DA_ACDCALLS - O_ACDCALLS)), <INBOUND_ACDCALLS>
Avg Inbound ACD Time	The average length of all inbound ACD calls answered by this agent that completed during the specified time period.	sum(ACDTIME+ DA_ACDTIME- O_ACDTIME)/sum(ACDCALLS+ DA_ACDCALLS- O_ACDCALLS)
Avg ACW Time (Inbound ACD)	The average length of all ACW sessions by this agent for inbound ACD calls completed during the specified time period. This includes direct agent call activities.	sum(ACWTIME + DA_ACWTIME - O_ACWTIME)/ sum(ACDCALLS+ DA_ACDCALLS- OACDCALLS)
Outbound ACD Calls	The total number of all outbound ACD calls for this agent that completed during the specified time period.	sum(O_ACDCALLS)
Avg Outbound ACD Time	The average length of all outbound ACD calls for this agent that completed during the specified time period.	sum(O_ACDTIME) / sum(O_ACDCALLS)

Report heading	Description	Database item, calculation, or <calculation name>
Avg ACW Time (Outbound ACD)	The average length of all ACW sessions by this agent for outbound ACD calls that completed during the specified time period. This includes direct agent call activities.	$\text{sum}(\text{O\_ACWTIME}) / \text{sum}(\text{O\_ACDCALLS})$
Extn In Calls	<p>The number of inbound extension calls that were completed by the agent during the period covered.</p> <p>This includes calls received while the agent was in the following work modes:</p> <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	$\text{sum}(\text{ACWINCALLS} + \text{AUXINCALLS}),$ $\text{sum}\langle \text{EXT\_CALL\_IN} \rangle$
Avg Extn In Time	The average length of this agent's inbound extension calls.	$\text{sum}((\text{ACWINTIME} + \text{AUXINTIME}) / \text{sum}(\text{ACWINCALLS} + \text{AUXINCALLS}))$
Extn Out Calls	<p>The number of outbound extension calls that were completed by the agent during the period covered.</p> <p>This includes calls originated by the agent while the agent was in the following work modes:</p> <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	$\text{sum}(\text{ACWOUTCALLS} + \text{AUXOUTCALLS}),$ $\text{sum}\langle \text{EXT\_CALL\_OUT} \rangle$
Avg Extn Out Time	The average length of this agent's outbound extension calls.	$\text{sum}(\text{ACWOUTTIME} + \text{AUXOUTTIME}) / \text{sum}(\text{ACWOUTCALLS} + \text{AUXOUTCALLS})$

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
External Calls Extn Out	The number of outbound extension calls that were made by this agent to a location outside the switch during ACW sessions and AUX work. (Does not include DA_ACWOFFCALLS.)	sum(ACWOUTOFFCALLS + AUXOUTOFFCALLS)
Avg External Extn Out Time	The average length of this agent's calls to a location outside the switch during ACW sessions or AUX work.	sum(ACWOUTOFFTIME + AUXOUTOFFTIME)/ sum(ACWOUTOFFCALLS + AUXOUTOFFCALLS)
Assists	The number of calls that were referred to the supervisor by this agent during the specified time period.	sum(ASSISTS)
Trans Out	The number of calls that were transferred by this agent to another destination during the specified time period.	sum(TRANSFERRED)



# Agent Login/Logout (Skill) report

The Agent Login/Logout (Skill) report shows the times that agents in a given skill logged in and logged out, the reason codes associated with the logout (if there is one), and the skills with which the agents logged in and out.

## Things to know about this report

---

If you have a switch with the EAS feature activated, you will see the report displayed in this section. Here are some things to know about this report:

- This new report provides logout reason codes.
- This new report shows up to 15 skills.
- This new report can be customized to show more or fewer skills and to add the skill levels directly on the CMS server.
- The Login/Logout (Skill) report is available in daily version only.
- The database items for the Agent Group Summary report are stored in the `haglog` table.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

Agent Login/Logout (Skill) report example

The following figure provides an example of an Agent Login/Logout (Skill) report:

Agent Login/Logout (Skill) - s511												
Report Edit Format Tools Options Help												
Date: 2/19/98												
Skill: s511												
Agent Name	Extn	Login Time	Logout Time	Logout Date	Logout Reason	Skill 1	Skill 2	Skill 3	Skill 4	Skill 5	Skill 6	Skill 7
44461	42151	7:10AM	4:10PM	2/19/98	IO	510	511	512	513	515		
44462	42152	7:10AM	4:12PM	2/19/98	IO	510	511	512	513	515		
44463	42153	7:10AM	4:00PM	2/19/98	IO	510	511	512	513	515		
44464	42154	7:10AM	4:15PM	2/19/98	IO	510	511	512	513	515		
44465	42155	7:10AM	4:10PM	2/19/98	IO	510	511	512	513	515		
44466	42156	7:10AM	4:30PM	2/19/98	IO	510	511	512	513	515		
44467	42157	7:10AM	4:12PM	2/19/98	IO	510	511	512	513	515		
44468	42158	7:10AM	4:15PM	2/19/98	IO	510	511	512	513	515		
44471	42161	7:10AM	4:00PM	2/19/98	IO	511	512	513	514	515		
44472	42162	7:10AM	4:28PM	2/19/98	IO	511	512	513	514	515		
44473	42163	7:10AM	4:20PM	2/19/98	IO	511	512	513	514	515		
44474	42164	7:10AM	4:15PM	2/19/98	IO	511	512	513	514	515		
44475	42165	7:10AM	4:10PM	2/19/98	IO	511	512	513	514	515		
44476	42166	7:10AM	4:12PM	2/19/98	IO	511	512	513	514	515		
44477	42167	7:10AM	4:30PM	2/19/98	IO	511	512	513	514	515		
44478	42168	7:10AM	4:15PM	2/19/98	IO	511	512	513	514	515		
Double Click To Run Format Table												
Bison36vpe												

Agent Login/Logout (Skill) report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date	The date for which the report was run. The report shows data for agents who logged in on this date.	ROW_DATE
Skill	The name or number of the skill (selected in the report input window).	syn(SPLIT)
Extn	The extension where the agent logged in.	EXTN
Login Time	The time that the agent logged in with the given set of skills.	LOGIN

Report heading	Description	Database item, calculation, or <calculation name>
Logout Time	The time that the agent logged out or was logged out from the given set of skills.	LOGOUT
Logout Date	The date that the agent logged out from the given set of skills.	LOGOUT_DATE
Logout Reason	The reason for logging out.	LOGOUTREASON
Skills 1–15	The first 15 skills with which the agent logged in.	SPLIT, LOGONSKILL2-15

# Agent Login/Logout (Split) report

The Agent Split Login/Logout report shows the agent login and logout times for agents in a split on a specified day.

## Things to know about this report

Here are some things to know about this report:

- This report is available in the daily version only.
- The database items for the Agent Login/Logout (Split) report are stored in the haglog table.
- This report appears for switches without EAS.
- This report accepts split numbers from 1-600 when the switch is a more recent version.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

## Agent Login/Logout (Split) report example

The following figure provides an example of an Agent Login/Logout (Split) report:

Agent Split Login/Logout - s1				
Report Edit Format Tools Options Help				
Date: 2/19/98				
Split: s1				
Agent Name	Extn	Login Time	Logout Time	Logout Date
44461	42151	7:10AM	4:10PM	2/19/98
44462	42152	7:10AM	4:12PM	2/19/98
44463	42153	7:10AM	4:00PM	2/19/98
44464	42154	7:10AM	4:15PM	2/19/98
44465	42155	7:10AM	4:10PM	2/19/98
44466	42156	7:10AM	4:30PM	2/19/98
44467	42157	7:10AM	4:12PM	2/19/98
44468	42158	7:10AM	4:15PM	2/19/98
44471	42161	7:10AM	4:00PM	2/19/98
44472	42162	7:10AM	4:28PM	2/19/98
44473	42163	7:10AM	4:20PM	2/19/98
44474	42164	7:10AM	4:15PM	2/19/98
44475	42165	7:10AM	4:10PM	2/19/98
44476	42166	7:10AM	4:12PM	2/19/98
44477	42167	7:10AM	4:30PM	2/19/98
44478	42168	7:10AM	4:15PM	2/19/98

Double Click To Run Format Table Jaeger1G32

## Agent Login/Logout (Split) report description

The following table describes the report fields:

Field	Description	Database item, calculation, or <calculation name>
Date	The day for which the report shows data. You can make these selections in the report input window.	ROW_DATE
Split	The name or number of the split (selected in the report input window).	syn(SPLIT)
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Agent Name	The name or login ID of the agent.	syn(LOGID)
Extn	The measured extension where the agent logged in.	EXTN
Login Time	The time that the agent logged into this split.	LOGIN
Logout Time	The time that the agent logged out of this split.	LOGOUT
Logout Date	The date that the agent logged out of this split.	LOGOUT_DATE

# Agent Split/Skill report

The Agent Split/Skill report shows an individual agent’s performance by split or skill.

## Things to know about this report

Here are some things to know about this report:

- The Agent Split/Skill report is available in interval, daily, weekly, and monthly versions.
- The database items for the Agent Split/Skill report are stored in the hagent (interval), dagent (daily), wagent (weekly), and magent (monthly) tables.
- Each row in the report shows the total for the specified time for a particular split/skill the agent was logged into. However, the Totals row shows the totals over the day for all splits or skills for this agent.
- Talk times are shown as totals, not as averages.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

## Agent Split/Skill report example

The following figure provides an example of an Agent Split/Skill report:

Agent: agent12												
Date	Split/Skill	ACD Calls	ACD Time	ACW Time	Extn In Calls	Extn In Time	Extn Out Calls	Extn Out Time	Assists	Held Calls	Hold Time	Trans Out
Totals		14	:02:45	:02:39	0	:00:00	0	:00:00	0	0	:00:00	0
3/27/98	Skill1	11	:02:05	:02:01	0	:00:00	0	:00:00	0	0	:00:00	0
3/27/98	Skill2	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
3/27/98	Skill3	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
3/28/98	Skill1	3	:00:40	:00:38	0	:00:00	0	:00:00	0	0	:00:00	0
3/28/98	Skill2	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0
3/28/98	Skill3	0	:00:00	:00:00	0	:00:00	0	:00:00	0	0	:00:00	0

## Agent Split/Skill report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, or Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Agent	The name or login ID of the agent. You can make this selection in the report input window.	syn(LOGID)
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Time (for interval reports only)	The intrahour intervals for which the report shows data. You can make these selections in the report input window.	STARTTIME, STARTTIME + INTRVL
Split/Skill	The name or number of the splits/skills that the agent logged into during the specified time period and for which data are shown.	syn(SPLIT)
ACD Calls	The number of split/skill and direct agent ACD calls that were answered by the agent. This total also includes outbound ACD calls (O_ACDCALLS) if you have the Outgoing Call Management application on ASAI. (O_ACDCALLS is the number of ACDCALLS that were placed by an adjunct [predictive dialing].)	(ACDCALLS+ DA_ACDCALLS), <TOTAL ACDCALLS>
ACD Time	The total time an agent talked on split/skill and direct agent ACD calls for the split/skill.	(I_ACDCALLTIME+ I_DA_ACDCALLTIME), <TOTAL I_ACDCALLTIME>
ACW Time	The total time that the agent spent in ACW associated with split/skill and direct agent ACD calls and ACW not associated with a call during the report interval.	(I_ACWTIME + I_DA_ACWTIME), <TOTAL_ACWTIME>

Report heading	Description	Database item, calculation, or <calculation name>
Extn In Calls	<p>The number of inbound extension calls that were completed by the agent during the period covered.</p> <p>This includes calls received while the agent was in the following work modes:</p> <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	ACWINCALLS+ AUXINCALLS, <EXT_CALL_IN>
Extn In Time	The total time that the agent spent talking on inbound extension calls during the report period.	I_ACWINTIME+ I_AUXINTIME, <EXT_IN_TIME>
Extn Out Calls	<p>The number of outbound extension calls that were completed by the agent during the period covered.</p> <p>This includes calls originated by the agent while the agent was in the following work modes:</p> <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	ACWOUTCALLS + AUXOUTCALLS, <EXT_CALL_OUT>
Extn Out Time	The total time that the agent spent on outbound extension calls during the report period.	I_ACWOUTTIME + I_AUXOUTTIME, <EXT_OUT_TIME>
Assists	The number of times that the split/skill supervisor was called by the agent who was on a split/skill or a direct agent ACD call or in call-related ACW.	ASSISTS
Held Calls	The number of calls that the agent placed on hold. This is all calls the agent put on hold.	HOLDCALLS



Report heading	Description	Database item, calculation, or <calculation name>
Total Hold Time	The total time that calls were on hold for this agent. This includes all callers.	HOLDTIME
Trans Out	The number of times that an agent completed a transfer (any call transferred).	TRANSFERRED

# Agent Summary report

## Overview

The Agent Summary report shows the activities and performance of an individual agent for all splits or skills of which the agent is a member. It represents the totals over the specified time period for all splits or skills the agent was logged into. This report also includes information on agent occupancy, expressed as a percentage of total work time, both with and without ACW.

## Things to know about this report

Here are some things to know about this report:

- The Agent Summary report is available in interval, daily, weekly, and monthly versions.
- The database items for the Agent Summary report are stored in the hagent (interval), dagent (daily), wagent (weekly), and magent (monthly) tables.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

## Agent Summary report example

The following figure provides an example of an Agent Summary report:

Summary Daily - Georgia Gillian																
Agent: Georgia Gillian																
ACD Calls	Avg ACD Time	Avg ACW Time	% Agent Occup ACW	% Agent Occup w/o ACW	Extn In Calls	Avg Extn In Time	Extn Out Calls	Avg Extn Out Time	ACD Time	ACW Time	Agent Ring Time	Other Time	AUX Time	Avail Time	Staffed Time	Trans Out
5718	:17	:00	77	77	0		0		26:27:04	:00:00	1:34:40	:01:51	:00:12	8:17:28	36:21:15	0
1743	:10	:00	41	41	0		0		4:43:01	:00:00	:24:32	:01:35	:00:08	7:16:25	12:25:41	0
3975	:20	:00	96	96	0		0		21:44:03	:00:00	1:10:08	:00:16	:00:04	1:01:03	23:55:34	0

## Agent Summary report description

The following table describes the report fields:

Field	Description	Database item, calculation, or <calculation name>
Date, Week Starting, or Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Agent	The name or login ID of the agent. You can make this selection in the report input window.	syn(LOGID)
Time (for interval reports only)	The intrahour intervals for which the report shows data. You can make these selections in the report input window. The time displays in hh:mm:ss (hour/minute/second) format.	STARTTIME, STARTTIME + INTRVL
ACD Calls	The number of ACD calls and direct agent calls that were answered by the agent. This total also includes O_ACDCALLS if you have the Outgoing Call Management application of ASAI. (O_ACDCALLS is the number of ACDCALLS that were placed by an adjunct [predictive dialing].)	sum(ACDCALLS + DA_ACDCALLS), sum(<TOTAL_ACDCALLS>)
Avg ACD Time	The average length of this agent's ACD calls (including direct agent calls) during the period covered.	sum(TOTAL_ACDTIME)/sum(TOTAL_ACDCALLS), <AVG_AGENT_TALK_SUM>
Avg ACW Time	The average length of After Call Work (ACW) sessions for this agent. This includes direct agent call activities.	sum(TOTAL_ACWTIME)/sum(TOTAL_ACDCALLS), <AVG_AGENT_ACW_SUM>
% Agent Occup w/ACW	The percentage of agent occupancy in which the agent's time in after call work is considered as work time.	100 * (sum[I_RINGTIME + I_ACDTIME + I_ACDOTHERTIME + I_ACDAUX_OUTTIME + I_ACDAUXINTIME + I_ACWTIME]) / (sum[TI_STAFFTIME – TI_AUXTIME + I_ACDAUX_OUTTIME + I_ACDAUXINTIME])

Field	Description	Database item, calculation, or <calculation name>
% Agent Occup w/o ACW	The percentage of agent occupancy in which the agent's time in after call work time is considered idle.	$100 * (\text{sum}[\text{I\_RINGTIME} + \text{I\_ACD\_TIME} + \text{I\_ACD\_OTHER\_TIME} + \text{I\_ACD\_AUX\_OUT\_TIME} + \text{I\_ACD\_AUX\_INT\_TIME}]) / (\text{sum}[\text{TI\_STAFF\_TIME} - \text{TI\_AUX\_TIME} + \text{I\_ACD\_AUX\_OUT\_TIME} + \text{I\_ACD\_AUX\_INT\_TIME}])$
Extn In Calls	The number of inbound extension calls that were completed by the agent during the period covered. This includes calls received while the agent was in the following work modes: <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	$\text{sum}(\text{ACWINCALLS} + \text{EXT\_CALL\_IN})$
Avg Extn In Time	The average length of this agent's inbound extension calls.	$\text{sum}(\text{ACWINTIME} + \text{AUXINTIME}) / \text{sum}(\text{ACWINCALLS} + \text{AUXINCALLS}),$ <AVG_TALK_TIME_IN_SUM>
Extn Out Calls	The number of outbound extension calls that were placed by the agent during the period covered. This includes calls originated by the agent while the agent was in the following work modes: <ul style="list-style-type: none"> <li>● Auto-In or Manual-In</li> <li>● ACW mode for ACD calls</li> <li>● ACW mode that was not associated with a call</li> <li>● AUX work mode</li> </ul>	$\text{sum}(\text{ACWOUTCALLS} + \text{AUXOUTCALLS})$ $\text{sum}(\text{EXT\_CALL\_OUT})$
Avg Extn Out Time	The average length of this agent's outbound extension calls.	$\text{sum}(\text{ACWOUTTIME} + \text{AUXOUTTIME}) / \text{sum}(\text{ACWOUTCALLS} + \text{AUXOUTCALLS}),$ <AVG_TALK_TIME_OUT_SUM>

Field	Description	Database item, calculation, or <calculation name>
ACD Time	Time this agent spent on ACD calls (including direct agent calls) during the report interval.	sum(I_ACDTIME + I_DA_ACDTIME), sum(<TOTAL_I_ACDTIME>)
ACW Time	The amount of time the agent spent working on call-related activities (that is, ACW activities). This includes direct agent ACW activities during the report interval.	sum(I_ACWTIME + I_DA_ACWTIME), sum(<TOTAL_I_ACWTIME>)
Agent Ring Time	The time the agent had split/skill and direct agent ACD calls ringing. If the agent answers or makes another call instead of answering the ringing call, the I_RINGTIME is stopped. This applies only to switches with ring state.	sum(I_RINGTIME)
Other Time	The time the agent spent doing other work in all splits/skills. For switches, agents are doing other work while in Auto-In or Manual-In if they: <ul style="list-style-type: none"> <li>● Put any call on hold while not doing any other activity</li> <li>● Dial to place a call or to activate a feature</li> <li>● Have a personal call ringing with no other activity</li> </ul>	sum(TI_OTHERTIME)
AUX Time	The total time that the agents spent in AUX work in all splits/skills or on AUXIN/AUXOUT calls for the specified time period.	sum(TI_AUXTIME)
Avail Time	The total time that the agents were available to take ACD calls for any split/skill during the specified time period.	sum(TI_AVAILTIME)
Staffed Time	The total time the agents were logged in (staffed) for the specified time period in any split/skill. This does not include time the link was down.	sum(TI_STAFFTIME)

## Historical reports

Field	Description	Database item, calculation, or <calculation name>
Trans Out	The number of calls transferred by this agent to another destination. For switches, this records all calls that were transferred.	sum(TRANSFERRED)
Held Calls	The number of calls the agent put on hold. For switches, this is all calls the agent put on hold.	sum(HOLDCALLS)
Avg Hold Time	The average length of time calls were on hold.	sum(HOLDTIME) / sum(HOLDCALLS), <AVG_HOLD_TIME_SUM>

## Agent Trace by Location report

The Agent Trace by Location report lists each agent activity and the time it occurred, by agent location ID. This information could be useful when evaluating how well agents are using their time.

### Things to know about this report

Here are some things to know about this report:

- Refer to [Agent and trunk states](#) on page 31 for a list of the agent states.
- The database items for the Agent Trace by Location report are stored in the ag\_actv table.
- This report uses the Agent report input window. Select an agent who you want to view on the report. See [Agent report input fields](#) on page 317 for more information.

### Agent Trace by Location report example

The following figure provides an example of an Agent Trace by Location report:

Date	Time	Seq	Location ID	Logout Reason	AUX Reason	State	Split/Skill	Time	Hold	Rec	Malicious Call	Rls
3/31/98	4:15:09PM	1	02		2	RINGING	Gold					
3/31/98	4:15:09PM	1	02		6	AVAIL	Gold					
3/31/98	4:15:09PM	1	02		6	AVAIL	Gold					
3/31/98	4:15:09PM	1	02		2	RINGING	Gold					
3/31/98	4:15:09PM	1	02		4	ACD	Gold					

## Agent Trace by Location report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Agent	The name or login ID of the agent. You can make this selection in the report input window.	syn(LOGID)
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Date	The day that the event (state change) was recorded.	ROW_DATE
Time	The time of day that the event started.	EVENT_TIME
Seq	The sequence number of the event. Agent events which occur in the same second are assigned increasing sequence numbers, so the order in which they occurred can be determined.	WMODE_SEQ
Location ID	The location IDs associated with the agent. This ID is not associated with the agent personally, but rather with the terminal the agent is logged into. It is also associated with a port network location ID on the switch. If the Agent Site Tracking feature is not available on your system, the field will not display meaningful data. For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.	LOC_ID
Logout Reason	The reason code that the agent entered when logging out. Reason code 0 (zero) indicates that the agent forced a logout without entering a reason code, or the system logged the agent out.	syn(LOGOUTREASON)
AUX Reason	The reason code that the agent entered when changing to AUX work mode. Reason code 0 (zero) indicates that the agent did not enter a reason code, or the system put the agent into AUX work mode.	syn(AUXREASON)



Report heading	Description	Database item, calculation, or <calculation name>
State	The current work state of the agent. An agent can be in any one of the following states: LOGON, LOGOFF, ACDIN, ACDOU, ACW, ACWIN, ACWOUT, AUX, AUXIN, AUXOUT, AVAILABLE, DACDIN, DACDOU, DACW, DACWIN, DACWOUT, or UNKNOWN.	WORKMODE and DIRECTION
Split/Skill	The name or number of the split/skill which the agent logged into or for which the agent handled a call.	syn(SPLIT)
Time	The length of time spent in the state. Shown in minutes and seconds (mm:ss).	DURATION
Hold	The agent put the current call on hold. This is all calls the agent put on hold.	CALLER_HOLD
Rec	This indicates whether the agent reconnected to the call (for example, the agent put a call on hold and then retrieved the call from hold).	RECONNECT
Malicious Call	The agent activated malicious call trace.	MCT
Rls	The agent released the ACD call. This is always true for ACD calls the agent transferred or conferenced.	AGT_RELEASED
Calling Party	The identification of the caller. This is the ANI/SID for switches with ISDN ANI delivery. Otherwise, it is the extension or trunk equipment location identifying the originator of the call.	CALLING_PTY
Call Work Code	The call work code that the agent entered for the call.	WORKCODE
Dialed Digits	The digits that the agent dialed to originate a call. Trunk access codes, feature access codes, account and authorization codes are not included.	DIGITS_DIALED
Asst	The agent requested supervisor assistance. This is activated by pressing the ASSIST button.	ASSIST_ACTV

## Historical reports

Report heading	Description	Database item, calculation, or <calculation name>
Conf	The agent activated a conference.	CONFERENCE
Trans Out	The agent transferred the call (all calls transferred).	TRANSFERRED

---

# Other reports

This section describes other reports.

## General information about other reports

### What an other report contains

---

Supervisor other reports give you access to specific information on call records and call work codes.

### Organization of other reports


---

The following list shows how the Call Records and Call Work Code reports are organized in Supervisor:

- [Call Records report](#) on page 365
- [Call Work Code report](#) on page 372

## Other report selector window

The following figure is an example of the Other report selector window. The reports are explained in the same order as listed in the window.

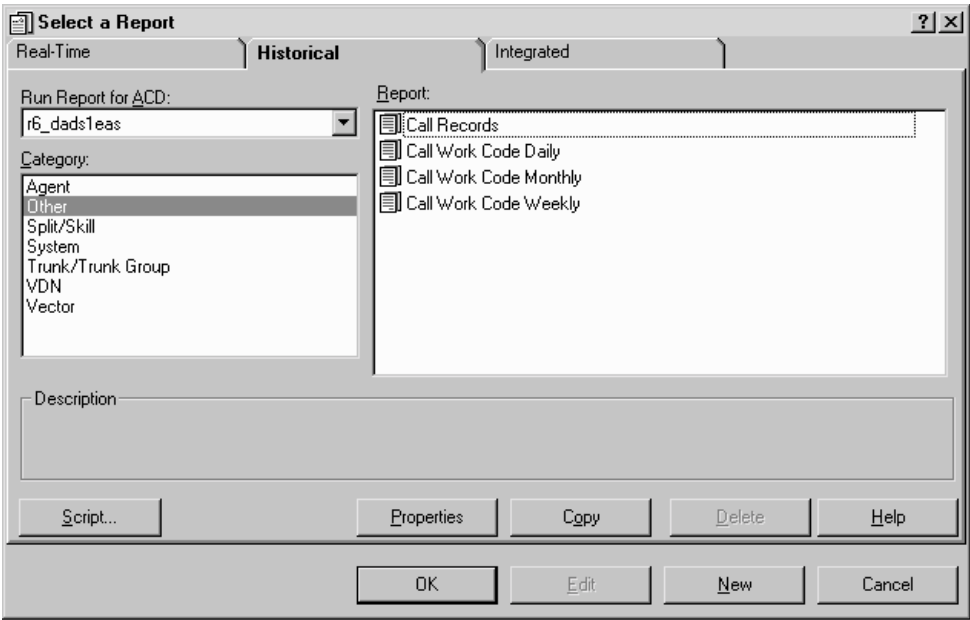

# Call Records report

The Call Records report allows you to view selected information about each call. For example, you might have a caller that complained about being put on hold three times and then transferred. This report gives you this type of information about a call.

## Things to know about this report

---

Here are some things to know about this report:

- Call Records allow you to view information about particular calls. Each call is represented by one or more records, because a new record is created whenever the call is conferenced or transferred. However, all records for a particular call will have the same call ID, so that you know the records represent the same call.
- With call records, the call is tracked up until it is transferred or conferenced. At the point of a conference or transfer, a new call record is generated for the call.
- The standard Call Records report is provided as a model for customized call record reports. Most call record reporting will need to be done from Designer reports tailored to your needs.
- If you are customizing the Historical Call Record report with Report Designer, the Disposition report field will display the numerical values for DISPOSITION, and not the state names. See the Avaya Call Management System Database Items and Calculations document for more information.
- See the Avaya Call Management System Database Items and Calculations document for a complete listing of the call record historical database items.
- Call records are limited to 5000 records.
- To protect the real-time processing on CMS, internal call records can only be collected if your call center's traffic is under 400 calls in 20 minutes.
- The call\_rec table includes many items that are not displayed in the standard report.
- This report gives you information on specific calls. It is based only on the start and stop dates and times that you enter.
- The database items for the Call Records report are stored in the call\_rec table.

## Call Records report input fields

---

The following table describes the fields on the input window. You must fill in the window to run the report.

Field	Definition
Start date	Enter the date from which you want the reporting period to start. The report runs for all calls answered by the ACD from the Start date and Start time through the Stop date and Stop time.
Start time	Enter the time from which you want the reporting period to start. Use any of the following formats: <ul style="list-style-type: none"><li>● AM/PM (for example, 7:30AM or 5:00PM)</li><li>● 24-hour notation (for example, 7:30 or 17:00)</li></ul>
Stop date	Enter the date you want the report to run through. The report will be run for all calls answered by the ACD from the Start date and Start time through the Stop date and Stop time.
Stop time	Enter the time that you want the report to stop. Use any of the following formats: <ul style="list-style-type: none"><li>● AM/PM (for example, 7:30AM or 5:00PM)</li><li>● 24-hour notation (for example, 7:30 or 17:00)</li></ul>
Destination	Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.

## Call Records report example

The following figure provides an example of a Call Records report:

The screenshot shows a window titled "Call Records" with a menu bar (Report, Edit, Format, Tools, Options, Help) and a date filter set to "10/4/99". The table below is a sample of the data displayed.

Call ID	Segment	Date	Start Time	Calling Party	Dialed Number	Disposition	Disposition Time	Split/Skill	Ans Logid	Talk Time	Hold Time	ACW Time	Trans Out	Conf	Assist	Last Call Work Code
12967579	01	3/31/98	4:15:09PM		3035551947			Gold	50001	03:12	00:34	00:08		n	n	4
10928547	01	3/31/98	4:15:11PM		3035557683			Regular	50034	02:15	00:12	00:12		n	n	1
21047019	02	3/31/98	3:21:08PM		3035559807			Gold	50021	04:32	00:45	00:05		n	n	1
46289105	01	3/31/98	3:12:34PM		3035556724			Gold	50012	01:45	00:18	00:15		n	n	2

Double Click To Run Format Table

## Call Records report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
ACD	The number of the ACD that handled this call.	syn(ACD)
Call ID	A unique number assigned to this call and all its segments. Note that in the case of a conference or transfer, when the data for the conference/transfer is recorded, the same call ID will be recorded for all call segments of the conference/transfer. In the case of <b>meet-me</b> conferences, this may result in higher-numbered segments of the call starting before the first segment on the call. Call IDs are not necessarily strictly sequential, but will be unique for calls over a day.	CALLID

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Segment	The number of the call segment. Segment numbers are from 1 up to the number of segments in the call.	SEGMENT
Date	The starting date for the segment.	ROW_DATE
Start Time	The starting time for the segment.	ROW_TIME
Calling Party	The Automatic Number Identification (ANI)/Station Identification (SID) (Generic 3 Version 4 switches or the ECS with ANI delivery), extension or trunk equipment location identifying the originator of the call This field is blank if the trunk is not measured or, for internal calls, if the originating extension is not measured.	CALLING_PTY
Dialed Number	The number the caller dialed. This will be the VDN for inbound vectoring calls and dialed digits for outbound calls. This will be blank for inbound calls without vectoring.	DIALED_NUM



Report heading	Description	Database item, calculation, or <calculation name>
Disposition	<p>Indicates what happened to the call in the call segment. The possibilities are:  1=connected (CONN), 2=answered (ANS), 3=abandoned (ABAN),  4=interflowed (IFLOW), 5=forced busy (FBUSY), 6=forced disconnect (FDISC),  and 7=other (OTHER).</p> <p>A connected call is a non-ACD call to a measured agent for which CMS receives an indication that the call was connected.</p> <p>An answered call is any split/skill or direct agent ACD call for which CMS receives an indication that the call was answered by an agent.</p> <p>An abandoned call is any call for which CMS receives notification that the caller abandoned. This includes calls with talk times shorter than the phantom abandoned call timer.</p> <p>An interflowed call is a call that was redirected to an off-switch destination.</p> <p>Forced busy calls are calls that CMS records as BUSYCALLS for the trunk group that carried them. For switches with vectoring, these are VDN calls that received a forced busy from the busy vector command. For the ECS, calls that receive a busy indication because the split queue was full (or there was no queue) are recorded here.</p> <p>Forced disconnect calls are VDN calls that are disconnected by the switch due to the execution of a disconnect vector command. Forced disconnect calls also include calls disconnected because of the disconnect vector timer or because they reached the end of vector processing without being queued.</p>	DISPOSITION

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Disposition Time	The amount of time the call waited until its disposition (in the vector, in queue, and ringing). For extension calls made directly to agents (not through a VDN), this will always be zero.	DISPTIME
Split/Skill	The number of the split or skill associated with the call at its disposition in this call segment. Calls that were not queued to a split or skill at the time of disposition will have this item set to blank. Calls that were queued to an unmeasured split or skill at the time of disposition will have this item set to zero.	DISPSPLIT
Ans Logid	The login ID of the agent who answered the call in this segment. This field is blank for unmeasured extensions when EAS is not active.	ANSLOGIN
Talk Time	The time an agent spends talking on a call. This does not include the time the caller is on hold.	TALKTIME
Hold Time	The total time the call was put on hold by the answering agent, in seconds, in this call segment. Note that in agent-to-agent calls, Hold Time is accrued for the answering agent if the agent puts the call on hold, but not for the other agent (who continues to accrue talk time). For switches, Hold Time includes all calls held.	ANSHOLDTIME
ACW Time	The time spent, in seconds, in After Call Work (ACW) related to this call by the answering agent in this segment.	ACWTIME
Trans Out	This indicates whether or not the answering agent initiated a transfer on this call segment. Valid values for Trans Out are 0=NO, 1=YES. Trans Out is set for any call transferred.	TRANSFERRED

Report heading	Description	Database item, calculation, or <calculation name>
Conf	This indicates whether or not this call segment represents part of a conference (0= NO, 1=YES).	CONFERENCE
Assist	This indicates if the answering agent in this segment requested supervisor assistance on this call (0= NO, 1=YES).	ASSIST
Last Call Work Code	The last call work code entered by the answering agent in this segment.	LASTCWC

## Call Work Code report

Use the Call Work Code report to track certain call activities of your call center, such as special sale items, complaints, or how many times a customer made a purchase based on a special sales campaign. Agents enter a specific call work code that is associated with a particular call activity when the activity occurs. Those entries are tracked on this report. To produce data in this report, you must have the Call Work Codes feature.

### Things to know about this report

---

Here are some things to know about this report:

- The Call Work Code report is available in daily, weekly, and monthly versions.
- The database items for the Call Work Code reports are stored in the dcwc (daily), wcwc (weekly), and mcwc (monthly) tables.
- The range of call work codes that may be reported on cannot exceed 1000.
- Because call work codes directly affect the amount of storage space required for each file system and the disk space, you must allocate the number of call work codes to be saved by the CMS in the System Setup-Data Storage Allocation window.
- You must identify and specify where you want to store call work code data in the System Setup-Free Space Allocation window.
- You must assign the call work codes for which the CMS collects data in the Call Center Administration-Call Work Codes window.
- Call Work Codes can only be nine or fewer digits in each code if you want to assign names to the codes in the Dictionary.

### Prerequisite system administration

---

If you wish to run this report, you must do the following:

- Allocate the number of call work codes to be saved by CMS in the System Setup-Data Storage Allocation window. See the Avaya Call Management System Administration document for more information.
- Identify and specify where you want to store call work code data in the System Setup-Free Space Allocation window. See the Avaya Call Management System Administration document for more information.
- Assign the call work codes for which CMS collects data in the Call Center Administration-Call Work Codes window. See the Avaya Call Management System Administration document for more information.

## Call Work Code report input fields

---

The following table describes the fields on the input window. You must fill in the window to run the report.

Field	Definition
Call work code(s)	Enter the call work code names or numbers that you want to view in this report.
Date	<p>Enter the date for the day or the start date for the week or the month you would like the report to cover.</p> <ul style="list-style-type: none"> <li>• You can use the month/day/year (for example, 3/21/02).</li> <li>• You can use a minus offset based on today's date (for example, -1 for yesterday).</li> </ul> <p>When you specify a date for a weekly report, that date must correspond to the week start day selected in the System Setup- Storage Intervals window. If the date and day do not match, the message <b>No records found</b> displays in the status line. The month start date must be the first day of the month.</p>
Destination	Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.

Call Work Code report example

The following figure provides an example of a Call Work Code report:

Call Work Code Daily

Report Edit Format Tools Options Help

Date: 3/31/98

Call Work Code	Call Work Code Name	ACD Calls	ACD Time	ACW Time	Avg ACD Time	Avg ACW Time
Totals						
1	Sales	157	10:46:34	00:39:25	04:13	00:15
2	Purchases	198	05:39:28	00:39:58	03:38	00:12
3	Returns	86	07:16:15	00:30:01	05:14	00:21
4	Fraud	21	02:10:47	00:11:12	06:24	00:32

Double Click To Run Format Table

r6\_dads1eas

## Call Work Code report description

---

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
ACD	ACD name or number associated with the call work codes.	syn(ACD)
Call Work Code	Call work code numbers.	CWC
Call Work Code Name	Names associated with the call work code numbers.	syn(CWC)
ACD Calls	Number of times the call work code was entered while agents were on ACD calls or in ACW associated with an ACD call.	ACDCALLS
ACD Time	Total talk time associated with ACDCALLS that have this call work code.	ACDTIME
ACW Time	Total after call work time associated with ACDCALLS with this call work code.	ACWTIME
Avg ACD Time	Average talk time associated with the call work code.	ACDTIME/ ACDCALLS, <AVG_ACD_TALK_TIME>
Avg ACW Time	Average after call work time associated with the call work code.	ACWTIME/ ACDCALLS, <AVG_ACW_TIME>

# Split/Skill reports

This section describes Split/Skill reports.

## General information about Split/Skill reports

### What a Split/Skill report contains

---

Supervisor Split/Skill reports give you access to information on your splits or skills. This information includes looking at the percentage of calls answered within set service levels by split/skill, how many calls were handled by each agent in a split/skill, and summarizing the activity for an entire split/skill.

### Organization of Split/Skill reports

---


The following list shows how the Split/Skill reports are structured in Supervisor:

- [Split/Skill Call Profile report](#) on page 381
- [Split/Skill Graphical ASA report](#) on page 384
- [Split/Skill Graphical Average Positions Staffed report](#) on page 388
- [Split/Skill Graphical ASA Daily report](#) on page 390
- [Split/Skill Graphical Call Profile report](#) on page 393
- [Split/Skill Graphical Multi-ACD Service Level report](#) on page 397
- [Split/Skill Graphical Service Level report](#) on page 402
- [Split/Skill Graphical Skill Overload report](#) on page 405
- [Split/Skill Graphical Time Spent report](#) on page 408
- [Split/Skill Outbound report](#) on page 411
- [Split/Skill report](#) on page 414
- [Split/Skill by Location report](#) on page 420
- [Split/Skill Summary report](#) on page 426



## Split/Skill report selector window

The following figure is an example of the Split/Skill report selector window. The reports are explained in the same order as listed in the window.

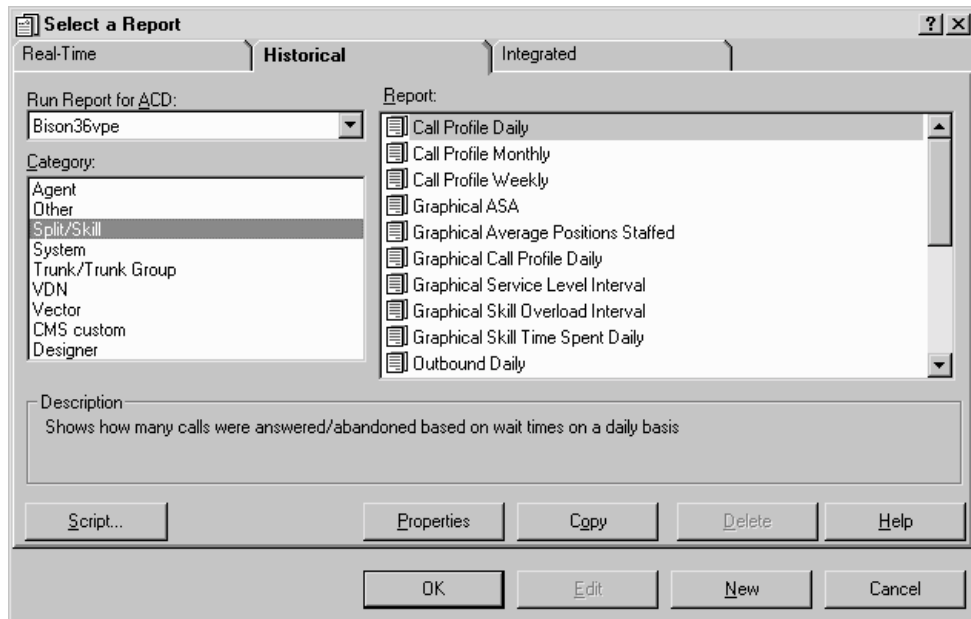

# Split/Skill report selector window and input fields

The reports in this section use the Split/Skill report selector window. Specific input information is included with the reports. You must fill in the report selector window to run the report.

## Split/Skill report input fields

---

The following table describes the input fields on historical Split/Skill report input windows. Not all reports use all fields; refer to information for the specific report you are running to determine what you want to view. For example, you may enter an agent group, agent name, location ID, or split/skill to run the report.

All possible fields on this window are described here:

Field	Definition
Split/Skill	Enter the appropriate split/skill name or number that you want to view in this report. Any names you want to appear on the report must have been previously defined and entered in the Dictionary subsystem.
Date (interval)	Enter the date you would like the report to cover. Use any of the following formats: <ul style="list-style-type: none"> <li>• A month/day/year (for example, 3/21/02)</li> <li>• A minus offset based on today's date (for example, - 1 for yesterday)</li> </ul>
Dates (daily, weekly, monthly)	Enter the dates you would like the report to cover: <ul style="list-style-type: none"> <li>• Daily - enter the days</li> <li>• Weekly - enter the start date for the weeks. When you specify a date for a weekly report, that date must correspond to the week start day selected in the System Setup-Storage Intervals window. If the date and day do not match, the message No records found displays in the status line.</li> <li>• Monthly - enter the first day of the months</li> </ul> Use any of the following formats: <ul style="list-style-type: none"> <li>• A month/day/year (for example, 3/21/02)</li> <li>• A minus offset based on today's date (for example, - 1 for yesterday)</li> <li>• A semicolon (;) to separate individual data entry items (for example, 3/21/02;3/23/02;3/25/02)</li> <li>• A hyphen to designate a range of dates (for example, 3/21/02-3/25/02). For the weekly and monthly versions, the report includes any weeks or months that begin in the range.</li> </ul>
Times (interval)	Enter the time you would like the report to cover. Use any of the following formats: <ul style="list-style-type: none"> <li>• AM/PM (for example, 7:30AM-5:00PM)</li> <li>• Military time (for example, 7:30-17:00)</li> <li>• You can use a minus offset based on today's date (for example, -1 for yesterday).</li> </ul>

Field	Definition
Destination	Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.
Location	Select a location ID for which to run the report. The location ID is an ID number of 1 – 44 digits assigned to a port network location on the switch and the equipment assigned to that port location.  For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.

## Split/Skill Call Profile report

The Split/Skill Call Profile report shows the number of calls answered and abandoned in time increments that you administer. This report also displays your acceptable service level. See the Avaya Call Management System Administration document for both the time increments and acceptable service levels. Since this report shows you how long it takes for calls to be answered or abandoned, you can determine how long a caller is willing to wait for an agent before hanging up. With this information, you can determine the appropriate answering speed required to reduce abandoned calls.


### Things to know about this report

Here are some things to know about this report:

- Calls are displayed in ten columns, with each column representing a progressively longer wait time.
- The Split/Skill Call Profile report is available in daily, weekly, and monthly versions.
- The database items for the Split/Skill Call Profile report are stored in the dsplit (daily), wsplit (weekly), and msplit (monthly) tables.
- This report uses the Split/Skill report input window. Select a split/skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.

### Split/Skill Call Profile report example

The following figure provides an example of a Split/Skill Call Profile report.

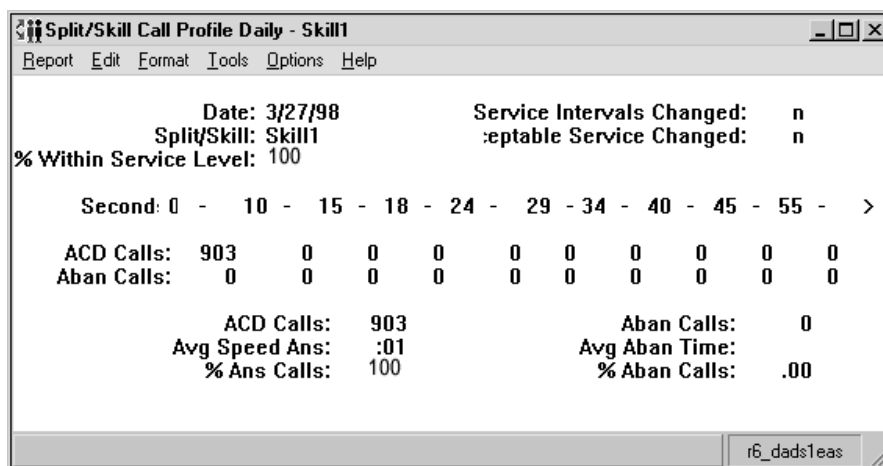

## Split/Skill Call Profile report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
% Within Service Level	The percentage of split/skill ACD calls that were queued to this split/skill and answered within your administered service level.	100*(ACCEPTABLE/ CALLSOFFERED), <PERCENT_SERV_LVL_SPL>
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Service Intervals Changed	A YES appears if you changed your service interval increments during the time period covered by the report. A NO appears if you have not changed your service interval increments. The words displayed for YES or NO represent the values defined in the Dictionary subsystem.	syn(YES_NO)
Acceptable Service Changed	A YES appears if you changed your acceptable service level during the period covered by the report. A NO appears if you have not changed your acceptable service level. The words displayed for YES or NO represent the values defined in the Dictionary subsystem.	syn(YES_NO)
Seconds	The values administered for the service level increments. Each Secs (seconds) interval represents a progressively longer wait time for a call, and each interval can be a different length.	PERIOD1-9

Report heading	Description	Database item, calculation, or <calculation name>
ACD Calls	The number of split/skill ACD calls answered within each service level increment.	ACDCALLS1-10
Aban Calls	The number of split/skill ACD calls that abandoned within each service level increment.	ABNCALLS1-10
ACD Calls	The number of split/skill ACD calls that were queued to this split/skill and answered by an agent for this split/skill. This total also includes O_ACDCALLS if you have the Outgoing Call Management (OCM) application of ASAI. The O_ACDCALLS is the number of ACDCALLS that were placed by an adjunct; this is also referred to as predictive dialing.	ACDCALLS
Avg Speed Ans	The average time the split/skill ACD calls were waiting in queue and ringing before being answered by an agent.	ANSTIME/ ACDCALLS, <AVG_ANSWER_SPEED>
% Ans Calls	The percentage of calls queued to the split/skill that were answered by agents for this split/skill.	100*(ACDCALLS/ CALLSOFFERED), <PERCENT_CALL_ANS>
Aban Calls	The number of ACD calls to the split/skill that disconnected while either waiting in queue (if this was the first split/skill the call was queued to), or while ringing. This total includes calls with talk time less than the phantom abandoned call timer value, if it is set. This total also includes O_ABNCALLS if you have OCM. The O_ABNCALLS is the number of outbound ACD calls that were abandoned by the far end.	ABNCALLS
Avg Aban Time	The average time the split/skill ACD calls were waiting in queue or ringing before abandoning.	ABNTIME/ ABNCALLS, <AVG_ABANDON_TIME>
% Aban Calls	The percentage of calls queued to the split/skill that abandoned before being answered by an agent.	100*(ABNCALLS/ (CALLSOFFERED)), <PERCENT_CALL_ABAN>

## Split/Skill Graphical ASA report

The Split/Skill Graphical ASA (Average Speed of Answer) report shows the average speed of answer for ACD calls answered in each selected split/skill for each selected interval.


Here are some things to know about this report:

- The database items for the Split/Skill Graphical ASA report are stored in the dsplit (current interval) and hsplit (intrahour interval) tables.
- The chart type can be changed. See [Using reports](#) on page 35 for more information.
- This report is only available through the Supervisor interface.
- This report uses the Split/Skill report input window. Select a split/skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.



## Split/Skill Graphical ASA report example

The following figure provides an example of a Split/Skill Graphical ASA report:

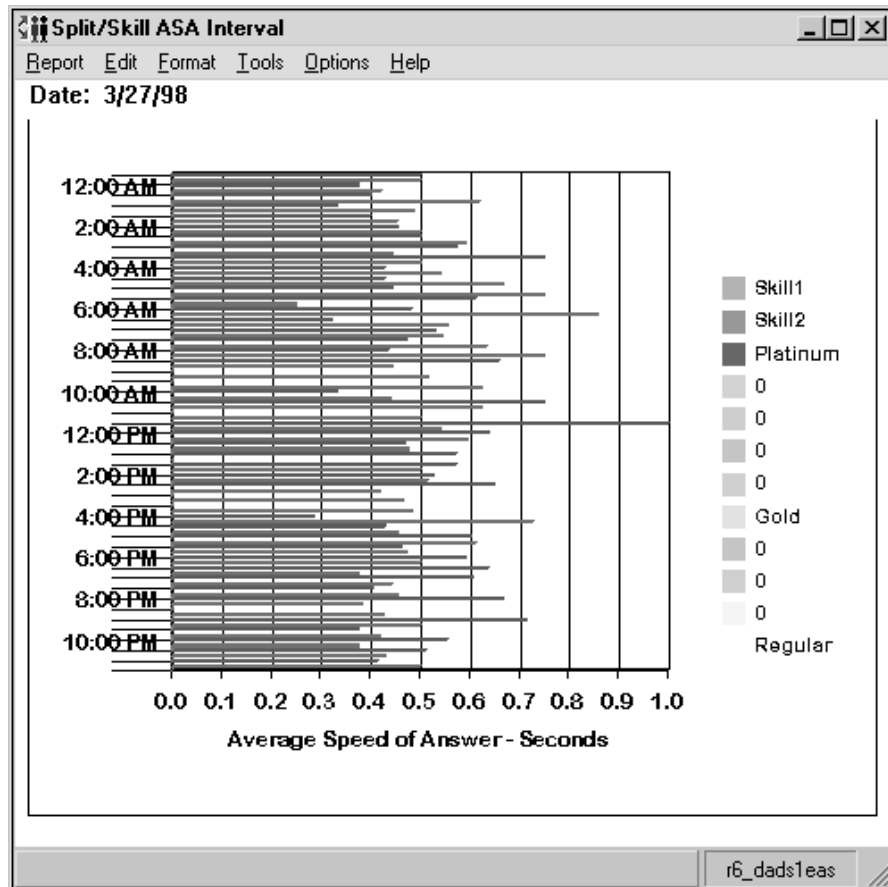

## Split/Skill Graphical ASA report input fields

---

All possible fields on this window are described below:

Field	Definition
Split/Skill	Enter the appropriate split/skill name or number that you want to view in this report. Any names you want to appear on the report must have been previously defined and entered in the Dictionary subsystem.
Date (interval)	Enter the date you would like the report to cover. Use any of the following formats: <ul style="list-style-type: none"> <li>● A month/day/year (for example, 3/21/02)</li> <li>● A minus offset based on today's date (for example, - 1 for yesterday)</li> </ul>
Dates (daily, weekly, monthly)	Enter the dates you would like the report to cover: <ul style="list-style-type: none"> <li>● Daily - enter the days</li> <li>● Weekly - enter the start date for the weeks. When you specify a date for a weekly report, that date must correspond to the week start day selected in the System Setup-Storage Intervals window. If the date and day do not match, the message No records found displays in the status line.</li> <li>● Monthly - enter the first day of the months</li> </ul> Use any of the following formats: <ul style="list-style-type: none"> <li>● A month/day/year (for example, 3/21/02)</li> <li>● A minus offset based on today's date (for example, - 1 for yesterday)</li> <li>● A semicolon (;) to separate individual data entry items (for example, 3/21/02;3/23/02;3/25/02)</li> <li>● A hyphen to designate a range of dates (for example, 3/21/02-3/25/02). For the weekly and monthly versions, the report includes any weeks or months that begin in the range.</li> </ul>

Field	Definition
Times (interval)	Enter the time you would like the report to cover. Use any of the following formats: <ul style="list-style-type: none"> <li>● AM/PM (for example, 7:30AM-5:00PM)</li> <li>● Military time (for example, 7:30-17:00)</li> <li>● You can use a minus offset based on today's date (for example, -1 for yesterday).</li> </ul>
Destination	Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.
Location	Select a location ID for which to run the report. The location ID is an ID number of 1 – 44 digits assigned to a port network location on the switch and the equipment assigned to that port location. For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.

## Split/Skill Graphical ASA report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date	The day for which the report was run (selected in the report input window).	ROWDATE
Start Time (Interval)	The start time of the interval for which the data was collected. (This field displays only for the Interval report.)	STARTTIME
Split/Skill	The name or number of the split/skill you are currently viewing.	syn(SPLIT)
Average Speed of Ans - Seconds	The value in seconds of the average speed of answer for the split/skill during the time period covered in the report.	<AVG_ANSWER_SPEED>

## Split/Skill Graphical Average Positions Staffed report

This report is available for customers who have purchased Avaya Business Advocate and the MultiVantage™ system. This report shows, for a specified skill, the maximum agent positions allocated for the skill, as well as the average positions staffed. This allows call center supervisors to see historically how many agents were counted on for a skill in comparison to how many agents were actually available on the skill.

### Things to know about this report


---

Here are some things to know about this report:

- This report is available only on a switch with EAS. If Avaya Business Advocate is not activated, then the fields on the report that pertain to Avaya Business Advocate will not populate.
- This report is accessed from the historical folder of the report selector window, via the Split/Skill category, under Graphical Average Positions Staffed.
- The report input window allows the user to specify a skill name or number, the time intervals, and the report destination.
- The caption displayed on the report is **Average Positions Staffed - xxx** where xxx is the skill string name specified by the user in the Name Format window.
- The date for which the report is run displays at the top right of the report.
- The primary component of this report is a 2-D vertical bar chart.
- The chart contains the following components:
  - The y-axis of the chart has gradients for the number of agents.
  - The x-axis of the chart displays the specified time intervals.
  - The legend displays **Max Post Allocated** and **Avg Pos Staffed**.
- The database items for the Split/Skill Graphical ASA report are stored in the dsplit (current interval) and hsplit (intrahour interval) tables.
- This report uses the Split/Skill report input window. Select a split/skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.

## Split/Skill Graphical Average Positions Staffed report example

The following figure provides an example of a Split/Skill Graphical Average Positions Staffed report:

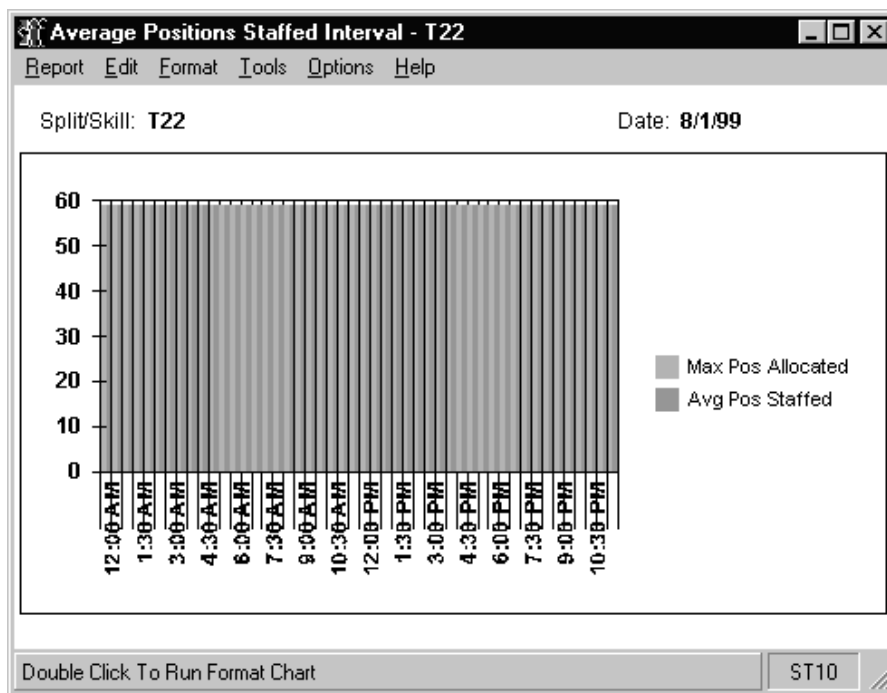

## Split/Skill Graphical Average Positions Staffed report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date	The day for which the report was run (selected in the report input window).	ROWDATE
Split/Skill	The name or number of the split/skill you are currently viewing.	syn(SPLIT)
Max Pos Allocated	The maximum agent positions allocated for this skill.	MAX_DEDICATED_AGT
Avg Pos Staffed	The average positions staffed for this skill.	AVG_EQV_AG_STFD

## Split/Skill Graphical ASA Daily report

The Split/Skill Graphical ASA (Average Speed of Answer) Daily report shows the average speed of answer for ACD calls answered in selected splits/skills for selected days.

### Things to know about this report


---

Here are some things to know about this report:

- The database items for the Split/Skill Graphical ASA Daily report are stored in the dsplit (current interval) tables.
- The chart type can be changed. See [Using reports](#) on page 35, for more information.
- The bottom right of the report contains a status bar that displays the name of the ACD chosen through the report selector dialog box. A legend on the right side of the report shows the names of the selected splits/skills.
- This report is only available through the Supervisor interface.
- This report uses the Split/Skill report input window. Select the splits/skills that you want to view on the report and the days for which you want to view ASA. See [Split/Skill report selector window and input fields](#) on page 378 for more information.

## Split/Skill Graphical ASA Daily report example

The following figure provides an example of a Split/Skill Graphical ASA Daily report:

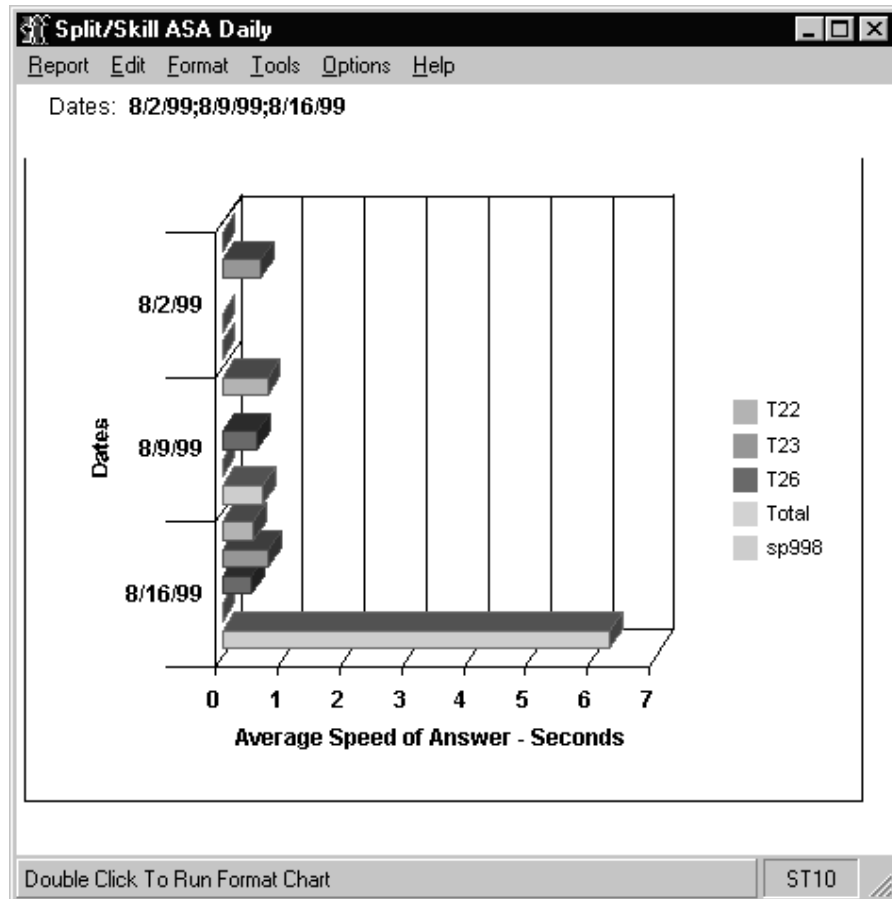

## Split/Skill Graphical ASA report description

---

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Dates	The days for which the report was run (selected in the report input window).	ROWDATE
Split/Skill	The name of the split/skill you are currently viewing.	syn(SPLIT)
Average Speed of Ans - Seconds	The value in seconds of the average speed of answer for the split/skill during the time period covered in the report.	<AVG_ANSWER_SPEED>



# Split/Skill Graphical Call Profile report

This report shows how well the split or skill you specify performed compared to your call center's predefined service levels for the date you specify.

## Things to know about this report


---

Here are some things to know about this report:

- This report has four charts and displays a collection of split/skill call profile related data items at the top of the report. A legend appears to the right of each chart.
- The three-dimensional pie chart in the upper-left quadrant shows the percentage of ACD calls answered within the Acceptable Service Level and the percentage of ACD calls answered outside this level. The numerical value represented by each pie piece is shown inside the pie chart, and the boxes to the right of each graph are a legend.
- The three-dimensional pie charts on the right side of the report show the Percentage Answered Distribution (upper right quadrant) and the Percentage Abandoned Distribution (lower right quadrant) for each service level increment. The numerical value represented by each pie piece is shown inside the pie chart.
- The horizontal bar chart in the lower-left quadrant shows the actual number of ACD calls answered within each service interval. The horizontal axis represents the number of calls answered or abandoned. The vertical axis represents the customer's service intervals. For each of these intervals, two horizontal bars are displayed. One bar shows the number of answered ACD calls, and the other bar shows the number of abandoned calls.
- The number displayed for each service interval is the upper limit of the interval. For example, if the first two intervals are 5 and 10, the first data point on the graph indicates the number of calls answered/abandoned within 0-5 seconds, the second data point indicates the number of calls answered/abandoned within 6-10 seconds.
- Other chart styles are available and can be changed.
- The database items for the Split/Skill Call Profile report are stored in the dsplit table.
- This report is only available through the Supervisor interface.
- This report uses the Split/Skill report input window. Select a split/skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.

Split/Skill Graphical Call Profile report example

The following figure provides an example of a Split/Skill Graphical Call Profile report:

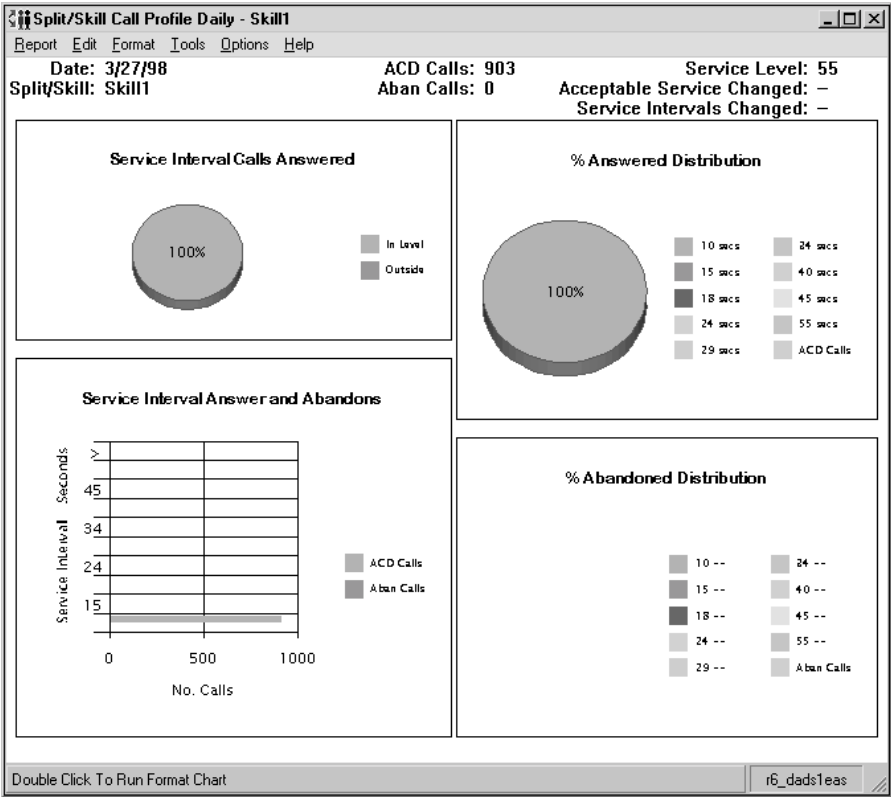

Split/Skill Graphical Call Profile report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date	The day for which the report was run (selected in the report input window).	ROW_DATE
ACD Calls	The number of calls answered within the split/skill for that day.	ACDCALLS
Service Level	The number of seconds defined by the customer as acceptable for answering calls.	SERVICELEVEL

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the split/skill.	syn(SPLIT)
Aban Calls	The number of split/skill calls abandoned for that day.	ABNCALLS
Acceptable Service Changed	Shows whether or not the acceptable service level was changed. A YES appears if the acceptable service level changed during the period covered by the report. Otherwise, a NO appears.	syn(SVCLEVELCHG)
Service Intervals Changed	A YES appears if service intervals were changed during the period covered by the report.	syn(PERIODCHG)
Service Interval Calls Answered	Percentage of split/skill ACD calls that were answered by an agent within the predefined acceptable service level. Calls to the split/skill include abandoned calls, calls not answered, and outbound ACD calls placed by an adjunct (for example, outbound predictive dialing). Calls that were not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one split and answered in another split/skill. Percent Within Service Level does not include direct agent calls.	< <PERCENT_SERV_LVL_SPL>
Service Interval Answers and Abandons	Percentage of split/skill ACD calls that were answered by an agent within the predefined acceptable service level. Calls to the split/skill include abandoned calls, calls not answered, and outbound ACD calls placed by an adjunct. Calls that were not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one split and answered in another split/skill. Percent Within Service Level does not include direct agent calls.	< <100-PERCENT_SERV_LVL_SPL>

## Historical reports

Report heading	Description	Database item, calculation, or <calculation name>
% Answered Distribution	Graphically displays the distribution of all of the incoming calls that were answered within each of the defined service levels.	ACDCALLS1-10
% Abandoned Distribution	Graphically displays the distribution of all of the incoming calls that were abandoned within each of the defined service levels.	ABNCALLS1-10

## Split/Skill Graphical Multi-ACD Service Level report

The Split/Skill Graphical Multi-ACD Service Level report shows the Percent in Service Level achieved for a skill selected from one or more ACDs for each day. You can compare a split/skill in different ACDs and use the information to:

- Determine workload
- Review Percent in Service Level for each ACD
- Evaluate call-handling performance
- Reassign agents
- Perform other ACD configuration alternatives for balancing workloads and/or reducing abandoned calls

### Things to know about this report

---

Here are some things to know about this report:

- You can specify a single split/skill across ACDs.
- The Split/Skill Graphical Multi-ACD Service Level report is only available in a daily version.
- The database items used for the Split/Skill Graphical Multi-ACD Service Level report are stored in the dsplit (daily) tables.
- The Split/Skill Graphical Multi-ACD Service Level report can include information on up to eight ACDs.
- See [Split/Skill Graphical Multi-ACD Service Level report input fields](#) on page 399 for report inputs.

## Split/Skill Graphical Multi-ACD Service Level report input window

---

The following figure provides an example of a Split/Skill Graphical Multi-ACD Service Level report input window. The report input window must be filled in to run the report:

The screenshot shows a Windows-style dialog box titled "Multi-ACD Service Level Daily". It contains two main sections: "Inputs" and "Destination".

**Inputs section:**

- Split/Skill:** A dropdown menu with "sp998" selected. To its right is a button with a list icon and a left arrow.
- Dates:** A text field containing "8/2/99;8/9/99;8/16/99". To its right is a button with a list icon and a left arrow.
- ACDs:** A dropdown menu with "ST10" selected. To its right is a button with a list icon and a left arrow.

**Destination section:**

- View Report on Screen:** A radio button that is currently selected.
- Print Report on:** A radio button that is not selected. Next to it is a text field containing the path "\\DRPRINT2\33b37" and a printer icon button.

**Buttons:** At the bottom of the dialog are three buttons: "OK", "Cancel", and "Help".

## Split/Skill Graphical Multi-ACD Service Level report input fields


---

The following table describes the fields on the input window.

Field	Definition
Dates (daily)	<p>Enter the dates you would like the report to cover. Use any of the following formats:</p> <ul style="list-style-type: none"> <li>● A month/day/year (for example, 3/21/02)</li> <li>● A minus offset based on today's date (for example, - 1 for yesterday)</li> <li>● A semicolon (;) to separate individual data entry items (for example, 3/21/02;3/23/02;3/25/02)</li> <li>● A hyphen to designate a range of dates (for example, 3/21/02-3/25/02)</li> </ul>
First through Eighth ACD	Enter the ACD name or number that corresponds to the following Splits/Skills field.
Split(s)/Skill(s)	Enter the appropriate split/skill names or numbers that you want to view in this report. Any names you want to appear on the report must have been previously defined and entered in the Dictionary subsystem.
Destination	Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.

## Split/Skill Graphical Multi-ACD Service Level report example

The following figure provides an example of a Split/Skill Graphical Multi-ACD Service Level report:

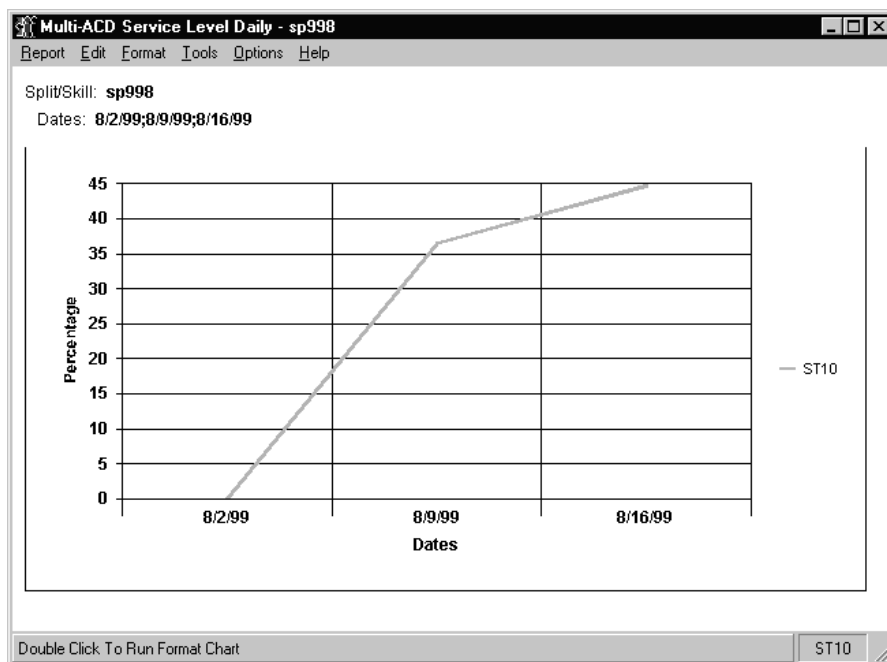



## Split/Skill Graphical Multi-ACD Service Level report description

---

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
Date, Week Starting, Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Percentage	The Percent in Service Level for the ACD.	<100 * ACCEPTABLE/CALLSOFFERED >

## Split/Skill Graphical Service Level report

This report shows the percentage of ACD calls answered within the predefined acceptable service level and the percentage of ACD calls abandoned for the date and split or skill you specify.

### Things to know about this report


---

Here are some things to know about this report:

- The chart type can be changed. See [Using reports](#) on page 35 for more information.
- Each set of vertical bars is labeled with the start time for the service interval. The box below the chart is a legend.
- The database items for the Split/Skill Service Level report are stored in the hsplit (intrahour interval) table.
- This report is only available through the Supervisor interface.
- This report uses the Split/Skill report input window. Select a split/skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.

## Split/Skill Graphical Service Level report example

The following figure provides an example of a Split/Skill Graphical Service Level report:

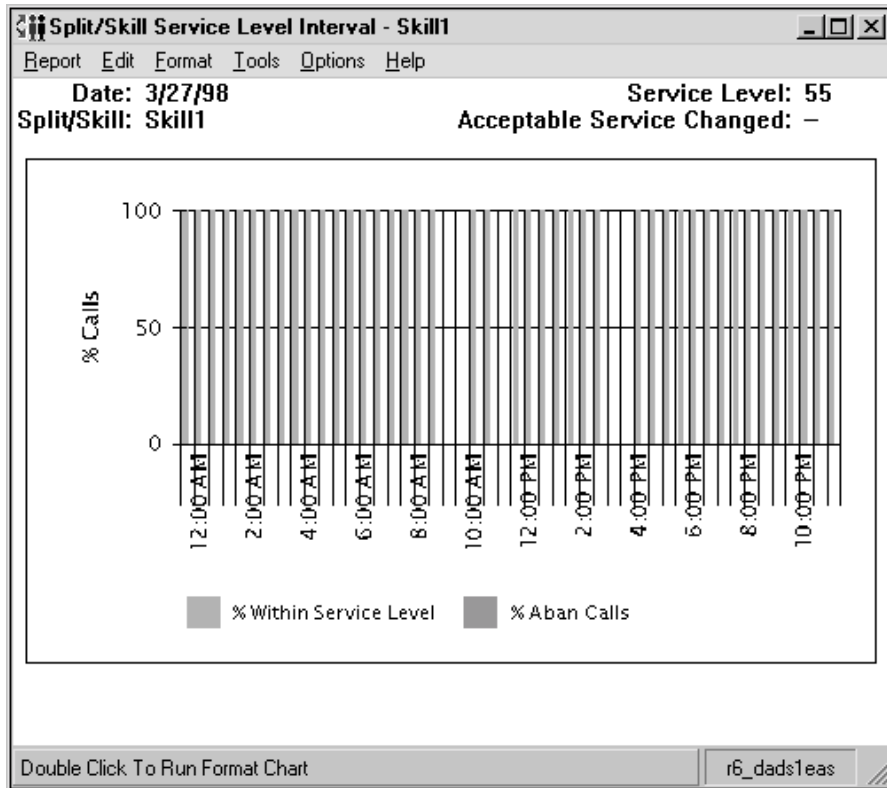

## Split/Skill Graphical Service Level report description

---

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date	The day for which the report was run (selected in the report input window).	ROW_DATE
Secs.	Shows actual administered service level.	SERVICELEVEL
Split/Skill	The name or number of the split/skill that you are currently viewing.	syn(SPLIT)
Acceptable Service Changed	Shows whether or not the service level was changed. A <b>YES</b> appears if the acceptable service level changed during the period covered by the report. Otherwise, a <b>NO</b> appears.	syn(SVCLEVELCHG)
% Within Service Level	Percentage of ACD calls that were answered by an agent within the predefined acceptable service level for the time period shown in the report.	<PERCENT_SERV_LVL_SPL>
% Aban Calls	Percentage of ACD calls that were abandoned for the time period shown in the report.	<PERCENT_CALL_ABAN>

# Split/Skill Graphical Skill Overload report

The Graphical Skill Overload report shows how much time each skill has spent in normal versus overload condition for the intervals specified for a particular day.

If Avaya Business Advocate is not activated, the fields of the report which pertain to Avaya Business Advocate will not be populated.

## Things to know about this report


---

Here are some things you need to know about this report:

- You can access this report from the Historical Split/Skill Category selector menu.
- The Graphical Skill Overload report is available in a daily version.
- This report displays a horizontal bar chart with a horizontal bar for each skill.
- If you notice a trend toward increased time in overload state, you may need to train or hire additional agents for that skill.
- The database items used for this report are stored in the `dsplit` table.
- This report uses the Split/Skill report input window. Select a skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.

# Split/Skill Graphical Skill Overload report example

The following figure is an example of a Graphical Skill Overload report:

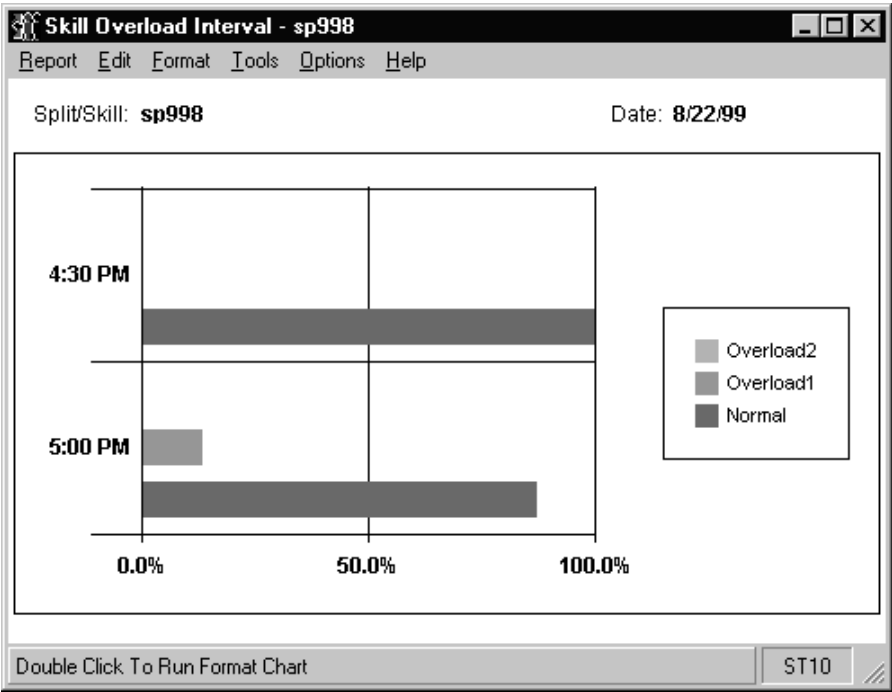

## Split/Skill Graphical Skill Overload report description

---

The following table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Date	The day for which the report was run (selected in the report input window).	ROW_DATE
Split/Skill	The name or number of the splits/skills selected for this report.	syn(SPLIT)
Normal	The time the skill spent under all of the thresholds.	I_NORMTIME
Overload1	The time the skill spent over threshold 1 and under threshold 2.	I_OL1TIME
Overload2	The time the skill spent over threshold 2.	I_OL21TIME

## Split/Skill Graphical Time Spent report

This report shows how much time the agents staffed in the specified split or skill spent in each work state. It also shows the composite time spent in the AUX work state for each of the reason codes defined for this call center.

### Things to know about this report

---

Here are some things to know about this report:

- Call center supervisors can use this report to estimate how much time agents in this split/skill spent on ACD calls, in available state, in ACW, in AUX, etc. for a particular day. This report enables supervisors to tell how much time the agents in this split/skill spent in AUX work state for each of the reason codes defined for this call center.
- This report can display a three-dimensional pie chart that shows the amount of time (in hours and minutes) that the agent spent in each work state.
- By default, the percentage is shown inside of each section of the pie chart.
- A legend displays a different color for each of the agent work states (dictionary-defined synonym for each work state).
- This report displays a three-dimensional pie chart that shows the reason codes for the time that the agents spent in AUX work mode.
- The percentage of AUX time (in hours and minutes) agents spent in AUX for each reason code is displayed inside the slice of the pie chart.
- A legend to the right of the pie chart shows a different color for each of the reason codes. This legend contains the dictionary-defined reason codes or numbers (if the reason codes have not been defined in Dictionary).
- The database items used for the Split/Skill Graphical Skill Time Spent report are stored in the hsplit (intrahour) and dsplit (daily) tables.
- This report is only available through the Supervisor interface.
- This report uses the Split/Skill report input window. Select a split/skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.



## Split/Skill Graphical Time Spent report example

The following figure provides an example of a Split/Skill Graphical Skill Time Spent report:



## Split/Skill Graphical Skill Time Spent report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the split/skill you are currently viewing.	syn(SPLIT)
Date	The day for which the report was run (selected in the report input window).	ROW_DATE

Report heading	Description	Database item, calculation, or <calculation name>
AVAIL	The time during the collection interval that POSITIONS were available for calls from this split/skill.	I_AVAILTIME
ACW	The time during the collection interval that POSITIONS were in AUX in this split/skill. This includes I_AUXINTIME and I_AUXOUTTIME.	<I_ACWTIME>
RINGING	The time during the collection interval that agents were in the ringing state for calls to this split/skill. If the agent changes work modes or answers/makes another call instead of answering the ringing call, I_RINGTIME will stop accumulating. RINGTIME is the time that the caller spends ringing and is independent of agent activity.	I_RINGTIME
ACD	The time during the collection interval that POSITIONS were on split/skill ACD calls for this split/skill.	<I_ACDTIME>
AUX	The time during the collection interval that POSITIONS are in AUX in this split/skill.	I_AUXTIME
OTHER	The time during the collection interval that POSITIONS were doing other work.	I_OTHERTIME
Reason Code 0	<p>The time during the collection interval that POSITIONS were in AUX for reason code 0 in this split/skill. This includes time on extension calls from this AUX state.</p> <ul style="list-style-type: none"> <li>● For switches using AUX reason codes, this represents the time agents spent in <b>system</b> AUX.</li> <li>● For switches not using AUX reason codes, I_AUXTIME0 is the same as I_AUXTIME.</li> </ul>	I_AUXTIME0
Reason Code 1-9	The time during the collection interval that POSITIONS were in AUX for each reason code 1-9 in this skill. This includes the time on extension calls from each AUX state.	I_AUXTIME1-9

# Split/Skill Outbound report

The Split/Skill Outbound report displays the numbers and average talk times for each type of outbound call for a given split/skill. It is useful primarily for splits/skills that use an adjunct to deliver outbound ACD calls or to dial outbound extension calls.

## Things to know about this report


---

Here are some things to know about this report:

- This report requires the Outgoing Call Management application of ASAI.
- The Split/Skill Outbound report is available in interval, daily, weekly, and monthly versions.
- The database items for the Split/Skill Outbound report are stored in the hsplit (interval), dsplit (daily), wsplit (weekly), and msplit (monthly) tables.
- This report uses the Split/Skill report input window. Select a split/skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.

Split/Skill Outbound report example

The following figure provides an example of a Split/Skill Outbound report:

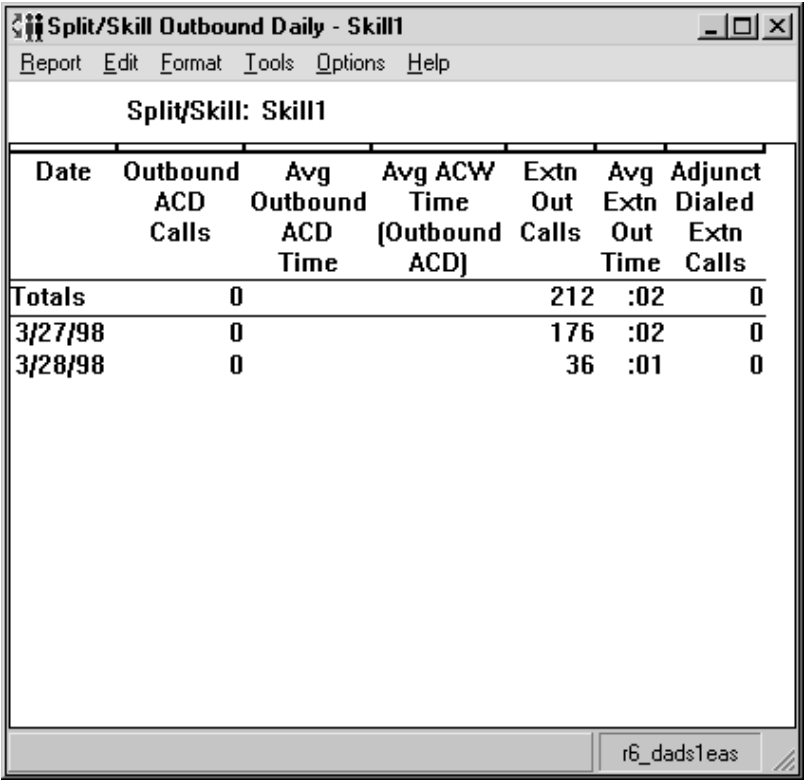

Split/Skill Outbound report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
Time (for interval reports only)	The intrahour intervals for which the report shows data, as selected in the report input window.	STARTTIME, STARTTIME+INTRVL

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Outbound ACD Calls	The number of outbound ACD calls placed by an adjunct processor and queued to this split/skill and answered by agents for this split/skill.	O_ACDCALLS
Avg Outbound ACD Time	The average time the agents spent talking on outbound ACD calls placed by an adjunct for this split/skill.	O_ACDTIME/O_ACDCALLS
Avg ACW Time (Outbound ACD)	The average time the agents spent in after call work associated with outbound ACD calls placed by an adjunct for this split/skill.	O_ACWTIME/O_ACDCALLS
Extn Out Calls	The number of outbound extension calls made by agents logged into this split/skill during the period covered. Direct agent ACW out calls are not included.  For agents in multiple splits/skills, outbound AUX extension calls are included here if this split/skill is the first one that the agent logged into, unless the agent has an ACD call on hold. In this case the outbound call is recorded for the split/skill associated with the ACD call.	ACWOUTCALLS+AUXOUTCALLS <EXT_CALL_OUT>
Avg Extn Out Time	The average time agents in this split/skill spent talking on outbound extension calls.  For agents in multiple splits/skills, time spent on outbound AUX extension calls are included here if this split/skill is the first one that the agent logged into, unless the agent has an ACD call on hold. In this case the outbound call is recorded for the split/skill associated with the ACD call.	(ACWOUTTIME+AUXOUTTIME)/ (ACWOUTCALLS+AUXOUTCALLS)
Adjunct Dialed Extn Calls	The number of outbound extension calls for this split/skill that were placed by an adjunct for an agent; these are also referred to as keyboard-dialed calls.	ACWOUTADJCALLS + AUXOUTADJCALLS

# Split/Skill report

The Split/Skill report shows the calls handled, agent time and assists, and transfers and holds for each agent in a split/skill. This report shows only the time each agent worked in this particular split/skill. An agent could have worked in other splits/skills during the day.


## Things to know about this report

Here are some things to know about this report:

- The Split/Skill report is available in daily, weekly, and monthly versions.
- The database items for the Split/Skill report are stored in the dagent (daily), wagent (weekly), and magent (monthly) tables.
- This report uses the Split/Skill report input window. Select a split/skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.

## Split/Skill report example

The following figure provides an example of a Split/Skill report:

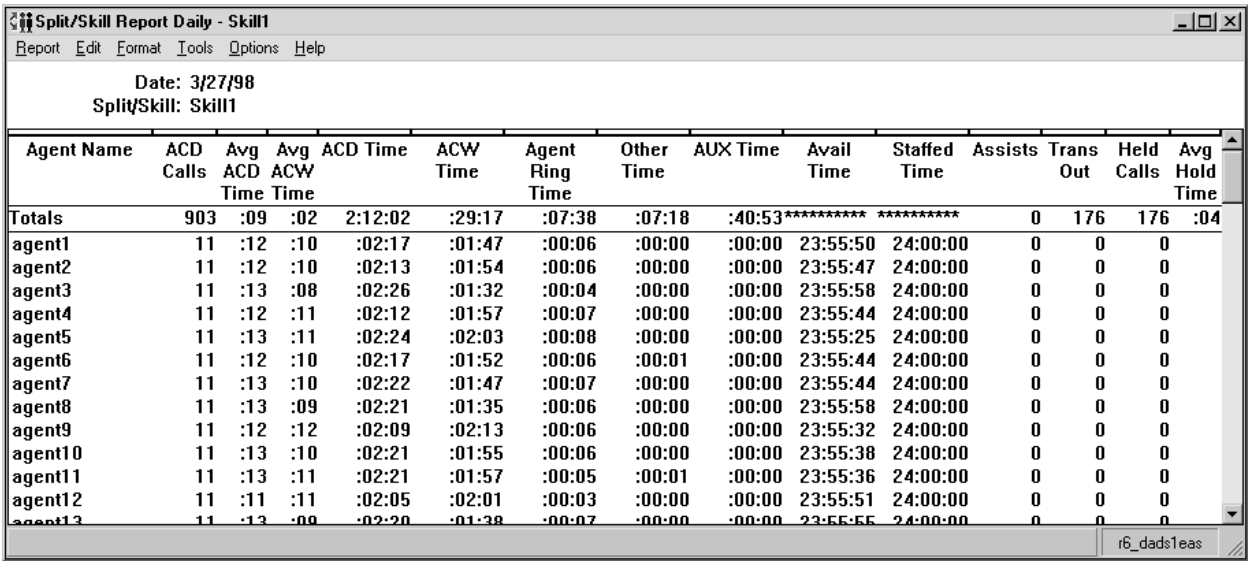

The screenshot shows a window titled "Split/Skill Report Daily - Skill1". The window has a menu bar with "Report", "Edit", "Format", "Tools", "Options", and "Help". Below the menu bar, it displays "Date: 3/27/98" and "Split/Skill: Skill1". The main area contains a table with the following columns: Agent Name, ACD Calls, Avg ACD Time, Avg ACW Time, ACD Time, ACW Time, Agent Ring Time, Other Time, AUX Time, Avail Time, Staffed Time, Assists, Trans Out, Held Calls, and Avg Hold Time. The table lists data for a "Totals" row and 13 individual agents (agent1 through agent13). The "Totals" row shows 903 ACD calls, 903 ACW calls, 2:12:02 ACD time, 2:29:17 ACW time, 07:38 agent ring time, 07:18 other time, 40:53 AUX time, 23:55:50 avail time, 24:00:00 staffed time, 0 assists, 176 trans out, 176 held calls, and 04:04 avg hold time. The individual agent rows show similar data for each agent.

Agent Name	ACD Calls	Avg ACD Time	Avg ACW Time	ACD Time	ACW Time	Agent Ring Time	Other Time	AUX Time	Avail Time	Staffed Time	Assists	Trans Out	Held Calls	Avg Hold Time
Totals	903	:09	:02	2:12:02	:29:17	:07:38	:07:18	:40:53	23:55:50	24:00:00	0	176	176	:04
agent1	11	:12	:10	:02:17	:01:47	:00:06	:00:00	:00:00	23:55:50	24:00:00	0	0	0	
agent2	11	:12	:10	:02:13	:01:54	:00:06	:00:00	:00:00	23:55:47	24:00:00	0	0	0	
agent3	11	:13	:08	:02:26	:01:32	:00:04	:00:00	:00:00	23:55:58	24:00:00	0	0	0	
agent4	11	:12	:11	:02:12	:01:57	:00:07	:00:00	:00:00	23:55:44	24:00:00	0	0	0	
agent5	11	:13	:11	:02:24	:02:03	:00:08	:00:00	:00:00	23:55:25	24:00:00	0	0	0	
agent6	11	:12	:10	:02:17	:01:52	:00:06	:00:01	:00:00	23:55:44	24:00:00	0	0	0	
agent7	11	:13	:10	:02:22	:01:47	:00:07	:00:00	:00:00	23:55:44	24:00:00	0	0	0	
agent8	11	:13	:09	:02:21	:01:35	:00:06	:00:00	:00:00	23:55:58	24:00:00	0	0	0	
agent9	11	:12	:12	:02:09	:02:13	:00:06	:00:00	:00:00	23:55:32	24:00:00	0	0	0	
agent10	11	:13	:10	:02:21	:01:55	:00:06	:00:00	:00:00	23:55:38	24:00:00	0	0	0	
agent11	11	:13	:11	:02:21	:01:57	:00:05	:00:01	:00:00	23:55:36	24:00:00	0	0	0	
agent12	11	:11	:11	:02:05	:02:01	:00:03	:00:00	:00:00	23:55:51	24:00:00	0	0	0	
agent13	11	:13	:09	:02:20	:01:38	:00:07	:00:00	:00:00	23:55:55	24:00:00	0	0	0	

## Split/Skill report description

---

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	The day, week, or month for which the report ran. You make these selections in the report input window.	ROW_DATE
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Agent Name	The names or login IDs of the agents that logged into the split/skill selected in the report input window.	syn(LOGID)
ACD Calls	The number of split/skill and direct agent ACD calls answered by the agent that connected during interval. Direct agent calls are included if this is the direct agent skill, or the direct agent skill is not measured by CMS and this is the first skill the agent logged into. This total also includes O_ACDCALLS if you have the Outgoing Call Management application on ASAI. The O_ACDCALLS is the number of ACDCALLS that were placed by an adjunct on behalf of a split/skill; this is also referred to as predictive dialing.	ACDCALLS + DA_ACDCALLS, <TOTAL_ACDCALLS>

Report heading	Description	Database item, calculation, or <calculation name>
Avg ACD Time	<p>The average time the agent spent talking on ACD calls for this split/skill that completed during the period covered.</p> <p>Direct agent time is included:</p> <ul style="list-style-type: none"> <li>● If this is the direct agent skill</li> <li>● If the direct agent skill is not measured by CMS and this is the first skill the agent logged into</li> <li>● If the Direct Agent skill is not assigned, but the agent receives Direct Agent calls</li> </ul> <p>This average includes O_ACDTIME if you have Outgoing Call Management (OCM).</p>	$\frac{(ACD\text{TIME} + DA\_ACD\text{TIME})}{(ACDCALLS + DA\_ACDCALLS)},$ <p>&lt;AVG_AGENT_TALK_TIME&gt;</p>
Avg ACW Time	<p>The average time the agent spent in ACW for ACD and direct agent calls for this split/skill during the time period covered by the report.</p> <p>Direct agent calls are included:</p> <ul style="list-style-type: none"> <li>● If this is the direct agent skill</li> <li>● If the direct agent skill is not measured by CMS and this is the first skill the agent logged into</li> <li>● If the Direct Agent skill is not assigned, but the agent receives Direct Agent calls</li> </ul> <p>This average includes O_ACWTIME if you have Outgoing Call Management (OCM).</p>	$\frac{(ACW\text{TIME} + DA\_ACW\text{TIME})}{(ACDCALLS + DA\_ACDCALLS)},$ <p>&lt;AVG_AGENT_ACW_TIME&gt;</p>



Report heading	Description	Database item, calculation, or <calculation name>
ACD Time	<p>The total time the agent spent on split/skill ACD calls for this split/skill during the period.</p> <p>Direct agent time is included:</p> <ul style="list-style-type: none"> <li>● If this is the direct agent skill</li> <li>● If the direct agent skill is not measured by CMS and this is the first skill the agent logged into</li> <li>● If the Direct Agent skill is not assigned, but the agent receives Direct Agent calls</li> </ul>	I_ACDDTIME+ I_DA_ACDDTIME, <TOTAL_I_ACDDTIME>
ACW Time	The total time the agent spent working in after call work activities for this split/skill and direct agent ACD calls attributed to this split/skill.	I_ACWTIME+ I_DA_ACWTIME, <TOTAL_I_ACWTIME>
Agent Ring Time	The total time split/skill and direct agent calls rang before the agent answered.	I_RINGTIME

Report heading	Description	Database item, calculation, or <calculation name>
Other Time	<p>The time agents spent doing other work. For all switches <b>other</b> time is accumulated when:</p> <ul style="list-style-type: none"> <li>● An agent first logs into the switch. CMS tracks the agent time as <b>other</b> time until the switch notifies CMS of the agent's state</li> <li>● The link between CMS and the switch becomes operational. The switch notifies CMS of all agents who are logged in. CMS assumes these agents are in the <b>other</b> state until the switch sends it notification of each agent's current state.</li> <li>● <b>Other</b> time is accumulated when agents in Auto-In or Manual-In</li> <li>● Put any call on hold while not doing any other activity</li> <li>● Dialed to place a call or to activate a feature</li> <li>● Had a personal call ringing with no other activity</li> <li>● Were available for other, multiple call handling skills, but not for this skill</li> <li>● Were logged into multiple splits/skills and were doing work for a split/skill other than this split/skill (on an ACD call or in call- related ACW)</li> </ul>	I_OTHERTIME
AUX Time	The total time the agent spent in auxiliary work for the split/skill.	I_AUXTIME
Avail Time	The total time the agent spent waiting for an ACD call in the split/skill.	I_AVAILTIME
Staffed Time	The total time the agent was logged into the split/skill for the period covered.	I_STAFFTIME

Report heading	Description	Database item, calculation, or <calculation name>
Assists	The number of calls for which an agent requested supervisor assistance for the split/skill. Assists for direct agent calls are included here.	ASSISTS
Trans Out	The number of calls transferred by this agent to another destination during the specified time period. This is any call transferred.	TRANSFERRED
Held Calls	The number of calls the agent put on hold. This is any type of call.	HOLDCALLS
Avg Hold Time	The average time callers spent on hold at the agent. This is any type of call.	HOLDTIME/ HOLDCALLS, <AVG_HOLD_TIME>

# Split/Skill by Location report

The Split/Skill by Location report shows the calls handled, agent time, location ID for the agent terminal, and work, AUX, and other time for each agent in a split/skill. This report shows only the time each agent worked in this particular split/skill. An agent could have worked in other splits/skills during the day. This report supports the Agent Site Tracking feature, which must be enabled to see meaningful data on the report.

## Things to know about this report

Here are some things to know about this report:

- The Split/Skill by Location report is available in a daily version only.
- The database items for the Split/Skill by Location report are stored in the dagent (daily) tables.
- This report uses the Split/Skill report input window. Select a split/skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.

## Split/Skill by Location report example

The following figure provides an example of a Split/Skill by Location report.

Split/Skill by Location - sp998

Report Edit Format Tools Options Help

Date: 10/5/99

Split/Skill: sp998

Location IDs: Boston;CO Springs;Fort Collins

Agent Name	Location	ACD Calls	Avg ACD Time	Avg ACW Time	ACD Time	ACW Time	Agent Ring Time	Other Time	AUX Time	Avail Time	Staffed Time
Totals											
</											

## Split/Skill by Location report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date Starting	The day for which the report ran. You make these selections in the report input window.	ROW_DATE
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
Location IDs	The location IDs associated with the agent. This ID is not associated with the agent personally, but rather with the terminal the agent is logged into. It is also associated with a port network location ID on the switch. If the Agent Site Tracking feature is not available on your system, the field will not display meaningful data. For more information, see <a href="#">Location IDs on Supervisor and the switch</a> on page 25.	LOC_ID
Agent Name	The names or login IDs of the agents that logged into the split/skill selected in the report input window.	syn(LOGID)
ACD Calls	The number of split/skill and direct agent ACD calls answered by the agent that connected during interval. Direct agent calls are included if this is the direct agent skill, or the direct agent skill is not measured by CMS and this is the first skill the agent logged into. This total also includes O_ACDCALLS if you have the Outgoing Call Management application on ASAI. The O_ACDCALLS is the number of ACDCALLS that were placed by an adjunct on behalf of a split/skill; this is also referred to as predictive dialing.	ACDCALLS + DA_ACDCALLS, <TOTAL_ACDCALLS>

Report heading	Description	Database item, calculation, or <calculation name>
Avg ACD Time	<p>The average time the agent spent talking on ACD calls for this split/skill that completed during the period covered.</p> <p>Direct agent time is included:</p> <ul style="list-style-type: none"> <li>● If this is the direct agent skill</li> <li>● If the direct agent skill is not measured by CMS and this is the first skill the agent logged into</li> <li>● If the Direct Agent skill is not assigned, but the agent receives Direct Agent calls</li> </ul> <p>This average includes O_ACDTIME if you have Outgoing Call Management (OCM).</p>	$\frac{(ACDTIME + DA\_ACDTIME)}{(ACDCALLS + DA\_ACDCALLS)},$ <AVG_AGENT_TALK_TIME>
Avg ACW Time	<p>The average time the agent spent in ACW for ACD and direct agent calls for this split/skill during the time period covered by the report.</p> <p>Direct agent calls are included:</p> <ul style="list-style-type: none"> <li>● If this is the direct agent skill</li> <li>● If the direct agent skill is not measured by CMS and this is the first skill the agent logged into</li> <li>● If the Direct Agent skill is not assigned, but the agent receives Direct Agent calls</li> </ul> <p>This average includes O_ACWTIME if you have Outgoing Call Management (OCM).</p>	$\frac{(ACWTIME + DA\_ACWTIME)}{(ACDCALLS + DA\_ACDCALLS)},$ <AVG_AGENT_ACW_TIME>

Report heading	Description	Database item, calculation, or <calculation name>
ACD Time	<p>The total time the agent spent on split/skill ACD calls for this split/skill during the period.</p> <p>Direct agent time is included:</p> <ul style="list-style-type: none"> <li>● If this is the direct agent skill</li> <li>● If the direct agent skill is not measured by CMS and this is the first skill the agent logged into</li> <li>● If the Direct Agent skill is not assigned, but the agent receives Direct Agent calls</li> </ul>	I_ACDDTIME+ I_DA_ACDDTIME, <TOTAL_I_ACDDTIME>
ACW Time	The total time the agent spent working in after call work activities for this split/skill and direct agent ACD calls attributed to this split/skill.	I_ACWTIME+ I_DA_ACWTIME, <TOTAL_I_ACWTIME>
Agent Ring Time	The total time split/skill and direct agent calls rang before the agent answered.	I_RINGTIME

Report heading	Description	Database item, calculation, or <calculation name>
Other Time	<p>The time agents spent doing other work. For all switches <b>other</b> time is accumulated when:</p> <ul style="list-style-type: none"> <li>● An agent first logs into the switch. CMS tracks the agent time as <b>other</b> time until the switch notifies CMS of the agent's state</li> <li>● The link between CMS and the switch becomes operational. The switch notifies CMS of all agents who are logged in. CMS assumes these agents are in the <b>other</b> state until the switch sends it notification of each agent's current state.</li> <li>● <b>Other</b> time is accumulated when agents in Auto-In or Manual-In</li> <li>● Put any call on hold while not doing any other activity</li> <li>● Dialed to place a call or to activate a feature</li> <li>● Had a personal call ringing with no other activity</li> <li>● Were available for other, multiple call handling skills, but not for this skill</li> <li>● Were logged into multiple splits/skills and were doing work for a split/skill other than this split/skill (on an ACD call or in call-related ACW)</li> </ul>	I_OTHERTIME
AUX Time	The total time the agent spent in auxiliary work for the split/skill.	I_AUXTIME
Avail Time	The total time the agent spent waiting for an ACD call in the split/skill.	I_AVAILTIME
Staffed Time	The total time the agent was logged into the split/skill for the period covered.	I_STAFFTIME
Total ACD Calls	The total number of ACD calls received on the skill for the selected date.	sum (TOTAL_ACDCALLS)



Report heading	Description	Database item, calculation, or <calculation name>
Total Avg ACD Time	The total average ACD time on the skill for the selected date.	AVG_AGENT_TALK_SUM
Total Avg ACW Time	The total average ACW time on the skill for the selected date.	AVG_AGENT_ACW_TIME
Total ACD Time	The total ACD time for the skill for the selected date.	sum(TOTAL_I_ACD_TIME)
Total ACW Time	The total ACW time for the skill for the selected date.	sum(TOTAL_I_ACW_TIME)
Total Agent Ring Time	The total agent ring time for the skill for the selected date.	sum(I_RINGTIME)
Total Agent Other Time	The total agent other time for the skill for the selected date.	sum(I_OTHERTIME)
Total Agent AUX Time	The total agent AUX time for the skill for the selected date.	sum(I_AUXTIME)
Total Agent Avail Time	The total agent avail time for the skill for the selected date.	sum(I_AVAILTIME)
Total Agent Staffed Time	The total agent staffed time for the skill for the selected date.	sum(I_STAFFTIME)

## Split/Skill Summary report

The Split/Skill Summary report summarizes the activity for an entire split or skill by time. You could use this report to analyze the overall performance of a split/skill or to compare two or more comparable splits/skills.

### Things to know about this report

---

Here are some things to know about this report:

- For switches with vectoring, calls that queued to this split or skill as the second or third split/skill in the VDN, but the disposition of the call (answered, abandoned, outflowed) was recorded for another split/skill.
- Direct agent call data are not included in any of the Split/Skill Summary reports. Direct agent calls are considered calls to the agent instead of calls to the split/skill. If you wish to include direct agent calls as split/skill calls, you can create a Designer report using the agent table data.
- The Split/Skill Summary report is available in interval, daily, weekly, and monthly versions.
- The database items for the Split/Skill Summary report are stored in the hsplit (interval), dsplit (daily), wsplit (weekly), and msplit (monthly) tables.
- This report uses the Split/Skill report input window. Select a split/skill that you want to view on the report. See [Split/Skill report selector window and input fields](#) on page 378 for more information.

## Split/Skill Summary report example

The following figure provides an example of a Split/Skill Summary report:

Date	Avg Speed	Avg Aban	ACD Calls	Avg ACD	Avg ACW	Aban Calls	Max Delay	Flow In	Flow Out	Extn Out	Avg Extn	Dequeued Calls	Avg Time to Dequeue	% ACD	% Ans
Totals	:00		1088	:09	:02	0	:01	0	0	212	:02	0		.18	100.00
3/27/98	:01		903	:09	:02	0	:01	0	0	176	:02	0		.14	100.00
3/28/98	:00		185	:09	:02	0	:01	0	0	36	:01	0		.04	100.00

## Split/Skill Summary report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
Time (for interval reports only)	The intrahour intervals for which the report shows data, selected in the report input window.	STARTTIME, STARTTIME + INTRVL
Date, Week Starting, Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Avg Speed Ans	The average time the completed split/skill ACD calls were waiting in queue and ringing before being answered by an agent.	ANSTIME/ACDCALLS <AVG_ANSWER_SPEED>
Avg Aban Time	The average time the split/skill ACD calls were waiting in queue or ringing before abandoning.	ABNTIME/ABNCALLS <AVG_ABANDON_TIME>
ACD Calls	The number of split/skill ACD calls that were queued to this split/skill and answered by an agent for this split/skill. This total also includes O_ACDCALLS if you have the Outgoing Call Management application of ASAI (OCM). The O_ACDCALLS is the number of ACDCALLS that were placed by an adjunct; this is also referred to as predictive dialing.	ACDCALLS
Avg ACD Time	The average time the agents spent talking on ACD calls for this split/skill that completed during the interval. This average includes O_ACDTIME if you have OCM.	ACDTIME/ACDCALLS <AVG_ACD_TALK_TIME>
Avg ACW Time	The average time the agents spent in after call work associated with ACD calls for this split/skill. This average includes O_ACWTIME if you have OCM.	ACWTIME/ACDCALLS <AVG_ACW_TIME>
Aban Calls	The number of ACD calls to the split/skill that abandoned while either waiting in queue (if this was the first split/skill the call was queued to), or while ringing. This total includes calls with talk time less than the phantom abandoned call timer value, if it is set. This total also includes O_ABNCALLS if you have OCM. The O_ABNCALLS is the number of outbound ACD calls that were abandoned by the far end.	ABNCALLS

Report heading	Description	Database item, calculation, or <calculation name>
Max Delay	<p>The maximum time that a caller waited in queue and ringing before:</p> <ul style="list-style-type: none"> <li>● Being answered</li> <li>● Abandoning</li> <li>● Being redirected</li> <li>● Receiving a busy signal</li> <li>● Being disconnected</li> </ul> <p>The value shown in the Totals line for this column is the maximum of the Max Delay values shown in the individual intervals.</p>	MAXOCWTIME
Flow In	<p>The number of calls that were redirected to this split/skill queue from another queue. The following calls are considered inflows:</p> <ul style="list-style-type: none"> <li>● For switches without vectoring, calls that intraflow from another split's queue to this split's queue.</li> <li>● With multiple split/skill queuing (switches with vectoring), calls that queue to this split/skill as a nonprimary split/skill and are either answered by an agent in this split/skill or abandoned from ringing in this split/skill.</li> <li>● Calls that ring at an agent in this split/skill and then requeue to the same split/skill by the <b>Redirection on No Answer to a Split/Skill</b> feature.</li> <li>● When a call leaves a VDN (for example by routing to a VDN) or leaves vector processing (for example by routing to a split/skill), the next split/skill to which the call queues is not credited with an inflow.</li> </ul>	INFLOWCALLS

Report heading	Description	Database item, calculation, or <calculation name>
Flow Out	<ul style="list-style-type: none"> <li>● The number of calls offered to this split/skill that were redirected to another destination.</li> <li>● For switches without vectoring, calls that intraflow or interflow to another destination are counted as outflows.</li> </ul> <p>For switches with vectoring, an outflow is counted:</p> <ul style="list-style-type: none"> <li>● If the call routes to another VDN</li> <li>● If the call routes to a number or digits</li> </ul> <p>For switches with vectoring, an outflow is also counted:</p> <ul style="list-style-type: none"> <li>● If the call queues to this split/skill as the primary split/skill and is redirected by the Redirection on No Answer feature</li> <li>● If the call queues to a messaging split/skill</li> <li>● If the call rang at an agent in this split/skill and was answered using call pickup</li> <li>● If the call queued to this split/skill as primary and was either answered by an agent in a nonprimary split/skill or abandons from ringing at an agent in a nonprimary split/skill</li> </ul>	OUTFLOWCALLS
Extn Out Calls	<p>The number of outbound extension calls made by agents logged into this split/skill. Direct agent ACW out calls are not included.</p> <p>For agents in multiple splits/skills, outbound AUX extension calls are included here if this split/skill is the first one that the agent logged into, unless the agent has an ACD call on hold. In this case, the outbound call is recorded for the split/skill associated with the ACD call.</p>	ACWOUTCALLS+AUXOUTCALLS <EXT_CALL_OUT>

Report heading	Description	Database item, calculation, or <calculation name>
Avg Extn Out Time	The average time agents in this split/skill spent talking on outbound extension calls. For agents in multiple splits/skills, time spent on outbound AUX extension calls is included here if this split/skill is the first one that the agent logged into, unless the agent has an ACD call on hold. In this case the outbound call is recorded for the split/skill associated with the ACD call.	$(ACWOUTTIME+AUXOUTTIME)/(ACWOUTCALLS+AUXOUTCALLS)$ <AVG_TALK_TIME_OUT>
Dequeued Calls	For switches with multiple split/skill queuing, the number of calls queued to this split/skill as a nonprimary split/skill (that is, this was not the first split/skill to which the call queued) for which the disposition (answered, outflowed, abandoned, busy, forced disconnect) was recorded in another split/skill.	DEQUEECALLS
Avg Time to Dequeue	For switches with multiple split/skill queuing, average time the dequeued calls spent queued to this split/skill before leaving the queue.	DEQUETIME/DEQUEECALLS
% ACD Time	The percentage of staffed time that agents in this split/skill spent on ACD calls and in after call work for this split/skill.	$100*(I\_ACDTIME+I\_ACWTIME)/I\_STAFFTIME)$ <PERCENT_ACD_TIME>
% Ans Calls	The percentage of calls queued to this split/skill that were answered by agents for this split/skill.	$100*(ACDCALLS/CALLSOFFERED)$ <PERCENT_CALL_ANS>
Avg Pos Staff (Interval report only)	The average number of positions staffed in this split/skill during the interval.	$I\_STAFFTIME/(INTRVL*60)$ <AVG_POS_STAFF>
Calls Per Pos (Interval report only)	The average number of calls answered by each position staffed during the interval. (If an agent is staffed for part of an interval, the calculation reports what the agent would have handled had the agent been staffed during the entire interval.)	$(60 * INTRVL * ACDCALLS)/I\_STAFFTIME$ <CALLS_PER_POS>

# System reports

This section describes system reports.

## General information about system reports

### What a system reports contain

---

System reports allow you to access summary data on a set of measured splits/skills for a particular ACD, the summary data over all splits/skills for a particular ACD, and the call data on similar splits/skills for different ACDs.

### Organization of system reports

---


The following list shows how the system reports are structured in Supervisor.

- [System Graphical Maximum Delay report](#) on page 434
- [System Multi-ACD by Split/Skill report](#) on page 438
- [System Multi-ACD report](#) on page 444
- [System report](#) on page 449



## System report selector window

The following figure is an example of the System report selector window. The reports are explained in the same order as listed in the window:

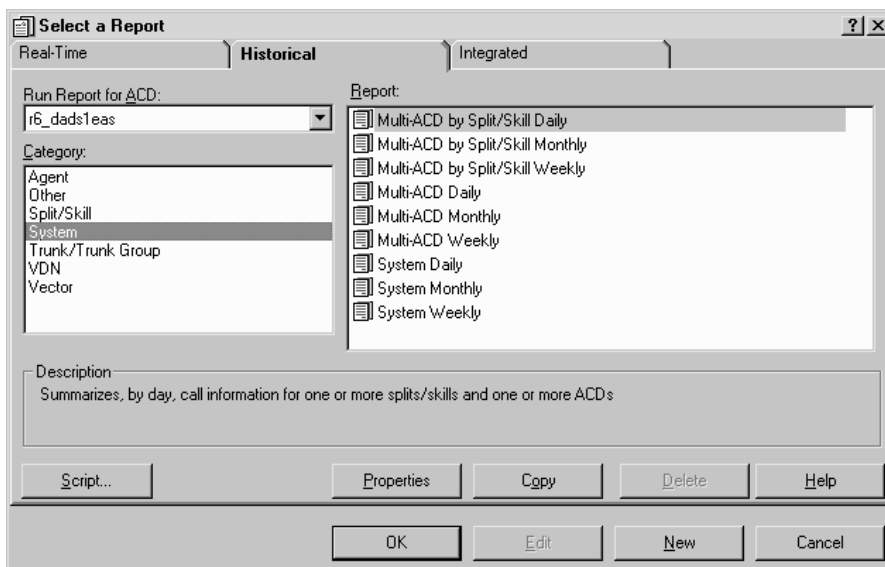

## System Graphical Maximum Delay report

The System Graphical Maximum Delay report shows the maximum delay for one split/skill in one or more ACDs for each day selected. You can compare the split/skill across ACDs and use the information to determine which ACD has the longest delay in answering calls.


### Things to know about this report

Here are some things to know about this report:

- You can specify one split/skill available across ACDs.
- The System Graphical Maximum Delay report is available in a daily version.
- The database items used for the System Graphical Maximum Delay report are stored in the dsplit (daily) tables.
- Standard multi-ACD reports can include information on up to eight ACDs.
- See [System report input fields](#) on page 435 for inputs for this report.

### Graphical Maximum Delay report input window

The following figure provides an example of a System Graphical Maximum Delay input window. The report input window must be filled in to run the report:

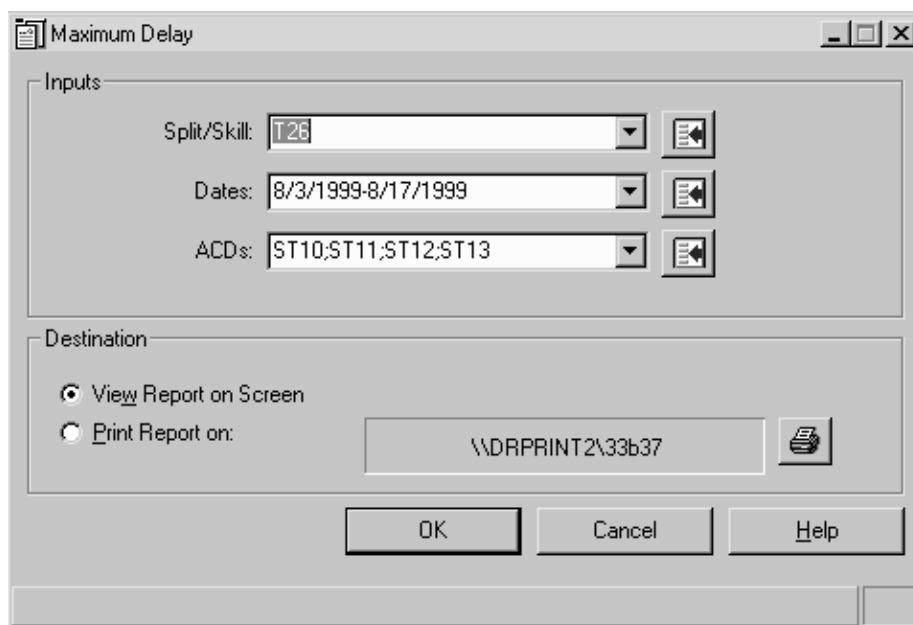

The screenshot shows a dialog box titled "Maximum Delay". It has two main sections: "Inputs" and "Destination".

**Inputs section:**

- Split/Skill:** A dropdown menu with "T26" selected.
- Dates:** A text field with "8/3/1999-8/17/1999".
- ACDs:** A text field with "ST10;ST11;ST12;ST13".

**Destination section:**

- View Report on Screen:** A radio button that is selected.
- Print Report on:** A radio button that is not selected.
- Print Path:** A text field with "\\DRPRINT2\33b37".

At the bottom of the dialog box are three buttons: "OK", "Cancel", and "Help".

## System report input fields


---

The following table describes the fields on the input window.

Field	Definition
Dates (daily, weekly, monthly)	<p>Enter the days you would like the report to cover. Use any of the following formats:</p> <ul style="list-style-type: none"> <li>● A month/day/year (for example, 3/21/02)</li> <li>● A minus offset based on today's date (for example, - 1 for yesterday)</li> <li>● A semicolon (;) to separate individual data entry items (for example, 3/21/02;3/23/02;3/25/02)</li> <li>● A hyphen to designate a range of dates (for example, 3/21/02-3/25/02). For the weekly and monthly versions, the report includes any weeks or months that begin in the range.</li> </ul>
First through Eighth ACD	Enter the ACD names or numbers that corresponds to the following Split/Skill field.
Split/Skill	Enter the appropriate split/skill name or number that you want to view in this report. Any name you want to appear on the report must have been previously defined and entered in the Dictionary subsystem.
Destination	Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.

# System Graphical Maximum Delay report example

The following figure provides an example of a System Multi-ACD by Split/Skill report:

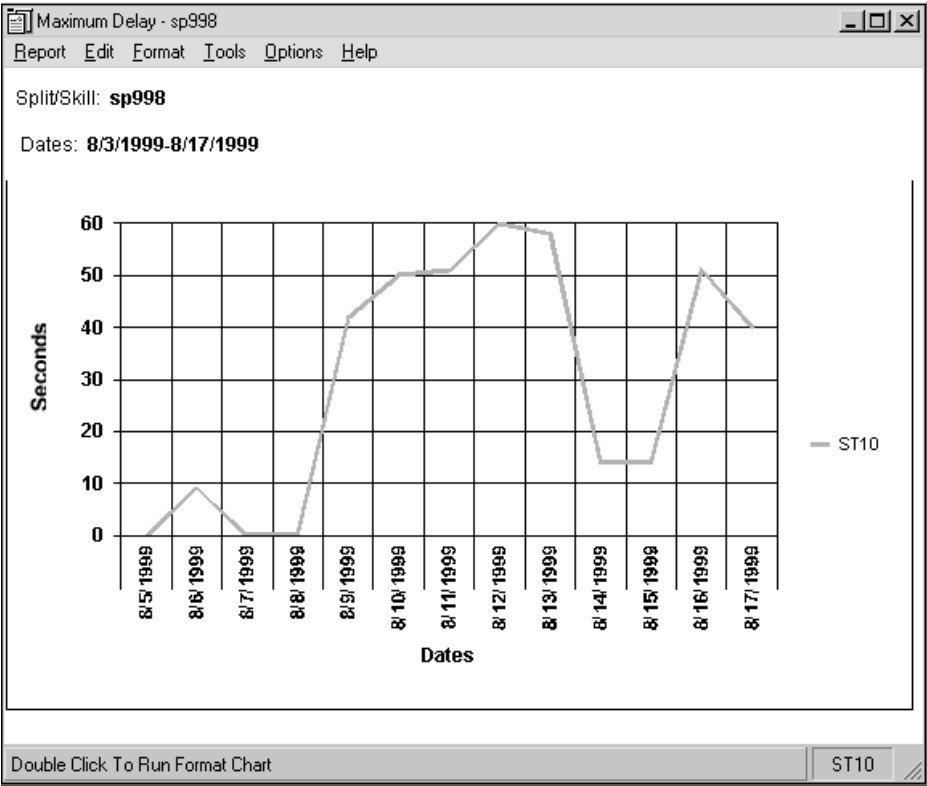

## System Graphical Maximum Delay report description

---

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
Dates	The dates for which the report ran. You can make these selections in the report input window.	ROW_DATE
—Max Delay — Seconds	<p>The maximum time that a caller waited in queue and ringing before:</p> <ul style="list-style-type: none"> <li>● Being serviced</li> <li>● Abandoning</li> <li>● Being redirected</li> <li>● Receiving a busy signal</li> <li>● Being disconnected</li> </ul> <p>The value shown in the Totals line is the maximum of the Max Delay values shown for the individual splits/skills.</p>	MAXOCWTIME

## System Multi-ACD by Split/Skill report

The System Multi-ACD by Split/Skill report displays call-handling information on different splits/skills for different ACDs. You can compare similar splits/skills in different ACDs and use the information to:

- Determine workload
- Evaluate call-handling performance
- Reassign agents
- Perform other ACD configuration alternatives for balancing workloads and/or reducing abandoned calls

### Things to know about this report

---

Here are some things to know about this report:

- You can specify a list of splits/skills available for each ACD desired.
- The System Multi-ACD report by Split/Skill report is available in daily, weekly, and monthly versions.
- The database items used for the System Multi-ACD by Split/Skill report are stored in the dsplit (daily), wsplit (weekly), and msplit (monthly) tables.
- Standard Multi-ACD reports can include information on up to eight ACDs.

## Multi-ACD by Split/Skill report input window

The following figure provides an example of a System Multi-ACD by Split Skill input window. The report input window must be filled in to run the report:

**System Multi-ACD by Split/Skill Daily**

**Inputs**

Date: 3/2/98

ACD: Bison36vpe

Splits/Skills: Skill1

ACD(2): (none)

Splits/Skills(2):

ACD(3): (none)

Splits/Skills(3):

ACD(4): (none)

Splits/Skills(4):

**Destination**

☒ View Report on Screen

☐ Print Report on: \\druak\\ddops3

OK Cancel Help

## Multi-ACD by Split/Skill report input fields

The following table describes the fields on the input window.

Field	Definition
Dates (daily, weekly, monthly)	<p>Enter the dates you would like the report to cover:</p> <ul style="list-style-type: none"> <li>● Daily - enter the days</li> <li>● Weekly - enter the start date for the weeks. When you specify a date for a weekly report, that date must correspond to the week start day selected in the System Setup-Storage Intervals window. If the date and day do not match, the message No records found displays in the status line.</li> <li>● Monthly - enter the first day of the months</li> </ul> <p>Use any of the following formats:</p> <ul style="list-style-type: none"> <li>● A month/day/year (for example, 3/21/02)</li> <li>● A minus offset based on today's date (for example, - 1 for yesterday)</li> <li>● A semicolon (;) to separate individual data entry items (for example, 3/21/02;3/23/02;3/25/02)</li> <li>● A hyphen to designate a range of dates (for example, 3/21/02-3/25/02). For the weekly and monthly versions, the report includes any weeks or months that begin in the range</li> </ul>
First through Eighth ACD	Enter the ACD name or number that corresponds to the following Splits/Skills field.
First through Eighth Split(s)/Skill(s)	Enter the appropriate split/skill names or numbers that you want to view in this report. Any names you want to appear on the report must have been previously defined and entered in the Dictionary subsystem. You can enter more than one split/ skill by using a semicolon (;) to separate individual entries or using a hyphen for a range of values.
Destination	Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.



## System Multi-ACD by Split/Skill report example

The following figure provides an example of a System Multi-ACD by Split/Skill report:

ACD	Avg Speed Ans	Avg Aban Time	ACD Calls	Avg ACD Time	Avg ACW Time	Aban Calls	Max Delay	Extn Out Calls	Avg Extn Out Time	% ACD Time	% Ans Calls
<b>Totals</b>	:01		<b>4928</b>	:10	:01	<b>0</b>	:01	<b>549</b>	:03	.07	100.00
r6_dads1_eas	:01		2024	:10	:01	0	:01	295	:03	.07	100.00
r6_dads2_eas	:01		2904	:10	:01	0	:01	254	:03	.07	100.00

## System Multi-ACD by Split/Skill report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
ACD	The ACD name or number for which the data was collected.	syn(ACD)

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Avg Speed Ans	The average time the split/skill ACD calls were waiting in queue and ringing before being answered by an agent.	ANSTIME/ ACDCALLS <AVG_ANSWER_SPEED>
Avg Aban Time	The average time the split/skill ACD calls were waiting in queue or ringing before abandoning.	ABNTIME/ ABNCALLS <AVG_ABANDON_TIME>
ACD Calls	The number of split/skill ACD calls that were queued to this split/skill and answered by an agent for this split/skill. This total also includes O_ACDCALLS if you have the Outgoing Call Management application (OCM) of ASAI. The O_ACDCALLS is the number of ACDCALLS that were placed by an adjunct; this is also referred to as predictive dialing.	ACDCALLS
Avg ACD Time	The average time the agents spent talking on ACD calls for this split/skill. This average time includes O_ACDTIME if you have OCM.	ACDTIME/ACDCALLS, <AVG_ACD_TALK_TIME>
Avg ACW Time	The average time the agents spent in after call work associated with ACD calls for this split/skill. This average time includes O_ACWTIME if you have the OCM.	ACWTIME/ ACDCALLS, <AVG_ACW_TIME>
Aban Calls	The number of ACD calls to the split/skill that abandoned while either waiting in queue (if this was the first split/skill the call was queued to), or while ringing. This total includes calls with talk time less than the phantom abandoned call timer value, if it is set. This total also includes O_ABNCALLS if you have OCM. The O_ABNCALLS is the number of outbound ACD calls that were abandoned by the far end.	ABNCALLS

Report heading	Description	Database item, calculation, or <calculation name>
Max Delay	<p>The maximum time that a caller waited in queue and ringing before:</p> <ul style="list-style-type: none"> <li>● Being serviced</li> <li>● Abandoning</li> <li>● Being redirected</li> <li>● Receiving a busy signal</li> <li>● Being disconnected</li> </ul> <p>The value shown in the Totals line is the maximum of the Max Delay values shown for the individual splits/skills.</p>	MAXOCWTIME
Extn Out Calls	<p>The number of outbound extension calls made by agents logged into this split/skill. Direct agent ACW out calls are not included. For agents in multiple splits/skills, outbound AUX extension calls are included here if this split/skill is the first one that the agent logged into, unless the agent has an ACD call on hold. In this case the outbound call is recorded for the split/skill associated with the ACD call.</p>	(ACWOUTCALLS + AUXOUTCALLS), <EXT_CALL_OUT>
Avg Extn Out Time	<p>The average time agents in this split/skill spent talking on outbound extension calls. For agents in multiple splits/skills, time spent on outbound AUX extension calls is included here if this split/skill is the first one that the agent logged into, unless the agent has an ACD call on hold. In this case the outbound call is recorded for the split/skill associated with the ACD call.</p>	(ACWOUTTIME+ AUXOUTTIME)/(ACWOUTCALLS + AUXOUTCALLS), <AVG_TALK_TIME_OUT>
% ACD Time	<p>The percentage of staffed time that agents for this split/skill spent on ACD calls and in after call work for this split/skill.</p>	100*((I_ACDTIME+ I_ACWTIME)/ I_STAFFTIME), <PERCENT_ACD_TIME>
% Ans Calls	<p>The percentage of calls queued to this split/skill that were answered by agents for this split/skill.</p>	100*(ACDCALLS/ CALLSOFFERED), <PERCENT_CALL_ANS>

# System Multi-ACD report

The System Multi-ACD report summarizes data over all splits/skills in the ACD for each ACD requested. This allows you to evaluate and compare different ACD configurations to determine workload and call-handling performance. After reviewing this report, you could choose different ACD configurations to balance workloads and/or reduce abandoned calls.

If you have vectoring, you may want to create a Designer report that summarizes data over all VDNs instead of over all splits/skills.


## Things to know about this report

Here are some things to know about this report:

- The System Multi-ACD report is available in daily, weekly, and monthly versions.
- The database items used for the System Multi-ACD report are stored in the dsplit (daily), wsplit (weekly), and msplit (monthly) tables.
- Standard Multi-ACD reports can include information on up to eight ACDs.

## Multi-ACD report input window

The following figure provides an example of a System Multi-ACD Input window. The report input window must be filled in to run the report:

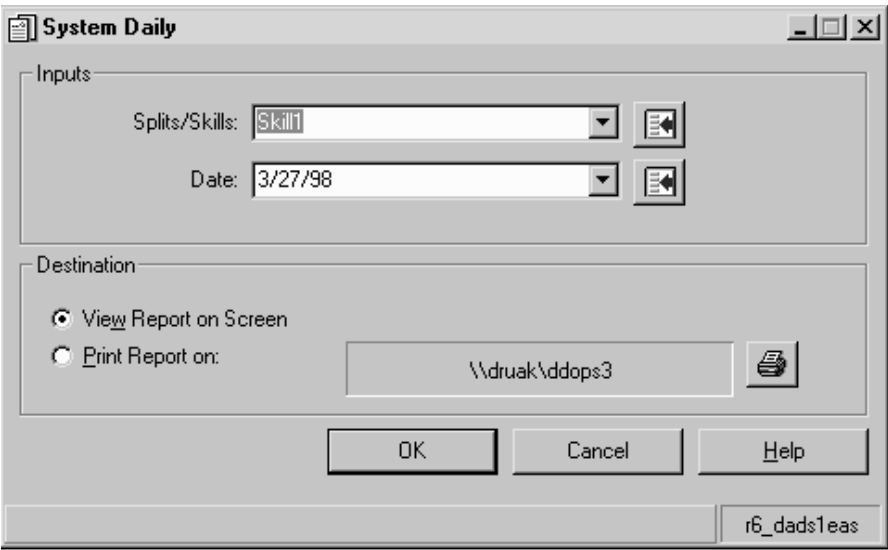

## Multi-ACD report input fields

---

The following table describes the fields on the input window.

Field	Definition
Date	<p>Enter the date you would like the report to cover.</p> <ul style="list-style-type: none"> <li>● Daily - enter the day</li> <li>● Weekly - enter the start date for the week. When you specify a date for a weekly report, that date must correspond to the week start day selected in the System Setup-Storage Intervals window. If the date and day do not match, the message No records found displays in the status line.</li> <li>● Monthly - enter the first day of the month</li> </ul>
Dates (daily, weekly, monthly)	<p>Enter the dates you would like the report to cover:</p> <ul style="list-style-type: none"> <li>● Daily - enter the days</li> <li>● Weekly - enter the start date for the weeks. When you specify a date for a weekly report, that date must correspond to the week start day selected in the System Setup-Storage Intervals window. If the date and day do not match, the message No records found displays in the status line.</li> <li>● Monthly - enter the first day of the months</li> </ul> <p>Use any of the following formats:</p> <ul style="list-style-type: none"> <li>● A month/day/year (for example, 3/21/02)</li> <li>● A minus offset based on today's date (for example, - 1 for yesterday)</li> <li>● A semicolon (;) to separate individual data entry items (for example, 3/21/02;3/23/02;3/25/02)</li> <li>● A hyphen to designate a range of dates (for example, 3/21/02-3/25/02). For the weekly and monthly versions, the report includes any weeks or months that begin in the range.</li> </ul>

Field	Definition
ACDs (1 - 8)	Enter the appropriate ACD names or numbers. You can enter more than one ACD by using a semicolon (;) to separate individual entries or using a hyphen for a range of values.
Destination	Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.

System Multi-ACD report example

The following figure provides an example of a System Multi-ACD report:

System Multi-ACD by Split/Skill Daily														
Report Edit Format Tools Options Help														
Date: 3/27/98														
Split/Skill	ACD	Avg Speed Ans	Avg Aban Time	ACD Calls	Avg ACD Time	Avg ACW Time	Aban Calls	Max Delay	Flow In	Flow Out	Extn Out Calls	Avg Extn Out Time	% ACD Time	% Ans Calls
Totals		:01		2115	:11	:02	0	:01	0	0	549	:03	.10	100.00
Skill1	r6_dads1eas	:01		903	:09	:02	0	:01	0	0	176	:02	.14	100.00
Skill2	r6_dads2eas			0			0	:00	0	0	0		.00	
Gold	r6_dads3eas	:01		1212	:13	:01	0	:01	0	0	373	:04	.26	100.00
Regular	r6_dads4eas			0			0	:00	0	0	0		.00	
														r6_dads1eas

## System Multi-ACD report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	The day, week, or month for which the report ran. You make these selections in the report input window.	ROW_DATE
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Avg Speed Ans	The average time the split/skill ACD calls were waiting in queue and ringing before being answered by an agent.	sum(ANSTIME)/ sum(ACDCALLS) <AVG_ANSWER_SPEED_SUM >
Avg Aban Time	The average time the split/skill ACD calls were waiting in queue or ringing before abandoning.	sum(ABNTIME)/ sum(ABNCALLS) <AVG_ABANDON_TIME_SUM>
ACD Calls	The number of split/skill ACD calls that were queued to splits/skills in the ACD and answered by an agent for those splits/skills. This total also includes O_ACDCALLS if you have the Outgoing Call Management application (OCM) of ASAI. The O_ACDCALLS is the number of ACDCALLS that were placed by an adjunct; this is also referred to as predictive dialing.	sum(ACDCALLS)
Avg ACD Time	The average time the agents spent talking on ACD calls for this ACD. The average time includes O_ACDDTIME if you have OCM.	sum(ACDDTIME)/ sum(ACDCALLS) <AVG_ACD_TALK_TIM_SUM>
Avg ACW Time	The average time the agents spent in after call work for ACD calls to this ACD. This average time includes O_ACWTIME if you have OCM.	sum(ACWTIME)/sum (ACDCALL S) <AVG_ACW_TIME_SUM>

Report heading	Description	Database item, calculation, or <calculation name>
Aban Calls	The number of ACD calls queued to split/skills in the ACD that abandoned while waiting in queue or ringing. This total includes calls with talk time less than the phantom abandoned call timer value, if it is set. This total also includes O_ABNCALLS if you have OCM. The O_ABNCALLS is the number of outbound ACD calls that were abandoned by the far end.	sum(ABNCALLS)
Max Delay	The maximum time that a caller waited in queue and ringing before: <ul style="list-style-type: none"> <li>● Being serviced</li> <li>● Abandoning</li> <li>● Being redirected</li> <li>● Receiving a busy signal</li> <li>● Being disconnected</li> </ul> The value shown in the Totals line is the maximum of the Max Delay values shown for the individual ACDs.	max(MAXOCWTIME)
Extn Out Calls	The number of outbound extension calls made by agents logged into this ACD. Direct agent ACW out calls are not included.	sum(ACWOUTCALLS+ AUXOUTCALLS) <EXT_CALL_OUT>
Avg Extn Out Time	The average time agents in this ACD spent talking on outbound extension calls.	sum(ACWOUTTIME+ AUXOUTTIME)/ sum(ACWOUTCALLS+ AUXOUTCALLS) <AVG_TALK_TIME_OUT_SUM >
% ACD Time	The percentage of staffed time that agents for the splits/skills in this ACD spent on ACD calls and in after call work.	100*(sum(I_ACDTIME+ I_ACWTIME)/ sum(I_STAFFTIME)) <PERCENT_ACD_TIME_SUM>
% Ans Calls	The percentage of calls queued to the splits/skills in this ACD that were answered by agents for the splits/skills.	100*(sum(ACDCALLS)/ sum(CALLSOFFERED)) <PERCENT_CALL_ANS_SUM>



## System report

The System report summarizes the activity for a set of splits/skills for the same ACD. You can use this report to compare split/skill performance for splits/skills performing similar functions for the same ACD.

### Things to know about this report

Here are some things to know about this report:

- If you have a switch without vectoring, Flow Out represents the number of calls redirected (by call forwarding or call coverage) from this split to another destination. In many cases, the summary numbers for Flow Out of one split may not match Flow In numbers for another split. These numbers may not match because calls were intraflowed into unmeasured splits, extensions within the ACD, or elsewhere. Also, the Flow In and Flow Out for a given split are typically not equal.
- Statistics in the report such as % AUX (percent auxiliary work) and Number of Extension-Out Calls are indicators of activities not directly related to ACD traffic.
- The System report is available in daily, weekly, and monthly versions.
- The database items used for the System report are stored in the dsplit (daily), wsplit (weekly), and msplit (monthly) tables.

### System report input window

The following figure provides an example of a System report input window. The report input window must be filled in to run the report:

## System report input fields

---

The following table describes the fields on the input window

Field	Definition
Date	<p>Enter the date you would like the report to cover:</p> <ul style="list-style-type: none"><li>● Daily — enter the day</li><li>● Weekly — enter the start date for the week. When you specify a date for a weekly report, that date must correspond to the week start day selected in the System Setup—Storage Intervals window. If the date and day do not match, the message No records found displays in the status line.</li><li>● Monthly — enter the first day of the month</li></ul> <p>Use any of the following formats:</p> <ul style="list-style-type: none"><li>● A month/day/year (for example, 3/21/02)</li><li>● A minus offset based on today's date (for example, - 1 for yesterday)</li><li>● A semicolon (;) to separate individual data entry items (for example, 3/21/02;3/23/02;3/25/02)</li></ul>
Split/Skill	<p>Enter the appropriate split/skill name or number that you want to view in this report. Any name you want to appear on the report must have been previously defined and entered in the Dictionary subsystem.</p>
Destination	<p>Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.</p>

## System report example

The following figure provides an example of a System report:

The screenshot shows a window titled 'System Daily' with a menu bar (Report, Edit, Format, Tools, Options, Help) and a date field set to '3/27/98'. The main area contains a table with the following data:

Split/Skill	Avg Speed Ans	Avg Aban Time	ACD Calls	Avg ACD Time	Avg ACW Time	Aban Calls	Max Delay	Flow In	Flow Out	Extn Out Calls	Avg Extn Out Time	% ACD Time	% Ans Calls
<b>Totals</b>	:01		2115	:11	:02	0	:01	0	0	549	:03	.08	100.00
Skill1	:01		903	:09	:02	0	:01	0	0	176	:02	.14	100.00
Skill2			0			0	:00	0	0	0		.00	
Platinum			0			0	:00	0	0	0		.00	
Gold	:01		1212	:13	:01	0	:01	0	0	373	:04	.26	100.00
Regular			0			0	:00	0	0	0		.00	

The status bar at the bottom right shows 'r6\_dads1eas'.

## System report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	The day, week, or month for which the report ran. You can make these selections in the report input window.	ROW_DATE
ACD	The ACD name or number for which the data was collected.	syn(ACD)
Split/Skill	The name or number of the split/skill that is selected for this report. You can make these selections in the report input window.	syn(SPLIT)
Avg Speed Ans	The average time the split/skill ACD calls were waiting in queue and ringing before being answered by an agent.	ANSTIME/ ACDCALLS, <AVG_ANSWER_SPEED>

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Avg Aban Time	The average time the split/skill ACD calls were waiting in queue or ringing before abandoning.	ABNTIME/ ABNCALLS <AVG_ABANDON_TIME>
ACD Calls	The number of split/skill ACD calls that were queued to this split/skill and answered by an agent for this split/skill. This total also includes O_ACDCALLS if you have the Outgoing Call Management (OCM) application of ASAI. The O_ACDCALLS is the number of ACDCALLS that were placed by an adjunct; this is also referred to as predictive dialing.	ACDCALLS
Avg ACD Time	The average time the agents spent talking on ACD calls for the split/skill. This average time includes O_ACDTIME if you have OCM.	ACDTIME/ ACDCALLS, <AVG_ACD_TALK_TIME>
Avg ACW Time	The average time the agent spent in after call work associated with ACD calls for the split/skill. This average time includes O_ACWTIME if you have OCM.	ACWTIME/ ACDCALLS, <AVG_ACW_TIME>
Aban Calls	The number of ACD calls to the split/skill that abandoned while either waiting in queue (if this was the first split/skill the call was queued to), or while ringing. This total includes calls with talk time less than the phantom abandoned call timer value, if it is set. This total also includes O_ABNCALLS if you have OCM. The O_ABNCALLS is the number of outbound ACD calls that were abandoned by the far end.	ABNCALLS

Report heading	Description	Database item, calculation, or <calculation name>
Max Delay	<p>The maximum time that a caller waited in queue and ringing before:</p> <ul style="list-style-type: none"> <li>● Being answered</li> <li>● Abandoning</li> <li>● Being redirected</li> <li>● Receiving a busy signal</li> <li>● Being disconnected</li> </ul> <p>The value shown in the Totals line is the maximum of the Max Delay values shown in the individual intervals.</p>	MAXOCWTIME
Flow In	<p>The number of calls that were redirected to the split/skill queue from another queue. The following calls are considered inflows:</p> <ul style="list-style-type: none"> <li>● For switches without vectoring, calls that intraflow from another split's queue to this split's queue</li> <li>● With multiple split/skill queuing, calls that queue to this split/skill as a nonprimary split/skill and are either answered by an agent in this split/skill or abandoned from ringing in this split/skill</li> <li>● Calls that ring at an agent in this split/skill and then requeue to the same split/skill by the <b>Redirection on No Answer to a split/skill</b> feature</li> <li>● When a call leaves a VDN (for example by routing to a VDN) or leaves vector processing (for example by routing to a split/skill), the next split/skill to which the call queues is not credited with an inflow</li> </ul>	INFLOWCALLS

Report heading	Description	Database item, calculation, or <calculation name>
Flow Out	<p>The number of calls offered to this split/skill that were redirected to another destination. For switches without vectoring, calls that intraflow or interflow to another destination are counted as outflows.</p> <p>For switches with vectoring, an outflow is counted:</p> <ul style="list-style-type: none"> <li>● If the call routes to another VDN</li> <li>● If the call routes to a number or digits</li> </ul> <p>An outflow is also counted:</p> <ul style="list-style-type: none"> <li>● If the call queues to this split/skill as the primary split/skill and is redirected by the Redirection on No Answer feature</li> <li>● If the call queues to a messaging split/skill</li> <li>● If the call rang at an agent in this split/skill and was answered using call pickup</li> <li>● If the call queued to this split/skill as primary and was either answered by an agent in a nonprimary split/skill or abandoned from ringing at an agent in a nonprimary split/skill</li> </ul>	OUTFLOWCALLS
Extn Out Calls	<p>The number of outbound extension calls made by agents logged into this split/skill. The direct agent ACW out calls are not included. For agents in multiple splits/skills, outbound AUX extension calls are included here if this split/skill is the first one that the agent logged into, unless the agent has an ACD call on hold. In this case, the outbound call is recorded for the split/skill associated with the ACD call.</p>	(ACWOUTCALLS+ AUXOUTCALLS) <EXT_CALL_OUT>

Report heading	Description	Database item, calculation, or <calculation name>
Avg Extn Out Time	The average time agents in this split/skill spent talking on outbound extension calls. For agents in multiple splits/skills, time spent on outbound AUX extension calls is included here if this split/skill is the first one that the agent logged into, unless the agent has an ACD call on hold. In this case, the outbound call is recorded for the split/skill associated with the ACD call.	(ACWOUTTIME+ AUXOUTTIME)/ (ACWOUTCALLS+ AUXOUTCALLS) <AVG_TALK_TIME_OUT>
% ACD Time	The percentage of staffed time that agents for this split/skill spent on ACD calls and in after call work for this split/skill.	100*((I_ACDTIME+ I_ACWTIME)/ I_STAFFTIME), <PERCENT_ACD_TIME>
% Ans Calls	The percentage of calls queued to this split/skill that were answered by agents for this split/skill.	100*(ACDCALLS / CALLSOFFERED), <PERCENT_CALL_ANS>

## Trunk/Trunk Group reports

This section describes trunk and trunk group reports.

### General information about Trunk/Trunk Group reports

#### What a Trunk/Trunk Group report contains

Trunk and Trunk Group reports display traffic data for a single trunk, summarize the incoming and outgoing traffic of every trunk in a trunk group for a specific time period, display the level of incoming and outgoing call traffic for an individual trunk group, or display the busiest hour of the day for each trunk group you select.

#### Organization of Trunk/Trunk Group reports


The following list shows how the Trunk and Trunk Group reports are structured in Supervisor.

- [Trunk/Trunk Group Busy Hour report](#) on page 461
- [Trunk report](#) on page 464
- [Trunk Group report](#) on page 467
- [Trunk Group Summary report](#) on page 470



## Trunk/Trunk Group report selector window

The following figure is an example of the Trunk/Trunk Group report selector window. The reports are explained in the same order as listed in the window:

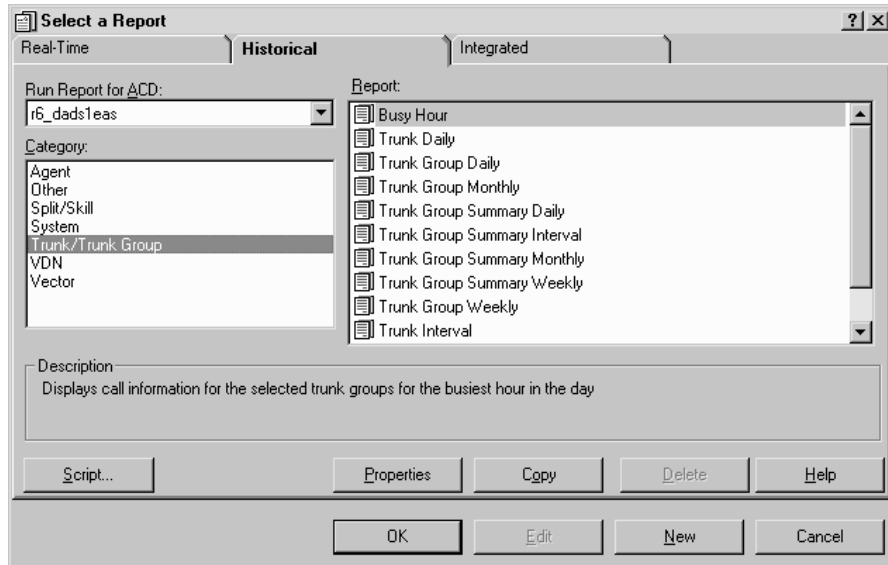

# Trunk/Trunk Group report input fields

The reports in this section use the Trunk/Trunk Group/Busy Hour report input windows. Specific input information is included with the reports. The following figure shows an example of the Trunk/Trunk Group/Busy Hour report input window. You must fill in the report input window to run the report.

## Trunk Group report input fields

---

The following table describes the input fields on historical Trunk/Trunk Group/Busy Hour report input windows. Not all reports use all fields; refer to information for the specific report you are running to determine what you want to view. For example, you may enter an a trunk or trunk group to run the report.

All possible fields on this window are described here:

Field	Definition
Trunk group (daily, weekly, and monthly)	Enter the appropriate trunk group name or number. See on-line help for the valid numerical entries for your particular switch.
Date	<p>Enter the date you would like the report to cover:</p> <ul style="list-style-type: none"> <li>● A month/day/year (for example, 3/21/02)</li> <li>● A minus offset based on today's date (for example, - 1 for yesterday)</li> </ul>
Dates (daily, weekly, monthly)	<p>Enter the dates for the days or the start dates for the weeks or the months you would like the report to cover.</p> <ul style="list-style-type: none"> <li>● Daily - enter the days</li> <li>● Weekly - enter the start date for the weeks. When you specify a date for a weekly report, that date must correspond to the week start day selected in the System Setup-Storage Intervals window. If the date and day do not match, the message No records found displays in the status line.</li> <li>● Monthly - enter the first day of the months</li> </ul> <p>Use any of the following formats:</p> <ul style="list-style-type: none"> <li>● A month/day/year (for example, 3/21/02)</li> <li>● A minus offset based on today's date (for example, - 1 for yesterday)</li> <li>● A semicolon (;) to separate individual data entry items (for example, 3/21/02;3/23/02;3/25/02)</li> <li>● A hyphen to designate a range of dates (for example, 3/21/02-3/25/02). For the weekly and monthly versions, the report includes any weeks or months that begin in the range.</li> </ul> <p>When you specify a date for a weekly report, that date must correspond to the week start day selected in the System Setup-Storage Intervals window. If the date and day do not match, the message No records found displays in the status line. The month start date must be the first day of the month.</p>

Field	Definition
Times (interval)	<p>Enter the time you would like the report to cover. Use any of the following formats:</p> <ul style="list-style-type: none"><li>● AM/PM (for example, 7:30AM-5:00PM)</li><li>● Military time (for example, 7:30-17:00)</li><li>● You can use a minus offset based on today's date (for example, -1 for yesterday).</li></ul>
Destination	<p>Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.</p>

# Trunk/Trunk Group Busy Hour report

The Trunk/Trunk Group Busy Hour report displays the busiest hour of the day for each trunk group you select. The busiest hour is calculated as a set of contiguous intervals that make up an hour (one 60-minute interval, two 30-minute intervals, or four 15-minute intervals) in which the total holding time for the trunks in the trunk group was the maximum for the day.

## Things to know about this report


---

Here are some things to know about this report:

- The Trunk/Trunk Group Busy Hour is available in daily version only.
- The busiest hour is calculated as a set of contiguous intervals that make up an hour (one 60-minute interval, two 30-minute intervals, or four 15-minute intervals) in which the total holding time for the trunks in the trunk group was the maximum for the day.
- The database items for the Trunk/Trunk Group Busy Hour report are stored in the dtkgp (daily) table.
- You cannot customize this report.
- This report uses the Trunk/Trunk Group/Busy Hour report input window. Select a trunk group that you want to view on the report. See [Trunk/Trunk Group report input fields](#) on page 458 for more information.

Trunk/Trunk Group Busy Hour report example

The following figure provides an example of the Trunk/Trunk Group Busy Hour report:

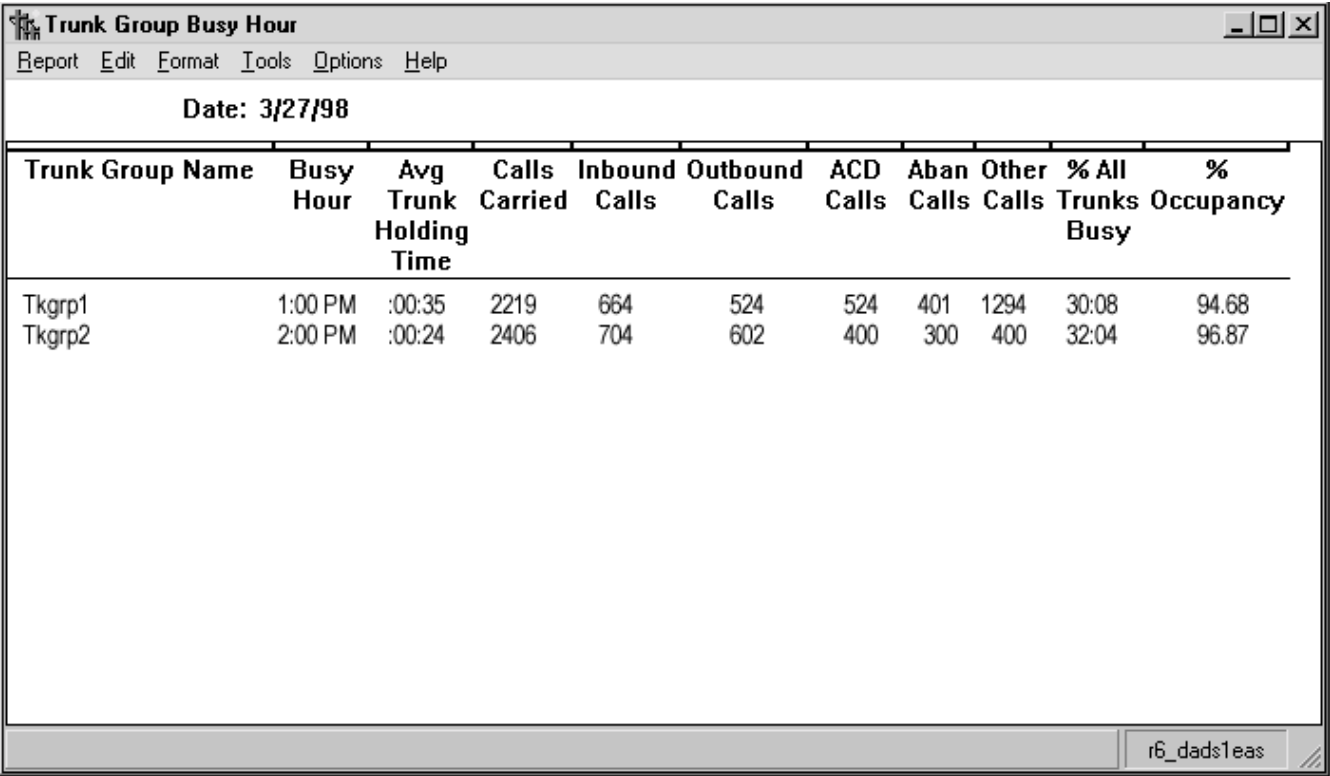

Trunk/Trunk Group Busy Hour report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date	Day for which the report was run (selected in the report input window).	ROW_DATE
Trunk Group Name	Trunk group name or number for which the report was requested.	syn(TKGRP)
Busy Hour	Start time of the hour in which the trunk group was the busiest.	BH_STARTTIME

Report heading	Description	Database item, calculation, or <calculation name>
Avg Trunk Holding Time	Average holding time for all incoming and outgoing calls in the trunk group that completed during the busy hour.	$(BH\_INTIME+BH\_OUTTIME)/(BH\_INCALLS+BH\_OUTCALLS)$
Calls Carried	Total number of all incoming and outgoing calls carried by this trunk group that completed during the busy hour.	$BH\_INCALLS+BH\_OUTCALLS$
Inbound Calls	Total number of all incoming calls carried by this trunk group that completed during the busy hour.	$BH\_INCALLS$
Outbound Calls	Total number of all outgoing calls carried by this trunk group that completed during the busy hour.	$BH\_OUTCALLS$
ACD Calls	Total number of all ACD calls carried by this trunk group and answered by an agent that completed during the busy hour.	$BH\_ACDCALLS + BH\_OACDCALLS$
Aban Calls	Total number of all calls abandoned by callers on this trunk group during the busy hour. With vectoring, this includes calls that were abandoned from vector processing. With switches, this includes all calls carried by the trunk group that were abandoned, except for calls directly to unmeasured stations that did not go through a measured VDN or split/skill.	$BH\_ABNCALLS + BH\_OABNCALLS$
Other Calls	Number of calls that received a busy signal, calls disconnected, extension calls, short calls, and calls of unknown disposition.	$BH\_OTHERCALLS + BH\_OOTHERCALLS$
% All Trunks Busy	Percentage of time during the hour that all trunks were busy.	$BH\_ALLINUSETIME/36$
% Occupancy	Percentage of time during the hour that trunks were occupied by incoming and outgoing calls.	$(BH\_INTIME + BH\_OUTTIME)/100$

## Trunk report

The Trunk report displays call traffic data for a single trunk. With this report, you can review trunks in any measured trunk group.

You can use this report to verify that call traffic levels for a trunk are appropriate throughout the time period specified. You can also monitor outgoing calls made throughout the day.

### Things to know about this report

---

Here are some things to know about this report:

- The Trunk report is available in interval, daily, weekly, and monthly versions.
- The database items for the Trunk report are stored in the htrunk (interval), dtrunk (daily), wtrunk (weekly), and mtrunk (monthly) tables.
- The report item Centum Call Seconds (CCS) is the number of 100-second increments in which the trunk was busy during the intrahour interval. A trunk is seized" while the call is both in queue and connected to an agent. Therefore, wait time for abandoned calls is figured into the CCS figures. For example, since a half-hour has 1800 seconds, the maximum CCS for each trunk in a trunk group is 18 CCS. Multiplying 18 CCS by the number of trunks in a trunk group gives you the maximum occupancy for the trunk group, which you can then compare with your actual CCS. If your intrahour interval is 15- or 60-minutes, your number will be different.
- This report uses the Trunk/Trunk Group/Busy Hour report input window. Select a trunk group that you want to view on the report. See [Trunk/Trunk Group report input fields](#) on page 458 for more information.



## Trunk report example

The following figure provides an example of the Trunk report:

* Trunk Daily									
Report Edit Format Tools Options Help									
Trunk Group Name: <b>ISDN</b>									
Trunk: <b>01A10001</b>									
Date	Inbound Calls	Inbound Aban Calls	Avg Inbound Trunk Hold Time	Inbound CCS	Outbound Calls	Outbound Aban Calls	Avg Outbound Trunk Hold Time	Outbound CCS	Maint Busy Time
<b>Totals</b>	<b>914</b>	<b>25</b>	<b>2:01</b>	<b>1102.16</b>	<b>0</b>	<b>0</b>		<b>.00</b>	<b>:00</b>
11/17/1999	264	4	2:03	324.22	0	0		.00	:00
11/18/1999	149	7	2:25	216.48	0	0		.00	:00
11/23/1999	243	6	1:52	271.82	0	0		.00	:00
11/24/1999	258	8	1:52	289.64	0	0		.00	:00

Double Click To Run Format Table

Español

## Trunk report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	Day, week, or month for which the report was run (selected in the report input window).	ROW_DATE
Trunk Group Name	Trunk group name or number for which the report was requested.	syn(TKGRP)
Trunk	Trunk number (physical equipment location) of the trunk.	EQLOC
ACD	ACD name or number associated with the trunk group.	syn(ACD)

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Time (Interval only)	Intrahour intervals for which the report shows data (selected in the report input window).	STARTTIME, STARTTIME + INTRVL
Inbound Calls	Total number of all incoming calls carried by this trunk that completed during the specified time period.	INCALLS
Aban Calls	Total number of inbound calls abandoned by the caller during the specified time period.	ABNCALLS
Avg Inbound Trunk Hold Time	Average holding time for all incoming calls that completed during the specified time period. Average holding time includes time in vector processing, in queue, ringing, talking, and holding.	INTIME / INCALLS; <AVG_TRK_HOLD_TIME_IN>
Inbound CCS	Total trunk occupancy by incoming calls during the specified time period.	I_INOCC / 100
Outbound Calls	Total number of all outgoing calls carried by this trunk that completed during the specified time period.	OUTCALLS
Outbound Aban Calls	Number of outbound ACD calls (if you have the outgoing call management application on ASAI) abandoned at the far end. (switches with ASAI).	O_ABNCALLS
Avg Outbound Trunk Hold Time	Average holding time of all outgoing calls that completed during the specified time period.	OUTTIME / OUTCALLS; <AVG_TRK_HOLD_TIM_OUT>
Outbound CCS	Total trunk occupancy of outgoing calls during the specified time period.	I_OUTOCC/100
Maint Busy Time	Total time of all maintenance-busy periods for this trunk for the time period.	MBUSYTIME

# Trunk Group report

The Trunk Group report summarizes the incoming and outgoing traffic of every trunk in a trunk group for the specified time period. You could use this report to verify that the number of trunks available to your splits/skills is appropriate and to monitor the number of outgoing calls.

Also, because it lists trunks by physical location on the switch and totals trunk failures, the Trunk Group report can be useful for troubleshooting problems with trunks.

## Things to know about this report


---

Here are some things to know about this report:

- The Trunk Group report is available in daily, weekly, and monthly versions.
- The database items for the Trunk Group report are stored in the dtrunk (daily), wtrunk (weekly), and mtrunk (monthly) tables.
- The report item Centum Call Seconds (CCS) is the number of 100-second increments in which the trunk was busy during the intrahour interval. A trunk is seized" while the call is both in queue and connected to an agent. Therefore, wait time for abandoned calls is figured into the CCS figures. For example, since a half-hour has 1800 seconds, the maximum CCS for each trunk in a trunk group is 18 CCS. Multiplying 18 CCS by the number of trunks in a trunk group gives you the maximum occupancy for the trunk group, which you can then compare with your actual CCS. If your intrahour interval is 15 or 60 minutes, your number will be different.
- Trunks that fail are immediately put in the Maintenance Busy State.
- This report uses the Trunk/Trunk Group/Busy Hour report input window. Select a trunk group that you want to view on the report. See [Trunk/Trunk Group report input fields](#) on page 458 for more information.

Trunk Group report example

The following figure provides an example of the Trunk Group report:

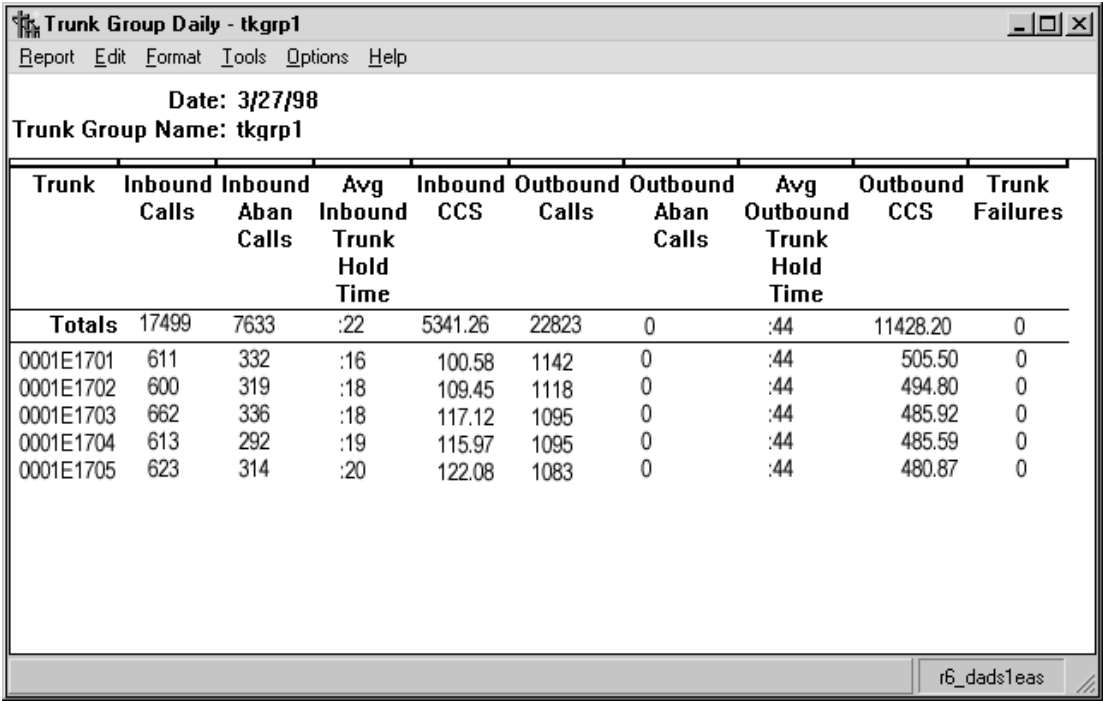

Trunk Group report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week starting, Month starting	Day, week, or month for which the report was run (selected in the report input window).	ROW_DATE
Trunk Group Name	Trunk group name or number for which the report was requested.	syn(TKGRP)
ACD	ACD name or number associated with the trunk group.	syn(ACD)
Trunk	Trunk number (physical equipment location) of the trunk.	EQLOC

Report heading	Description	Database item, calculation, or <calculation name>
Inbound Calls	Total number of inbound calls carried by this trunk that completed during the specified time period.	sum(INCALLS)
Aban Calls	Total number of inbound calls abandoned by the caller during the specified time period.	sum(ABNCALLS)
Avg Inbound Trunk Hold Time	Average holding time for all incoming calls that completed during the time period. Average holding time includes time in vector processing, in queue, ringing, talking, and on hold.	sum(INTIME)/sum(INCALLS) <AVG_TRK_HOLD_IN_SUM>
Inbound CCS	Total trunk occupancy by incoming calls during the specified time period.	sum(I_INOCC)/100
Outbound Calls	Number of outbound calls that were carried by this trunk that completed during the specified time period.	sum(OUTCALLS)
Outbound Aban Calls	Number of outbound ACD calls (if you have the Outgoing Call Management application on ASAI) that abandoned at the far end.	sum(O_ABNCALLS)
Avg Outbound Trunk Hold Time	Average holding time of all outgoing calls on this trunk that completed during the specified time period.	sum(OUTTIME)/ sum(OUTCALLS) <AVG_TRK_HOLD_OUT_SUM>
Outbound CCS	Total trunk occupancy of outgoing calls during the specified time period.	sum(I_OUTOCC) / 100
Trunk Failures	Number of trunk failures for this trunk or total for the trunk group. These can be hardware failures or failures due to internal switch errors.	sum(FAILURES)

## Trunk Group Summary report

The Trunk Group Summary report shows the level of incoming and outgoing call traffic for an individual trunk group. You could use this report to verify that the number of trunks available to your splits is appropriate and to monitor the number of outgoing calls.

### Things to know about this report

---

Here are some things to know about this report:

- The Trunk Group Summary report is available in interval, daily, weekly, and monthly versions.
- The database items for the Trunk Group Summary report are stored in the htkgrp (interval), dtkgp (daily), wtkgrp (weekly), and mtkgrp (monthly) tables.
- For both inbound and outbound calls, Call Carried = Calls Answered + Calls Abandoned + Other Calls. Also, Other Calls = Calls Given a Busy Signal + Calls Disconnected by the Switch + Calls Answered by an Unmeasured Agent.
- The report item Centum Call Seconds (CCS) is the number of 100-second increments in which the trunk was busy during the intrahour interval. A trunk is seized" while the call is both in queue and connected to an agent. Therefore, wait time for abandoned calls is figured into the CCS figures. For example, since a half-hour has 1800 seconds, the maximum CCS for each trunk in a trunk group is 18 CCS. Multiplying 18 CCS by the number of trunks in a trunk group gives you the maximum occupancy for the trunk group, which you can then compare with your actual CCS. If your intrahour interval is 15 or 60 minutes, your number will be different.
- A Trunk Group Summary can have two entries for one interval if the trunk group termination changed during that interval. For example, at the start of the interval, trunk group 2 terminates at VDN58803. During the interval the termination is changed to VDN58804. The system shows two trunk group records for reports (interval, daily, weekly, and monthly) containing the interval in which the termination was changed.
- This report uses the Trunk/Trunk Group/Busy Hour report input window. Select a trunk group that you want to view on the report. See [Trunk/Trunk Group report input fields](#) on page 458 for more information.

## Trunk Group Summary report example

The following figure provides an example of the Trunk Group Summary report:

Trunk Group Summary Daily - tkgrp1																	
Report Edit Format Tools Options Help																	
Trunk Group Name: tkgrp1																	
Number of trunks:																	
Date	Inbound Calls	ACD Calls	Inbound Aban Calls	Other Calls	Avg Inbound Trunk Hold Time	Inbound CCS	Outbound Calls	Outbound ACD Calls	Outbound Aban Calls	Outbound Other Calls	Avg Outbound Trunk Hold Time	Outbound CCS	Outbound Far End Comp	Outbound Blocked Calls	% All Trunks Busy	% Main Bus	
<b>Totals</b>	17499	9861	7633	5	:22	5341.26	22823	0	0	22823	:44	11428.20	1199	0	19.47	0.00	
12:00-12:30AM	602	463	138	1	:15	89.51	715	0	0	715	:40	288.53	294	0	18.72	0.00	
12:30-1:00AM	592	462	130	0	:15	90.92	722	0	0	722	:40	290.91	275	0	18.17	0.00	
1:00-1:30AM	535	406	129	0	:15	80.65	709	0	0	709	:42	297.09	176	0	16.56	0.00	
1:30-2:00AM	509	385	124	0	:16	81.28	719	0	0	719	:43	306.03	144	0	24.00	0.00	
2:00-2:30AM	558	424	134	0	:14	79.78	714	0	0	714	:43	306.27	138	0	21.39	0.00	

## Trunk Group Summary report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Trunk Group Name	Name or number of the trunk group for which the report was requested.	syn(TKGRP)
Number of trunks	Number of trunks in the trunk group.	TRUNKS
Time (for interval reports only)	Intrahour intervals for which the report shows data (selected in the report input window).	STARTTIME, STARTTIME + INTRVL
Date, Week starting, Month starting	Day, week, or month for which the report was run (selected in the report input window).	ROW_DATE
Inbound Calls	Total number of inbound calls carried by this trunk group that completed during the specified time period.	sum(INCALLS)

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
ACD Calls	Total number of inbound split/skill or direct agent calls answered by agents that completed during the specified time period.	sum(ACDCALLS)
Inbound Aban Calls	Total number of inbound calls abandoned by the caller during the specified time period.	sum(ABNCALLS)
Other Calls	Number of inbound calls that were not answered as ACD calls or abandoned. This includes calls that were forced busy, disconnected, answered extension-in calls, calls outflowed off the switch, short inbound calls, and calls with unknown dispositions.	sum(OTHERCALLS)
Avg Inbound Trunk Hold Time	Average trunk holding time for all incoming calls that completed during the period. This is the average length of time a typical incoming call made use of a trunk (the trunk could not be used for another call during that time).	sum(INTIME)/sum(INCALLS) <AVG_TRK_HOLD_IN_SUM>
Inbound CCS	Total trunk occupancy by incoming calls during the specified time period.	sum(I_INOCC) (in seconds)/100
Outbound Calls	Number of outbound calls that were carried by this trunk group that completed during the specified time period.	sum(OUTCALLS)
Outbound ACD Calls	Total number of outbound calls (if you have the Outgoing Call Management application on ASAI) that were offered to one or more splits/skills and handled by an agent in one of those splits/skills.	sum(O_ACDCALLS)
Outbound Aban Calls	Number of outbound ACD calls (if you have the Outgoing Call Management application on ASAI) that abandoned at the far end.	sum(O_ABNCALLS)



Report heading	Description	Database item, calculation, or <calculation name>
Outbound Other Calls	Number of outbound calls that were not answered or abandoned as ACD calls. This includes calls that were given a busy or disconnect by the switch, extension-out calls, short outgoing calls, and calls of unknown disposition.	sum(O_OTHERCALLS)
Avg Outbound Trunk Hold Time	Average trunk holding time for outgoing calls carried by this trunk group that completed during the specified time period.	sum(OUTTIME)/ sum(OUTCALLS) <AVG_TRK_HOLD_OUT_SUM>
Outbound CCS	Total trunk occupancy of outgoing calls during the specified time period.	sum(I_OUTOCC) / 100
Outbound Far End Comp	Number of outbound calls that were answered at the far end.	sum(COMPLETED)
Outbound Blocked Calls	The number of outbound call attempts that were blocked because all the trunks were busy.	sum(BLOCKAGE)
% All Trunks Busy	Percentage of time that all trunks were busy during the specified time period.	For interval 100*sum(ALLINUSETIME) / sum(INTRVL*60) For daily: <PERCENT_AL_BSY_SUM_D> For weekly: <PERCENT_AL_BSY_SUM_W> For monthly: <PERCENT_AL_BSY_SUM_M>
% Maint Busy	Percentage of time that trunks were out of service for maintenance during the specified time period.	for interval: 100*sum(MBUSYTIME) / (avg(INTRVL*60)*sum(TRUNKS)) For daily: <PERCENT_MBUSY_SUM_D> For weekly: <PERCENT_MBUSY_SUM_W> For monthly: <PERCENT_MBUSY_SUM_M>

# VDN reports

This section describes VDN reports.

## General information about VDN reports

### What a VDN report contains

---

The VDN reports give you the following specific information about VDNs and vectors:

- A summary of incoming ACD call-handling performance for a specified VDN
- Specific call data for a single VDN
- The number of calls answered by a measured agent or calls connected to a non-ACD destination (like an attendant) and the abandoned calls that were processed by a VDN in a selected time period
- For the busiest hour in a selected day, call-handling data for selected VDNs
- Call-handling data for several VDNs and ACDs

### Organization of VDN reports


---

The following list shows how the VDN reports are structured in Supervisor:

- [VDN Busy Hour report](#) on page 477
- [VDN Call Profile report](#) on page 480
- [VDN Graphical Busy/Abandon/Disconnect Comparison report](#) on page 484
- [VDN Graphical Call Profile report](#) on page 487
- [VDN Graphical Service Level report](#) on page 491
- [VDN Multi-ACD Flow report](#) on page 494
- [VDN report](#) on page 498
- [VDN Skill Preference report](#) on page 503

## VDN report selector window

The following figure is an example of the VDN reports selector window. The reports are explained in the same order as listed in the window.

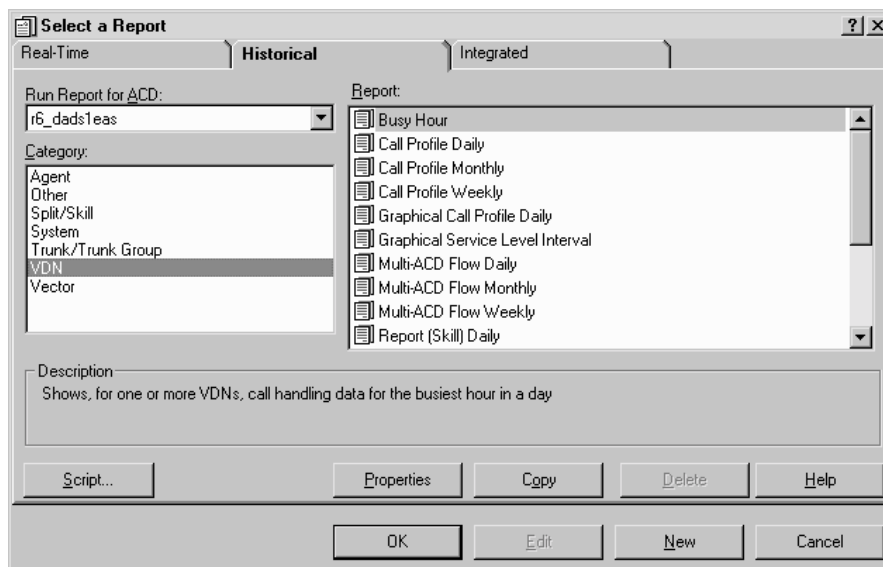

# VDN report input fields

## VDN report input fields

---

The following table describes the input fields on historical VDN report input windows. Not all reports use all fields; refer to information for the specific report you are running to determine what you want to view. You will generally select a VDN to run the report.

All possible fields on this window are described here:

Field	Definition
VDN	Enter the name or number of the VDN you want to include in the report.
Date	Enter the date you would like the report to cover: <ul style="list-style-type: none"><li>● A month/day/year (for example, 3/21/02)</li><li>● A minus offset based on today's date (for example, - 1 for yesterday)</li></ul>
Times (interval)	Enter the time you would like the report to cover. Use any of the following formats: <ul style="list-style-type: none"><li>● AM/PM (for example, 7:30AM-5:00PM)</li><li>● Military time (for example, 7:30-17:00)</li><li>● You can use a minus offset based on today's date (for example, -1 for yesterday).</li></ul> Select the information from the pull-down list of previously used items. During each CMS session, Supervisor recalls the items you have selected for each input field. You can use the pull-down list to select an item for the input field.
Destination	Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.

## VDN Busy Hour report

The VDN Busy Hour report shows call handling data for the busiest hour in the selected day for each selected VDN.

The busiest hour is the set of contiguous intervals, totaling an hour, that had the highest number of incoming calls for the VDN. For example, if your system stores data in 15-minute intervals, the busiest hour might be the four intervals from 10:15 a.m. to 11:15 a.m. or the four intervals from 4:30 p.m. to 5:30 p.m.

### Things to know about this report

Here are some things to know about this report:

- The Calls Offered report item includes all calls that entered the VDN.
- The VDN Busy Hour report is available in interval version only.
- The database items used in the VDN Busy Hour are stored in the hvdn (interval) table.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. See [VDN report input fields](#) on page 476 for more information.

### VDN Busy Hour report example

The following figure provides an example of the VDN Busy Hour report:

The screenshot shows a window titled "VDN Busy Hour" with a menu bar (Report, Edit, Format, Tools, Options, Help) and a date field set to "Date: 3/27/98". Below the menu is a table with the following data:

VDN Name	Busy Hour	Inbound Calls	ACD Calls	Avg ACD Time	Aban Calls	Forced Busy Calls	Forced Disc Calls	Other Calls
VDN1	12:30AM	854	591	:08	263	0	0	0

At the bottom of the window, there is a status bar with the text "Double Click To Run Format Table" and a user identifier "r6\_dads1eas".

## VDN Busy Hour report description

---

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date	Day for which the report was run (selected in the report input window).	ROW_DATE
ACD	ACD associated with the VDNs in the report. This ACD is always the current ACD.	syn(ACD)
VDN Name	Number or name of each VDN for which the report shows data (selected in the report input window).	syn(VDN)
Busy Hour	Busiest hour is the set of contiguous intervals totaling an hour that had the highest number of completed incoming calls to the associated VDN.	BH_STARTTIME
Inbound Calls	Number of calls to the VDN that were completed in the busy hour.	BH_VDNCALLS
ACD Calls	Number of calls to the VDN completed during the busy hour that were answered by an agent as split/skill or direct agent calls.	BH_ACDCALLS
Avg ACD Time	Average time that agents spent talking to callers on split/skill and direct agent ACD calls that completed during the busy hour to the VDN. This does not include HOLDTIME.	BH_ACDDTIME/ BH_ACDCALLS
Aban Calls	Number of calls to the VDN that were abandoned during the busy hour.	BH_ABNCALLS
Forced Busy Calls	Number of calls that received a forced busy signal while being processed by the VDN (in the busy hour).	BH_BUSYCALLS

Report heading	Description	Database item, calculation, or <calculation name>
Forced Disc Calls	Number of calls that received a forced disconnect while being processed by the VDN (in the busy hour).	BH_DISCCALLS
Other Calls	Number of calls that connected to a non-ACD destination while being processed by the VDN (in the busy hour).	BH_OTHERCALLS - BH_BUSYCALLS - BH_DISCCALLS

## VDN Call Profile report

The VDN Call Profile report displays the numbers of answered/connected and abandoned calls within each of the administered service level increments for the VDN during the selected time period. The VDN Call Profile report also displays the acceptable service level administered for the VDN and the percentage of calls completed during the reporting period that were answered/connected within that service level.

Because this report shows you how long it takes for calls to be answered or abandoned, you can determine how long callers are willing to wait for agents before hanging up. With this information, you can determine the answering speed required to reduce the number of abandoned calls.

### Things to know about this report

---

Here are some things to know about this report:

- The VDN Call Profile report is available only if the Vectoring feature has been purchased and authorized for you to use.
- Each of the ten columns represents a progressively longer wait time. For example, the first column shows calls answered/connected in less than or equal to PERIOD1 seconds, the second column shows calls answered/connected in less than or equal to PERIOD2 seconds, but greater than PERIOD1 seconds, and so on.
- Calls receiving a forced busy or disconnect and calls that outflow (for example, routed to another VDN) are not considered in the VDN Call Profile report.
- The VDN Call Profile report is available in daily, weekly, and monthly versions.
- The database items used in the VDN Call Profile report are stored in the dvdn (daily), wvdn (weekly), and mvdn (monthly) tables.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. See [VDN report input fields](#) on page 476 for more information.

### Prerequisite system administration


---

You must define your acceptable service level and service level increments for this VDN in the VDN Call Profile Setup window. If you do not define your service level and increments, zero (0) is used for all increments, and all calls appear in the first increment. See the Avaya Call Management System Administration document for more information.



## VDN Call Profile report example

The following figure provides an example of the VDN Call Profile report:

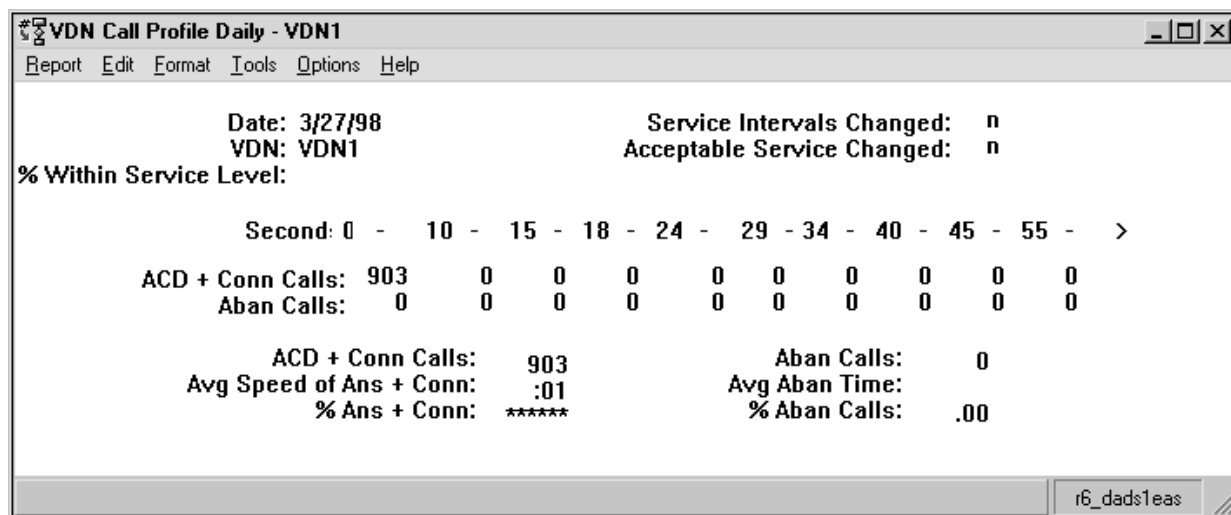

## VDN Call Profile report description

---

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	Day, week, or month for which the report was run (selected in the report input window).	ROW_DATE
VDN	Number or name of the VDN for which the report shows data (selected in the report input window).	syn(VDN)
ACD	ACD name or number for which the report was run.	syn(ACD)
% Within Service Level	Percentage of incoming calls to the VDN that were answered by a measured agent or connected to a non-ACD destination within the service level (as specified in the VDN Call Profile Setup window).	100*(sum(ACCEPTABLE)/sum(INCALLS)), <PERCENT_SERV_LVL_VDN >
Service Intervals Changed	Indication (YES/NO) as to whether the call profile increments (in the VDN Call Profile window) were changed within the time frame of the report.	syn(YES_NO)
Acceptable Service Changed	Indication (YES/NO) as to whether the acceptable service level (in the VDN Call Profile Setup window) was changed within the time frame of the report.	syn(YES_NO)
Seconds	Lower and upper limits in seconds of each service level increment (as defined in the VDN Call Profile Setup window). These increments represent progressively longer wait time segments in which calls may be answered by a measured agent, connected to a non-ACD destination, or abandoned.	PERIOD1-9

Report heading	Description	Database item, calculation, or <calculation name>
ACD+Conn Calls	Number of calls that, while carried by this VDN, were answered by a measured agent or were connected to a non-ACD destination within each of the service level increments. <b>Connected</b> means calls answered at a non-ACD destination.	sum(ANSCONNCALLS1), sum(ANSCONNCALLS2), through sum(ANSCONNCALLS10)
Aban Calls	Number of incoming calls to the VDN that hung up before they could be answered within each of the service level increments.	sum(ABNCALLS1), sum(ABNCALLS2), through sum(ABNCALLS10)
ACD+Conn Calls (total)	Number of calls that, while being carried by this VDN, were answered by an agent or were connected (to a non-ACD destination). <b>Connected</b> means calls answered at a non-ACD destination.	sum(ACDCALLS + CONNECTCALLS)
Avg Speed of Ans+Conn	Average time, in minutes and seconds, that calls completed in this interval waited before they were answered by an agent or were connected (to a non-ACD destination). This average includes direct agent calls. <b>Connected</b> means calls answered at a non-ACD destination.	sum(ANSTIME + CONNECTTIME) / sum(ACDCALLS + CONNECTCALLS)
% Ans+Conn	Percentage of calls to the VDN answered by a measured agent or connected to a non-ACD destination within the service level. <b>Connected</b> means calls answered at a non-ACD destination.	100*(sum(ACDCALLS + CONNECTCALLS) / sum(INCALLS)), <PERCENT_VDN_ANSCONN >
Aban Calls	Number of calls that were abandoned while being carried by the VDN.	sum(ABNCALLS)
Avg Aban Time	Average time that calls waited before the callers abandoned them.	sum(ABNTIME)/ sum(ABNCALLS), <AVG_ABANDON_TIME_SUM>
% Aban	Percentage of calls that abandoned while carried by this VDN.	100*(sum(ABNCALLS) / sum(INCALLS)), <PERCENT_VDN_ABAN>

## VDN Graphical Busy/Abandon/Disconnect Comparison report

This report shows the percent of busy, abandon, and disconnect for summarized VDNs in one ACD for the date you specify.

### Things to know about this report


---

Here are some things to know about this report:

- The selected ACD is displayed at the bottom right of the report.
- A legend on the right side of the report shows the color scheme for % Busy, % Abandon, and % Disconnect.
- % Busy refers to the percentage of the total calls that are busy for all VDNs on the ACD.
- % Abandon refers to the percentage of the total calls that abandoned for all VDNs on the ACD.
- % Disconnect refers to the percentage of the total calls that are disconnected for all VDNs on the ACD.
- The chart type can be changed. See [Using reports](#) on page 35 for more information.
- The database items are stored in the dvpn (daily) table.
- This report is only available through the Supervisor interface.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. See [VDN report input fields](#) on page 476 for more information.

## VDN Graphical Busy/Abandon/Disconnect Comparison report example

The following figure provides an example of the VDN Graphical Call Profile report:

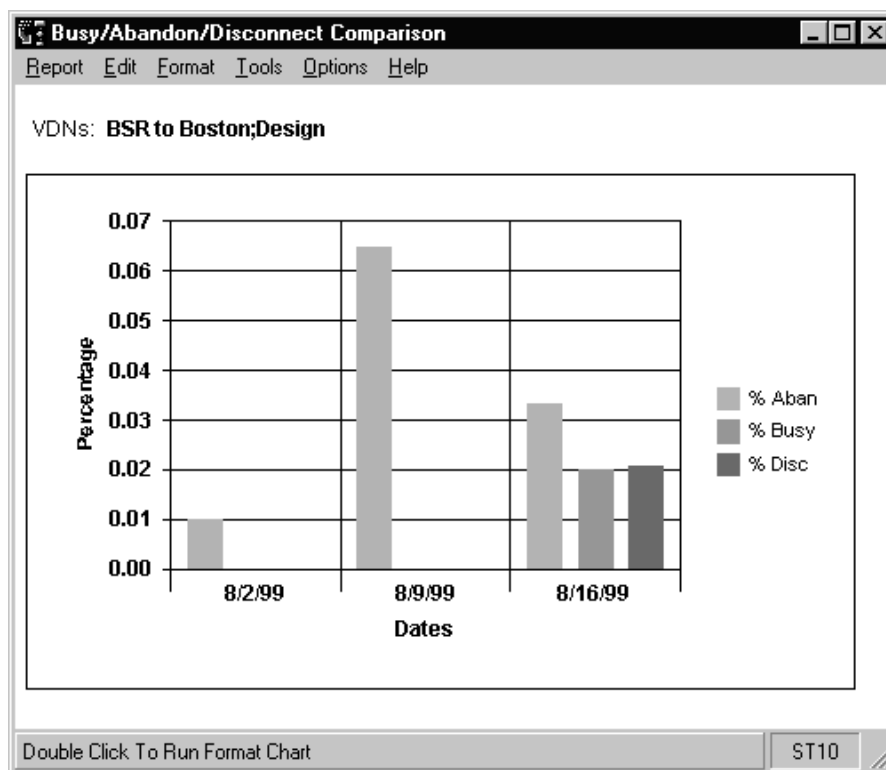

## VDN Graphical Call Profile report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date	The day for which the report was run (selected in the report input window).	ROW_DATE
VDN	The number or name of the VDN for which the report shows data (selected in the report input window).	VDN or syn(VDN)
ACD	ACD name or number that is sending calls to the VDN.	syn(ACD)
Abandon	The percentage of the total number of calls in all VDNs in the selected ACD that abandoned on the selected date.	100 * (sum(ABNCALLS)/sum(INCALLS)) . Note that this calculation is not a standard CMS calculation — it is only available through reports.
Busy	The percentage of the total number of calls in all VDNs in the selected ACD that were busy for the selected date.	100 * (sum(BUSYCALLS)/sum(INCALLS)). Note that this calculation is not a standard CMS calculation — it is only available through reports.
Disconnect	The percentage of the total number of calls in all VDNs in the selected ACD that disconnected on the selected date.	100 * (sum(DISCCALLS)/sum(INCALLS)). Note that this calculation is not a standard CMS calculation — it is only available through reports.

# VDN Graphical Call Profile report

This report shows how calls to the VDN you specify are being handled compared to your call center's predefined Acceptable Service Level for the date you specify.

## Things to know about this report


---

Here are some things to know about this report:

- This report has four charts and displays a collection of VDN call profile related data items at the top of the report. The box to the right of each chart is a legend.
- The three-dimensional pie chart in the upper-left quadrant shows the percentage of ACD calls answered within the predefined Acceptable Service Level and the percentage of ACD calls answered outside this level. The numerical value represented by each pie piece is shown inside the pie chart.
- The stacked area graph in the lower-left quadrant shows the number of ACD calls answered and abandoned within each service level. Note that the number displayed for each service interval is the upper limit of the interval. (For example, if the first two intervals are 5 and 10, the first data point shows answers/abandons within 0-5 seconds, and the second data point shows answers/abandons within 6-10 seconds.)
- The three-dimensional pie charts on the right side of the report show the Percentage Answered Distribution and the Percentage Abandoned Distribution. The numerical value represented by each pie piece is shown inside the pie chart.
- The chart type can be changed. See [Using reports](#) on page 35 for more information.
- The database items are stored in the dvdn (daily) table.
- This report is only available through the Supervisor interface.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. See [VDN report input fields](#) on page 476 for more information.

VDN Graphical Call Profile report example

The following figure provides an example of the VDN Graphical Call Profile report:

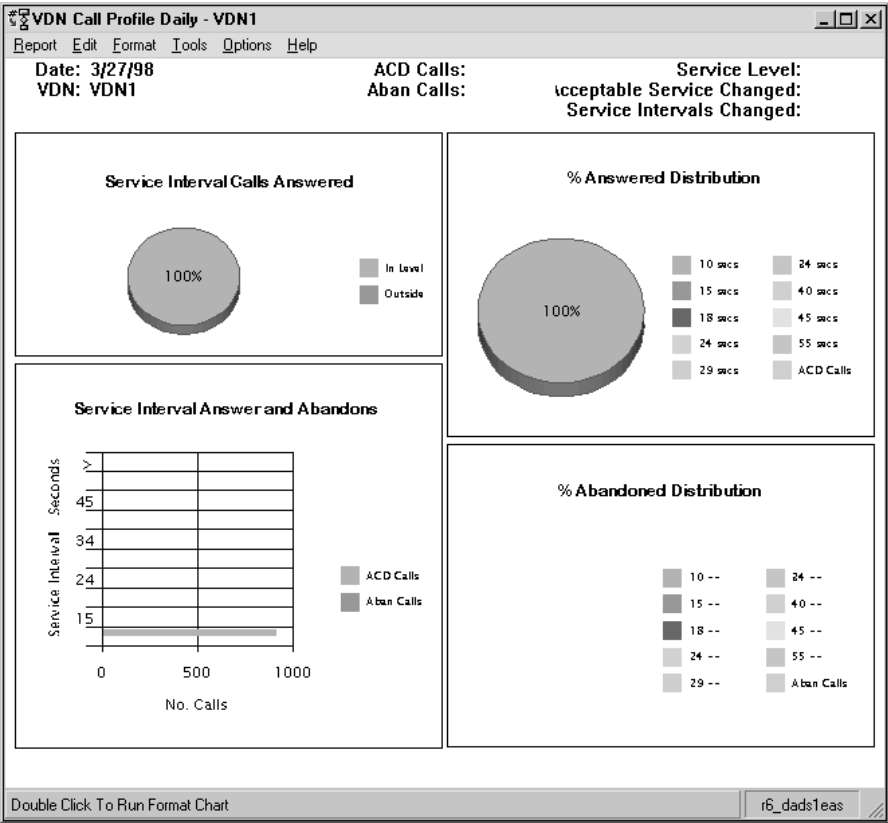



## VDN Graphical Call Profile report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date	The day for which the report was run (selected in the report input window).	ROW_DATE
VDN	The number or name of the VDN for which the report shows data (selected in the report input window).	VDN or syn(VDN)
ACD Calls	The total number of calls answered within the VDN for that day.	ACDCALLS
Aban Calls	The total number of VDN calls abandoned for that day.	ABNCALLS
Service Level	Shows administered acceptable service level.	SERVICELEVEL
Service Intervals Changed	Shows whether or not the service level was changed. A YES appears if the acceptable service level changed during the period covered by the report. Otherwise, a NO appears.	syn(SVCLEVELCHG)
Service Interval Calls Answered	The number of calls that, while connected to this VDN, were answered by an agent or were connected to a non-ACD destination within each of the service level increments. <b>Connected</b> means calls that were answered at a non-ACD destination.	sum (ANSCONNCALLS1), sum (ANSCONNCALLS2 through 10)

<b>Report heading</b>	<b>Description</b>	<b>Database item, calculation, or &lt;calculation name&gt;</b>
Service Interval Calls Answered	Percentage of split/skill ACD calls that were answered by an agent within the predefined acceptable service level. Calls to the split/skill include abandoned calls, calls not answered, and outbound ACD calls placed by an adjunct (for example, outbound predictive dialing). Calls that were not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one split and answered in another split/skill. Percent Within Service Level does not include direct agent calls.	<PERCENT_SERV_LVL_SPL>
Service Interval Answers and Abandons	Percentage of split/skill ACD calls that were answered by an agent within the predefined acceptable service level. Calls to the split/skill include abandoned calls, calls not answered, and outbound ACD calls placed by an adjunct. Calls that were not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one split and answered in another split/skill. Percent Within Service Level does not include direct agent calls.	< <100-PERCENT_SERV_LVL_SPL>
Service Interval - seconds	The lower and upper limit in seconds of each service level increment (as defined in the VDN Call Profile Setup window). These increments represent progressively longer wait time segments in which calls may be answered or abandoned.	PERIOD1-9
% Answered Distribution	A chart displaying the distribution of the percent of calls answered for the day across all intervals.	None.
% Abandoned Distribution	A chart displaying the distribution of the percent of calls abandoned for the day across all intervals.	None.

# VDN Graphical Service Level report

This report shows the percentage of ACD calls answered within the predefined Acceptable Service Level and the percentage of ACD calls abandoned for the date and VDN that you specify.

## Things to know about this report


---

Here are some things to know about this report:

- Each set of vertical bars is labeled with the start time for the service interval. The box below the graph is a legend.
- The chart type can be changed. See [Using reports](#) on page 35 for more information.
- The database items used for the report are stored in the hvdn (intrahour interval) table.
- This report is only available through the Supervisor interface.
- This report is only available through the Supervisor interface.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. See [VDN report input fields](#) on page 476 for more information.

## VDN Graphical Service Level report example

The following figure provides an example of the VDN Graphical Service Level report:

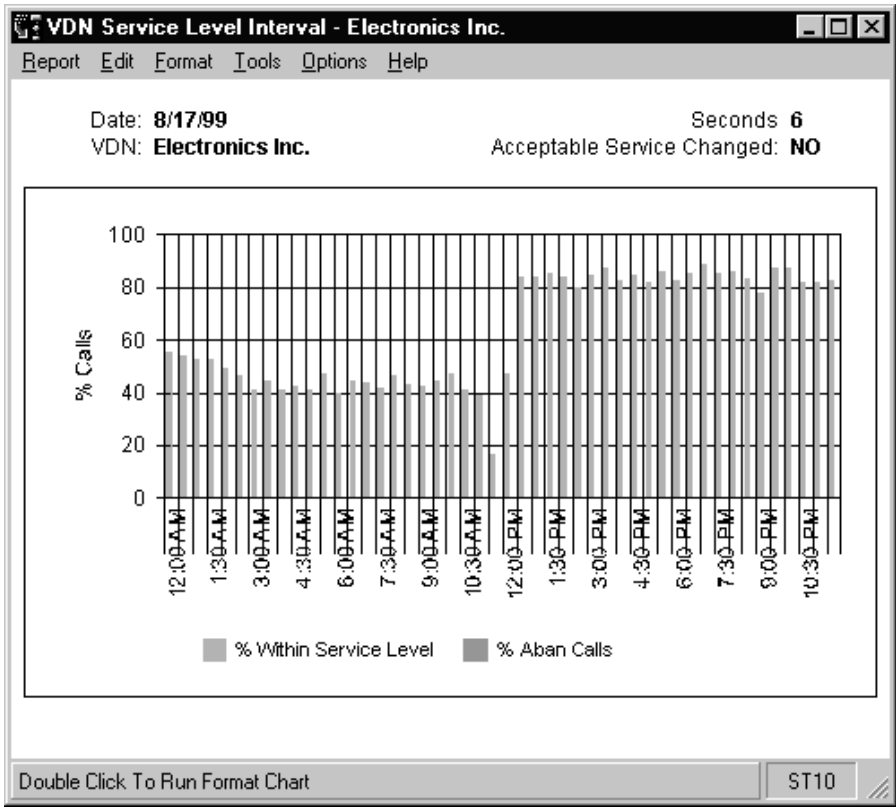

## VDN Graphical Service Level report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date	The day for which the report was run (selected in the report input window).	ROW_DATE
VDN	The number or name of the VDN for which the report shows data (selected in the report input window).	VDN
Seconds	Shows actual administered service level.	SERVICELEVEL
Acceptable Service Changed	Shows whether or not the service level was changed. A YES appears if the acceptable service level changed during the period covered by the report. Otherwise, a NO appears.	syn(SVCLEVELCHG)
% Within Service Level	The percentage of incoming calls to the VDN that were answered by a measured agent or connected to a non-ACD destination within the service level (as specified in the VDN Call Profile Setup window). Data are for each specified intrahour interval or day (selected in the report input window).	<PERCENT_SERV_LVL_VDN>
% Aban Calls	The percentage of incoming calls that were abandoned in the VDN.	<PERCENT_VDN_ABAN>
Times	Intrahour intervals for which the report shows data (as selected in the report input window).	STARTTIME or STARTTIME + INTRVL

## VDN Multi-ACD Flow report

The VDN Multi-ACD Call Flow report shows call-handling data for the VDNs and the ACDs you select. This report can display information on up to eight ACDs.

### Things to know about this report

---

Here are some things to know about this report:

- This report is only available if the Vectoring feature has been purchased and authorized for you to use.
- You must have the Lookahead Interflow feature active on your ACD to get Lookahead Attempts and Completions data.
- The VDN Flow Out report item includes only calls that route to another VDN and route to an external (off-switch) destination.
- The VDN Flow Interflow report item includes both Lookahead Interflow and non-Lookahead Interflow call completions.
- The VDN Multi-ACD Call Flow is available in daily, weekly, and monthly versions.
- The database items used in the VDN Multi-ACD Call Flow are stored in the dvdn (daily), wvdn (weekly), and mvdn (monthly) tables.
- You cannot customize this report.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. This report can display information on up to eight ACDs. See [VDN report input fields](#) on page 476 for more information.

## VDN Multi-ACD Flow report example

The following figure provides an example of the VDN Multi-ACD Flow report:

Date: 3/27/98													
VDN Name	ACD	Inbound Calls	ACD Calls	Aban Calls	Busy + Disc Calls	Backup ACD Calls	Flow In	Flow Out	VDN Interflow	Lookahead Interflow Attempts	Lookahead Interflow Completions	Adjunct Routing Attempts	Adjunct Routing Completions
<b>Totals</b>		9841	4735	5106	0	4735	808	0	0	0	0	0	0
VDN1	r6_dads1eas	9841	4735	5106	0	4735	808	0	0	0	0	0	0

## VDN Multi-ACD Flow report description

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	Day, week, or month for which the report was run (selected in the report input window).	ROW_DATE
VDN Name	Number or name of each VDN for which the report shows data (selected in the report input window). If the same VDN name or number is used on two or more ACDs, that name or number will be repeated for each ACD.	syn(VDN)
ACD	ACD that contains the associated VDN in the report.	syn(ACD)
Inbound Calls	Number of calls to the VDN that were completed in the specified time period.	INCALLS sum(INCALLS) (for the Totals line)

Report heading	Description	Database item, calculation, or <calculation name>
ACD Calls	Number of split/skill and direct agent ACD calls to the VDN completed during the specified time period that were answered by an agent.	ACDCALLS sum(ACDCALLS) (for the Totals line)
Aban Calls	Number of ACD calls to the VDN that hung up before being answered during the specified time period.	ABNCALLS sum(ABNCALLS) (for the Totals line)
Busy+Disc Calls	Number of calls to the VDN that, during the specified time period, received a forced busy signal or disconnect.	BUSYCALLS+ DISCCALLS, <BUSY_DISCONNECT> sum(BUSY+DISCCALLS) (for the Totals line)
ACD Calls	Number of calls that, in the specified time period, were answered by an agent in a backup split/skill (split/skill other than the main split/skill) while carried by the VDN. This report item includes messaging split/skill calls, check backup calls, route to split/skill calls, and direct agent calls.	BACKUPCALLS sum(BACKUPCALLS) (for the Totals line)
Flow In	Number of calls that, in the specified time period, were redirected to this VDN via a <b>route to</b> VDN. Calls are counted regardless of whether they remained connected to the VDN, were abandoned, or were subsequently routed to some other destination.	INFLOWCALLS sum(INFLOWCALLS) (for the Totals line)
Flow Out	Number of calls that, in the specified time period, were routed to another destination via a <b>route to</b> VDN or external destination. It does not include calls routed to another vector via a <b>go to vector</b> step.	OUTFLOWCALLS sum(OUTFLOWCALLS) (for the Totals line)
VDN Interflow	Number of calls that, in the specified time period, were routed from this VDN to a destination outside the switch. This report item includes Lookahead Interflow calls.	INTERFLOWCALLS sum(INTERFLOWCALLS) (for the Totals line)
Lookahead Interflow Attempts	Number of times that, in the specified time period, the switch attempted to route from this VDN using the Lookahead Interflow feature.	LOOKATTEMPTS sum(LOOKATTEMPTS) (for the Totals line)



Report heading	Description	Database item, calculation, or <calculation name>
Lookahead Interflow Completions	Number of calls that, in the specified time period, the switch successfully routed from this VDN using the Lookahead Interflow feature.	LOOKFLOWCALLS sum(LOOKFLOWCALLS) (for the Totals line)
Adjunct Routing Attempts	Number of times that, in the specified time period, a VDN attempted to request routing from an adjunct. This report item includes unsuccessful adjunct routing attempts, which means the adjunct was not able, within the given amount of time established in the vector, to route the call.	ADJATTEMPTS sum(ADJATTEMPTS) (for the Totals line)
Adjunct Routing Completions	Number of calls that, in the specified time period, were successfully routed by an adjunct via an <b>adjunct routing</b> command in a vector. This report item includes direct agent calls completed via the adjunct.	ADJROUTED sum(ADJROUTED) (for the Totals line)

# VDN report

The VDN report gives you historical information for a specified VDN and period of time. The interval, daily, weekly, and monthly VDN reports display, for a particular VDN, various types of data that show how well calls to that VDN were handled.


## Things to know about this report

Here are some things to know about this report:

- This report is only available if the Vectoring feature has been purchased and authorized for you to use.
- If you have Expert Agent Selection (EAS), the VDN report includes three VDN Skill Preference columns on the right-hand side of the report.
- The **go to vector** command allows the ACD to process calls using more than one vector, even though those calls remain connected to the original VDN. Thus, for a report item like Calls Ans in Main, the main splits in which calls are answered may be referenced in a vector other than the first vector to which the VDN is assigned.
- The VDN report is available in interval, daily, weekly, and monthly versions.
- The database items used in the VDN report are stored in the `hvdn` (interval), `dvdn` (daily), `wvdn` (weekly), and `mvdn` (monthly) tables.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. See [VDN report input fields](#) on page 476 for more information.

## VDN report example

The following figure provides an example of the VDN report:

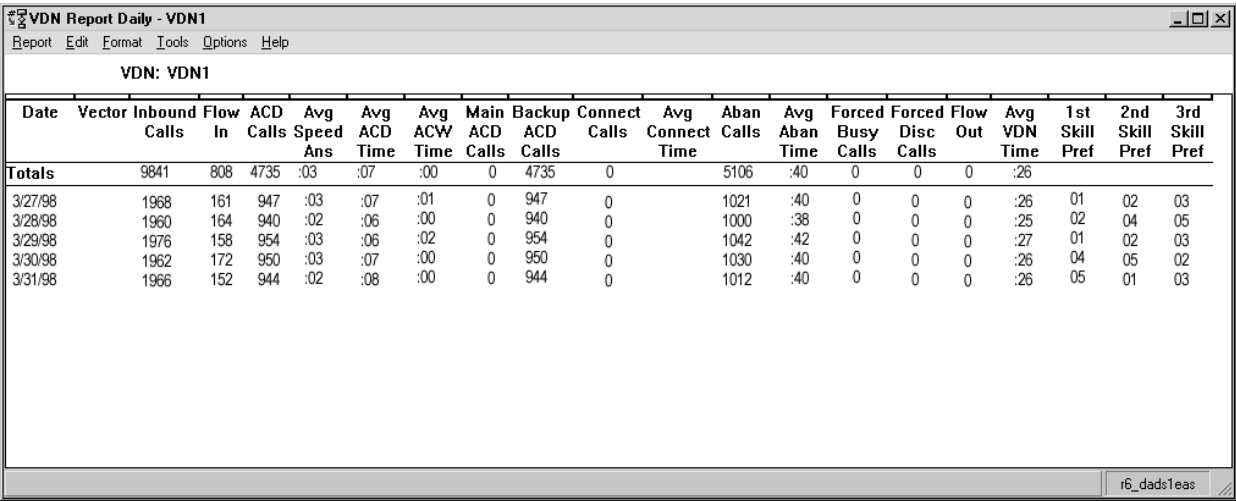

The screenshot shows a window titled "VDN Report Daily - VDN1" with a menu bar (Report, Edit, Format, Tools, Options, Help). The report title is "VDN: VDN1". The table below displays various call statistics for different dates and vectors.

Date	Vector	Inbound Calls	Flow In	ACD Calls	Avg Speed Ans	Avg ACD Time	Avg ACW Time	Main ACD Calls	Backup ACD Calls	Connect Calls	Avg Connect Time	Aban Calls	Avg Aban Time	Forced Busy Calls	Forced Disc Calls	Flow Out	Avg VDN Time	1st Skill Pref	2nd Skill Pref	3rd Skill Pref
Totals		9841	808	4735	:03	:07	:00	0	4735	0		5106	:40	0	0	0	:26			
3/27/98	1968	161	947	:03	:07	:01	0	947	0			1021	:40	0	0	0	:26	01	02	03
3/28/98	1960	164	940	:02	:06	:00	0	940	0			1000	:38	0	0	0	:25	02	04	05
3/29/98	1976	158	954	:03	:06	:02	0	954	0			1042	:42	0	0	0	:27	01	02	03
3/30/98	1962	172	950	:03	:07	:00	0	950	0			1030	:40	0	0	0	:26	04	05	02
3/31/98	1966	152	944	:02	:08	:00	0	944	0			1012	:40	0	0	0	:26	05	01	03

The status bar at the bottom right shows "r6\_dads1eas".

## VDN report description

---

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Date, Week Starting, Month Starting	Days, weeks, or months for which the report was run (selected in the report input window).	ROW_DATE
VDN Name	Number or name of the VDN for which the report shows data (selected in the report input window).	syn(VDN)
ACD	ACD name or number that is sending calls to the VDN.	syn(ACD)
Time (for Interval reports only)	Intrahour intervals for which the report shows data (selected in the report input window).	STARTTIME, STARTTIME + INTRVL
Vector	Number of the vector to which the VDN is assigned. If the VDN-vector association changed during the reporting period, two rows appear in the report for that period, one for each vector associated with the VDN.	VECTOR
Inbound Calls	Number of calls to the VDN within the specified time period. Calls are counted regardless of whether they were answered in the VDN, were abandoned, or were routed to some other destination.	INCALLS sum(INCALLS)
Flow In	Number of calls that, in the specified time period, were redirected to this VDN via the <b>route to VDN</b> vector command. Calls are counted regardless of whether they were answered in the VDN, were abandoned, or were routed to some other destination.	INFLOWCALLS sum(INFLOWCALLS)

Report heading	Description	Database item, calculation, or <calculation name>
ACD Calls	Number of split/skill and direct agent ACD calls completed during the reporting period that were answered while carried by the VDN. This includes calls from <b>queue to</b> , <b>check</b> , <b>route to</b> split/skill, and <b>adjunct routing</b> to a split/skill or direct agent.	ACDCALLS sum(ACDCALLS)
Avg Speed Ans	Average time, in minutes and seconds, split/skill and direct agent ACD calls waited before they were answered by an agent.	ANSTIME/ ACDCALLS, <AVG_ANSWER_SPEED> <AVG_ANSWER_SPEED_SUM>
Avg ACD Time	Average talk time, in minutes and seconds, for split/skill and direct agent ACD calls for this VDN. This does not include HOLDTIME.	ACDTIME/ ACDCALLS, <AVG_ACD_TALK_TIME> <AVG_ACD_TALK_TIM_SUM>
Avg ACW Time	Average amount of time, in the specified time period, that agents spent in after-call work for split/skill and direct agent ACD calls to this VDN.	ACWTIME/ ACDCALLS <AVG_ACW_TIME> <AVG_ACW_TIME_SUM>
Main ACD Calls	Number of calls to the VDN completed during the specified time period that were answered by an agent in a main split/skill. The calls are directed to the main split/skill by the <b>queue to</b> vector command. This item does not include direct agent calls.	ACDCALLS- BACKUPCALLS sum(ACDCALLS) - sum(BACKUPCALLS)
Backup ACD Calls	Number of calls to the VDN completed during the specified time period that were answered by an agent in a backup split/skill (split/skill other than the main split/skill). The calls can be directed to a backup split/skill by a <b>check backup</b> , <b>messaging split/skill</b> , or <b>route to split/skill</b> or direct agent vector command. This item does include direct agent calls.	BACKUPCALLS sum(BACKUPCALLS)

Report heading	Description	Database item, calculation, or <calculation name>
Connect Calls	Number of calls to the VDN that were connected to a non-ACD destination. <b>Connected</b> means calls answered at a non-ACD destination.	CONNECTCALLS
Avg Connect Time	Average time, in minutes and seconds, that calls to the VDN waited before connecting to a non-ACD destination. CMS tracks time starting from the moment a call connects to the VDN and ending the moment the call connects to the destination. <b>Connected</b> means calls answered at a non-ACD destination.	CONNECTTIME / CONNECTCALLS, <AVG_CONNECT_TIME> <AVG_CONNECT_TIME_SUM>
Aban Calls	Number of calls to the ACD that hung up while being carried by this VDN. The number of calls applies to the specified time period.	ABNCALLS sum(ABNCALLS) (for the Totals line)
Avg Aban Time	Average time, in minutes and seconds, that abandoned calls waited in this VDN before they were abandoned. This average, which applies to the specified time period, includes direct agent calls.	ABN TIME/ ABNCALLS, <AVG_ABANDON_TIME> <AVG_ABANDON_TIME_SUM> (for the Totals line)
% Aban	The percentage of calls offered to the VDN that abandoned.	100 * ABNCALLS/INCALLS
Forced Busy Calls	Number of calls that, for the specified time period, received a forced busy signal while being carried by the VDN.	BUSYCALLS sum(BUSYCALLS) (for the Totals line)
Forced Disc Calls	Number of calls that, in the specified time period, received a forced disconnect while being carried by the VDN.	DISCCALLS sum(DISCCALLS) (for the Totals line)
% Busy	The percentage of total calls offered to the VDN that were forced busy by a vector step.	100 * BUSYCALLS/INCALLS
Flow Out	Number of calls that, for the specified time period, were routed to another VDN or external destination via a <b>route to</b> step or <b>adjunct routing</b> command. It does not include calls routed to a new vector via a <b>go to vector</b> command.	OUTFLOWCALLS sum(OUTFLOWCALLS) (for the Totals line)

## Historical reports

Report heading	Description	Database item, calculation, or <calculation name>
% Flow Out	The percentage of total calls offered to the VDN that were directed to another VDN.	100 * OUTFLOWCALLS/INCALLS
Avg VDN Time	Average time, in minutes and seconds, that calls were carried by the VDN, including talk time. This average, which applies to the specified time period, is for all calls, including direct agent calls, abandoned calls, disconnected calls, interflowed calls, and so on.	INTIME/INCALLS, <AVG_VDN_TIME> <AVG_VDN_TIME_SUM> (for the Totals line)
1st Skill Pref	For switches with EAS only, the first skill assigned to this VDN.	SKILL1
2nd Skill Pref	For switches with EAS only, the second skill assigned to this VDN.	SKILL2
3rd Skill Pref	For switches with EAS only, the third skill assigned to this VDN.	SKILL3

## VDN Skill Preference report

The VDN Skill Preference report shows the number of calls answered, average talk time, and average after call work time for calls to the VDN by skill preference for which they were answered. The report lists information for the first, second, and third VDN skill preferences.

### Things to know about this report

Here are some things to know about this report:

- If the VDN skill preferences are referred to explicitly in the vector (for example, **queue to skill xx** instead of **queue to skill 1st**), the calls answered for that skill are included in this report.
- The VDN Skill Preference report is available in interval, daily, weekly, and monthly versions.
- The database items used in the VDN Skill Preference report are stored in the hvdn (interval), dvdn (daily), wvdn (weekly), and mvdn (monthly) tables.
- This report uses the VDN report input window. Select a VDN that you want to view on the report. See [VDN report input fields](#) on page 476 for more information.

### VDN Skill Preference report example

The following figure provides an example of the VDN Skill Preference report:

VDN Skill Preference Daily - Electronics Inc.																			
VDN: Electronics Inc.																			
Date	Vector	Inbound Calls	Avg Speed Ans	Aban Calls	Avg Aban Time	ACD Calls	Avg ACD Time	Avg ACW Time	1st Skill Pref	1st Skill ACD Calls	1st Skill Avg ACW Time	1st Skill Avg ACW Time	2nd Skill Pref	2nd Skill ACD Calls	2nd Skill Avg ACW Time	2nd Skill Avg ACW Time	3rd Skill Pref	3rd Skill ACD Calls	3rd Skill Avg ACW Time
<b>Totals</b>		<b>191100</b>	<b>:08</b>	<b>75</b>	<b>:09*****</b>		<b>:16</b>	<b>:02</b>		<b>0</b>				<b>0</b>				<b>0</b>	
8/2/99	2	50304	:05	5	:0150299	:08	:00	0	0	0			0	0			0	0	
8/9/99	2	5816	:05	9	:015807	:10	:00	0	0	0			0	0			0	0	
8/9/99	998	24712	:05	35	:0024677	:10	:00	0	0	0			0	0			0	0	
8/16/99	2	110268	:09	26	:24*****	:21	:03	0	0	0			0	0			0	0	

ST10

## VDN Skill Preference report description

---

The following table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
VDN	Name or number of the VDN for which the report was run.	syn(VDN)
ACD	Name or number of the ACD for which the report was run.	syn(ACD)
Date, Week Starting, Month Starting	Dates for which the report was run. For weekly and monthly reports, these dates are the starting dates of the weeks or months.	ROW_DATE
Time (for interval reports only)	Intervals which the report covers.	STARTTIME, STARTTIME + INTRVL
Vector	Number of the vector to which the VDN is assigned. If the VDN-vector association changes during the reporting period, two rows will appear in the report for that period, one for each vector associated with the VDN.	VECTOR
Inbound Calls	Number of inbound calls that were directed to the VDN.	INCALLS sum(INCALLS)
Avg Speed Ans	Average speed of answer for split/skill and direct agent ACD calls to the VDN that were completed during the reporting period.	ANSTIME / ACDCALLS <AVG_ANSWER_SPEED> <AVG_ANSWER_SPEED_SUM>
Aban Calls	Number of calls to the VDN during the reporting period that hung up before they could be answered.	ABNCALLS sum(ABNCALLS)
Avg Aban Time	Average time callers to the VDN waited before abandoning.	ABNTIME / ABNCALLS <AVG_ABANDON_TIME> <AVG_ABANDON_TIME_SUM>



Report heading	Description	Database item, calculation, or <calculation name>
ACD Calls	Number of skill and direct agent ACD calls to the VDN completed during the reporting period that were answered by an agent. This includes calls from <b>queue to, check, messaging skill, route to skill</b> , and <b>adjunct routing</b> to a skill or direct agent.	ACDCALLS sum(ACDCALLS)
Avg ACD Time	Average time agents spent talking on skill and direct agent ACD calls to this VDN that were completed during the reporting period. This does not include HOLDTIME.	ACDTIME / ACDCALLS <AVG_ACD_TALK_TIME> <AVG_ACD_TALK_TIM_SUM>
Avg ACW	Average time agents spent in after call work associated with skill and direct agent calls to this VDN that were completed during the reporting period.	ACWTIME / ACDCALLS <AVG_ACW_TIME> <AVG_ACW_TIME_SUM>
1st Skill Pref.	First VDN skill assigned to this VDN.	SKILL1
1st Skill ACD Calls	Number of ACD calls to the VDN completed during the reporting period that were answered by an agent in the first VDN skill.	SKILLCALLS1 sum(SKILLCALLS1)
1st Skill Avg ACD Time	Average talk time for calls to this VDN answered by agents in the first VDN skill preference. This does not include HOLDTIME.	SKILLTIME1 / SKILLCALLS1 sum(SKILLTIME1) / sum(SKILLCALLS1)
1st Skill Avg ACW	Average after call work time for calls to this VDN answered by agents in the first VDN skill preference.	SKILLACWTIME1/SKILLCALLS1 sum(SKILLACWTIME1) / sum(SKILLCALLS1)
2nd Skill Pref.	Second VDN skill assigned to this VDN.	SKILL2
2nd Skill ACD Calls	Number of ACD calls to the VDN completed during the reporting period that were answered by an agent in the second VDN skill preference.	SKILLCALLS2 sum(SKILLCALLS2)
2nd Skill Avg ACD Time	Average talk time for calls to this VDN answered by agents in the second VDN skill. This does not include HOLDTIME.	SKILLTIME2 / SKILLCALLS2 sum(SKILLTIME2) / sum(SKILLCALLS2)
2nd Skill Avg ACW	Average after call work time for calls to this VDN answered by agents in the second VDN skill.	SKILLACWTIME2/SKILLCALLS2 sum(SKILLACWTIME2) / sum(SKILLCALLS2)

## Historical reports

Report heading	Description	Database item, calculation, or <calculation name>
3rd Skill Pref.	Third VDN skill assigned to this VDN.	SKILL3
3rd Skill ACD Calls	Number of ACD calls to the VDN completed during the reporting period that were answered by an agent in the third VDN skill.	SKILLCALLS3 sum(SKILLCALLS3)
3rd Skill Avg ACD	Average talk time for calls to this VDN answered by agents in the third VDN skill. This does not include HOLDTIME.	SKILLTIME3 / SKILLCALLS3 sum(SKILLTIME3) / sum(SKILLCALLS3) (for the Totals line)
3rd Skill Avg ACW	Average after call work time for calls to this VDN answered by agents in the third VDN skill.	SKILLACWTIME3/SKILLCALLS3 sum(SKILLACWTIME3)/sum(SKILLCALLS3) (for the Totals line)

# Vector report

This section describes the vector report.


## General information about the Vector report

### Organization of the Vector report

The Vector report is available in Interval, Daily, Weekly, and Monthly versions.

### Vector report selector window

The following figure is an example of the Vector report selector window.

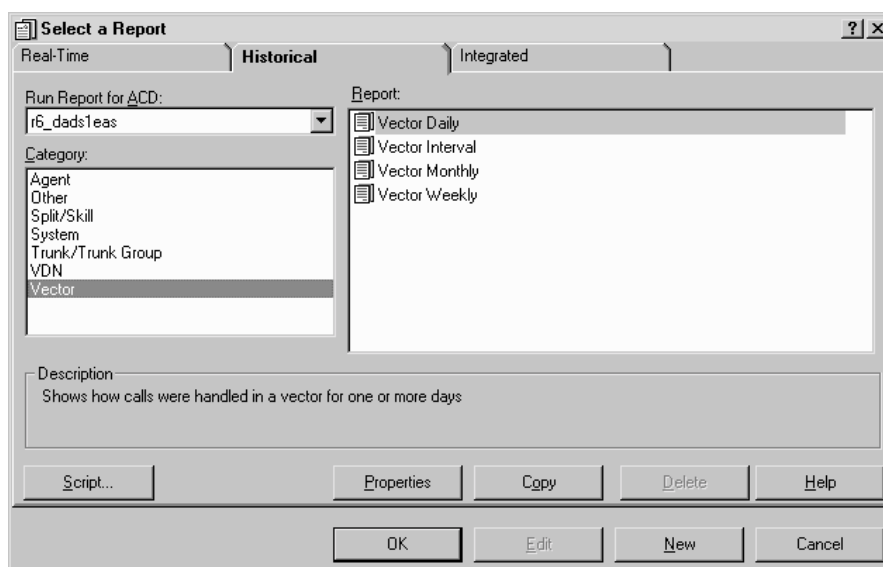

# Vector report input fields

## Vector report input fields

---

The following table describes the fields on the input window.

Field	Definition
Vector	Enter the name or number of the vector you want to include in the report.
Date (for interval report only)	Enter the dates you would like the report to cover: <ul style="list-style-type: none"><li>• You can use the month/day/year (for example, 3/21/02).</li><li>• You can use a minus offset based on today's date (for example, -1 for yesterday).</li></ul>
Date (for daily, weekly, and monthly reports)	Enter the dates you would like the report to cover: <ul style="list-style-type: none"><li>• Daily - enter the days</li><li>• Weekly - enter the start date for the weeks. When you specify a date for a weekly report, that date must correspond to the week start day selected in the System Setup-Storage Intervals window. If the date and day do not match, the message No records found displays in the status line.</li><li>• Monthly - enter the first day of the months</li></ul> Use any of the following formats: <ul style="list-style-type: none"><li>• A month/day/year (for example, 3/21/02)</li><li>• A minus offset based on today's date (for example, -1 for yesterday)</li><li>• A semicolon (;) to separate individual data entry items (for example, 3/21/02;3/23/02;3/25/02)</li><li>• A hyphen to designate a range of dates (for example, 3/21/02-3/25/02). For the weekly and monthly versions, the report includes any weeks or months that begin in the range.</li></ul>

Field	Definition
Times	<p>Enter the time you would like the report to cover.</p> <ul style="list-style-type: none"><li>● You can use AM/PM format (for example, 7:30AM-5:00PM).</li><li>● You can use military time format (for example, 7:30-17:00).</li></ul>
Destination	<p>Choose a report destination. You can select <b>View Report on Screen</b> or <b>Print Report on</b> and then use the Select Printer button to print the report on any Windows printer. The default printer is shown.</p>

# Vector report

The Vector report displays, for a single vector, various types of data that show how calls were handled by the vector.

This menu item is available only if you have purchased the CMS Vectoring feature and that feature has been authorized for you to use.


## Things to know about this report

Here are some things to know about this report:

- The Vector report is available in interval, daily, weekly, and monthly versions.
- The database items for the Vector reports are stored in the hvector (interval), dvector (daily), wvector (weekly), and mvector (monthly) tables.

## Vector report example

The following figure provides an example of a Vector report:

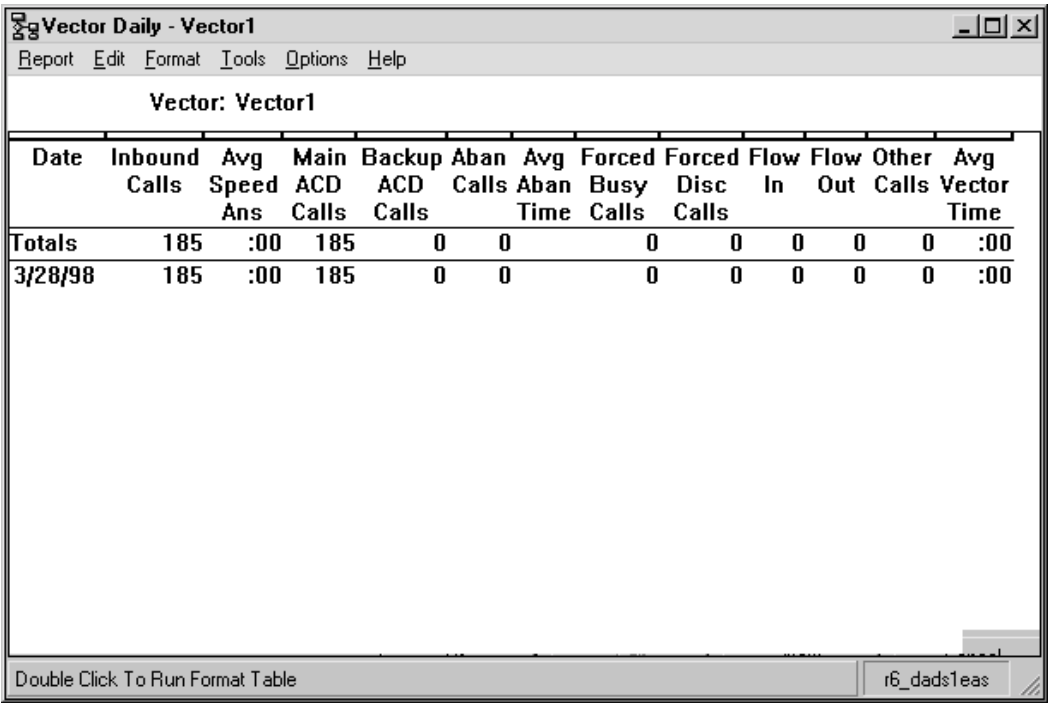

The screenshot shows a window titled "Vector Daily - Vector1" with a menu bar (Report, Edit, Format, Tools, Options, Help). The report title is "Vector: Vector1". The table below displays call statistics for a specific date.

Date	Inbound Calls	Avg Speed Ans	Main ACD Calls	Backup ACD Calls	Aban Calls	Avg Aban Time	Forced Busy Calls	Forced Disc Calls	Flow In	Flow Out	Other Calls	Avg Vector Time
Totals	185	:00	185	0	0		0	0	0	0	0	:00
3/28/98	185	:00	185	0	0		0	0	0	0	0	:00

At the bottom of the window, there is a status bar with the text "Double Click To Run Format Table" and a field containing "r6\_dads1eas".

## Vector report description

The following table describes the report fields for the time period covered by the report.

Report heading	Description	Database item, calculation, or <calculation name>
Vector	Number or name of the vector for which the report shows data (selected in the report input window).	syn(VECTOR)
Date, Week Starting, Month Starting	Day (for interval report) or dates (for daily, weekly, and monthly reports) for which the report was run (selected in the report input window).	ROW_DATE
Time (for Interval reports only)	Intrahour intervals for which the report shows data (selected in the report input window).	STARTTIME, STARTTIME+INTRVL
Inbound Calls	Number of calls processed by the vector that completed in the specified time period.	INCALLS sum(INCALLS) (for the Totals line)
Avg Speed Ans	Average time, in minutes and seconds, that split/skill and direct agent ACD calls waited before they were answered by an agent. This item includes only calls that were answered as a result of processing by this vector.	ANSTIME/ACDCALLS <AVG_ANSWER_SPEED> <AVG_ANSWER_SPEED_SUM> (for the Totals line)
Main ACD Calls	Number of calls completed during the specified time period that were answered by an agent in a main split/skill because of processing by this vector. The calls are directed to the main split/skill by the <b>queue to</b> vector command. This item does not include direct agent calls.	ACDCALLS-BACKUPCALLS sum(ACDCALLS) - sum(BACKUPCALLS) (for the Totals line)
Backup ACD Calls	Number of calls completed during the specified time period that were answered by an agent in a backup split/skill using a vector command other than <b>queue to</b> . This report item includes messaging split/skill calls, check backup calls, route to split/skill calls, and direct agent calls.	BACKUPCALLS sum(BACKUPCALLS) (for the Totals line)

Report heading	Description	Database item, calculation, or <calculation name>
Aban Calls	The number of calls that were abandoned by the caller while in vector processing. This item includes calls that abandoned either while in a split/skill or direct agent queue or while ringing at agent voice terminals or while in vector processing (call need not have queued yet). The number of calls applies for the specified time period.	ABNCALLS sum(ABNCALLS) (for the Totals line)
Avg Aban Time	The average time, in minutes and seconds, that calls waited in the vector before they were abandoned.	ABNTIME/ABNCALLS <AVG_ABANDON_TIME> <AVG_ABANDON_TIME_SUM> (for the Totals line)
Forced Busy Calls	The number of calls that, in the specified time period, received a forced busy signal as a result of processing by this vector.	BUSYCALLS sum(BUSYCALLS) (for the Totals line)
Forced Disc Calls	The number of calls that, in the specified time period, received a forced disconnect as a result of processing by the vector.	DISCCALLS sum(DISCCALLS) (for the Totals line)
Flow In	The number of calls that, in the specified time period, were redirected to this vector from within the switch via <b>route to VDN</b> and <b>go to vector</b> commands.	INFLOWCALLS sum(INFLOWCALLS) (for the Totals line)
Flow Out	Number of calls that, in the specified time period, were redirected to another destination by way of a <b>go to vector</b> , <b>route to</b> , or <b>adjunct routing</b> command to a destination other than a split/skill or direct agent. (Calls that route to a split/skill or direct agent by way of a <b>route to</b> , <b>adjunct routing</b> , or <b>messaging split/skill</b> command are still tracked in the vector.)	OUTFLOWCALLS sum(OUTFLOWCALLS) (for the Totals line)



Report heading	Description	Database item, calculation, or <calculation name>
Other Calls	This includes forced busy calls, forced disconnect calls and outflow calls. OTHERCALLS = INCALLS - ACDCALLS - ABNCALLS.	OTHERCALLS
Avg Vector Time	The average time, in minutes and seconds, that calls were being processed by the vector. This average, which applies to the specified time period of the report, is for all calls to the vector. The item includes calls that were abandoned, disconnected calls, interflowed calls, and so on. Talk time is not included because calls are removed from the vector when the calls connect to agent voice terminals. Vector processing stops when the <b>stop</b> step or the <b>go to vector</b> step is processed or the <b>route to</b> completes successfully; or at the completion of the last step in the vector, when busy or disconnect is sent, when the call abandons, or when a messaging split/skill or adjunct routing command succeeds.	INTIME/INCALLS <AVG_VEC_TIME> <AVG_VEC_TIME_SUM> (for the Totals line)



# Integrated reports

This chapter gives a brief description of each available integrated report and definitions of the input fields. It provides the information needed to complete any integrated report input screen.

## How this chapter is organized

---

Each report section contains the following headings:

- [About integrated reports](#) on page 516
- [Agent reports](#) on page 518
- [Split/Skill reports](#) on page 533
- [VDN report](#) on page 545

# About integrated reports

## Definition of integrated reports


At the Integrated Reports tab, reports that refresh in real-time can be selected to display information accumulated from any interval beginning in the past 24 hours until the time the report is generated. Standard integrated reports show data for Automatic Call Distribution (ACD), agent, split/skill, trunks/trunk group, vector, and Vector Directory Number (VDN) activities. The reports you see depend on your switch type, permissions, and system performance.

## Integrated report data

Once the historical database has been queried for an integrated report, that data will not update automatically. The real-time data contained in the report will continue to update at the end of each interval, but the report must be requested again to get updated historical data. The data for the time period requested will still be available.

## Diagram of integrated reporting system

The following diagram shows how the integrated reporting system is structured. This section follows the report structure outlined in the diagram- agent reports are described first, followed by split/skill reports, then VDN reports. Designer reports are described in the Avaya Call Management System Supervisor Report Designer user guide.

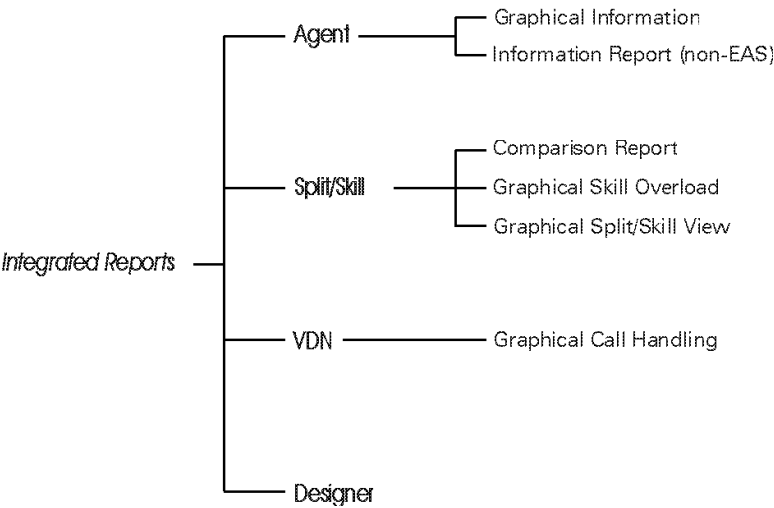

## Presentation of report information

---

The integrated reports are available only when you are using the Supervisor application. They are not available through the Terminal or the standard Avaya Call Management System (CMS).

Only reports that are available exclusively through Supervisor are described in this chapter. An integrated report combines real-time and historical data for a current view of the day. For general information about integrated reports, see [Using reports](#) on page 35, in this document.

# Agent reports

Agent reports allow for access to information and statistics for each agent from specified start times.

## General information about agent reports

### Organization of agent reports

---

The following list shows how the Integrated Agent reports are organized in Supervisor. Depending on your switch type, you will see either the Information or Graphical Information report.


- [Agent Graphical Information report](#) on page 521
- [Agent Information report](#) on page 528

# Agent report selector window and input fields

## Agent report selector window

---

This figure is an example of the Agent report selector window. The reports are explained in the same order as listed in the window:

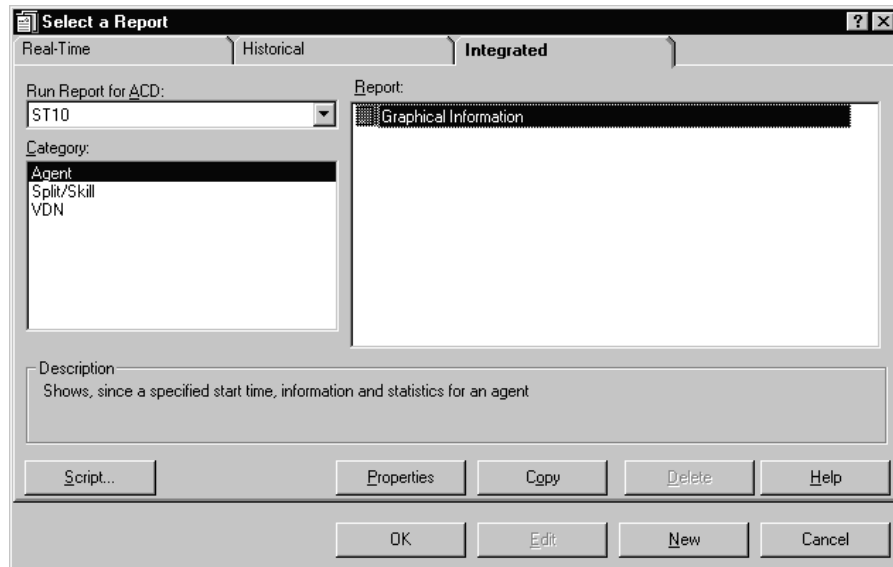

## Agent report input fields

---

The following describes the input fields on Integrated Agent report input windows. The report input window must be filled in to run the report. These fields are the same for all Agent report input windows.

Field	Description
Agent	Enter the name of the agent. The agent's name must be defined in the Dictionary subsystem; otherwise, you will see the agent login IDs.
Report Data Start Time	Enter the day and time (either in military time or with AM/PM specified) you want the report to start collecting data. The time entered (or the time adjusted to the nearest previous interval start time relative to the entered time) is used to populate the Report Data Start Time field on the report. <b>Note:</b> If no report start time is available, the start time will be midnight of the current day. The report start time must be less than 24 hours before the current time.
Refresh Every <#> Seconds	Enter the number of seconds (3 to 600) to specify how rapidly CMS should update the report data. The default value for the <b>Refresh rate in seconds</b> field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check this box to turn on the thresholds for the report.
Run Minimized	Check this box to minimize the report.



# Agent Graphical Information report

The Agent Graphical Information report shows information and statistics for an agent from a specified interval start time, within the past 24 hours.

## Ways to access this report

---

This report can be accessed in the following ways:

- From the Integrated Agent Category selector menu
- By drilling down to this report from the Agent Name or Login ID fields on other reports (for example, Work State, Graphic AUX Agent reports or Call Center Administration windows)

## Things to know about this report

---

Here are some things to know about this report:

- If the system is a switch that does not have the Automatic Call Distribution (ACD) feature, see [Agent Information report](#) on page 528 in this chapter for details.
- This report is available for all switch releases. Contents of this report will vary depending upon the switch release for which it is being run.
- Supervisors can use this report to access further information on one particular agent without having to execute several steps and several different reports to get the pertinent information. This report enables supervisors to quickly evaluate agent performance and decide whether an agent should be added to or removed from a skill.
- If an agent logs off while an Integrated Agent report is being displayed, the staffed time and AUX time for that agent may drop, because the real-time component of the times is no longer present. Restarting the report will cause the integrated times to be displayed once again.
- The database items for the Agent Graphical Information report are stored in the cagent (current interval) and hagent (intrahour interval) tables.
- This report uses the Agent Graphical Information report input window. See [Agent report selector window and input fields](#) on page 519 for input field definitions.


## Switch information

The following list describes the information this report will contain for the switch:

- A two-dimensional bar chart shows the time the agent has spent in each of the work states since the report data start time. Above the bar chart is the text Agent Time Spent.
- A table show the skills assigned to the agent and the corresponding skill level. A scroll bar is provided if the number of skills to which the agent is assigned exceeds the default size of this table.

## Agent Graphical Information report example

This figure provides an example of an Agent Graphical Information report:

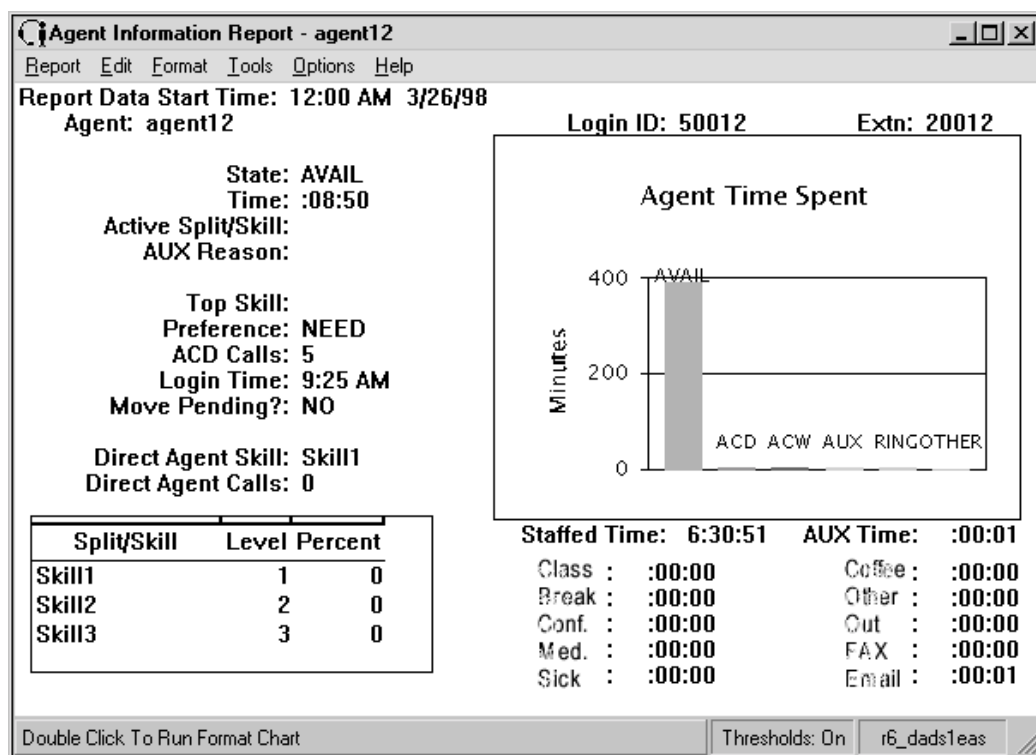

## Agent Graphical Information report description

This table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Report Data Start Time	The day and time that the report started collecting data.	No database item.
Agent	The names (or agent IDs if the names have not been assigned in Dictionary) of the agents assigned and logged into this split/skill.	syn(LOGID)
Login ID	The login identification of the agent.	LOGID
Extn	The extension that the agent logged in from.	EXTENSION
State	The current work mode (state) that the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RINGING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN or OUT).	syn(AWORKMODE) and syn(DIRECTION)
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME

Report heading	Description	Database item, calculation, or <calculation name>
Active Split/Skill	When an agent is on a split/skill or direct agent ACD call or in ACW, this is the split/skill associated with the call or ACW. When an agent is available, in AUX or in OTHER, this is null (blank). When an agent is on an AUXIN/AUXOUT call, this is the OLDEST_LOGON split/skill. When an agent is on an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold, this is the OLDEST_LOGON split/skill. When an agent is on an AUXIN call with an ACD call on hold, this is the OLDEST_LOGON split/skill. When an agent is on an AUXOUT call with an ACD call on hold, this is the split/skill associated with the ACD call.	syn(WORKSKILL)
AUX Reason	The reason code associated with the agent's current state. This is blank if the agent is not in the AUX state. For agents in AUX on switch releases that are earlier than the ECS or that do not have EAS and reason codes active, this will only be 0 (zero).	syn(AUXREASON)
Top Skill	The agent's first-administered, highest-level, measured skill, where skill level 1 is the highest, and skill level 16 is the lowest.	syn(TOPSKILL)
Call Handling Preference	The agent's call handling preference. Values are blank, skill level (LVL), percent (PCNT) or greatest need (NEED).	syn(PREFERENCE)
ACD Calls	The queued ACD calls to the split/skill that were answered by an agent in the split/skill. This does not include direct agent calls, but it does include ACD calls placed by an adjunct (outbound predictive dialing — switches with ASAI only).	sum(ACDCALLS)

Report heading	Description	Database item, calculation, or <calculation name>
Login Time	The time of the day that the agent logged into this SPLIT. This field is not set unless the agent is logged in. Values include NULL and time-of- day.	LOGONSTART
Move Pending?	A move to a new split or skill or a change of skills is pending for this agent. This is available only for switch releases with the Move Agent While Staffed feature.	MOVEPENDING
Direct Agent Skill	The skill that is currently assigned as the agent's direct agent skill. Direct agent calls to the agent are queued to this skill.	syn(DA_SKILL)
Direct Agent Calls	The number of direct agent ACD calls that the agent answered.	DA_ACDCALLS
Split/Skill	The split/skill number for which the data was collected.	syn(SPLIT)
Level	The skill level (1-16) or reserve skill level (1 or 2) that is associated with the SPLIT.	syn(LEVEL)
Percent	Agent's percent allocation for this SPLIT. Requires Avaya Business Advocate.	PERCENT
AVAIL	The time since the report start time that the agent was in the available state for split/skill or direct agent ACD calls in any split/skill. TI_AVAILTIME is recorded for the split/skill that was the OLDEST_LOGON. For non-EAS operation, if an agent logged into multiple splits in AUX mode in one split and is available for ACD calls in another split. The agent accrues I_AVAILTIME for the split in which the agent is available and TI_AVAILABLE in the split logged into the longest.	sum(TI_AVAILTIME)
ACD	The time during the collection interval that the agent was talking on ACD calls for the SPLIT.	sum(I_ACDTIME + I_DA_ACDTIME)

Report heading	Description	Database item, calculation, or <calculation name>
ACW	The total time during the collection interval that the agent was in after call work (ACW). This includes ACW for split/skill ACD calls and ACW not associated with the call.	sum (I_ACWTIME + I_DA_ACWTIME)
AUX	The time during the collection interval that the agent was in AUX in all splits/skills or on AUXINCALLS or AUXOUTCALLS. TI__ stands for the time that is stored for the split/skill logged into the longest.	sum(TI_AUXTIME)
RINGING	The time during the collection interval that the agent had split/skill and direct agent ACD calls ringing. If the agent changes work modes or answers/makes another call instead of answering the ringing call, I_RINGTIME will stop accumulating. RINGTIME is the time the caller spends ringing and is independent of agent activity.	sum(I_RINGTIME)
OTHER	The time during the collection interval that the agent was doing other work in all splits/skills. For all switches, while in Auto-in or Man-In, the agent put any call on hold and performed no further action, the agent dialed to place a call or to activate a feature, or an extension call rang with no other activity. For all switches, TI_OTHERTIME is collected for the time period after the link to the switch comes up or after the agent logs in and before the CMS receives notification of the agent's state from the switch.	sum(TI_OTHERTIME)
Staffed Time	The time during the collection interval that the agent was staffed in any split/skill. The TI_ stands for the time that is stored only for the split or skill that the agent is logged into for the longest amount of time.	sum(TI_STAFFTIME)

Report heading	Description	Database item, calculation, or <calculation name>
AUX Time	The time during the collection interval that the agent was in AUX in all splits/skills or on AUXINCALLS or AUXOUTCALLS. The TI_ stands for the time that is stored only for the split or skill that the agent is logged into for the longest amount of time.	sum(TI_AUXTIME)
Reason Code	The time that the agent spent in active AUX reason codes. It is the same as TI_AUXTIME for switches without AUX reason codes active. The TI_ stands for the time that is stored only for the skill that the agent is logged into for the longest amount of time.	sum(TI_AUXTIME0)

## Agent Information report

The Agent Information report shows information and statistics for an agent from a specified start time.

### Things to know about this report

---

Here are some things to know about this report:

- This report is not available with the EAS feature.
- This report uses the Agent Graphical Information report input window. See [Agent report selector window and input fields](#) on page 519 for input field definitions.
- When a user drills down from an agent name to an Agent Information report and selects an integrated report, the report data start time defaults to the start time specified in the last integrated report input window. If no integrated report has ever been entered, the default is set to midnight. Users have the ability to restart this report just as any other report can be restarted, and a different report start time can be specified when the report is restarted.
- The database items for the Agent Information report are stored in the cagent (current interval) and hagent (intrahour interval) tables.

This report can be accessed in the following ways:

- From the Integrated Agent Category selector menu
- By drilling down to this report from the Agent Name or Login ID fields on other reports (for example, Agent Information, Work State, Graphic AUX Agent reports or from Call Center Administration windows)
- If an agent logs off while an Integrated Agent report is being displayed, the staffed time and AUX time for that agent may drop, because the real-time component of the times is no longer present. Restarting the report will cause the integrated times to be displayed once again.



## Agent Information report example

This figure provides an example of an Agent Information report:

**Agent Information Report - a4014**

Report Edit Format Tools Options Help

Report Data Start Time: 12:00 AM 2/26/98

Agent: a4014 Login ID: Extn:

State: Staffed Time: :00:00

Percent: AVAIL: :00:00

Time: ACD: :00:00

Active Split: ACW: :00:00

ACD Calls: 0 AUX: :00:00

Move Pending?: RINGING: :00:00

Direct Agent Calls: 0 OTHER: :00:00

Staffed Split(s)

Thresholds: On Jaeger1G32

## Agent Information report description

This table describes the report fields.

Report heading	Description	Database item, calculation, or <calculation name>
Report Data Start Time	The day and time that the report started collecting data.	No database item.
Agent	The names (or agent IDs if the names have not been assigned in Dictionary) of the agents assigned and logged into this split/skill.	syn(LOGID)
Login ID	The login identification of the agent.	LOGID
Extn	The extension that the agent logged in from.	EXTENSION
State	The current work mode (state) that the agent is in (AVAIL, ACD, ACW, AUX, DACD, DACW, RING, UNKNOWN, OTHER, UNSTAFF) and the call direction (blank, IN or OUT).	syn(AWORKMODE) and syn(DIRECTION)

Report heading	Description	Database item, calculation, or <calculation name>
Time	The elapsed time since the last agent WORKMODE change for any split/skill. This item is not reset if the DIRECTION changes, but WORKMODE remains the same. For example, if the agent goes from AUX to AUXOUT to AUX, AGTIME continues without resetting.	AGTIME
Active Split	When an agent is on a split or direct agent ACD call or in ACW, this is the split associated with the call or ACW. When an agent is available, in AUX or in OTHER, this is null (blank). When an agent is on an AUXIN/AUXOUT call, this is the OLDEST_LOGON split. When an agent is on an AUXIN/AUXOUT call from the available state, while in AUX or with an AUXIN/AUXOUT call on hold, this is the OLDEST_LOGON split/skill. When an agent is on an AUXIN call with an ACD call on hold, this is the OLDEST_LOGON split. When an agent is on an AUXOUT call with an ACD call on hold, this is the split associated with the ACD call.	syn(WORKSKILL)
ACD Calls	The queued ACD calls to the split/skill that were answered by an agent in the split/skill. This does not include direct agent calls, but it does include ACD calls placed by an adjunct (outbound predictive dialing — switches with ASAI only).	sum(ACDCALLS)
Move Pending?	A move to a new split or skill or a change of skills is pending for this agent. This is available only for switch releases with the Move Agent While Staffed feature.	MOVEPENDING
Direct Agent Calls	The number of direct agent ACD calls that the agent answered.	sum(DA_ACDCALLS)
Staffed Time	Current number of top agents that are staffed in the skill.	sum(TI_STAFFTIME)

Report heading	Description	Database item, calculation, or <calculation name>
AVAIL	The time since the report start time that the agent was in the available state for split/skill or direct agent ACD calls in any split/skill. For non-EAS operation, if an agent logged into multiple splits in AUX mode in one split and is available for ACD calls in another split. The agent will accrue I_AVAILTIME for the split in which the agent is available and TI_AVAILABLE in the split logged into the longest.	sum(TI_AVAILTIME)
ACD	The time during the collection interval that the agent was talking on ACD calls for the SPLIT.	sum(I_ACDTIME + I_DA_ACDTIME)
ACW	The time during the collection interval that the agent was in after call work (ACW). This includes ACW for split/skill ACD calls and ACW not associated with the call.	sum(I_ACWTIME + I_DA_ACWTIME)
AUX	The time during the collection interval that the agent was in AUX in all splits/skills or on AUXINCALLS or AUXOUTCALLS. The TI_ stands for the time that is stored only for the split or skill that the agent is logged into for the longest amount of time.	sum(TI_AUXTIME)
RINGING	The time during the collection interval that the agent had split/skill and direct agent ACD calls ringing. If the agent changes work modes or answers/makes another call instead of answering the ringing call, I_RINGTIME will stop accumulating. RINGTIME is the time the caller spends ringing and is independent of agent activity.	sum(I_RINGTIME)

## Integrated reports

Report heading	Description	Database item, calculation, or <calculation name>
OTHER	The time during the collection interval that the agent was doing other work in all splits/skills. While in Auto-in or Man-In, the agent put any call on hold and performed no further action, the agent dialed to place a call or to activate a feature, or an extension call rang with no other activity. For all switches, TI_OTHERTIME is collected for the time period after the link to the switch comes up or after the agent logs in and before the CMS receives notification of the agent's state from the switch.	sum(TI_OTHERTIME)
Staffed Split(s)	Split/Skill number for which data was collected.	syn(SPLIT)

---

# Split/Skill reports

Split/Skill reports allow access to the following specific information about splits and skills:

- The current status and cumulative data for one or more splits or skills
- The status of agents in the split/skill and cumulative split/skill statistics
- The time each specified skill has spent in normal versus overload conditions

## General information about Split/Skill reports

### Organization of Split/Skill reports

---

The following list shows how the Integrated Split/Skill reports are organized:


- [Split/Skill Comparison report](#) on page 536
- [Graphical Skill Overload report](#) on page 539
- [Graphical Split/Skill View report](#) on page 541

## Split/Skill reports selector window and input fields

### Split/Skill reports selector window

---

The following figure is an example of the Split/Skill report selector window. The reports are explained in the same order as listed in the window:

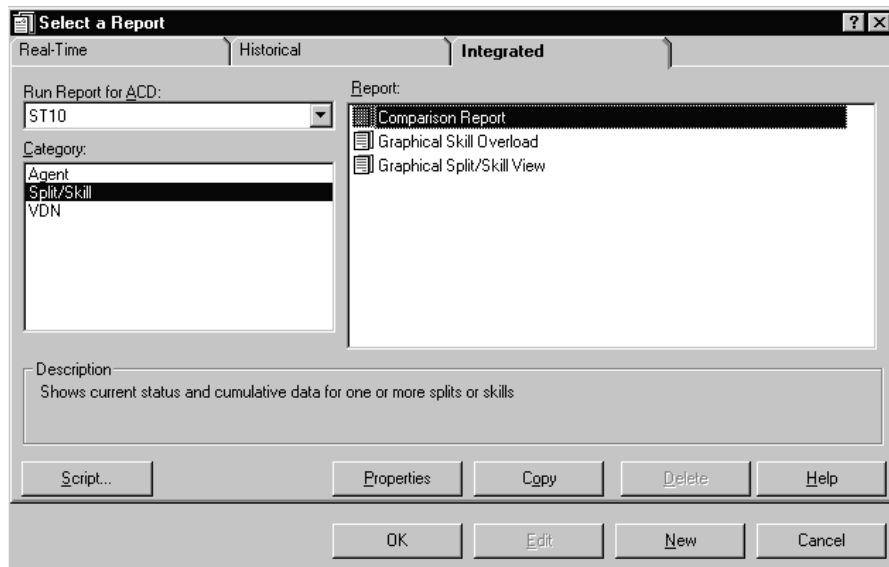

## Split/Skill report input fields

---

The following describes the input fields on integrated Split/Skill report input windows. The report input window must be filled in to run the report. These fields are the same for all integrated split/skill reports:

Field	Description
Splits/Skills	Enter the appropriate split/skill names. Any name you want to appear on the report must have been previously defined and entered in the Dictionary subsystem.
Report Data Start Time	Enter the day and time (either in military time or with AM/PM specified) you want the report to start collecting data. The time entered (or the time adjusted to the nearest previous interval start time relative to the entered time) is used to populate the Report Data Start Time field on the report. <b>Note:</b> If no report start time is available, the start time will be midnight of the current day. The report start time must be less than 24 hours before the current time.
Refresh Every <#> Seconds	Enter the number of seconds (3 to 600) to specify how rapidly CMS should update the report data. The default value for the <b>Refresh rate in seconds</b> field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.
Enable Report Thresholds	Check this box to turn on the thresholds for the report.
Run Minimized	Check this box to minimize the report.

# Split/Skill Comparison report

This report shows the current status and cumulative data for one or more splits or skills.

## Things to know about this report

Her are some things to know about this report:

- Call center supervisors or administrators who are responsible for several splits/skill can use this report to see if splits/skills have comparable talk times, abandon rates, and average speed of answer figures that are comparable up until a certain point in the day.
- The database items for the Split/Skill Comparison report are stored in the csplit (current interval) and hsplit (intrahour interval) table.
- This report uses the Split/Skill Comparison report input window. See [Split/Skill reports selector window and input fields](#) on page 534 for input field definitions.

## Split/Skill Comparison report example

This figure provides an example of a Split/Skill Comparison report:

Split/Skill	Skill State	Agents Staffed	Calls Waiting	Oldest Call Waiting	ACD Calls	Avg ACD Time	Aban Calls	Avg Aban Time	Avg Speed Ans
T22	NORMAL	0	0	:00	0		0		
T23	NORMAL	0	0	:00	0		0		
T26	NORMAL	0	0	:00	0		0		
Total	NORMAL	0	0	:00	0		0		
sp998	NORMAL	0	0	:00	0		0		



## Split/Skill Comparison report description

This table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Report Data Start Time	The day and time that the report started collecting data.	No database item.
Split/Skill	The name or number of the splits/skills selected for the report.	syn(SPLIT)
Skill State	Current state of this skill, compared to the administered thresholds. Requires Avaya Business Advocate.	SKSTATE
Agents Staffed	The login identification of the agent.	STAFFED
Calls Waiting	The total number of ACD calls waiting to be answered for each split/skill in the report. This includes calls that are in queue and ringing at an agent voice terminal. It also includes outbound ACD calls placed by an adjunct (also called outbound predictive dialing). It does not include direct agent calls.	INQUEUE + INRING
Oldest Call Waiting	The number of seconds that the oldest call has waited in queue or ringing at an agent voice terminal for each split/skill in the report. This does not include direct agent calls.	OLDESTCALL
ACD Calls	The ACD calls that were queued to the split/skill and answered by an agent. This does not include direct agent calls, but it does include ACD calls placed by an adjunct (also called outbound predictive dialing).	ACDCALLS
Avg ACD Time	The average talk time for all ACD calls to the split. This does not include hold time on direct agent calls, but it does include talk time of all outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ACDTIME / ACDCALLS, <AVG_ACD_TALK_TIME>

Report heading	Description	Database item, calculation, or <calculation name>
Aban Calls	The total number of queued calls for each split/skill that abandoned before an agent answered. This includes calls that are ringing at a voice terminal but does not include direct agent calls. It also includes the number of outbound calls for each split/skill that abandoned at the far end before an agent answered.	ABNCALLS
Avg Aban Time	The average time a caller waited before hanging up.	ABNTIME / ABNCALLS
Avg Speed Ans	The average time calls waited in queue and ringing before an agent answered. This does not include direct agent calls, but it does include outbound ACD calls placed by an adjunct (also called outbound predictive dialing).	ANSTIME / ACDCALLS, <AVG_ANSWER_SPEED>

## Graphical Skill Overload report

This report shows the amount of time each specified skill has spent in normal versus overload conditions from the report start time until the report generation time since a specified start time in the last 24 hours.

This report is available only if you have purchased the Expert Agent Select (EAS) feature.


### Things to know about this report

Here are some things to know about this report:

- The Graphical Skill Overload report is a vertical bar graph.
- The database items for the report are stored in the csplit (current interval) and hsplit (intrahour interval) table.
- This report uses the Split/skill Comparison report input window. See [Split/Skill reports selector window and input fields](#) on page 534 for input field definitions.

### Graphical Skill Overload report example

This figure provides an example of a Graphical Skill Overload report:

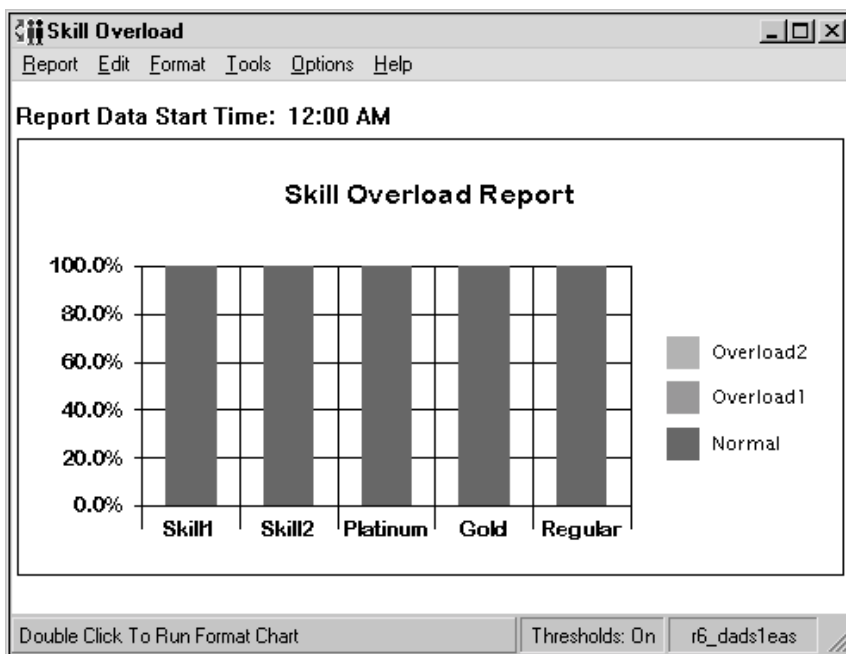

## Graphical Skill Overload report description

---

This table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Split/Skill	The name or number of the splits/skills selected for the report.	syn(SPLIT)
Normal	The time the skill spent under all of the thresholds.	I_NORMTIME
Overload1	The time the skill spent over threshold 1 and under threshold 2.	I_OL1TIME
Overload2	The time the skill spent over threshold 2.	I_OL2TIME

## Graphical Split/Skill View report

This report shows the status of agents in the split/skill and cumulative split/skill statistics.


### Things to know about this report

Here are some things to know about this report:

- Call center managers can use this report for large numbers of agents in one split or skill, and need split/skill status but do not want to consume the PC resources required to display individual agent status of many agents. Call center managers can use this report to see the totals and averages for a specific split or skill up to a certain point in the day.
- The database items for the Graphical Split/Skill view report are stored in the csplit (current interval) and hsplit (intrahour interval) table.
- This report uses the Split/Skill View input window. See [Split/Skill reports selector window and input fields](#) on page 534 for input field definitions.

### Graphical Split/Skill View report example

This figure provides an example of a Graphical Split/Skill view report:

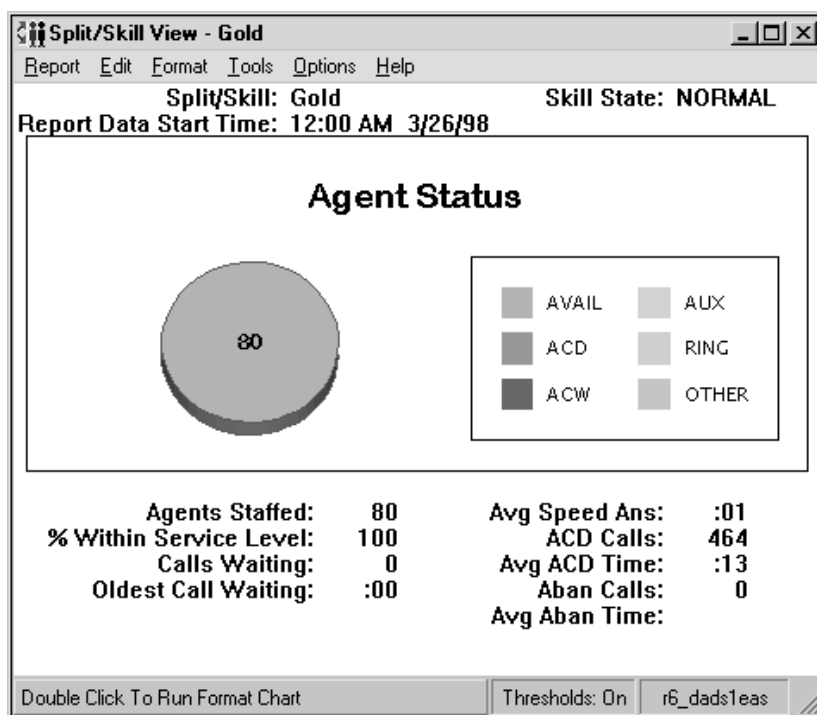

## Graphical Split/Skill View report description

---

This table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Report Data Start Time	The day and time that the report started collecting data.	No database item.
Skill State	Current state of this skill, compared to the administered thresholds. Requires Avaya Business Advocate.	syn(SKSTATE)
AVAIL	The current number of agents that are available to receive ACD calls in this split/skill.	AVAILABLE
ACD	The total number of agents connected to inbound and outbound ACD calls in each split/skill. This does not include direct agent calls.	ONACD
ACW	The current number of POSITIONS that are in after call work for this split/skill. This includes agents on ACWIN/ACWOUT calls as well as agents in ACW not associated with an ACD call. It does not include agents in ACW for direct agent ACD calls.	INACW
AUX	The current number of POSITIONS that are in auxiliary work for all splits/skills or on AUXIN/AUXOUT calls.	INAUX

Report heading	Description	Database item, calculation, or <calculation name>
RINGING	<p>The current number of POSITIONS that are in the ring state, for this split/skill. For example, the positions that have a split/skill or direct agent ACD call ring for this split/skill and are not doing anything else.</p> <p><b>Note:</b> When an agent makes or answers an extension call while an ACD call is ringing, that position is no longer counted in AGINRING (because the agent is then on an AUXIN/OUT call). Agents talking on ACD calls who receive a forced MCH call (for later version switches) are not counted in AGINRING (they are counted in ONACD).</p>	AGINRING
OTHER	The current number of POSITIONS that are doing other work.	OTHER
Agents Staffed	The number of agents logged into the split/skill.	STAFFED
% Within Service Level	The percentage of split/skill ACD calls that were answered by an agent within the predefined acceptable service level. Calls to the split/skill include abandoned calls, calls not answered, and outbound ACD calls placed by an adjunct (for example, outbound predictive dialing). Calls that were not answered may include forced busy calls, forced disconnect calls, calls redirected to another destination, and calls queued to more than one split and answered in another split/skill. Percent Within Service Level does not include direct agent calls.	100*(ACCEPTABLE/CALLSOFFERED); sum(PERCENT_SERV_LVL_SPL); <PERCENT_SERV_LVL>
Calls Waiting	The total number of split/skill ACD calls waiting to be answered. This includes calls that are in queue and ringing at an agent voice terminal and outbound ACD calls placed by an adjunct (for example, outbound predictive dialing). It does not include direct agent calls.	INQUEUE + INRING

Report heading	Description	Database item, calculation, or <calculation name>
Oldest Call Waiting	The number of seconds that the oldest ACD call has waited in queue or ringing before being answered. This does not include direct agent calls.	OLDESTCALL
Avg Speed Ans	The average time that calls waited in queue or ringing before an agent answered. This does not include direct agent calls, but it does include outbound ACD calls placed by an adjunct (outbound predictive dialing).	ANSTIME / ACDCALLS; <AVG_ANSWER_SPEED>
ACD Calls	The queued ACD calls to the split/skill that were answered by an agent. This does not include direct agent calls, but it does include ACD calls placed by an adjunct (outbound predictive dialing).	ACDCALLS
Avg ACD Time	The average talk time (does not include hold time) for all ACD calls to this split/skill. This does not include direct agent calls, but it does include talk time of all ACD calls placed by an adjunct (outbound predictive dialing).	<AVG_ACD_TALK_TIME>
Aban Calls	The total number of queued calls for each split/skill that abandoned before an agent answered. This includes calls that are ringing at a voice terminal but does not include direct agent calls. It also includes the number of outbound calls for each split/skill that abandoned at the far end before an agent answered.	ABNCALLS
Avg Aban Time	The average time a caller waited before hanging up.	ABNTIME / ABNCALLS; <AVG_ABANDON_TIME>



---

# VDN report


A VDN Graphical Call Handling report allows access to specific information on answered, abandoned, and outflow calls.

## General information about the VDN report

### VDN report selector window

---

The following figure is an example of the VDN report selector window:

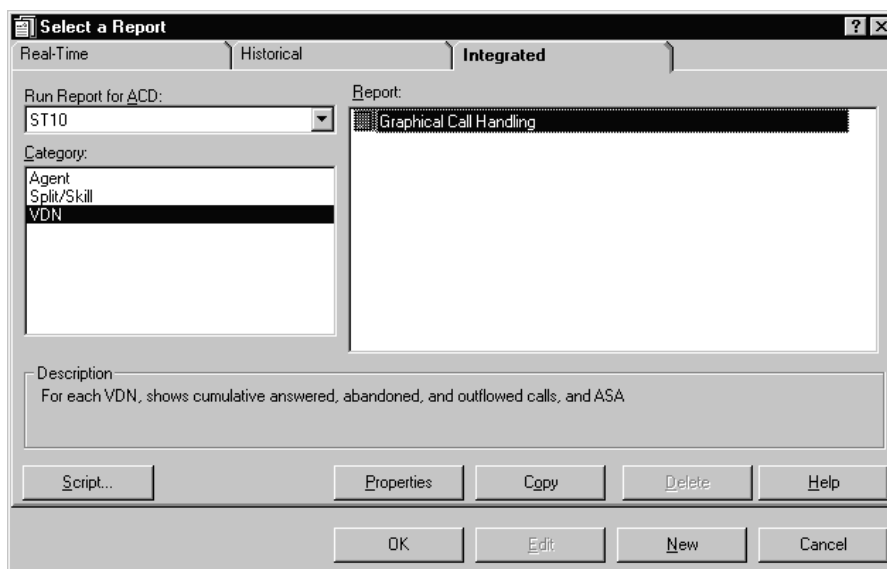

## VDN report input fields

---

This table describes the input fields on integrated VDN report input windows. You must fill in the report input window to run the report:

Field	Description
VDNs	<p>Enter the numbers or names (if they have been defined in the Dictionary) of the VDNs that you want to include in the report. You can enter a name only if it has been previously defined in the Dictionary subsystem.</p> <p>To complete the input field, do the following:</p> <ol style="list-style-type: none"> <li>1. Type in the information requested.</li> <li>2. Select the information from the pull-down list of previously used items. During each CMS session, Supervisor recalls the items you have selected for each input field. You can use the pull-down list to select an item for the input field.</li> <li>3. Use the Browse button to view all available items for the input field, and then select items for the input field. When you click on the Browse button, a window opens that lets you select items for the input field.</li> </ol>
Report Data Start Time	<p>Enter the day and time (either in military time or with AM/PM specified) you want the report to start collecting data. The time entered (or the time adjusted to the nearest previous interval start time relative to the entered time) is used to populate the Report Data Start Time field on the report.</p> <p><b>Note:</b> If no report start time is available, the start time will be midnight of the current day. The report start time must be less than 24 hours before the current time.</p>
Refresh Every <#> Seconds	<p>Enter the number of seconds (3 to 600) to specify how rapidly CMS should update the report data. The default value for the <b>Refresh rate in seconds</b> field in this window is your assigned minimum refresh rate plus 15 seconds. To find out what your minimum refresh rate is, or to change it, check with your CMS administrator.</p>
Enable Report Thresholds	<p>Check this box to turn on the thresholds for the report.</p>
Run Minimized	<p>Check this box to minimize the report.</p>

# VDN Graphical Call Handling report

This report shows, for each VDN, the cumulative number of calls that are answered, abandoned, and considered outflow calls. The report also includes the average speed of answer.

## Things to know about this report

---


This report shows in chart format how many ACD calls for each specified VDN were answered, abandoned, or outflowed.

This report consists of two charts, with a legend to the right of each.

- The top chart is a three-dimensional, horizontal, color-coded bar chart showing the numbers of ACD calls answered, abandoned, and outflowed.
- The bottom chart is a line graph, where the Rolling ASA for each specified VDN is represented by each color-coded line.
- If the system is a switch that does not have the EAS feature, see [Agent Information report](#) on page 528 for details.
- The chart type can be changed. See [Using reports](#) on page 35 for more information.
- The database items used for the VDN Graphical Call Handling report are stored in the cvdn (current interval) and hvdn (intrahour interval) tables.
- This report uses the VDN Graphical Call Handling report input window. See [General information about the VDN report](#) on page 545 for input field definitions.

## VDN Graphical Call Handling report example

This figure provides an example of a VDN Graphical Call Handling report:

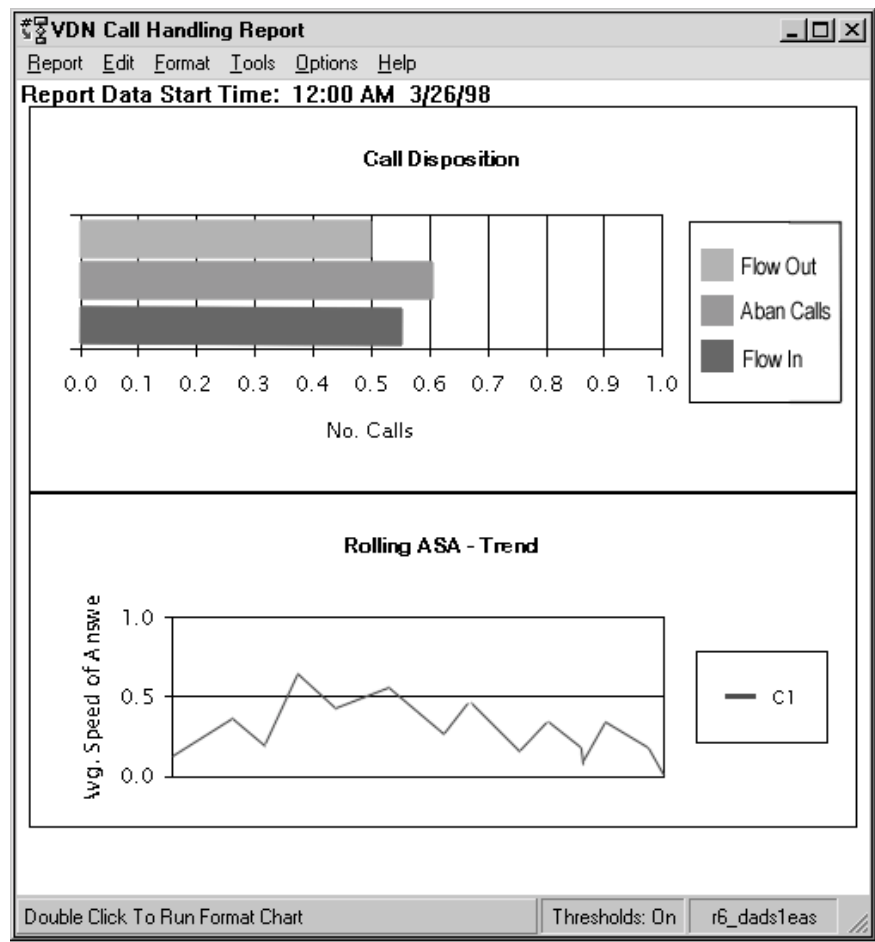

## VDN Graphical Call Handling report description

This table describes the report fields:

Report heading	Description	Database item, calculation, or <calculation name>
Report Data Start Time	The day and time that the report started collecting data.	No database item.
VDN	The number or name of the VDN for which the report shows data (selected in the report input window).	syn(VDN)
Rolling ASA	The switch-provided rolling average speed of answer for this VDN. This value is sent to CMS whenever it changes (for example, when a call is answered) on a later switch with the call vectoring enhancements.	ASA
Flow Out	The number of calls that were redirected to another VDN or off-switch destination via a <b>route to</b> step or <b>adjunct routing</b> command, or were redirected to a VDN by redirection on no answer. Calls in the VDN that are routed to other switch destinations, such as splits/skills or extensions, are not counted as outflows from the VDN.	OUTFLOWCALLS
Aban Calls	The number of calls to the ACD during the reporting period that hung up while being carried by this VDN.	ABNCALLS
ACD Calls	The number of split/skill and direct agent ACD calls completed during the reporting period that were answered while carried by the VDN. This includes calls from <b>queue to main</b> , <b>check backup</b> , <b>route to</b> split/skill, and <b>adjunct routing</b> to a split/skill or direct agent.	ACDCALLS



# Glossary

<b>% Agent Group Occupancy with ACW</b>	Agent group occupancy, displayed as a percentage, including agent ACW time as work time.
<b>% Agent Group Occupancy without ACW</b>	Agent group occupancy, displayed as a percentage, <i>not</i> including agent ACW time as work time.
<b>% Agent Occupancy with ACW</b>	Agent occupancy, displayed as a percentage, including agent after call work (ACW) time as work time.
<b>% Agent Occupancy without ACW</b>	Agent occupancy, displayed as a percentage, <i>not</i> including agent ACW time as work time.
<b>% Flow out</b>	The percentage of inbound calls on the Vector Directory Number (VDN) that are directed (flowed out) to other VDNs.
<b>Abandoned call</b>	A call in which a caller hangs up before receiving an answer from an agent. The call could be queued to a split or in a vector or Vector Directory Number (VDN) before it is abandoned.
<b>Abandoned call search</b>	An ACD capability that enables the system to make sure that the caller is on the line before passing the call to an agent.
<b>Acceptable service level</b>	<p>A target value set to define the acceptable amount of time for an agent to answer a call. Target values are normally set as objectives by management.</p> <p>A percentage of calls answered within a set amount of time (for example, 80% of calls answered within 20 seconds).</p>
<b>Access permissions</b>	Permissions assigned to an Avaya CMS user so that the user can access different subsystems in Avaya CMS or administer specific elements (splits/skills, trunks, vectors, etc.) of the ACD. Access permissions are specified as read or write permission. Read permission means the Avaya CMS user can access and view data (for example, run reports or view the Dictionary subsystem). Write permission means that the Avaya CMS user can add, modify, or delete data and execute processes.
<b>ACD</b>	See Automatic Call Distribution.
<b>ACD call</b>	A call that queued to a split/skill and was answered by an agent in that split/skill, or a call that queued as a direct agent call and was answered by the agent for whom it was queued.

## Acknowledgment

<b>Acknowledgment</b>	A window that requires you to confirm an action or to acknowledge a system message (for example, system going down, warning, or fatal error for the user window). This window cannot be moved, sized, or scrolled and disappears only when you confirm the message.
<b>Activate agent trace</b>	From this window you can start Avaya CMS tracing of agent activities. These activities include all agent state changes until the trace is turned off. You must activate an agent trace to obtain an Agent Trace report.
<b>Active VDN calls</b>	The number of calls currently active in a Vector Directory Number (VDN). The vector enhancement <b>VDN Calls Routing</b> refers to the ability to program a vector step according to the number of active VDN calls. The number of active calls is referred to as <b>counted-calls</b> in the vector step.
<b>ACW</b>	See After Call Work.
<b>Adjunct/Switch Applications Interface (ASAI)</b>	An Avaya recommendation for interfacing adjuncts and communications systems, based on the CCITT Q.932 specification for layer 3. ASAI supports activities such as event notification and call control.
<b>After Call Work (ACW)</b>	An agent state generally representing work related to the preceding ACD call. Going on-hook after an ACD call during MANUAL-IN operation places the call in ACW. ACW is accessible by a key on the agent's set and may not be related to an ACD call.
<b>Agent</b>	A person who answers calls to an extension in an ACD split/skill. The agent is known to Avaya CMS by a login identification keyed into a voice terminal.
<b>Agent login ID</b>	A 1- to 9-digit number entered by an ACD agent from a voice terminal to activate the agent position. Agent logins are required for all Avaya CMS-measured ACD agents.
<b>Agent occupancy</b>	The average percentage of time that you are expecting or targeting for each split/skill agent to spend, while logged in, on ACD calls and in ACW.
<b>Agent position (EAS)</b>	The combination of agent login ID and the skills the agent is assigned. Data are collected for the agent by skill, so the total work for the agent must be summed over all skills in which the agent worked.
<b>Agent position (Non-EAS)</b>	The combination of agent login ID and split the agent logged into. Agents logged into multiple splits have multiple positions associated with them. Call data are collected separately for each agent/split combination.
<b>Agent role</b>	A description of the kind of service an agent in multiple skills gives to one of their skills. This is a combination of call handling preference and skill/reserve levels.



<b>Agent skill</b>	<p>An attribute that is associated with an ACD agent. Agent Skills can be thought of as the ability for an agent with a particular set of skills to handle a call that requires one of a set of skills. An agent can be assigned up to 20 skills. The meaning of each Agent Skill is defined by the customer. Examples are the ability to speak a particular language or the expertise to handle a certain product.</p> <p>See also Primary Skill and Secondary Skill.</p>
<b>Agent state</b>	<p>A feature of agent call handling. Agent states are the different call work modes an agent can be in (ACD, ACW, AVAIL, AUX, UNSTAFF, DACD, DACW, OTHER, UNKNOWN, RINGING). Data about these states is displayed in real-time and historical reports.</p> <p>See the definition of each state for additional information.</p>
<b>Agent terminal</b>	<p>The voice terminal used by a call-center agent.</p>
<b>Agent trace</b>	<p>You must start an agent trace before you can obtain an Agent Trace report. You can activate traces for a maximum of 400 agents at any one time. You can select the dates in which the trace will receive information. This report lists each agent activity and the time it occurred. The Agent Trace report can be helpful when evaluating how well individual agents are using their time.</p>
<b>AI</b>	<p>See Auto-In.</p>
<b>Algorithm</b>	<p>A prescribed set of well-defined rules or instructions for the solution of a problem; for example, the performance of a calculation, in a finite number of steps. Expressing an algorithm in a formal notation is one of the main parts of a software program.</p>
<b>ANI</b>	<p>See Automatic Number Identification.</p>
<b>Announcement</b>	<p>A recorded message that normally tells the caller what destination the call has reached. The announcement also often tries to persuade the caller to stay on the line. With Call Vectoring, announcements can be part of a vector's call processing. An announcement is assigned to a vector by entering an announcement number.</p>
<b>ASA</b>	<p>See Average Speed of Answer.</p>
<b>ASAI</b>	<p>See Adjunct/Switch Applications Interface.</p>
<b>Auto-available split</b>	<p>An ACD capability that ensures that after a power failure or a system restart, Voice Response Units (for example, the CONVERSANT™ Voice Information System) are brought on line again immediately, without time-consuming reprogramming.</p>
<b>Auto-In (AI)</b>	<p>An ACD work mode that makes the agent available to receive calls and allows the agent to receive a new ACD call immediately after disconnecting from the previous call.</p>

## **Automatic Call Distribution (ACD)**

### **Automatic Call Distribution (ACD)**

A switch feature. Automatic Call Distribution (ACD) is software that channels high-volume incoming call traffic to agent groups (splits or skills).

Also an agent state where the extension is engaged in an ACD call (with the agent either talking to the caller or the call waiting on hold).

See also Redirect on no Answer and Auto-Available Split.

### **Automatic Number Identification (ANI)**

A general industry term referring to knowledge of the calling party number (CPN). When the calling party is behind a switch, the number provided can be either a billing number for the switch or the station identification number.

### **AUX**

See Auxiliary Work.

### **Auxiliary Work (AUX)**

An agent state. For example, the agent is engaged in non-ACD work, is on break, in a meeting, or at lunch. An agent can reach this state by pressing the AUX WORK button or dialing the proper access code from the voice terminal. The agent can also reach the state by going off-hook to make or answer an extension call while in AVAIL or with a call on hold.

### **AVAIL**

See Available.

### **Available (AVAIL)**

An agent state. The extension is able to accept an ACD call.

### **Avaya Business Advocate**

A set of features designed to enhance call and agent selection within a call center. Avaya Business Advocate requires Avaya CMS Supervisor, a MultiVantage™ system, and Expert Agent Selection (EAS). See the Avaya Business Advocate User Guide for more information.

### **Avaya CMS**

See Avaya Call Management System.

### **Avaya CMS Supervisor**

The Avaya Call Management System (CMS) application for the Microsoft® Windows® operating environment.

### **Average agent service time**

The average time you are expecting or targeting for each agent to spend on an ACD call, including talk time and after-call-work time.

### **Average Speed of Answer (ASA)**

The average amount of time a caller waits in queue before connecting to an agent. ASA is usually an objective set by your call center's management.

### **Calculation**

A menu selection in the Avaya CMS Dictionary subsystem which gives the abbreviated name (calculation name) for the calculation that generates the data for a field in a report.

### **Call handling preference**

A parameter of agent administration in the EAS environment that specifies how calls are selected for the agent.

<b>Call Management System (CMS)</b>	A software product used by business customers that have Avaya telecommunications switches and receive a large volume of telephone calls that are processed through the Automatic Call Distribution (ACD) feature of the switch. The Avaya CMS collects call-traffic data, formats management reports, and provides an administrative interface to the ACD feature in the switch.
<b>Call prompting</b>	A switch feature that routes incoming calls based on information entered by the calling party, such as an account number. The caller receives an announcement and is prompted to select an option from those listed in the announcement.
<b>Call vectoring</b>	<p>A switch feature that provides a highly flexible method for processing ACD calls using Vector Directory Numbers (VDNs) and vectors as processing points between trunk groups and splits. Call vectoring permits treatment of calls that is independent of splits.</p> <p>Similar to a computer program, a call vector is a set of instructions that control the routing of incoming calls based on conditions that occur in a call center environment. Examples of call vector conditions include time of day and the number of calls in queue.</p>
<b>Call Work Code (CWC)</b>	An ACD capability that makes sure that during or after the call, the agent can enter a string of digits and send these digits to the Avaya Call Management System (CMS) for management reporting.
<b>Call-based items</b>	The category of database items in Avaya CMS that are committed to the database after the call completes. If a call starts and ends in different intrahour intervals, all of the call-based data is recorded in the interval in which the call completed. Most database items are call-based.
<b>Call-handling profile</b>	A set of objectives describing how you want a split/skill to handle calls.
<b>Calls carried</b>	Trunk data. The number of inbound or outbound calls carried.
<b>Change agent skills</b>	An agent's skills may be changed from Avaya CMS by using the Change Agent Skills window. The Change Agent Skills window allows the user to change the skill assignments for one agent. Through this window a user can quickly see what skills are currently assigned to an agent and the user can easily change the agent's skill assignment or apply an agent template to up to 50 agents.
<b>CONN</b>	See Connected.
<b>Connected (CONN)</b>	A trunk state. A caller and an agent are connected on an ACD call.
<b>Connected call</b>	A non-ACD call is considered to be connected to an extension (not a VDN or direct agent) when the call rings at the station and the caller does not abandon.
<b>Current</b>	An Avaya CMS action that displays data from the current interval.

## **Current interval**

<b>Current interval</b>	Represents the current intrahour interval, which can be 15, 30, or 60 minutes. The current interval is part of the real-time database.
<b>Current wait time</b>	The time a call has waited for service in a call queue adjusted for queue priority.
<b>Custom reports</b>	Real-time or historical reports that have been customized from standard reports or created from scratch.
<b>CWC</b>	See Call Work Code.
<b>DABN</b>	See Direct Abandon.
<b>DACD</b>	See Direct Agent ACD.
<b>DACW</b>	See Direct Agent ACW.
<b>Daily data</b>	Interval data that has been converted to a 1-day summary.
<b>Data collection off</b>	Avaya CMS is not collecting ACD data. If you turn off data collection, Avaya CMS will not void data on current call activity.
<b>Data collection on</b>	Avaya CMS is collecting ACD data.
<b>Data points</b>	Points of historical data. A data point should include data for each interval of the working day.
<b>Database</b>	A group of tables that store ACD data according to a specific time frame: current and previous intrahour real-time data and intrahour, daily, weekly, and monthly historical data.
<b>Database item</b>	A name for a specific type of data stored in one of the Avaya CMS databases. A database item may store ACD identifiers (split numbers or names, login IDs, VDNs, and so forth.) or statistical data on ACD performance (number of ACD calls, wait time for calls in queue, current states of individual agents, and so forth).
<b>Database tables</b>	CMS uses these tables to collect, store, and retrieve ACD data. Standard CMS database items are names of columns in the CMS database tables.
<b>Date format</b>	The standard format for entering dates on Supervisor reports.
<b>Delete</b>	A CMS action that removes the entry on the window from the database.
<b>Designer reports</b>	Customized reports that can be created using Supervisor's Report Designer feature, and which are run from Supervisor.

<b>Dictionary</b>	A CMS subsystem that can be used to assign names to various call center elements such as login IDs, splits/skills, trunk groups, Vector Directory Numbers (VDNs) and vectors. These names appear on reports, making them easier to interpret.
<b>Dictionary location</b>	The location ID is a number associated with one or more port networks on a switch. Any hardware residing on a port network is assigned the port network's location ID and identified by that ID number. The hardware tracked with this number includes the voice terminals agents use and trunks.
<b>Direct Abandon (DABN)</b>	A trunk state. The caller abandoned the call, and the trunk quickly goes to idle.
<b>Direct Agent ACD (DACD)</b>	An agent state. The agent is on a direct agent ACD call.
<b>Direct Agent ACW (DACW)</b>	An agent state. The agent is in the after call work state for a direct agent ACD call.
<b>Direct agent calling</b>	An EAS capability that makes it possible for a caller to reach the same agent every time and still include the call in the management tracking of the call center. This is ideal for claims processing, where a client needs to speak with the agent handling the claim. This flexibility ensures a high level of customer service without reducing management control.
<b>EAD</b>	See Expert Agent Distribution.
<b>EAS</b>	See Expert Agent Selection.
<b>Entity</b>	A generic term that refers to one of the following: Agent, Agent Group, Split/Skill, Trunk, Trunk Group, Vector Directory Number (VDN), Vector, or Call Work Code.
<b>Error message</b>	A response from a program indicating that a problem has arisen or something unexpected has happened, requiring your attention.
<b>EWT</b>	See Expected Wait Time.
<b>Exception</b>	A type of activity on the ACD which falls outside of the limits you have defined. An exceptional condition is defined in the Avaya CMS Exceptions subsystem, and usually indicates abnormal or unacceptable performance on the ACD (by agents, splits/skills, Vector Directory Numbers (VDNs), vectors, trunks, or trunk groups).
<b>Exception reports</b>	Display occurrences of unusual call-handling events.

## Expected Wait Time (EWT)

<b>Expected Wait Time (EWT)</b>	An estimate of how long a caller will have to wait to be served by a call center while in queue considering the current and past traffic, handling time, and staffing conditions. Time spent in vector processing before being queued and the time spent ringing an agent with manual answering operation is not included in the EWT prediction. With the MultiVantage™ system and CMS, the EWT is a switch-based calculation.
<b>Expert Agent Distribution (EAD)</b>	A call queued for a skill will go to the most idle agent (primary skill agent). Agents who are idle and have secondary agent skills will receive the call queued for a skill if there are no primary agents available.
<b>Expert Agent Selection (EAS)</b>	Expert Agent Selection (EAS) is an optional switch feature that builds on the power of the Call Vectoring and ACD features of the switch to match the skills required to handle a particular call to an agent who has at least one of the skills that a caller requires.
<b>extension call</b>	Extension calls are any calls originated by agents and non-ACD calls received by agents.
<b>FBUSY</b>	See Forced Busy.
<b>FDISC</b>	See Forced Disconnect.
<b>Find one</b>	An Avaya CMS action that searches the database for entries that match the input value.
<b>Flex agents</b>	Agents who have a role of Roving, Backup, or Allocated. Top and Reserve agents are not Flex agents. See the Avaya Business Advocate User Guide.
<b>flexible routing</b>	An ACD capability that allows customers to choose how incoming calls should be routed to agents within a split. Customers can route calls to the first available agent or to the most idle agent.
<b>Flow out</b>	Number of calls that, in the specified time period, were routed to another destination through a <b>route to</b> Vector Directory Number (VDN) or external destination. This does not include calls routed to another vector through a <b>go to</b> vector step.
<b>FMCH</b>	See Forced Multiple Call Handling.
<b>Forced Busy (FBUSY)</b>	A trunk state. The caller receives a forced busy signal.
<b>Forced Disconnect (FDISC)</b>	A trunk state. The caller receives a forced disconnect.
<b>Forced Multiple Call Handling (FMCH)</b>	A feature that, when activated for a split/skill, allows calls to be automatically delivered to an idle line appearance, if the agent is in the Auto-In/Manual-In work mode and an unrestricted line appearance is available on the voice terminal.

<b>Historical database</b>	Contains intrahour records for up to 62 days, daily records for up to 5 years, and weekly/monthly records for up to 10 years for each Avaya CMS-measured agent, split/skill, trunk, trunk group, vector, and Vector Directory Number (VDN).
<b>Historical reports</b>	Display past ACD data for various agent, split/skill, trunk, trunk group, vector, or Vector Directory Number (VDN) activities. A report summary of call data into daily, weekly or monthly totals.
<b>HOLD</b>	A trunk state. The agent has put the call on this trunk on hold.
<b>IDLE</b>	A trunk state. The trunk is not is use and waiting for a call.
<b>II</b>	See Information Indicator.
<b>Information Indicator (II)</b>	A two-digit code that identifies the type of originating line (for example: hotel or pay phone) for incoming ISDN PRI calls.
<b>INFORMIX®</b>	A relational database management system used to organize Avaya CMS data.
<b>INFORMIX SQL</b>	The interactive interface typically used to view the INFORMIX database. For Avaya CMS purposes, Avaya CMS QL is used instead of INFORMIX SQL.
<b>Integrated Services Digital Network (ISDN)</b>	A digital standard for telephony that provides a wide range of services on the same lines. Example: telephone, television, and computer signals.
<b>Interval-based items</b>	A category of database items. These items represent the amount of time during a collection interval spent doing a particular activity. Interval-based items are updated throughout the collection interval and timing is restarted at the end of the interval. Interval-based items should only be used to show amount of time in an interval for an activity or to calculate percentages of time spent in an interval. Interval-based items should not be used to calculate averages (such as average hold time).
<b>Intrahour interval</b>	A 15, 30, or 60 minute segment of time starting on the hour. An intrahour interval is the basic unit of Avaya CMS report time.
<b>Location</b>	A location, or site, refers to a physical location. This can be a building, a section of a building, or it can be what was once a separate ACD before the ATM WAN capability was used to merge separate ACDs with other ACDs into one large call center. A location will typically be assigned one (or more) location IDs. A location, despite being part of a larger call center, may continue to have sole responsibility for handling certain 800 numbers. A location may also share responsibility for handling an 800 number by having some of its agents be part of a larger split/skill that includes agents from other locations.

## **Location ID for agents**

### **Location ID for agents**

An agent location ID is the ID of the agent terminal the agent is logged into. It is associated with the switch port network ID to which the agent terminal is attached. An agent cannot be assigned a location ID for reporting purposes until he or she logs into the ACD.

### **Location ID for trunks**

The switch network location ID (1-44) associated with a trunk. A Location ID is not directly assigned to a trunk, instead, it is assigned to a port network (from the chcabinetx form). Therefore, each trunk whose equipment location belongs to that port network will be associated with that port network's location ID.

### **Logical agent**

An EAS feature that associates the agent's login ID with the physical extension when the agent logs in. Properties such as the assigned skills, class of restriction, and coverage path are associated with the login ID rather than the physical extension. This allows agents to log in at any available set.

### **LOGOFF**

An agent trace work mode. An agent is logged out and not available to take ACD calls.

### **LOGON**

An agent trace work mode. An agent is logged in and available to take ACD calls.

### **Maintenance Busy (MBUSY)**

A trunk state. The trunk is maintenance busy or out of service for maintenance purposes.

### **Manual In (MI)**

An ACD work mode. MI makes the agent available to receive an ACD call and automatically places the agent into the ACW state upon release from the call.

### **MBUSY**

See Maintenance Busy.

### **MCH**

See Multiple Call Handling.

### **Measured**

A term that means an ACD element (agent, split/skill, trunk, trunk group, vector, VDN) has been identified to Avaya CMS for collection of data. If the ACD element is not measured, no data is collected.

### **MI**

See Manual In.

### **MIA**

See Most Idle Agent.

### **Modify**

An Avaya CMS action that changes the database entry to reflect the new values entered in the current primary window.

### **Monthly data**

Daily data that has been converted to a Monthly summary.



<b>Most Idle Agent (MIA)</b>	An ACD distribution method that maintains a queue of idle agents. An agent is put at the end of the list for a particular split when the agent completes an ACD call for that split. The agent continues to advance in the list as long as the agent remains staffed and in ACW, available, or on AUXIN/OUT extension calls from the available state. If the agent is in ACW or is on an AUXIN/OUT extension call from the available state, then the agent is marked as unavailable to take an ACD call but remains in the list, moving up. An agent in the AUX mode (either by pressing the AUX button or by logging in) is not in the list of eligible agents.
<b>Multiple Call Handling (MCH)</b>	Allows an agent to receive an ACD call while other calls are active on the agent's station. The agent must put the current call on hold and press AI/MI in order to receive another ACD call.
<b>Multiple split queuing</b>	With Call Vectoring, a call can be directed to up to four splits at the same time, with the first agent who is free getting the call.
<b>Multiuser mode</b>	Any administered Avaya CMS user can log into Avaya CMS. Data continues to be collected if data collection is turned on.
<b>Name (synonym) fields</b>	Fields in which you may enter a name, or synonym, that has been entered in the Dictionary subsystem. Examples: names of agents, splits/skills, agent groups, trunk groups, vectors, Vector Directory Numbers (VDNs).
<b>Nonprimary split/skill</b>	When a call is queued to multiple splits/skills, the second and third splits/skills to which the call queues in a Vector Directory Number (VDN) are called nonprimary splits/skills. They are also referred to as secondary and tertiary splits/skills, respectively.
<b>Only Me report</b>	A custom report that only the creator and the Avaya CMS administrators can access.
<b>OTHER</b>	An agent state. The agent is working on a direct agent call, working on a call for another split or skill, or has put a call on hold and has not chosen another work mode.
<b>Percent (%) within service level</b>	The percentage of calls that you are expecting or targeting to be answered by an agent within a specific number of seconds.
<b>Phantom abandon call timer</b>	An Avaya CMS capability that tracks information about abandoned calls. When the capability is enabled, calls with a duration shorter than the administered value (zero to ten seconds) are counted as phantom abandon calls. Setting the timer to zero disables it.
<b>Previous interval</b>	Represents one intrahour interval and is part of the real-time database. At the end of each intrahour interval, the contents of the current intrahour interval are copied to the previous intrahour interval portion of the real-time database.

## **Primary skill**

<b>Primary skill</b>	<p>Skills assigned to an agent. Primary skills are the areas in which the agent has the most expertise.</p> <p>See also Agent Skill.</p>
<b>Queue</b>	<p>A holding area for calls waiting to be answered in the order in which they were received. Calls in a queue may have different priority levels, in which case, calls with a higher priority are answered first.</p>
<b>QUEUED</b>	<p>A trunk state. An ACD call has seized the trunk and is queued to a split/skill waiting for an agent to answer.</p>
<b>Read permission</b>	<p>The Avaya CMS user can access and view data. Example: run reports or view the Dictionary subsystem. Read permission is granted from the User Permissions subsystem.</p>
<b>Real-time database</b>	<p>Consists of the current and previous intrahour data on each Avaya CMS-measured agent, split, trunk, trunk group, vector, and Vector Directory Number (VDN).</p>
<b>Real-time reports</b>	<p>Display current ACD call activity on agents, splits/skills, trunks, trunk groups, vectors, and Vector Directory Numbers (VDNs) for the current or previous intrahour interval. Current intrahour interval real-time reports are constantly updated as data changes during the interval. Previous intrahour interval real-time reports show data totals for activity that occurred in the previous intrahour interval.</p>
<b>Redirect on no answer</b>	<p>An ACD capability that assists the user if a call is not answered in a specified number of rings (preset by the call center Manager). The terminal extension, including ports with VRUs, is busied out and the call goes back into the queue at top priority.</p>
<b>Refresh rate</b>	<p>The number of seconds Avaya CMS should wait for each update of the real-time report data. A user's fastest allowable refresh rate is defined in the User Permissions - User Data window as a minimum refresh rate. The default refresh rate when a user brings up the report input window is the administered minimum refresh rate plus 15 seconds.</p> <p>R3V6 can refer to a software version of Avaya CMS.</p>
<b>RINGING</b>	<p>An agent state. The time a call rings at an agent's voice terminal after leaving the queue and before the agent answers the call.</p> <p>A trunk state. A call is ringing at the agent's voice terminal.</p>
<b>Rolling ASA</b>	<p>See Average Speed of Answer (ASA).</p>
<b>Scripting</b>	<p>The Scripting feature lets you create a script to run a specified report or run a report and export the data on schedule. The scripts require a customer- provided scheduler to be run at a later time.</p>

<b>Secondary skill</b>	Skills assigned to an agent. Secondary skills are the areas in which the agent does not have extensive expertise. (Used through G3V4 with EAS.) See also Agent Skill, Skill Level.
<b>SEIZED</b>	A trunk state. A call is using the trunk either incoming or outgoing.
<b>Service level</b>	A time specified in seconds within which all calls should be answered. Normally set as an objective by management. Usually referred to as Acceptable Service Level (ASA).
<b>Service Observing-VDNs</b>	A feature that gives a voice terminal user the ability to monitor the treatment a call receives as it is processed by a Vector Directory Number (VDN).
<b>Single-user mode</b>	Only one person can log into Avaya CMS. Data continues to be collected if data collection is turned on. This mode is required to change some Avaya CMS administration.
<b>Skill</b>	An attribute that is assigned to an ACD Agent. Agent Skills can be thought of as the ability for an Agent with a particular set of skills to handle a call which requires one of those skills. In relationship to your call center, think of skill as a specific customer need/requirement or perhaps a business need of your call center. You will be defining your skills based on the needs of your customers and your call center.
<b>Skill level</b>	A priority level from 1 (highest) to 16 (lowest) indicating an agent's level of expertise or ability to handle calls to the given skill.
<b>Split</b>	A group of extensions that receives special-purpose calls in an efficient, cost-effective manner. Normally, calls to a split arrive primarily over one or a few trunk groups.
<b>Staffed agent</b>	An Agent who is currently logged in to the switch.
<b>Standard reports</b>	The set of reports that are delivered with the Avaya CMS or Avaya CMS Supervisor software.
<b>Station</b>	An unmeasured extension. An extension that is not currently staffed by an agent or that is a member of an unmeasured split/skill or hunt group.
<b>Subsystem</b>	Each Avaya CMS Controller selection (for example, Reports, Dictionary, System Setup, Exceptions, and so forth) along with Timetable and Shortcut is referred to as a subsystem of the Call Management System throughout this document.
<b>Switch</b>	A private switching system providing voice-only or voice and data communications services (including access to public and private networks) for a group of terminals within a customer's premises.

## System AUX

<b>System AUX</b>	The switches use the reason code 0 as the default code for situations in which the switch places the agent in the AUX mode automatically (for example, on login, when agents make or receive extension calls from AI/MI mode, when the agent is taken out of service due to failure to answer a ringing call) or logs the agent out (for example, during a Move Agent while Staffed operation). ASAI applications that change the agent's work mode to AUX or log the agent out without specifying a reason code will result in change to AUX or logout with the default reason code.
<b>Tertiary split/skill</b>	Generic 3 and ECS with vectoring. When a call is queued to multiple splits/skills, the third split/skill the call queued to in a Vector Directory Number (VDN) is called the tertiary split/skill.
<b>Thresholds</b>	Avaya CMS Supervisor thresholds are defined as Caution or Warning. Threshold highlight settings apply only to some real-time data items in real-time and integrated reports. For information on setting threshold highlights, see the Avaya Call Management System Administration document.
<b>Time format</b>	The standard format for entering times on Avaya CMS reports.
<b>Timetable</b>	An activity task or group of activities tasks (like reports) scheduled for completion at a time that is convenient and nondisruptive for your call center's operation.
<b>Trunk</b>	A telephone circuit that carries calls between two switches, between a Central Office (CO) and a switch, or between a CO and a phone.
<b>Trunk group</b>	A group of trunks that are assigned the same dialing digits - either a phone number or a Direct Inward Dialed (DID) prefix.
<b>Uniform Call Distribution (UCD)</b>	The most idle agent for the skill will receive the call (if the agent is available).
<b>Universal Call Identifier (UCID)</b>	A number that uniquely identifies a call in a network of nodes that support UCID. This number will be a part of the records in the Call History feature of Avaya CMS.
<b>UNKNOWN</b>	An agent state. Avaya CMS does not recognize the current state. A trunk state. Avaya CMS does not recognize the state of the trunk.
<b>UNSTAF (non-EAS)</b>	Unstaffed, an agent state. The agent is not logged in and, therefore is not being tracked by Avaya CMS.
<b>User ID</b>	The login ID for an Avaya CMS user.
<b>User permissions</b>	An Avaya CMS subsystem that allows the Avaya CMS administrator to define user access permissions.
<b>VDN</b>	See Vector Directory Number.

<b>VDN calls-counted</b>	Also known as counted-calls to Vector Directory Number (VDN) and active VDN calls. This is a Call Vectoring capability. Counted-calls to VDN is a parameter of the <b>go to step</b> and <b>go to vector</b> commands that provides conditional branching (to a different step in the same vector or to a different vector) based on the number of incoming trunk calls a VDN is currently processing.
<b>VDN of Origin Announcement (VOA)</b>	A short announcement that is assigned to a Vector Directory Number (VDN) through switch administration. The VOA identifies the origin or purpose of a call for the call center agent who answers the call.
<b>VDN skill preference</b>	A prioritized list of agent skills administered for a Vector Directory Number (VDN) that are required or preferred for the answering agent. VDN Skill Preferences represent the requirement that a call be routed to an ACD agent with a particular ability or set of abilities.
<b>Vector</b>	A list of steps that process calls in a user-defined manner. The steps in a vector can send calls to splits, play announcements and music, disconnect calls, give calls a busy signal, or route calls to other destinations. Calls enter vector processing via Vector Directory Numbers (VDNs), which may have received calls from assigned trunk groups, from other vectors, or from extensions connected to the switch.
<b>Vector Directory Number (VDN)</b>	An extension number that enables calls to connect to a vector for processing. A VDN is not assigned an equipment location. It is assigned to a vector. A VDN can connect calls to a vector when the calls arrive over an assigned automatic-in trunk group or when calls arrive over a dial-repeating (DID) trunk group and the final digits match the VDN. The VDN by itself may be dialed to access the vector from any extension connected to the switch.
<b>Voice terminal</b>	A telephone set, usually with buttons, that gives an agent some control over the way calls are handled.
<b>Weekly data</b>	Daily data that have been converted to a weekly summary.
<b>Write permission</b>	The Avaya CMS user can add, modify, or delete data and execute processes. Write permission is granted from the User Permissions subsystem.

**Write permission**

# Index

## Symbols

% Aban . . . . .	483, 501
% Aban Calls . . . . .	383, 404, 493
% Abandoned Distribution . . . . .	396, 490
% ACD Time . . . . .	443, 448, 455
% Agent (Group) Occupancy with ACW . . . . .	551
% Agent (Group) Occupancy without ACW . . . . .	551
% Agent Occup w/ACW . . . . .	338, 355
% Agent Occup w/o ACW . . . . .	338, 355
% Agent Occupancy with ACW . . . . .	551
% Agent Occupancy without ACW . . . . .	551
% Ans Calls . . . . .	383, 443, 448, 455
% Ans+Conn . . . . .	483
% Answered Distribution . . . . .	396, 490
% Busy . . . . .	501
% Flow Out . . . . .	502, 551
% Outside Service Level	
Split/Skill Graphical Call Profile report . . . . .	202
VDN Graphical Call Profile report . . . . .	287
% Within Service Level	
Split/Skill Call Profile report . . . . .	181, 382
Split/Skill Graphical Call Profile report . . . . .	201
Split/Skill Graphical Service Level report . . . . .	404
Split/Skill Graphical Status report . . . . .	221
VDN Call Profile report . . . . .	282, 482
VDN Graphical Call Profile report . . . . .	287
VDN Graphical Service Level report . . . . .	493

## Numerical

100 * (sum(ABNCALLS/sum(INCALLS)) . . . . .	486
100 * (sum(BUSYCALLS/sum(INCALLS)) . . . . .	486
100 * (sum(DISCCALLS/sum(INCALLS)) . . . . .	486
100 * (sum[I_RINGTIME + I_ACDTIME + I_ACDOTHER- TIME + I_ACD_AUX_OUTTIME + I_ACD_AUXINTIME + I_ ACWTIME]) / (sum[TI_STAFFTIME TI_AUXTIME + I_ ACDAUX_OUTTIME + I_ACD_AUXINTIME]) . . . . .	338
100 * (sum[I_RINGTIME + I_ACDTIME + I_ACDOTHER- TIME + I_ACD_AUX_OUTTIME + I_ACD_AUXINTIME]) / (sum[TI_STAFFTIME TI_AUXTIME + I_ACD_AUX_OUT- TIME + I_ACD_AUXINTIME]) . . . . .	338
100 * ABNCALLS/INCALLS . . . . .	501
100 * BUSYCALLS/INCALLS . . . . .	501
100 * OUTFLOWCALLS/INCALLS . . . . .	502
100- PERCENT_ SERV_LVL_VDN> . . . . .	287
100-PERCENT_ SERV_LVL_SPL> . . . . .	202, 395, 490
1st Skill ACD Calls . . . . .	505
1st Skill Avg ACD Time . . . . .	505
1st Skill Avg ACW . . . . .	505
1st Skill Pref. . . . .	505
1st Skill Preference . . . . .	502

2nd Skill ACD Calls . . . . .	505
2nd Skill Avg ACD Time . . . . .	505
2nd Skill Avg ACW . . . . .	505
2nd Skill Pref. . . . .	505
2nd Skill Preference . . . . .	502
3D Chart	
Rotating . . . . .	81
3rd Skill ACD Calls . . . . .	506
3rd Skill Avg ACD . . . . .	506
3rd Skill Avg ACW . . . . .	506
3rd Skill Pref. . . . .	506
3rd Skill Preference . . . . .	502

## A

Aban . . . . .	288
Aban Calls	
Graphical Split/Skill View report . . . . .	544
Multi-ACD Top Agent report . . . . .	155
Queue/Agent Status report . . . . .	167
Queue/Top Agent Status report . . . . .	161
Split/Skill Call Profile report . . . . .	383
Split/Skill Comparison report . . . . .	538
Split/Skill Graphical Call Profile report . . . . .	202, 395
Split/Skill Summary report . . . . .	428
System Multi-ACD by Split/Skill report . . . . .	442
System Multi-ACD report . . . . .	448
System report . . . . .	452
Trunk Group report . . . . .	469
Trunk report . . . . .	466
Trunk/Trunk Group Busy Hour report . . . . .	463
VDN Busy Hour report . . . . .	478
VDN Call Profile report . . . . .	283, 483
VDN Graphical Call Handling report . . . . .	549
VDN Graphical Call Profile report . . . . .	489
VDN Multi-ACD Flow report . . . . .	496
VDN report . . . . .	293, 501
VDN Skill Preference report . . . . .	290, 504
Vector report . . . . .	512
Abandon . . . . .	486
Abandoned . . . . .	182
Abandoned Call . . . . .	551
Abandoned Call Search . . . . .	551
Abandoned Calls . . . . .	148, 222, 249, 259
ABNCALLS . . . . .	148, 182, 183, 222, 249, 259, 284, 290, 291, 293, 298, 383, 395, 442, 452, 469, 483, 496, 501, 504, 537, 542, 549
ABNCALLS1 . . . . .	202, 483
ABNCALLS1-10 . . . . .	182, 283, 288, 383, 396, 489
ABNCALLS2-10 . . . . .	483

ABNTIME	148, 183, 222, 249, 259, 284, 291, 293, 298, 383, 442, 452, 483, 501, 504, 537, 542
About Graphical Reports	521
ACCEPTABLE	181, 221, 282, 382, 401, 482, 542
Acceptable Service Changed	382, 395, 404, 482, 493
Acceptable Service Level	551
Access Permissions	551
Accessing Reports	35
ACD	127, 135, 145, 153, 225, 321, 323, 326, 328, 332, 335, 337, 342, 349, 351, 360, 375, 382, 401, 410, 415, 437, 441, 451, 468, 478, 482, 486, 495, 499, 504, 551
ACD Call	551
ACD Calls	127, 132, 148, 154, 202, 222, 248, 249, 259, 260, 293, 298, 323, 326, 332, 337, 351, 355, 375, 383, 394, 415, 421, 442, 452, 478, 489, 496, 500, 505
Multi-ACD reports	147
ACD Calls Ans	290
ACD Time	323, 332, 339, 351, 355, 375, 417, 423
ACD+Conn Calls	483
ACD+Conn Calls (total)	483
ACDCALLS	146, 148, 182, 221, 222, 248, 259, 283, 284, 290, 293, 298, 323, 326, 332, 337, 342, 351, 375, 383, 394, 416, 422, 442, 443, 451, 452, 455, 483, 496, 500, 504, 505, 523, 529, 537, 542, 549
Multi-ACD reports	147
ACDCALLS + DA_ACDCALLS	415, 421
ACDCALLS1	202
ACDCALLS1-10	181, 383, 396, 489
ACDs	145
ACDTIME	148, 222, 248, 259, 290, 293, 342, 375, 416, 422, 442, 452, 500, 505, 537
Acknowledgment	552
Activate Agent Trace	552
Active Skill	132
Active Split	127
Active Split/Skill	229, 233
Active VDN Calls	294, 552
ACTIVECALLS	294
ACW	127, 135, 226, 328, 410, 552
ACW Time	323, 332, 339, 351, 355, 375, 417, 423
ACWINCALLS	323, 332, 338, 343, 352
ACWINTIME	338, 343
ACWOUTCALLS	332, 339, 343, 352, 443, 454, 455
ACWOUTOFFCALLS	344
ACWOUTOFFTIME	344
ACWOUTTIME	339, 343, 443, 455
ACWTIME	290, 342, 375, 416, 422, 442, 452, 500, 505
ADJATTEMPTS	497
ADJROUTED	497
Adjunct Routing Attempts	497
Adjunct Routing Completions	497
Adjunct/Switch Applications Interface (ASAI)	552
After Call Work	260
After Call Work (ACW)	552
Agent	132, 242, 244, 256, 323, 328, 342, 351, 355, 360, 552

Agent Attendance Report	322
Agent AUX Report	320
Agent Graphical Information Report	131
Agent Group	121, 332, 335, 337
Agent Group Report	120
Agent ID	332
Agent Information Report	126, 521
Agent Login ID	552
Agent Name	121, 124, 127, 141, 163, 169, 194, 198, 220, 226, 229, 233, 263, 273, 304, 321, 326, 332, 335, 337, 349, 415, 421
Agent Occupancy	552
Agent Position	
EAS	552
Non-EAS	552
Agent Report	123
Agent Report Input Fields	317
Agent report input fields	520
Agent report input window	118
Agent report selector window	117, 519
Agent Report Selector Window and Input Fields	317
Agent Reports	116, 518
Agent Group Report	120
Agent Information Report	126
Agent Report	123
Attendance	322
AUX	320
Event Count	325
general information	116, 315
Graphical Information Report	131
Graphical Time Spent	327
Group Attendance	331
Group AUX	334
Group Summary	336
Inbound/Outbound	341
Information	521
Login/Logout (Skill)	345
Login/Logout (Split)	348
organization	315
Overview	116
overview	518
Roadmap	116
selector window	316
Split/Skill Report	350
Summary Report	354
Trace by Location Report	359
Agent Reports Selector Window	316
Agent Reports, general information	116
Agent Ring Time	323, 332, 339, 355, 417, 423
Agent Role	552
Agent Skill	553
Agent State	553
Agent state	304



Agent Summary Report . . . . .	354
Agent Terminal . . . . .	553
Agent Trace . . . . .	553
Agent Trace by Location Report . . . . .	359
Agents Active chartFlex Agents. . . . .	187
Agents Active chartReserve1 Agents . . . . .	187
Agents Active chartReserve2 Agents . . . . .	187
Agents Active chartTop Agents . . . . .	187
Agents Avail. . . . .	272
Agents in ACW . . . . .	271
Agents in AUX. . . . .	194, 271
Agents in Other . . . . .	272
Agents on ACD Calls . . . . .	271
Agents Ringing . . . . .	272
Agents Staffed . . . . .	141, 220, 237, 272
AGINRING . . . . .	148, 249, 260, 542
AGRING . . . . .	190
AGTIME 195, 199, 220, 227, 245, 256, 273, 523, 529	
AI. . . . .	553
Algorithm . . . . .	553
ANI . . . . .	553
Announcement . . . . .	553
Ans/Conn . . . . .	287
ANSCONNCALLS1 . . . . .	483, 489
ANSCONNCALLS10. . . . .	489
ANSCONNCALLS1-10. . . . .	283, 287
ANSCONNCALLS2 . . . . .	489
ANSCONNCALLS2-10. . . . .	483
ANSTIME 146, 182, 221, 248, 259, 284, 290, 293, 298, 383, 442, 451, 483, 500, 504, 537, 542	
ASA . . . . .	549, 553
ASAI . . . . .	553
ASSISTS . . . . .	344, 352, 419
Assists . . . . .	344, 352, 419
Asst . . . . .	361
Attendance Report. . . . .	322
Auto-Available Split . . . . .	553
Auto-In (AI) . . . . .	553
Automatic Call Distribution (ACD). . . . .	554
Automatic Number Identification (ANI) . . . . .	554
AUX . . . . .	127, 135, 226, 328, 410, 554
AUX Reason 121, 124, 132, 163, 169, 195, 199, 227, 273, 360	
AUX Report . . . . .	320
AUX Time. . . . .	323, 332, 335, 340, 355, 418, 424
AUX Time 0 . . . . .	321, 335
AUX Time 1 I 9 . . . . .	321, 335
Aux Work . . . . .	149, 250, 261
Auxiliary Work (AUX) . . . . .	554
AUXINCALLS . . . . .	323, 332, 338, 343, 352
AUXINTIME . . . . .	338, 343
AUXOUTCALLS. . . . .	323, 339, 343, 352, 443, 454, 455
AUXOUTOFFCALLS . . . . .	344
AUXOUTOFFTIME . . . . .	344
AUXOUTTIME . . . . .	332, 339, 343, 443, 455
AUXREASON . . . . .	195, 199, 227, 229, 273, 523
AVAIL . . . . .	127, 135, 225, 328, 410, 554
Avail Time . . . . .	323, 332, 340, 355, 418, 424
AVAILABLE . . . . .	148, 249, 259, 542
Available . . . . .	148, 249, 259
Available (AVAIL) . . . . .	554
Avaya Business Advocate . . . . .	554
Avaya Call Management System (CMS) . . . . .	555
Avaya CMS . . . . .	554
Avaya CMS Supervisor . . . . .	554
Average Agent Service Time . . . . .	554
Average Speed of Ans - Seconds . . . . .	387, 392
Average Speed of Answer . . . . .	182
Average Speed of Answer (ASA) . . . . .	554
Average Time to Abandon . . . . .	183, 383
Avg Aban Time 155, 291, 293, 442, 452, 483, 501, 504	
Avg ACD Talk . . . . .	293
Avg ACD Talk Time . . . . .	148, 248, 259
Avg ACD Time 154, 355, 375, 416, 422, 442, 447, 452, 478, 500, 505	
Avg ACW . . . . .	505
Avg ACW Call . . . . .	337
Avg ACW Time . . . . .	355, 375, 442, 447, 452, 500
Avg ACW Time (Inbound ACD) . . . . .	342
Avg ACW Time (Outbound ACD) . . . . .	343
Avg After Call . . . . .	290, 416, 422
Avg Connect Time . . . . .	501
Avg External Extn Out Time. . . . .	344
Avg Extn In Time. . . . .	338, 355
Avg Extn Out Time . . . . .	339, 343, 355, 443, 448, 455
Avg Hold Time . . . . .	355, 419
Avg Inbound ACD Time. . . . .	342
Avg Inbound Trunk Hold Time. . . . .	469
Avg Outbound ACD Time . . . . .	342
Avg Outbound Trunk Hold Time . . . . .	469
Avg Pos Staffed . . . . .	389
Avg Speed Ans . . . . .	154, 248, 383, 442, 451, 504
Avg Speed Answer . . . . .	290, 293, 298
Avg Speed of Ans+Conn . . . . .	483
Avg Speed of Answer . . . . .	146, 259, 500
Avg Talk Time . . . . .	290, 337, 343
Avg Time to Abandon . . . . .	148, 249, 259, 298
Avg VDN Time . . . . .	502
Avg. ACD Talk Time . . . . .	222
Avg. Speed of Answer . . . . .	221
Avg. Time to Abandon . . . . .	222
AVG_ABANDON_TIME . . . . .	542
AVG_ACD_TALK_TIME . . . . .	222, 537, 542
AVG_AGENT_ACW_TIME . . . . .	425
AVG_AGENT_TALK_SUM . . . . .	425
AVG_ANSWER_SPEED . . . . .	221, 387, 392, 537, 542
AVG_EQV_AG_STFD . . . . .	389
AWORKMODE. . . . .	226, 273, 523, 529

---

## B

Backup ACD Calls . . . . .	500
BACKUPCALLS . . . . .	496, 500
BH_ABNCALLS . . . . .	478
BH_ACDCALLS . . . . .	478
BH_ACDTIME . . . . .	478
BH_BUSYCALLS . . . . .	478, 479
BH_DISCCALLS . . . . .	479
BH_OTHERCALLS . . . . .	479
BH_STARTTIME . . . . .	478
BH_VDNCALLS . . . . .	478
Browse Date dialog box . . . . .	38
Browse Dates dialog box . . . . .	39
Browse Months dialog box . . . . .	40, 41
Browse Time dialog box . . . . .	43
Busy . . . . .	486
Busy Hour . . . . .	478
Busy+Disc Calls . . . . .	496
Busy/Disc . . . . .	298
BUSYCALLS . . . . .	293, 298, 496, 501

---

## C

Calculation. . . . .	554
Call Handling Preference . . . . .	132, 554
Call Profile Report . . . . .	180
Call Prompting . . . . .	555
Call Records Report . . . . .	365
Call Records Report Input Fields . . . . .	366
Call Vectoring . . . . .	555
Call Work Code . . . . .	373, 375
Call Work Code (CWC) . . . . .	555
Call Work Code Name . . . . .	375
Call Work Code Report . . . . .	372
Call Work Code Report Input Fields . . . . .	373
Call-Based Items. . . . .	555
Call-Handling Profile . . . . .	555
Calling Party . . . . .	361
Calls . . . . .	342
Calls Aban. . . . .	298
Calls Carried. . . . .	555
Calls Wait . . . . .	298
Calls Waiting 146, 154, 161, 173, 209, 221, 237, 240, 248, 254, 258, 265, 293	
CALLSOFFERED 181, 182, 183, 221, 382, 383, 401, 443, 455, 542	
Change Agent Skills . . . . .	555
Chart Reports	
3D Effects Tab . . . . .	66
3D Effects Tab Parameters . . . . .	67
Axis Tab . . . . .	68
Axis Tab Parameters . . . . .	68
Data Labels Tab . . . . .	75

## Chart Reports, (continued)

Data Labels Tab Parameters . . . . .	76
Formatting . . . . .	63
General Tab. . . . .	64
General Tab Parameters. . . . .	65
Legend Tab . . . . .	73
Legend Tab Parameters . . . . .	74
Title Tab . . . . .	71
Title Tab Parameters . . . . .	72
Type Tab . . . . .	69
Type Tab Parameters . . . . .	70
Conf . . . . .	362
Connect Calls . . . . .	501
CONNECTCALLS . . . . .	283, 284, 483, 501
Connected (CONN) . . . . .	555
Connected Call . . . . .	555
CONNECTTIME . . . . .	284, 483, 501
Copying Chart Reports . . . . .	84
Current. . . . .	555
Current Interval . . . . .	556
Current Interval, Definition. . . . .	26
Current Wait Time . . . . .	556
Custom Reports . . . . .	556
Custom Reports, Reference . . . . .	26
CWC. . . . .	375, 556

---

## D

DA_ACDCALLS323, 326, 332, 337, 342, 351, 416, 422, 523, 529	
DA_ACDTIME . . . . .	342, 416, 422
DA_ACWTIME . . . . .	342, 416, 422
DA_SKILL . . . . .	523
DABN . . . . .	556
DACD . . . . .	556
DACW . . . . .	556
Daily Data . . . . .	556
Daily Data, Definition . . . . .	26
Daily Reports . . . . .	314
Data Collection Off . . . . .	556
Data Collection On . . . . .	556
Data Points. . . . .	556
Database. . . . .	556
Database Item . . . . .	556
Database Tables . . . . .	556
Date321, 323, 326, 328, 332, 337, 342, 349, 351, 355, 360, 373, 382, 387, 389, 394, 401, 404, 407, 409, 415, 421, 441, 451, 468, 478, 482, 486, 489, 493, 495, 499, 504	
Date Format . . . . .	556
Date, Week Starting, Month Starting . . . . .	375
Dates . . . . .	392, 437
Delete . . . . .	556
Designer Reports . . . . .	556
Designer Reports, Definition . . . . .	26

Dialed Digits . . . . .	361
Dialed Number Identification Service (DNIS) . . . . .	557
Dictionary . . . . .	557
Dictionary Location . . . . .	557
Direct Abandon (DABN) . . . . .	557
Direct Agent ACD (DACD) . . . . .	557
Direct Agent ACW (DACW) . . . . .	557
Direct Agent Calling . . . . .	557
Direct Agent Calls . . . . .	127, 132
Direct Agent Skills . . . . .	132
DIRECTION . . . . .	220, 226, 256, 273, 361, 523, 529
Direction . . . . .	273
DISCCALLS . . . . .	298, 496, 501
Disconnect . . . . .	486
Drill-Down Reports . . . . .	300
Drill-Down Top Agent Work State Report . . . . .	302
Drill-Down Work State Report . . . . .	306
General Information . . . . .	300
Drill-Down Top Agent Work State Report . . . . .	302
Drill-Down Work State Report . . . . .	306
DURATION . . . . .	361

## E

EAD . . . . .	557
EAS . . . . .	557
Entity . . . . .	557
EQLOC . . . . .	468
Error Message . . . . .	557
Event Count . . . . .	141
Event Count 1-9 . . . . .	326
Event Count Report . . . . .	325
Event Count Summary Report . . . . .	139
Event counts . . . . .	139
EVENT_TIME . . . . .	360
EVENT1-9 . . . . .	141
EWT . . . . .	557
EWT High . . . . .	147
EWT Low . . . . .	147
EWT Medium . . . . .	147
EWT Top . . . . .	146
EWTHIGH . . . . .	147, 205, 241, 243, 255, 266
EWTLOW . . . . .	147, 206, 242, 244, 255, 266
EWTMEDIUM . . . . .	147, 206, 241, 243, 255, 266
EWTTOP . . . . .	146, 205, 241, 243, 255, 265
Exception . . . . .	557
Exception Reports . . . . .	557
Definition . . . . .	26
Exceptions . . . . .	
Audio difficulty . . . . .	139
Exiting and Restarting Reports . . . . .	44
Exiting Reports, procedure . . . . .	44
Expected Wait Time (EWT) . . . . .	558
Expected Wait Time High . . . . .	241, 243, 255, 266
Expected Wait Time Low . . . . .	242, 244, 255, 266

Expected Wait Time Medium . . . . .	241, 243, 255, 266
Expected Wait Time Top . . . . .	241, 243, 255, 265
Expert Agent Distribution (EAD) . . . . .	558
Expert Agent Selection (EAS) . . . . .	558
Exporting Report Data . . . . .	82
Defaults . . . . .	82
Procedure . . . . .	82
Report Format . . . . .	82
EXT_CALL_IN . . . . .	323
EXT_CALL_IN> . . . . .	332
EXT_CALL_OUT . . . . .	323
EXT_CALL_OUT> . . . . .	332
EXT_IN_TIME . . . . .	323
EXT_OUT_TIME . . . . .	323
EXT_OUT_TIME> . . . . .	332
EXTENSION . . . . .	273, 523, 529
Extension Call . . . . .	558
External Extn Out Calls . . . . .	344
EXTN . . . . .	346, 349
Extn . . . . .	121, 124, 127, 132, 163, 169, 273, 346, 349
Extn In Calls . . . . .	323, 332, 338, 343, 352, 355
Extn In Time . . . . .	323, 332, 352
Extn Out Calls . . . . .	323, 332, 339, 343, 352, 355, 443, 448, 454
Extn Out Time . . . . .	323, 332, 352
EXTN_IN_TIME> . . . . .	332

## F

FAGINRING . . . . .	187, 216
FAILURES . . . . .	469
FBUSY . . . . .	558
FDISC . . . . .	558
FINACW . . . . .	187, 216
FINAUX . . . . .	216
Find One . . . . .	558
Flex Agents . . . . .	558
Flex Agents (Active) . . . . .	216
Flex Agents (AUX) . . . . .	216
Flex Agents (Other) . . . . .	216
Flex Agents Staffed . . . . .	156, 163, 186
Flexible Routing . . . . .	558
Flow In . . . . .	453, 496, 499
Flow Out . . . . .	454, 496, 501, 558
FMCH . . . . .	558
FONACD . . . . .	187, 216
Forced Busy (FBUSY) . . . . .	558
Forced Busy Calls . . . . .	478, 501
Forced Disc Calls . . . . .	479, 501
Forced Disconnect (FDISC) . . . . .	558
Forced Multiple Call Handling (FMCH) . . . . .	558
FOTHER . . . . .	216
FSTAFFED . . . . .	156, 186, 225
FTE_AGENTS . . . . .	190
Full Time Equivalent Agents Staffed . . . . .	190

---

## G

Graphical Active Agents Report . . . . .	184
Graphical Allocated Agents Report . . . . .	188
Graphical Reports	
Introduction. . . . .	521
Graphical Skill Overload Report . . . . .	210, 405
Graphical Staffing Profile Report . . . . .	213
Graphical Time Spent Report . . . . .	327
Group Attendance Report. . . . .	331
Group AUX Report . . . . .	334
Group Summary Report . . . . .	336

---

## H

Held Calls . . . . .	352, 355, 419
High. . . . .	205
Historical Agent Reports, organization . . . . .	315
Historical Agent Reports, overview . . . . .	315
Historical Database. . . . .	559
Historical Database, Definition . . . . .	26
Historical Other Reports, overview . . . . .	363
Historical Reports . . . . .	314, 376, 559
Agent Attendance. . . . .	322
Agent AUX . . . . .	320
Agent Event Count . . . . .	325
Agent Graphical Time Spent. . . . .	327
Agent Group Attendance . . . . .	331
Agent Group AUX. . . . .	334
Agent Group Summary . . . . .	336
agent reports . . . . .	315
Agent Summary Report . . . . .	354
Agent Trace by Location Report . . . . .	359
Call Records Report . . . . .	365
Call Work Code Attendance . . . . .	372
Graphical Skill Overload Report . . . . .	405
Inbound/Outbound Summary . . . . .	341
introduction. . . . .	312
Login/Logout (Skill) . . . . .	345
Login/Logout (Split) . . . . .	348
organization . . . . .	311
overview . . . . .	311
presentation . . . . .	312
roadmap . . . . .	313
Split/Skill by Location Report . . . . .	420
Split/Skill Call Profile Report . . . . .	381
Split/Skill Graphical ASA Daily Report . . . . .	390
Split/Skill Graphical ASA Report . . . . .	384
Split/Skill Graphical Average Positions Staffed Report . . . . .	388
Split/Skill Graphical Call Profile Report . . . . .	393
Split/Skill Graphical Multi-ACD Service Level Report	397

## Historical Reports, (continued)

Split/Skill Graphical Service Level Report . . . . .	402
Split/Skill Graphical Time Spent Report . . . . .	408
Split/Skill Outbound Report. . . . .	411
Split/Skill Report. . . . .	350, 414
Split/Skill Summary Report. . . . .	426
System Graphical Maximum Delay Report . . . . .	434
System Multi-ACD by Split/Skill Report . . . . .	438
System Multi-ACD Report . . . . .	444
System Report . . . . .	449
System Reports . . . . .	432
Trunk Group Report . . . . .	467
Trunk Group Summary Report . . . . .	470
Trunk Report . . . . .	464
Trunk/Trunk Group Busy Hour Report. . . . .	461
Trunk/Trunk Group Reports . . . . .	456
VDN Busy Hour Report . . . . .	477
VDN Call Profile Report . . . . .	480
VDN Graphical Busy/Abandon/Disconnect Comparison Report . . . . .	484
VDN Graphical Call Profile Report . . . . .	487
VDN Graphical Service Level Report . . . . .	491
VDN Multi-ACD Flow Report . . . . .	494
VDN Report . . . . .	498
VDN Reports . . . . .	474
VDN Skill Preference Report . . . . .	503
Vector Report . . . . .	507, 510
Historical Reports, Definition. . . . .	26
Historical Reports, introduction . . . . .	312
Historical Reports, organization . . . . .	311
Historical Reports, overview . . . . .	311
Historical Reports, presentation . . . . .	312
Historical Reports, roadmap . . . . .	313
Historical System Reports, general information . . . . .	432
Historical System Reports, selector window. . . . .	433
Historical Trunk/Trunk Group Reports, general information. . . . .	456
Historical Trunk/Trunk Group Reports, selector window . . . . .	457
Historical VDN Reports, general information . . . . .	474
Historical VDN Reports, selector window . . . . .	475
Historical Vector Report, general information . . . . .	507
Historical Vector Report, selector window. . . . .	507
HOLD . . . . .	559
Hold . . . . .	361
HOLDCALLS . . . . .	352, 419
HOLDTIME. . . . .	353, 419

---

## I

I_ACDTIME . . . . .	323, 332, 339, 351, 417, 423, 443, 455, 523, 529, 549
I_ACWINTIME . . . . .	323, 332, 352

I_ACWOUTTIME	323, 332, 352
I_ACWTIME	323, 332, 339, 351, 417, 423, 443, 455, 523, 529
I_AUXINTIME	323, 332, 352
I_AUXOUTTIME	323, 332, 352
I_AUXTIME	410, 424
I_AUXTIME0	410
I_AUXTIME1-9	410
I_AVAILTIME	410, 418, 424
I_DA_ACDTIME	323, 332, 339, 351, 417, 423, 523, 529
I_DA_ACWTIME	323, 332, 339, 351, 417, 423, 523, 529
I_INOCC	469
I_NORMTIME	407, 540
I_OL1TIME	407, 540
I_OL2TIME	407, 540
I_OTHERTIME	410, 418, 424
I_OUTOCC	469
I_RINGTIME	135, 323, 328, 332, 339, 410, 417, 423, 529
I_STAFFTIME	418, 424, 443, 455
IDLE	559
II	559
INACW	148, 190, 249, 260, 542
INAUX	149, 194, 250, 261, 542
INAUX0	194
INAUX1-9	194
Inbound Calls	469, 478, 495, 499, 504
Inbound CCS	469
Inbound/Outbound Report	341
INCALLS	282, 284, 290, 469, 482, 483, 495, 499, 504
INFLOWCALLS	294, 299, 453, 496, 499
Information Indicator (II)	559
Information Report	521
INFORMIX	559
INFORMIX SQL	559
INPROGRESS	298
INQUEUE	537, 542
INRING	537, 542
Integrated Agent Reports	518
Integrated Agent Reports, overview	518
Integrated Reports	
Agent Information	521
Agent input fields	520
Agent Reports	518
Agent selector window	519
Graphical Call Handling	547
Graphical Split/Skill View	541
Split/Skill report input fields	535
Split/Skill report selector window	534
Split/Skill Reports	533
VDN Report	545
VDN Report input fields	546
VDN Report selector window	545
Integrated Reports, Definition	26, 516

Integrated Reports, roadmap	516
Integrated Services Digital Network (ISDN)	559
Integrated Split/Skill Reports	533
Integrated Split/Skill Reports, general information	533
Integrated VDN Report, general information	545
INTERFLOWCALLS	496
Interval Reports	314
Interval-Based Items	559
INTIME	469, 502
Intrahour Interval	559
INTRVL	326, 504

## L

LEVEL	523
Level	132, 170, 220, 227, 229, 233, 273
LOC_ID	194, 198, 229, 233, 263, 271, 304, 308, 360, 421
Location	559
Location ID	194, 198, 229, 233, 263, 271, 304, 308, 360
Location ID for Agents	560
Location ID for Trunks	560
Location IDs	421
Location IDs on the switch and Supervisor	25
Logical Agent	560
LOGID	141, 194, 198, 220, 226, 242, 244, 256, 263, 273, 323, 326, 328, 332, 337, 342, 351, 355, 360, 415, 421, 523, 529, 537, 542
LOGIN	346, 349
Login ID	121, 124, 127, 132, 163, 169, 194, 198, 229, 233, 263, 273, 304
Login Skills	245
Login Time	346, 349
Login/Logout (Skill) Report	345
Login/Logout (Split) Report	348
LOGOFF	560
LOGON	560
LOGONSTART	523
LOGOUT	347, 349
Logout Date	347, 349
Logout Reason	360
Logout Time	347, 349
LOGOUT_DATE	349
Lookahead Interflow Attempts	496
Lookahead Interflow Completions	497
LOOKATTEMPTS	496
LOOKFLOWCALLS	497
Low	206

## M

Main ACD Calls	500
Maintenance Busy (MBUSY)	560
Malicious Call	361
Manual In (MI)	560

Max Delay . . . . .	443, 453
Max Delay Seconds . . . . .	437
Max Pos Allocated . . . . .	389
MAX_DEDICATED_AGT . . . . .	389
MAXOCWTIME . . . . .	437, 443, 453
MBUSY . . . . .	560
MCH . . . . .	560
Measured . . . . .	560
Medium . . . . .	206
MI . . . . .	560
MIA . . . . .	560
Modify . . . . .	560
Month . . . . .	321
Month Starting	323, 326, 332, 342, 351, 355, 382, 415, 482
Month starting . . . . .	451, 468, 495, 499, 504
Monthly Data . . . . .	560
Monthly Data, Definition . . . . .	26
Monthly Reports . . . . .	314
Most Idle Agent (MIA) . . . . .	561
Move Pending? . . . . .	127, 132
MOVEPENDING . . . . .	523, 529
Multi-ACD Report . . . . .	142
Multi-ACD Top Agent Report . . . . .	150
Multiple Call Handling (MCH) . . . . .	561
Multiple Split Queuing . . . . .	561
Multiuser Mode . . . . .	561
Multiuser Mode, Definition . . . . .	26

## N

Name (Synonym) Fields . . . . .	561
Nonprimary Split/Skill . . . . .	561
Normal . . . . .	407

## O

O_ABNCALLS . . . . .	469
O_ACDCALLS . . . . .	342, 343
O_ACDTIME . . . . .	342
O_ACWTIME . . . . .	342, 343
OACDCALLS . . . . .	342
Oldest Call Waiting	146, 154, 173, 209, 221, 241, 243, 248, 254, 259, 293
OLDESTCALL	146, 209, 221, 241, 243, 254, 259, 293, 537, 542
ONACD . . . . .	148, 190, 249, 260, 542
Only Me Report . . . . .	561
Options Menu . . . . .	56
Menu Item Functions . . . . .	56
OTHER	136, 149, 226, 250, 260, 328, 410, 542, 561
Other . . . . .	127, 149, 250, 260
Other Calls . . . . .	479

Other Reports . . . . .	137
Call Records Report . . . . .	365
Call Work Code . . . . .	372
Event Count Summary Report . . . . .	139
general information . . . . .	363
Multi-ACD Report . . . . .	142
Multi-ACD Top Agent Report . . . . .	150
Overview . . . . .	137
overview . . . . .	363
Roadmap . . . . .	137
selector window . . . . .	138, 364
Other Reports Selector Window . . . . .	364
Other Reports, selector window . . . . .	138
Other Time . . . . .	340, 355, 418, 424
Outbound Aban Calls . . . . .	469
Outbound ACD Calls . . . . .	342
Outbound Calls . . . . .	469
Outbound CCS . . . . .	469
OUTCALLS . . . . .	469
OUTFLOWCALLS . . . . .	294, 299, 454, 496, 501, 549
OUTTIME . . . . .	469
Overload1 . . . . .	407
Overload2 . . . . .	407

## P

PERCENT . . . . .	273
Percent . . . . .	132, 169, 273
Percent (%) Within Service Level . . . . .	561
PERCENT_CALL_ABAN . . . . .	404
PERCENT_SERV_LVL_VDN . . . . .	493
PERCENT_SERV_LVL_SPL> . . . . .	395
PERCENT_SERV_LVL_SPL . . . . .	542
PERCENT_VDN_ABAN . . . . .	493
Percentage . . . . .	401
Percentage Abandoned . . . . .	183
Percentage Answered . . . . .	182
PERIOD1-9 . . . . .	181, 283, 287, 382, 482, 490
PERIODCHG . . . . .	382, 395
Phantom Abandon Call Timer . . . . .	561
Pop-Up Menus . . . . .	79
Displayed Menus . . . . .	79
PREFERENCE . . . . .	523
Previous Interval . . . . .	561
Previous Interval, Definition . . . . .	26
Primary Skill . . . . .	562

## Q

Queue . . . . .	562
Queue Agent Status Report . . . . .	165
Queue Agent Summary Report . . . . .	172



Queue/Agent Reports . . . . .	157
general information . . . . .	157
input fields . . . . .	158
Queue Agent Status Report . . . . .	165
Queue Agent Summary Report . . . . .	172
Queue/Top Agent Status Report . . . . .	159
Roadmap . . . . .	157
selector window . . . . .	158
Queue/Agent Reports input fields . . . . .	158
Queue/Agent Reports selector window . . . . .	158
Queue/Agent Reports, general information . . . . .	157
Queue/Top Agent Status Report . . . . .	159
QUEUED . . . . .	562

## R

R1AGINRING . . . . .	187, 217
R1INACD . . . . .	217
R1INACW . . . . .	187, 217
R1INAUX . . . . .	216
R1ONACD . . . . .	187
R1OTHER . . . . .	217
R1STAFFED . . . . .	156, 186, 191
R21AGINRING . . . . .	187
R2AGINRING . . . . .	217
R2INACD . . . . .	217
R2INACW . . . . .	187, 217
R2INAUX . . . . .	217
R2ONACD . . . . .	187
R2OTHER . . . . .	217
R2STAFFED . . . . .	156, 186, 191
Read Permission . . . . .	562
Real-Time Agent Reports, overview . . . . .	116
Real-Time Database . . . . .	562
Real-Time Database, Definition . . . . .	26
Real-Time Reports . . . . .	562
Agent Graphical Information Report . . . . .	131
Agent Group Report . . . . .	120
Agent Information Report . . . . .	126
Agent Report . . . . .	123
Agent report input window . . . . .	118
Agent report selector window . . . . .	117
Agent Reports . . . . .	116
Call Profile . . . . .	180
Drill-Down Reports . . . . .	300
Drill-Down Top Agent Work State Report . . . . .	302
Drill-Down Work State Report . . . . .	306
Event Count Summary Report . . . . .	139
Graphical Active Agents . . . . .	184
Graphical Allocated Agents . . . . .	188
Graphical Call Profile Report . . . . .	199
Graphical EWT Report . . . . .	203
Graphical Queue Report . . . . .	207

Real-Time Reports, (continued)	
Graphical Skill Overload Report . . . . .	210
Graphical Staffing Profile Report . . . . .	213
Graphical Status Report . . . . .	218
Graphical Top Skill Status Report . . . . .	223
Multi-ACD Report . . . . .	142
Multi-ACD Top Agent Report . . . . .	150
organization . . . . .	113
Other Reports . . . . .	137
overview . . . . .	113
presentation . . . . .	114
Queue Agent Status Report . . . . .	165
Queue Agent Summary Report . . . . .	172
Queue/Agent report . . . . .	158
Queue/Agent Report selector window . . . . .	158
Queue/Agent Reports . . . . .	157
Queue/Top Agent Status Report . . . . .	159
Reserve1 AUX Agents Report . . . . .	228
Reserve2 AUX Agents Report . . . . .	232
roadmap . . . . .	115
Skill AUX Report . . . . .	236
Skill Status Report . . . . .	238
Skill Top Agent Report . . . . .	246
Split Status Report . . . . .	252
Split/Skill Agent Status by Location Report . . . . .	269
Split/Skill by Location Report . . . . .	261
Split/Skill Graphical AUX Agents Report . . . . .	192
Split/Skill Graphical AUX Top Agents Report . . . . .	196
Split/Skill Report . . . . .	257
Split/Skill Reports . . . . .	175
Split/Skill Top Agent Status Report . . . . .	264
Trunk Group Report . . . . .	274
Trunk Group report . . . . .	274
VDN Call Profile Report . . . . .	281
VDN Graphical Call Profile Report . . . . .	285
VDN Report . . . . .	292
VDN Reports . . . . .	278
VDN Skill Preference Report . . . . .	289
Vector Report . . . . .	295
Real-time reports	
Split/Skill . . . . .	179
Real-Time Reports, Definition . . . . .	26
Real-Time Reports, organization . . . . .	113
Real-Time Reports, overview . . . . .	113
Real-Time Reports, presentation . . . . .	114
Real-Time Reports, roadmap . . . . .	115
Reason Code 0 . . . . .	194, 198, 227, 328, 410
Reason Code 1   9 . . . . .	227
Reason Code 1-9 . . . . .	194, 198, 410
Reason Codes 1-9 . . . . .	328
RECONNECT . . . . .	361
Reconnect . . . . .	361

Redirect On No Answer. . . . .	562
Refresh Rate . . . . .	562
Report Charts . . . . .	59
Report Intervals . . . . .	314
Report Menu Bar. . . . .	45
Report Menu Bar, report menu . . . . .	45
Report Menu Bar, Save as HTML . . . . .	48
Report Run Dates, Browse Date . . . . .	38
Report Run Dates, Browse Dates . . . . .	39
Report Run Dates, Browse Months . . . . .	40, 41
Report Run Dates, Selecting . . . . .	37
Report Run Times, Browse Time . . . . .	43
Report Run Times, Selecting . . . . .	42
Report Tables . . . . .	57
Report Types . . . . .	57
Report Windows	
Changing Column Widths . . . . .	85
Graphical Report Window . . . . .	85
Resizing . . . . .	85
Standard Windows . . . . .	85
Report, Editing and Viewing. . . . .	57
Reports, Copying Charts . . . . .	84
Reports, Editing . . . . .	52
Menu . . . . .	52
Menu Item Functions . . . . .	53
Reports, Exporting Data . . . . .	82
Reports, Formatting	
Menu . . . . .	54
Menu Item Functions . . . . .	54
Reports, Layouts. . . . .	57
Reports, Minimized. . . . .	77
Icons. . . . .	77
Threshold Icons. . . . .	78
Reports, Options. . . . .	56
Reports, Resizing Windows and Columns . . . . .	85
Reports, Tools	
Menu . . . . .	55
Menu Item Functions . . . . .	55
Reserve1 Agents (Active). . . . .	217
Reserve1 Agents (active). . . . .	191
Reserve1 Agents (AUX) . . . . .	216
Reserve1 Agents (Other) . . . . .	217
Reserve1 Agents in AUX . . . . .	229
Reserve1 Agents Staffed . . . . .	156, 163, 186, 191
Reserve1 AUX Agents Report. . . . .	228
Reserve2 Agents (Active). . . . .	217
Reserve2 Agents (active). . . . .	191
Reserve2 Agents (AUX) . . . . .	217
Reserve2 Agents (Other) . . . . .	217
Reserve2 Agents in AUX . . . . .	233
Reserve2 Agents Staffed . . . . .	156, 163, 186, 191
Reserve2 AUX Agents Report. . . . .	232
Resizing Report Windows and Columns . . . . .	85
Restarting Reports, procedure . . . . .	44

RINGING. . . . .	127, 135, 226, 328, 410, 562
Ringin. . . . .	148, 249, 260
Rls. . . . .	361
Roadmap	
Historical Split/Skill Reports . . . . .	376
Historical System Reports . . . . .	432
Historical Trunk/Trunk Group Reports. . . . .	456
Historical VDN Reports . . . . .	474
Historical Vector Report . . . . .	507
Real-Time Agent Reports . . . . .	116
Real-Time Other Reports . . . . .	137
Real-Time Queue/Agent Reports . . . . .	157
Real-Time Split/Skill Reports . . . . .	175
ROLE . . . . .	273
Role . . . . .	169, 229, 233, 273
Rolling ASA . . . . .	562
ROW_DATE . . . . .	321, 323, 326, 328, 332, 337, 342, 346, 349, 351, 355, 360, 375, 382, 387, 389, 392, 394, 401, 404, 407, 409, 415, 421, 437, 441, 451, 468, 478, 482, 486, 489, 493, 495, 499, 504
Running Reports . . . . .	37

## S

Save as HTML . . . . .	48
Browsers . . . . .	48
Fonts . . . . .	51
Not Using Templates . . . . .	50
Output Files. . . . .	50
Save as location. . . . .	48
Template Tags . . . . .	51
Templates . . . . .	50
Using . . . . .	49
Using Existing Templates . . . . .	51
Scripting . . . . .	562
Scripting, Using. . . . .	36
Secondary Skill . . . . .	563
Seconds . . . . .	382, 482, 493
Secs . . . . .	181, 201, 288, 404
Secs. . . . .	283, 287
SEIZED . . . . .	563
Selecting Reports. . . . .	37
Seq . . . . .	360
Service Interval - Seconds. . . . .	490
Service Interval Answers and Abandons . . . . .	395, 490
Service Interval Calls Answered . . . . .	395, 489, 490
Service Intervals Changed. . . . .	382, 395, 482, 489
Service Level . . . . .	394, 489, 563
Service ObservingVDNs. . . . .	563
SERVICELEVEL . . . . .	201, 288, 394, 404
SERVLEVEL . . . . .	489, 493
Single-User Mode. . . . .	563
Single-User Mode, Definition . . . . .	26



Skill	132, 153, 189, 194, 198, 201, 225, 227, 229, 233, 240, 304, 346, 563
Skill Level	563
Skill State	146, 153, 160, 173, 186, 189, 209, 212, 215, 220, 225, 240, 258, 265, 308
Skill Top Agent Report	246
SKILL1	502, 505
SKILL2	502, 505
SKILL3	502, 506
SKILLACWTIME1	505
SKILLACWTIME2	505
SKILLACWTIME3	506
SKILLCALLS1	291, 505
SKILLCALLS2	291, 505
SKILLCALLS3	291, 506
Skills	248
Skills 1-15	347
SKILLTIME1	505
SKILLTIME2	505
SKILLTIME3	506
SKSTATE	146, 153, 160, 173, 186, 189, 209, 212, 215, 220, 225, 240, 258, 265, 308, 537, 542
SPLIT	141, 145, 181, 185, 189, 194, 198, 201, 205, 209, 212, 215, 220, 225, 237, 240, 254, 258, 271, 304, 308, 346, 351, 361, 382, 387, 389, 392, 395, 401, 404, 407, 409, 415, 421, 437, 441, 447, 451, 523, 529, 537, 540, 542
Split	127, 205, 254, 349, 563
Split Status Report	252
Split/Skill	121, 124, 141, 170, 173, 181, 185, 209, 212, 215, 220, 221, 237, 271, 351, 361, 382, 387, 389, 392, 395, 401, 404, 407, 409, 415, 421, 437, 441, 447, 451
Split/Skill Agent Status by Location Report	269
Split/Skill by Location Report	261, 420
Split/Skill Call Profile Report	381
Split/Skill Graphical ASA Daily Report	390
Split/Skill Graphical ASA Report	384
Split/Skill Graphical AUX Agents Report	192
Split/Skill Graphical AUX Top Agents Report	196
Split/Skill Graphical Average Positions Staffed Report	388
Split/Skill Graphical Call Profile Report	199, 393
Split/Skill Graphical EWT Report	203
Split/Skill Graphical Multi-ACD Service Level Report	397
Split/Skill Graphical Multi-ACD Service Level Report Input Fields	399
Split/Skill Graphical Queue Report	207
Split/Skill Graphical Service Level Report	402
Split/Skill Graphical Status Report	218
Split/Skill Graphical Status report	
Split/Skill Graphical Status report	220
Split/Skill Graphical Time Spent Report	408
Split/Skill Graphical Top Skill Status Report	223
Split/Skill Outbound Report	411
Split/Skill Report	257, 350, 414
Split/Skill Report Input Fields	378
Split/Skill report input fields	535

Split/Skill report selector window	534
Split/Skill Reports	175, 376, 533
Call Profile	180
Call Profile Report	381
general information	175, 376, 533
Graphical Active Agents	184
Graphical Allocated Agents	188
Graphical ASA Daily Report	390
Graphical ASA Report	384
Graphical Average Positions Staffed Report	388
Graphical Call Profile Report	199, 393
Graphical EWT Report	203
Graphical Multi-ACD Service Level Report	397
Graphical Queue Report	207
Graphical Service Level Report	402
Graphical Skill Overload Report	210, 405
Graphical Staffing Profile Report	213
Graphical Status Report	218
Graphical Time Spent Report	408
Graphical Top Skill Status Report	223
Graphical View	541
input fields	179, 378
organization	376
Outbound Report	411
Report	414
Reserve1 AUX Agents Report	228
Reserve2 AUX Agents Report	232
Roadmap	175, 376
selector window	177, 377
Skill AUX Report	236
Skill Status Report	238
Skill Top Agent Report	246
Split Status Report	252
Split/Skill Agent Status by Location Report	269
Split/Skill by Location Report	261, 420
Split/Skill Graphical AUX Agents Report	192
Split/Skill Graphical Top AUX Agents Report	196
Split/Skill Report	257
Split/Skill Top Agent Status Report	264
Summary Report	426
VDN Report	545
Split/Skill Reports selector window	177
Split/Skill Reports, general information	175
Split/Skill Reports, input fields	179
Split/Skill Skill AUX Report	236
Split/Skill Skill Status Report	238
Split/Skill Summary Report	426
Split/Skill Top Agent Status Report	264
Splits	256
Splits/Skills	145, 258
STAFFED	141, 149, 250, 261, 537, 542
Staffed	149, 250, 261, 263

Staffed Agent . . . . .	563
Staffed Time 136, 321, 323, 332, 335, 340, 355, 418, 424	
Standard Agents (active) . . . . .	190
Standard Agents (staffed). . . . .	190
Standard Reports . . . . .	563
Start. . . . .	366
Start Time (Interval) . . . . .	387
STARTTIME . . . . .	321, 323, 326, 342, 351, 499, 504
State121, 124, 127, 132, 169, 220, 226, 242, 244, 256, 273, 361	
Station . . . . .	563
Stop. . . . .	366
Stroke Count. . . . .	325
Stroke counts . . . . .	139
Subsystem. . . . .	563
Subsystem, Definition . . . . .	26
sum(I_AUXTIME) . . . . .	425
sum(I_AVAILTIME). . . . .	425
sum(I_OTHERTIME) . . . . .	425
sum(I_RINGTIME) . . . . .	425
sum(I_STAFFTIME) . . . . .	425
sum(TOTAL_ACDCALLS) . . . . .	424
sum(TOTAL_I_ACD_TIME). . . . .	425
sum(TOTAL_I_ACW_TIME) . . . . .	425
Supervisor and switch location IDs . . . . .	25
SVCLEVELCHG . . . . .	382, 395, 404, 482, 489, 493
Switch. . . . .	563
Switch location IDs . . . . .	25
syn(SPLIT) . . . . .	349
System Graphical Maximum Delay Report . . . . .	434
System Graphical Maximum Delay Report Input Fields	435
System Multi-ACD by Split/Skill Report . . . . .	438
System Multi-ACD by Split/Skill Report Input Fields.	440
System Multi-ACD Report. . . . .	444
System Multi-ACD Report Input Fields. . . . .	445
System Multi-ACD Report Input Window. . . . .	444
System Report . . . . .	449
System Reports . . . . .	432
general information . . . . .	432
Graphical Maximum Delay Report . . . . .	434
Multi-ACD by Split/Skill Report. . . . .	438
Multi-ACD Report . . . . .	444
Roadmap. . . . .	432
selector window. . . . .	433
System Report . . . . .	449
System Setup . . . . .	564

## T

### Table Reports

Accessing Options Window . . . . .	60
Formatting . . . . .	60
General Tab . . . . .	60

### Table Reports, (continued)

General Tab Parameters. . . . .	61
Sort Tab . . . . .	61
Using Sort Tab . . . . .	62
TAGINRING . . . . .	186, 187, 216, 226
TAVAILABLE. . . . .	225
Tertiary Split/Skill . . . . .	564
Threshold . . . . .	564
Threshold highlights	
entities . . . . .	86
example . . . . .	87
set . . . . .	88
threshold settings window . . . . .	88
turn on and off. . . . .	86
Threshold Settings window . . . . .	88
TI_AUXTIME 135, 323, 328, 332, 340, 418, 523, 529	
TI_AUXTIME0 . . . . .	328, 523
TI_AUXTIME19. . . . .	328
TI_AVAILTIME . . . . .	135, 323, 328, 332, 340, 523, 529
TI_OTHERTIME . . . . .	136, 328, 523, 529
TI_STAFFTIME. . . . .	136, 323, 332, 340, 523, 529
Time121, 124, 127, 132, 171, 195, 199, 220, 227, 229, 233, 245, 256, 273, 321, 323, 326, 342, 351, 360, 361, 499, 504	
Time Format . . . . .	564
Times . . . . .	493
Timetable . . . . .	564
TINACW . . . . .	186, 187, 216, 226
TINAUX . . . . .	198, 215, 226
TINAUX0. . . . .	198
TINAUX1-9. . . . .	198, 227
TKGRP . . . . .	468
TONACD. . . . .	186, 187, 216, 225
Top . . . . .	205
Top Agents (Active). . . . .	216
Top Agents (AUX) . . . . .	215
Top Agents (Other) . . . . .	216
Top Agents Active chart Other Skills . . . . .	186
Top Agents Active chartThis Skill . . . . .	186
Top Agents Avail . . . . .	155
Top Agents in ACW. . . . .	155
Top Agents in AUX . . . . .	155, 198
Top Agents in Other. . . . .	156
Top Agents on ACD Calls . . . . .	155
Top Agents Ringing. . . . .	155
Top Agents Staffed . . . . .	156, 185, 225
Top Skill . . . . .	132
TOPSKILL . . . . .	523
Total ACD Calls. . . . .	424
Total ACD Time. . . . .	425
Total ACW Time . . . . .	425
Total Agent AUX Time . . . . .	425
Total Agent Avail Time . . . . .	425
Total Agent Other Time . . . . .	425
Total Agent Ring Time . . . . .	425

Total Agent Staffed Time . . . . .	425
Total Agents Active . . . . .	190
Total AUX Time . . . . .	321
Total Avg ACD Time . . . . .	425
Total Avg ACW Time . . . . .	425
Total Calls Abandoned . . . . .	182
Total Calls Answered . . . . .	182
Total Hold Time . . . . .	353
TOTAL_ACDCALLS . . . . .	141, 323, 337
TOTAL_ACDCALLS> . . . . .	332
TOTAL_ACDTIME . . . . .	337
TOTAL_ACWTIME . . . . .	337
TOTAL_I_ACDTIME . . . . .	323, 326, 332
TOTAL_I_ACDTIME> . . . . .	328
TOTAL_I_ACWTIME . . . . .	323, 328, 332
TOTHER . . . . .	186, 216, 226
Trans Out . . . . .	344, 353, 355, 362, 419
TRANSFERRED . . . . .	344, 353, 419
Trunk . . . . .	468, 564
Trunk Failures . . . . .	469
Trunk Group . . . . .	564
Trunk Group Name . . . . .	468
Trunk Group Report . . . . .	274, 467
Trunk Group Reports . . . . .	
General Information . . . . .	274
Input Fields . . . . .	274
Selector Window . . . . .	274
selector window . . . . .	274
Trunk Group Report . . . . .	274
Trunk Group Reports selector window . . . . .	274
Trunk Group Summary Report . . . . .	470
Trunk Report . . . . .	464
Trunk/Trunk Group Busy Hour Report . . . . .	461
Trunk/Trunk Group Report Input Fields . . . . .	458
Trunk/Trunk Group Reports . . . . .	456
Busy Hour Report . . . . .	461
general information . . . . .	456
Roadmap . . . . .	456
selector window . . . . .	457
Trunk Group Report . . . . .	467
Trunk Group Summary Report . . . . .	470
Trunk Report . . . . .	464
TSTAFFED . . . . .	185, 225

## U

Uniform Call Distribution (UCD) . . . . .	564
Universal Call Identifier (UCID) . . . . .	564
UNKNOWN . . . . .	564
UNSTAF . . . . .	564
User ID . . . . .	564
User Permissions . . . . .	564

## V

VDN245, 256, 282, 287, 290, 293, 478, 482, 486, 489, 493, 495, 499, 504, 549, 564 . . . . .	
VDN Busy Hour Report . . . . .	477
VDN Call Profile Report . . . . .	281, 480
Acceptable service level . . . . .	281
Caution . . . . .	480
Service level increments . . . . .	281
VDN Calls-Counted . . . . .	565
VDN Graphical Busy/Abandon/Disconnect Comparison Report . . . . .	484
VDN Graphical Call Handling Report . . . . .	547
VDN Graphical Call Profile Report . . . . .	285, 487
VDN Graphical Service Level Report . . . . .	491
VDN Interflow . . . . .	496
VDN Multi-ACD Flow Report . . . . .	494
VDN Name . . . . .	121, 124, 478, 495, 499
VDN of Origin Announcement (VOA) . . . . .	565
VDN Report . . . . .	292, 498
VDN Report Input Fields . . . . .	476
VDN Report input fields . . . . .	546
VDN Report selector window . . . . .	545
VDN Reports . . . . .	278, 474
Busy Hour Report . . . . .	477
Call Profile Report . . . . .	480
General Information . . . . .	278
general information . . . . .	474
Graphical Busy/Abandon/Disconnect Comparison Report . . . . .	484
Graphical Call Handling . . . . .	547
Graphical Call Profile Report . . . . .	487
Graphical Service Level Report . . . . .	491
Input Fields . . . . .	278
Multi-ACD Flow Report . . . . .	494
Report . . . . .	498
Roadmap . . . . .	278, 474
Selector Window . . . . .	278
selector window . . . . .	475
Skill Preference Report . . . . .	503
VDN Call Profile Report . . . . .	281
VDN Graphical Call Profile Report . . . . .	285
VDN Report . . . . .	292
VDN Skill Preference Report . . . . .	289
VDN Skill Preference . . . . .	565
VDN Skill Preference Report . . . . .	289, 503
VECTOR . . . . .	298, 499, 504
Vector . . . . .	298, 499, 504, 565
Vector Directory Number (VDN) . . . . .	565
Vector Flow In . . . . .	299
Vector Flow Out . . . . .	299

Vector Report . . . . . 295, 507, 510

    General Information . . . . . 295

    general information . . . . . 507

    Input Fields . . . . . 295

    Roadmap . . . . . 295, 300, 507

    Selector Window . . . . . 295

    selector window . . . . . 507

Vector Report Input Fields . . . . . 508

Voice Terminal . . . . . 565

---

**W**

Week . . . . . 321

Week Starting 323, 326, 332, 342, 351, 355, 382, 415, 482

Week starting . . . . . 451, 468, 495, 499, 504

Weekly Data . . . . . 565

Weekly Data, Definition . . . . . 26

Weekly Reports . . . . . 314

WMODE\_SEQ . . . . . 360

WORKMODE . . . 220, 242, 244, 256, 271, 272, 361

WORKSKILL . . . . . 227, 273, 523, 529

WORKSKLEVEL . . . . . 273

WORKSPLIT . . . . . 256

WORKSPLIT2 . . . . . 256

WORKSPLIT3 . . . . . 256

WORKSPLIT4 . . . . . 256

Write Permission . . . . . 565