



# **IP Office**

## **Embedded Voicemail Installation**



---

# Table of Contents

<b>IP Office Embedded Voicemail .....</b>	<b>1</b>
Overview of IP Office Embedded Voicemail .....	1
What's New in IP Office 3.0 .....	2
Embedded Voicemail Mailbox Features .....	3
Languages Supported .....	4
Upgrading to IP Office 3.0 .....	4
<b>Embedded Voicemail Installation .....</b>	<b>5</b>
Installation Overview .....	5
Setup Information .....	6
System Settings .....	6
User Mailboxes .....	6
Hunt Group Mailboxes .....	7
Auto Attendant Setup .....	8
IP406 V2 Installation .....	9
1. Requirements .....	9
2. Install the Memory Expansion Card .....	9
3. System Configuration .....	9
Small Office Embedded Voicemail Installation .....	10
1. Requirements .....	10
2. Checking for Voice Compression Channels .....	10
3. Install the Memory Expansion Card .....	10
4. System Configuration .....	10
System Configuration .....	11
Upgrading Prompts .....	13
Prompt Source and Destination Location .....	13
Upgrading Prompts Using a Memory Card Reader .....	14
Upgrading Prompts Using TFTP File Transfer .....	15
Monitoring Embedded Voicemail .....	16
<b>User Mailbox Configuration .....</b>	<b>17</b>
User Mailboxes .....	17
User Mailbox Configuration .....	18
<b>Hunt Group Mailbox Configuration .....</b>	<b>19</b>
Hunt Group Mailboxes .....	19
Hunt Group Mailbox Configuration .....	20
Hunt Group Message Waiting Indication .....	21
Hunt Group Mailbox Access .....	22
Message Waiting Indication .....	22
Short Code and DSS Key Access .....	22
Remote Access .....	22
<b>Auto Attendant Configuration .....</b>	<b>23</b>
Auto Attendant Overview .....	23
Example Auto Attendant Setup .....	24
Routing Incoming Calls to an Auto Attendant .....	27
Transferring Calls to an Auto Attendant .....	28
Using DSS Keys .....	28
Using Phone Manager .....	28
Using Short Codes .....	29
Auto Attendant Remote Access .....	30
Changing Prompts and Prompt Short Codes .....	31
Cascading Auto Attendants .....	31
<b>Miscellaneous .....</b>	<b>33</b>
Short Codes .....	33
DSS Key Programming .....	34

Remote Access .....	35
Using a Short Code.....	35
Using an Auto Attendant.....	35
Using an Incoming Call Route .....	35
Backing Up and Restoring Messages .....	36
Loading Files .....	37
<b>Glossary.....</b>	<b>39</b>
<b>Index.....</b>	<b>41</b>

---

# IP Office Embedded Voicemail

---

## Overview of IP Office Embedded Voicemail

IP Office Embedded Voicemail is supported on the IP Office Small Office Edition and IP Office 406 V2 control units. Embedded voicemail does not require an IP Office license. It provides basic voicemail mailbox operation without requiring a permanent voicemail server PC. It also provides multiple auto-attendant support for incoming calls.

Embedded voicemail uses the following components:

- **Memory Card**

The type and capacity depends of memory card depends the IP Office control unit. However, in all cases, the cards are specially formatted for embedded voicemail use. Alternate third-party memory cards are not supported for embedded voicemail.

- **IP Office IP406 V2 Control Unit**

Uses an Avaya supplied 512MB Type II Compact Flash memory card. Provides up to 15 hours of uncompressed message storage. The card slots into the **C/F TII** slot on the front of the control unit.

- **IP Office Small Office Edition**

Uses an Avaya supplied 64MB Compact Flash memory card within a PCMCIA card carrier. Provides up to 10 hours of compressed message storage. The PCMCIA card carrier slots into either of the PCMCIA slots on the back of the control unit.

- **Voice Compression Channels**

Messages and prompts stored on the Small Office Edition memory card are compressed using the IP Office control unit's voice compression channels. Thus voice compression channels are required during any voicemail accesses. It is important to note that the same voice compression channels are also used for VoIP calls.

- **IP Office Small Office Edition**

On the Small Office Edition, voice compression channels are pre-built into the control unit. Small Office Edition control units are available in 3 channel and 16 channel variants. An existing Small Office Edition control unit cannot be upgraded to add further voice compression channels.

- **IP Office 406 V2 Control Unit**

Does not require or use voice compression channels for embedded voicemail.

- **IP Office Manager Application**

During installation, connection to a PC running the IP Office Manager application is required. This is required for IP Office configuration and occasionally for TFTP transfer of the prompt files.

Note that Embedded Voicemail cannot be used in conjunction with Voicemail Lite or Voicemail Pro. The presence of a running Voicemail Lite or Pro server on the same network may cause Embedded Voicemail to fail.

## What's New in IP Office 3.0

The following changes have been made to Embedded Voicemail in IP Office 3.0 core software.

- **IP406 V2 Support**  
The IP Office IP406 V2 control unit is supported using a 512MB uncompressed Compact Flash memory card.
- **Auto Attendant Timeout**  
Following the playing of the auto attendant prompts, the auto-attendant will wait 8 seconds for a key press. If the auto attendant was accessed via an **Incoming Call Route** with a **Fallback Destination** set, inactive callers are transferred to that destination, otherwise the caller is disconnected. IP Office 3.0 allows the auto attendant timeout to be adjusted within the system configuration.
- **Auto Attendant Dial In Access**  
The destination for an auto-attendant transfer action can now be left blank. This will cause users to be prompted to dial the number they require. The number dialed must match a valid user or hunt group extension number.
- **Message Playback Completion**  
Following the playing of the last message in a mailbox, the user is no longer automatically disconnected. The user will be played a help menu and only disconnected after a period of inactivity.
- **Maximum Message Length**  
For system other than the IP401, the default maximum message length is increased to 2 minutes. IP Office 3.0 allows this to be adjusted up to 3 minutes in the system configuration.
- **Four Digit Mailbox Access Code**  
Mailbox access codes, where set, are forced to a minimum of 4 digits (maximum is 15 digits).
- **Remote Mailbox Access**  
Mailbox access without a specified user name will trigger a request for the mailbox number and then the mailbox access code if set. This allows remote mailbox access through the creation of appropriate short codes or selecting **Voicemail** as an **Incoming Call Route** destination.
- **Mailbox Help**  
Mailbox users can dial \*4 for help prompts. These help prompts are also played automatically following the playing of the last message in a mailbox.
- **Voicemail Reception Number**  
Callers leaving messages can dial \*0 to be transferred to the mailbox user's Voicemail Reception number. This number is set through the IP Office configuration.
- **Multi-Lingual Operation**  
For systems other than the IP401, the user Locale can be used to override the system Locale to set which language prompts are used. See Languages Supported.
- **Prompt Pre-Load**  
All prompts for IP Office 3.0 embedded voicemail are now pre-loaded onto new memory cards when supplied. The previous TFTP transfer of prompts used during installation is no longer required except during upgrades of existing memory cards.
- **'Record Greeting' short code feature renamed 'Auto Attendant'**  
A minor change is the renaming of the "Record Greeting" short code feature to "Auto Attendant" to more accurately reflect its usage.
- **SNMP Disk Full Warning**  
On IP Office systems configured for SNMP, a disk full alarm is generated when the embedded voicemail memory card reaches 90% full. In addition a critical space alarm is generated at 98% full (99% for the IP406 V2) and a OK alarms when the disk space returns to below 90% full.
- Note: When the critical disk space limit is reached, the Embedded Voicemail will not record any more messages. However calls are not advised of this and are still prompted to leave messages.

# Embedded Voicemail Mailbox Features

## Supported Features

- Hunt group and user voicemail for the leaving and collection of messages.
- Auto attendant on Small Office Edition.
- For security a voicemail access code can be assigned to any mailbox. This can be changed by the mailbox user and/or the System Administrator.
- Message waiting indication to suitable phones and IP Office Phone Manager.
- Message waiting indication for hunt group mailboxes can be assigned to specified users.
- Internal ringback on new messages.
- Short code features for collecting messages, leaving messages, voicemail on/off and ringback on/off.
- A voicemail reception number can be set for user mailboxes. Callers dialing \*0 are transferred from the mailbox to that number.

## Embedded Voicemail System Comparison

Feature	Small Office Edition	IP406 V2
Memory Type	64MB Compact Flash (in PCMCIA carrier).	512MB Compact Flash.
Compression Method	3 or 16 channels built into control unit motherboard.	Not required.
Storage	10 Hours.	15 Hours.
Maximum Simultaneous Connections	Up to 3 on VC3 system. Up to 10 on VC16 system.	4
Maximum Individual Message Length	Adjustable up to 180 seconds (default 120 seconds).	Adjustable up to 180 seconds (default 120 seconds).
Auto Attendant	Yes	Yes

- **Maximum Simultaneous Connections**

For Small Office Edition systems, this figure may be reduced whenever voice compression channels are already in use for VoIP call support.

## Major Features Not Supported

- **User trusted source settings**  
The use of V numbers in the user Source Numbers to bypass the mailbox access code is not supported.
- **Call Recording**
- **Voicemail Email**
- **Hunt Group Queued and Still Queued Messages.**

## Languages Supported

From 3.0+, Embedded Voicemail supports a range of language prompt sets. Previous it only supported a single set of language prompts at any time.

The IP Office system Locale setting is used to determine the default language prompts used. This can be overridden for individual user mailboxes by setting a different user Locale in the system configuration.

If the default language required does not match the system's locale, the required language locale settings must be entered for all users through their individual user settings.

The following languages are supported for Embedded Voicemail. The matching configuration Locale setting is shown in () brackets.

-  Using locales other than those shown, for example 2 letter locales, will result in incorrect prompts in addition to affects on the IP Office system operation.
  - **Danish (dan)**
  - **German (deu)**
  - **English-UK (eng)**
  - **English-US (enu)**
  - **Spanish (esp)**
  - **Spanish-Mexico (esm)**
  - **Spanish-Argentina (ess)**
  - **Finnish (fin)**
  - **French (fra)**
  - **French-Canadian (frc)**
  - **Italian (ita)**
  - **Japanese (jpn)**
  - **Korean (kor)**
  - **Dutch (nld)**
  - **Norwegian (nor)**
  - **Portuguese (ptg)**
  - **Portuguese-Brazilian (ptb)**
  - **Russian (rus)**
  - **Swedish (sve)**
  - **Chinese (chs)**

---

## Upgrading to IP Office 3.0

The method of transferring and handling prompts has changed in IP Office 3.0. Prompts are no longer transferred from a Manager PC using TFTP following a system restart.

For existing systems with embedded voicemail, the voicemail will be inactive following the IP Office control unit being upgraded to 3.0. To reactivate the embedded voicemail, the new 3.0 prompt set needs to be loaded onto the memory card. This action is only required once. See Upgrading Prompts.

New embedded voicemail memory cards are now supplied with the necessary prompts pre-installed. In cases where an older card without prompts is supplied, the new 3.0 prompt set needs to be loaded onto the memory card. Again see Upgrading Prompts.

---

# Embedded Voicemail Installation

---

## Installation Overview

Ensure that you have read and fully understood this documentation before installing embedded voicemail. This will ensure that you are familiar with the equipment and information required to complete the installation and the aspect of IP Office system configuration that affect embedded voicemail.

The installation process can be divided into a number of steps as follows:

- 1. Gather Setup Information**  
The Setup Information section contains a number of forms which can be used to gather customer information about required settings. Completing these forms before installation will assist in speeding up the installation process.
- 2. Hardware Installation**  
This covers the physical installation of the memory card and if necessary voice compression channels. This process varies according to the IP Office control unit type.
- 3. System Configuration**  
Set the IP Office to use embedded (integral) voicemail and set the maximum record time for messages, greetings and prompts.
- 4. User Mailbox Configuration**  
Configure the personal settings for individual users.
- 5. Hunt Group Mailbox Configuration**  
Configure the settings for any hunt groups where voicemail is required. This includes configuring message waiting indication and mailbox access which are not enabled by default.
- 6. Auto Attendant Configuration**  
Setup any required auto-attendant services and associate them with incoming call routes.





## Auto Attendant Setup

- **Auto Attendant Name:** \_\_\_\_\_ (Up to 12 characters)
- **Route to Auto Attendant:** \_\_\_\_\_  
 \_\_\_\_\_  
 (Detail which calls should go to the auto attendant and the routing to be used)
- **Maximum Inactivity:** \_\_\_\_\_ (5 to 20 seconds, default 8 seconds)
- **Fallback Destination:** \_\_\_\_\_

## Time Profiles

- Remember that IP Office configuration uses a 24-hour clock format for times.

Time Profiles	Morning			Afternoon			Evening (Out of Hours)		
Name									
Start Time									
End Time									
Sunday									
Monday									
Tuesday									
Wednesday									
Thursday									
Friday									
Saturday									

## Menu Actions

Key	Action				Destination
	Transfer to Operator	Normal Transfer	Replay Greeting	Not Defined	
0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
*	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
#	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

## IP406 V2 Installation

The following sections detail the process for installing and testing embedded voicemail for an IP406 V2 system.

---

### 1. Requirements

#### Hardware

- IP Office 406 V2 control unit. No voice compression channels are required.
- Avaya supplied 512MB Memory (Compact Flash) Card.

#### Configuration

- PC, connected to the IP Office network, with the following installed from the IP Office Administration CD:
    - IP Office Manager application.
- 

### 2. Install the Memory Expansion Card

The IP 406 V2 Memory Card is a Type II Compact Flash memory card. Only the Avaya supplied card can be used for embedded voicemail. Compact Flash cards from other source will not support embedded voicemail.

1. Insert the memory card into the **C/F TII** card slot on the front of the IP406 V2 control unit. Insert the card with the memory card label upwards. As the card is inserted, the card eject button adjacent to the slot will come out.
- 

### 3. System Configuration

The system can now be configured for embedded voicemail. See System Configuration.

## Small Office Embedded Voicemail Installation

The following sections detail the process for installing and testing embedded voicemail for a Small Office Edition system.

---

### 1. Requirements

#### Hardware

- IP Office Small Office Edition control unit with VC (voice compression) channels.
  - Existing systems cannot be upgraded to add additional voice compression channels.
- Avaya 64MB Small Office Memory (Compact Flash) Card. This is supplied with a PCMCIA memory card carrier.

#### Configuration

- PC, connected to the IP Office network, with the following installed from the IP Office Administration CD:
    - IP Office Manager application.
    - IP Office Monitor application.
- 

### 2. Checking for Voice Compression Channels

The number of voice compression channels in the Small Office Edition control unit (either 3 or 16) controls the maximum number of simultaneous embedded voicemail calls.

The number of voice compression channels is indicated by the label on the control unit.

1. Look at the label on the base of the control unit.
2. At the top of the label, the line **SMALL OFFICE** is followed by a list of the components within the unit. The number of voice compression channels is indicated by **VC** and a number.

As with all IP Office control units, the number of installed voice compression channels can also be checked using the IP Office Monitor application. See Monitor.

---

### 3. Install the Memory Expansion Card

The Small Office Memory Card is supplied with a PCMCIA card carrier.

1. Insert the Memory Card into the PCMCIA card carrier.
  2. The PCMCIA card carrier can be inserted into either of the PCMCIA card slots on the rear of the Small Office Edition control unit.
    - Due to the raised shape of the optional Small Office wireless card, we recommend that the Small Office Memory Card carrier is inserted in **Slot A**, leaving **Slot B** free. This allows either card to be inserted or removed without having to remove the other.
    - Insert the carrier with the memory card label pointing upwards. As the carrier is inserted, the card eject button for the PCMCIA slot will come out.
- 


### 4. System Configuration

The system can now be configured for embedded voicemail. See System Configuration.

## System Configuration

The system configuration for embedded voicemail is common to all the IP Office systems that support embedded voicemail memory cards.

1. Start IP Office Manager (select **Start | Programs | IP Office |  Manager**) and log on.
2. Click  to scan for the control unit.
3. Enter the control unit's system password and receive its configuration.
4. Double-click on  to open the System Configuration form.
5. Click the **System** tab. The **Locale** setting should match the language for spoken prompts required from the integral voicemail. See Languages Supported.
  - If it is not correct, consult with the customer first. This **Locale** setting controls many default aspect of IP Office operation and so should normally already be set to match the customer's locale.
6. Click the **Voicemail** tab. The diagram below indicates the fields applicable to embedded voicemail.

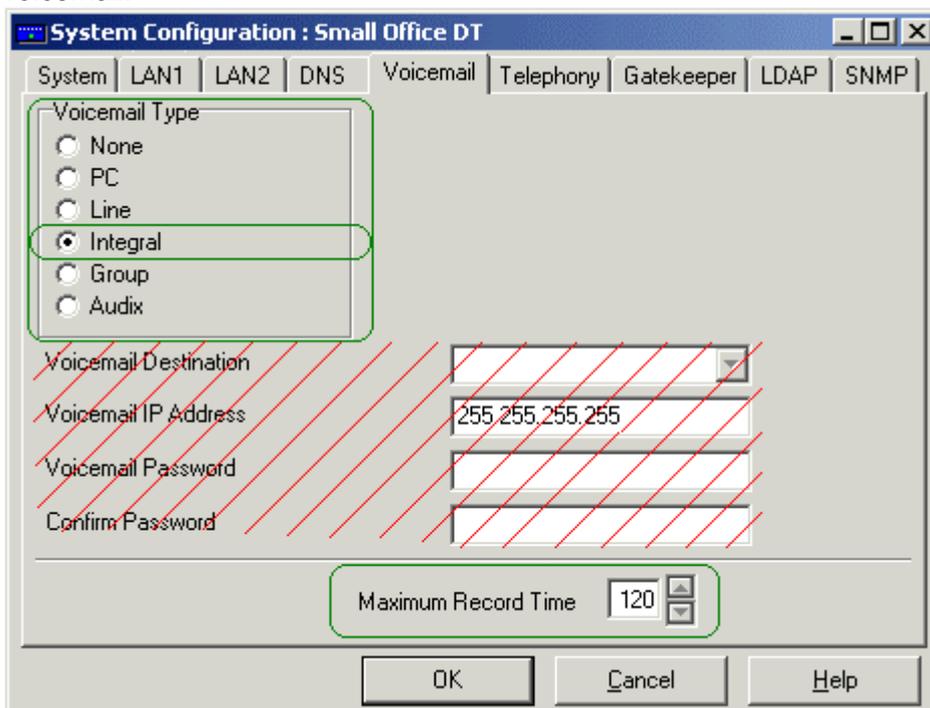

7. Change the **Voicemail Type** to **Integral**.
  - Embedded Voicemail cannot be used with Voicemail Lite or Voicemail Pro. The presence of a Voicemail Lite or Pro server on the same network may cause Embedded Voicemail to fail, even when the IP Office system is correctly set to **Integral**.
8. Set the **Maximum Record Time** for messages and prompts to the value required by the customer. The allowable range is 5 to 180 seconds with 120 seconds as default.
9. Click **OK**.
10. We will now start the TFTP Log in order to observe the correct transfer of prompt files to the memory card. Select **View | TFTP Log**.
  - Note: IP Office Monitor can also be used to monitor embedded voicemail installation, see Monitoring Embedded Voicemail
11. Arrange the TFTP Log and Manager windows so that you can see both or at least click between each rapidly.
12. Click  to send the configuration change back to the control unit.

13. Select ***Immediately*** or ***When Free*** as the **Reboot Mode**.
14. As soon as possible, click **Close** and switch to viewing the TFTP Log window. The following should be seen:
  - a. The configuration file being sent to the control unit should be shown, followed by a reboot request.
  - b. If there are any 4600/5600 Series IP telephones attached to the IP Office, requests for ***46XXupgrade.scr*** and possibly other files will be shown.
  - c. Requests for the ***HoldMusic.wav*** file may appear. These repeat up to 3 times if no file is available.
  - d. Finally the process of sending the ***IVMSounds*** files containing the Embedded Voicemail prompts is shown.
15. Once the prompt file transfer is complete, allow at least a further 5 minutes for the prompts to be transferred from the system's memory to the memory card.
16. From an extension on the system, dial **\*17**. The integral voicemail should answer and start to give you prompts.

## Upgrading Prompts

For IP Office 3.0, embedded voicemail memory cards are supplied with the necessary prompt files pre-installed. This is a change from previous releases where the prompts had to be initially transferred using TFTP from a PC running IP Office Manager.

Therefore the processes below should only be required when upgrading an existing pre-3.0 memory card or when the documentation for future releases indicates that the range of available embedded voicemail prompts has changed.

---

## Prompt Source and Destination Location

All the prompts for embedded voicemail can be found in the **LVMSound** folder on the IP Office Administrator Applications CD. There are two sets, one for compressed memory cards in the **G723 Files** folder, and one for uncompressed memory cards in the **G711 Files** folder. Each set contains a folder for each supported language.

- **IP Office Small Office Edition - Compressed Prompts**  
The sub-folders in **LVMSound/G723 Files** should be copied to **LVMAIL** on the compressed memory card.
- **IP Office 406 V2 - Uncompressed Prompts**  
The sub-folders in **LVMSound/G711 Files** should be copied to **LVMAIL** on the uncompressed memory card.

The following sections cover two methods for copying the prompt folders to the required location. In both cases, following the copying the IP Office system should be restarted. During the restart the new prompt files are scanned and processed by the IP Office system. This can take up to 10 minutes before embedded voicemail restarts with the new prompts. This scanning processes is much shorter on subsequent system restarts.

## Upgrading Prompts Using a Memory Card Reader


This method uses a third-party memory card reader capable of reading and writing to a Type II Compact Flash memory card. It requires the IP Office to have already been upgraded to IP Office 3.0 and to be restarted.

1. Remove the memory card from the IP Office control unit and if necessary from its PCMCIA carrier.
2. Following the memory card reader manufacturer's instructions, insert the memory card into the memory card reader.
3. Open the additional removable drive available on the PC. The folders should include a folder **lvmail**. Double-click the **lvmail** folder to open it.
  - The existing files in this folder include user messages and greeting. Do not delete any existing files. They also include pre-IP Office 3.0 embedded voicemail prompts which should be retained should it be necessary to downgrade the IP Office system.
4. Insert the IP Office 3.0 Administrator Application into the PC's CD drive.
5. When the installation wizard runs, select **Cancel**.
6. Using **Explorer** or **My Computer**, right-click the CD drive icon and select **Open** to view files on the CD without running the installation wizard.
7. Open the folder **LVMSOUND**.
8. The next step depends on the IP Office control unit type:
  - For an IP406 V2 control unit, double-click the **G711 Files** folder to open it.
  - For a Small Office Edition control unit, double-click the **G723 Files** folder to open it.
9. There should be a folder for each language supported, ie. **ENG** for UK English, **ENU** for US English and so on.
10. Drag and drop each of the language folders from the CD to the **lvmail** folder on the memory card.
  - If a set of language folder already exists, you will be asked to confirm the action. Select **Yes to all** for the folder replace and for the following file replacement query.
11. Following the transfer:
  - Select all the language sub-folders in the **lvmail** folder.
  - Right-click and select **Properties**.
  - Under **Attributes**, click to remove any check mark set against Read Only.
  - Click **OK**. If asked, select **Apply to all Folder, sub-folder and files**.
12. Again following the memory card reader manufacturer's instructions, remove the memory card from the memory card reader. With USB memory card readers, use the **Windows Unplug or Eject Hardware** wizard.
13. Reinsert the memory card into the IP Office control unit.
14. Restart the IP Office control unit by removing and then reapplying power.
15. Wait approximately 10 minutes following the restart for the IP Office to scan the new prompts it has available.
  - The IP Office Monitor application can be used to show this activity. See Monitoring Embedded Voicemail.
16. Test embedded voicemail operation by dialing **\*17** at an extension.

## Upgrading Prompts Using TFTP File Transfer

This method uses IP Office Manager as a TFTP server to pass files from the CD drive to the memory card. It requires the IP Office to have already been upgraded to IP Office 3.0 and to be restarted.

1. Using Manager, click  to receive the IP Office system's current configuration.
2. Click  **System** in the left-hand panel.
3. Double-click on the  system now listed in the right-hand panel.
4. On the **System** tab of the **System** form, set the following:

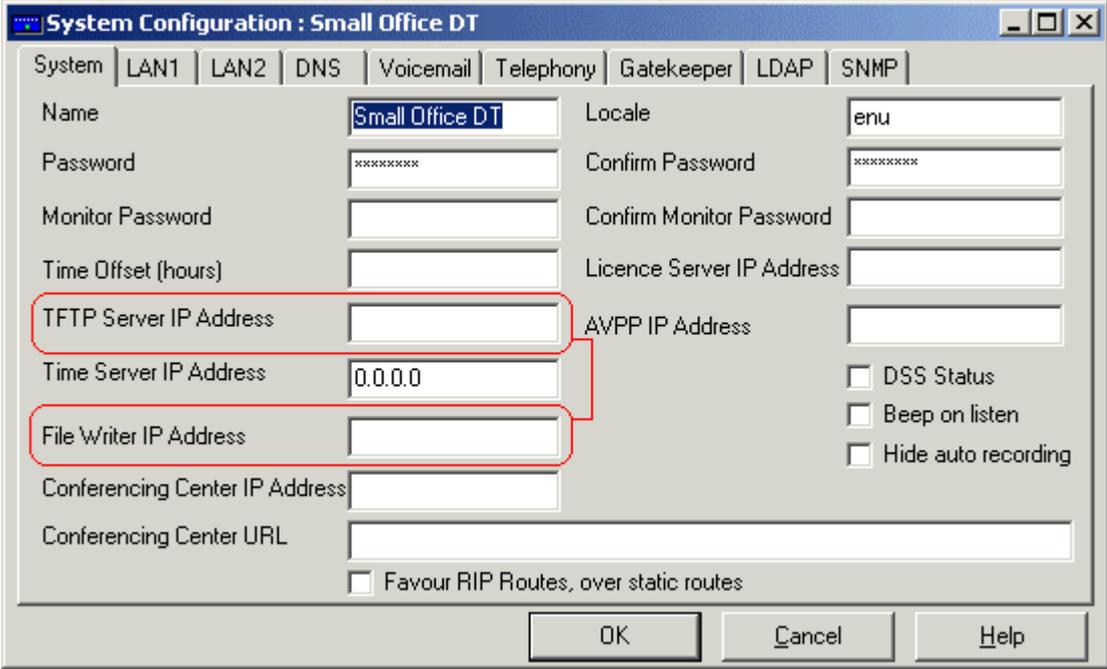

- Set the **File Writer IP Address** to the IP address of the PC running IP Office Manager.
  - Set the **TFTP Server IP Address** to the IP Office's LAN1 IP address.
5. Use  to send this configuration back to the control unit and allow it to reboot.
  6. Within Windows, select **Start | Run**.
  7. Enter **cmd** and click **OK** to open a command line window.
  8. Type the CD drive letter and press **Enter**, for example enter **D:**.
  9. Type **cd LVMSOUND** and press **Enter**.
  10. The next step depends on the IP Office control unit type:
    - For an IP406 V2 control unit:
      - a. Type **cd G711 Files** and press **Enter**.
      - b. Type **send711.bat** followed by the IP Office's LAN1 IP address, for example **send711.bat 192.168.42.1**.
      - c. The batch file will start transferring all the necessary folders and prompt files.
    - For a Small Office Edition control unit:
      - a. Type **cd G723 Files** and press **Enter**.
      - b. Type **send723.bat** followed by the IP Office's LAN1 IP address, for example **send723.bat 192.168.42.1**.
      - c. The batch file will start transferring all the necessary folders and prompt files.
  11. The whole process of transferring the prompt files can take up to 30 minutes.
  12. When all the files have been transferred, close the command window.

13. Restart the IP Office control unit by removing and then reapplying power.
14. Wait approximately 10 minutes following the restart for the IP Office to scan the new prompts it has available.
  - The IP Office Monitor application can be used to show this activity. See Monitoring Embedded Voicemail.
15. Test embedded voicemail operation by dialing \*17 at an extension.

---

## Monitoring Embedded Voicemail

The IP Office Monitor application can be used to observe the operation of embedded voicemail.

1. Select **Start | Programs | IP Office**.
2. Select  **Monitor**.
3. Select **File |  Select Unit**.
4. Enter the **Control Unit IP Address** and password. Depending on the IP Office system's configuration, the password required is either the system password or the separate monitor password if set.
5. Check the **Control Unit Type** is set to **IP Office**.
6. Click **OK**.
7. The Monitor application will attempt to connect with the control unit. If successful, something similar to the following will appear.

```
***** SysMonitor 4.1 (10) *****
***** contact made with 192.168.42.1 at 08:17 24/5/2004 *****
***** System (192.168.42.1) has been up and running for 10days, 9hrs, 40mins and
2secs(898802799mS) *****
0mS PRN: Monitor Started IP=192.168.42.203 IP 401 2.1(10)
1mS PRN: LAW=A PRI=0, BRI=0, ALOG=4, ADSL=0 VCOMP=5, MDM=0, WAN=0, MODU=0 LANM=0
CkSRC=0 VMAIL=0 (VER=0 TYP=3) CALLS=0 (TOT=2)
```

8. Click **Filters** and then **Trace Options**.
9. The following options must be selected in order for the monitor trace to include embedded voicemail events:
  - On the **Call** tab, select **Embedded Voicemail**.
  - On the **System** tab, select **Print**.
    - The **Trace Color** selection on the System tab is applied to embedded voicemail events.
10. Click **OK**.
11. Embedded voicemail events are now shown in the Monitor trace when running. These events are all prefixed **LV**.

---

# User Mailbox Configuration

---

## User Mailboxes

Embedded voicemail creates a mailbox for each user on the IP Office system.

Calls are routed to the mailbox whenever the user's extension is busy or does not answer within the users allocated answer interval. This includes calls that are forwarded to another internal destination.

The individual user's mailbox can be configured either through the mailbox and system short codes (refer to the Embedded Voicemail User Guide) or through the user settings within the IP Office configuration.


- **Message Waiting Indication**  
If supported by the user's current extension, the user will receive message waiting indication whenever their mailbox contains new messages. The type of message waiting indication will depend on the telephone.
- **Mailbox Access**  
The standard default short code (\*17) can be used to access an extensions associated user mailbox. Other methods of mailbox access can be configured.
- **Ringback**  
Embedded voicemail can be set to ring the user whenever they have new messages in their mailbox. This ringback is triggered the completion of a call at the user's extension. Ringback from a hunt group mailbox containing new messages may also occur if the user is configured to receive hunt group message waiting indication.
- **Voicemail On/Off**  
The sending of calls to the user's mailbox can be switched off. Note however that this does not stop other methods of leaving messages directly in the user's mailbox.
- **Access Code**  
An access code can be assigned to the mailbox. Anyone accessing the mailbox must first enter this code, followed by a # before they can collect messages. The access code can be reset by the user once they are in their mailbox.
- **Voicemail Reception**  
Setting a Voicemail Reception number for a user, allows callers leaving a message in their mailbox to dial \*0 to be transferred to that number. If used this feature should be announced in the mailbox greeting prompt.

### **WARNING: Changing User Names**

Mailboxes are created based on the unique user name within the IP Office configuration. Changing a user name will associate that user with a new mailbox. If it is necessary to change a user name, ensure that they have played and deleted all messages first. If a user name is changed without clearing the original mailbox, it will be necessary to create a short code based on the old user name in order to access the old mailbox.

## User Mailbox Configuration

1. In Manager, click  to load the IP Office system's configuration.
2. Click  **User** to display the list of existing users.
3. Double-click on the required user. The voicemail settings are on the **Voicemail** tab. These include settings that are used by IP Office Voicemail Lite and Voicemail Pro. The picture below indicates which features are and are not applicable to Embedded Voicemail.

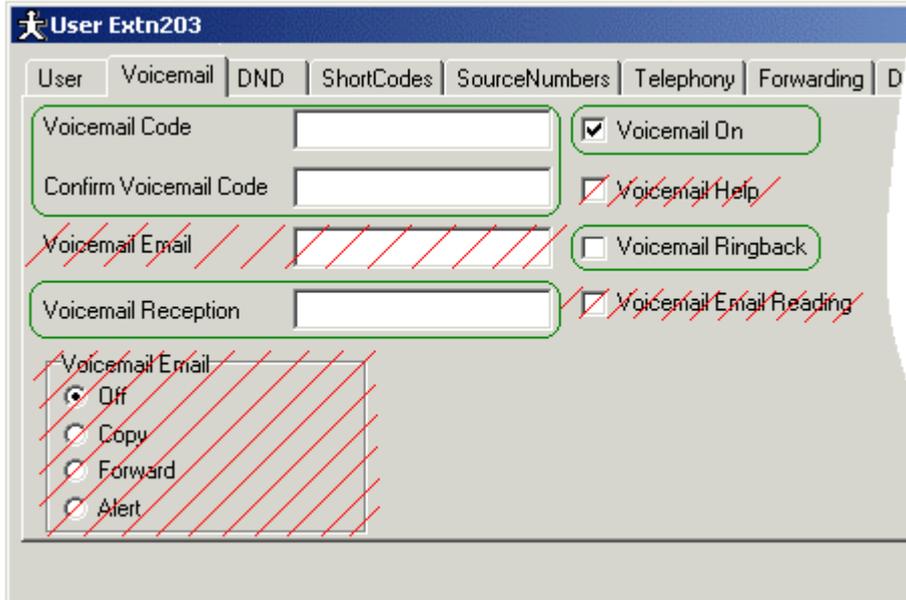

- **Voicemail Code**  
This field can be used to set a mailbox access code. That code must then be entered and followed by # by anyone attempting to retrieve messages from the mailbox. If set the code should be 4 digits or longer.
- **Voicemail On**  
When ticked, calls to the user's number will divert to voicemail if busy or not answered within the users set allocated answer interval.
- **Voicemail Ringback**  
When ticked, following the completion of any call, if the user's has new messages waiting, the voicemail system will ring the user. Note that ringback will also occur for any hunt group mailbox for which the user receives message waiting indication. However user mailbox ringback takes precedence over hunt group mailbox ringback when both contain new messages.
- **Voicemail Reception**  
The number to which callers in the mailbox should be transferred if they dial \*0.

4. Make any changes required for the user and click **OK**.
5. Repeat for any other users.
6. Use  to save the new changes back to the IP Office system.

**Note:**

- **Source Numbers**  
The settings on this tab for trusted source numbers are not used for IP Office Embedded Voicemail. The Hunt group setting is used, see Hunt Group Message Waiting Indication
- **Voice Recording**  
This tab is hidden on IP Office systems using embedded voicemail.

---

# Hunt Group Mailbox Configuration

---

## Hunt Group Mailboxes

Embedded voicemail creates a mailbox for each hunt group on the IP Office system. Call are only sent to the mailbox when each available group member has been rung for the group's set ring time.

The group mailbox can be configured either through the mailbox (refer to the Embedded Voicemail User Guide) or through the hunt group settings within the IP Office configuration.

- **Message Waiting Indication**

By default there is no message waiting indication to any user for hunt group messages. Users must be configured individually, see Hunt Group Message Waiting Indication

- **Mailbox Access**

By default there is no mailbox access to hunt group mailboxes to collect messages. Users assigned hunt group message waiting indication may also gain access depending on their phone type or if using IP Office Phone Manager. Otherwise an access short code must be created for the hunt group, see Hunt Group Mailbox Access

- **Ringback**

Embedded voicemail can be set to ring the user whenever they have new messages in a hunt group mailbox for which they receive message waiting indication. This ringback is triggered the completion of a call at the user's extension.

- **Voicemail On/Off**

The sending of calls to the group's mailbox can be switched off. Note however that this does not stop other methods of leaving messages directly in the mailbox.

- **Access Code**

An access code can be assigned to the mailbox. Anyone accessing the mailbox must first enter this code, followed by a # before they can collect messages. The access code can be reset by the user once they are in the mailbox.


### **WARNING: Changing Hunt Group Names**

Mailboxes are created based on the unique group name within the IP Office configuration. Changing a group name will associate that group with a new mailbox. If it is necessary to change a group name, ensure that they have played and deleted all messages first. If a group name is changed without clearing the original mailbox, it will be necessary to create a short code based on the old group name in order to access the old mailbox.

## Hunt Group Mailbox Configuration

Embedded voicemail creates a mailbox for each hunt group on the IP Office system. The group mailbox can be configured either through the mailbox and system short codes or through the hunt group settings within the IP Office configuration.

1. Within Manager, click  to load the IP Office system's configuration.
2. Click  **Hunt Group** to display the list of existing hunt groups.
3. Double-click on the required hunt group. The voicemail settings are on the Voicemail tab. These include settings that are used by IP Office Voicemail Lite and Voicemail Pro. The picture below indicates which features are and are not applicable to Embedded Voicemail.

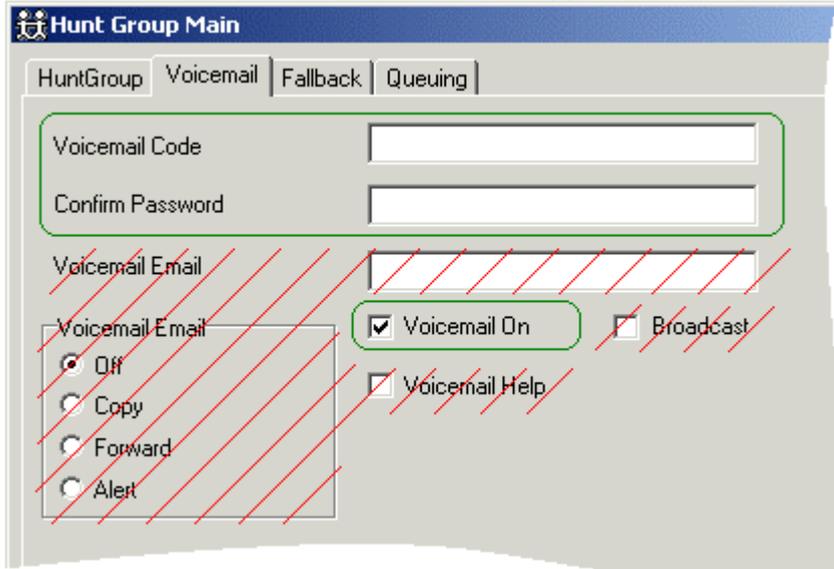

- **Voicemail Code**  
This field can be used to set a mailbox access code. That code must then be entered and followed by # by anyone attempting to retrieve messages from the mailbox.
- **Voicemail On**  
When ticked, calls to the hunt group's number will divert to voicemail if all available group members are busy or do not answer within the group's set allocated answer interval.

4. Make any changes as required for the hunt group and click **OK**.
5. Repeat for any other hunt group.
6. Use  to save the new changes back to the IP Office system.


**Note:**

- **Voice Recording**  
This tab is hidden on IP Office system's using embedded voicemail.

## Hunt Group Message Waiting Indication

By default no message waiting indication is sent to any user for a hunt group mailbox. The following process shows how to give a user message waiting indication from a hunt group's mailbox. The method of indication will depend on the type of telephone the user has and whether they are using IP Office Phone Manager.

1. Within Manager, click  to load the IP Office system's configuration.
2. Click  **User** to display the list of existing users.
3. Double-click on the required user.
4. Click on the **Source Numbers** tab.

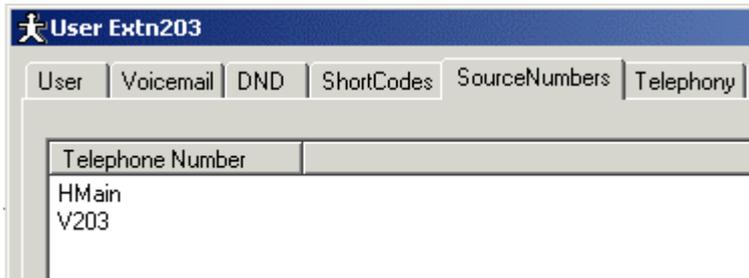

5. Right-click on the panel and select **Add**.
6. In the **Telephone Number** field, enter **H** followed by the name of the hunt group. For example, for the hunt group Main, enter **HMain**.
7. Click **OK** and repeat for any other hunt groups for which the user requires message waiting indication.
8. Click **OK** and repeat for any other users.
9. Use  to save the new changes back to the IP Office system.

## Hunt Group Mailbox Access

By default no user has access to a hunt group mailbox until specifically configured for such access. Hunt group mailboxes can be accessed using the following methods:

---

### Message Waiting Indication


Users assigned hunt group message waiting indication are also given methods to access the hunt group mailbox. The method will depend on the telephone and/or software they are using.

1. **Avaya 4400, 4600 and 6400 Series Telephone Users**  
 DS display phone users on telephone models with a  **MENU** key also gain access once they have been configured for hunt group message waiting. The hunt group name is then displayed when the user presses  **MENU**,  **MENU**, **Msgs**, **Voice**.
2. **Phone Manager Users**  
 Users using Phone Manager see the hunt group name and number of messages listed on the Messages tab. They can click on this to access the hunt group mailbox.

---

### Short Code and DSS Key Access

A short code can be created for hunt group mailbox access. This can be a system wide or user specific short code. The picture below shows an example short code for accessing the mailbox of the hunt group **Main**.

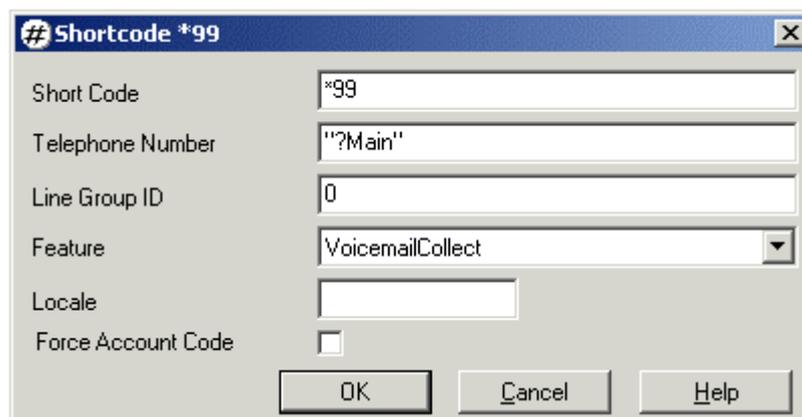

The Voicemail Collect feature and hunt group mailbox name can also be assigned to a user's DSS key.

---

### Remote Access

The standard methods for remote mailbox access for users, also apply to hunt group mailboxes.

---

# Auto Attendant Configuration

---

## Auto Attendant Overview

In addition to basic voicemail operation, the IP Office Small Office Edition and IP Office 406 V2 support the creation of auto attendants using embedded voicemail. Up to 4 auto attendants are supported on any one system.

Each auto attendant consists of:

- **Greeting Prompts**  
Separate morning, afternoon and evening (out of hours) greetings prompts. Which prompt is used is defined by associate Time Profiles.
  - In situations where time profiles are absent, overlap or conflict; the order of precedence given is to time profiles assigned to **Morning**, **Afternoon** and then **Evening**.
- **Menu Options Prompt**  
The greeting prompt is followed by a menu options prompt. This is used to inform the caller of the auto attendant options.
- **Actions**  
Each of the normal DTMF dialing keys; \*, # and 0 to 9, can be assigned to an action. Callers can dial-through prompts, that is press an action key whilst listening to the greetings prompts.

The choice of actions are:

- **Transfer to Operator**  
Transfers the caller to a specified number. This is a supervised transfer, that is, if not answered the call will return to the auto attendant .
  - **Normal Transfer**  
Transfer the caller to a specified number. This is an unsupervised transfer, that is, if busy or unanswered the call will follow the settings of the target user or hunt group. If the destination field is left blank, callers can dial the extension number that they require. Note however that no prompt is provided for this option.
  - **Replay Greeting**  
Repeat the auto-attendant greetings.
  - **Not Defined**  
Take no action.
- 
- **Recording Prompts**  
When a new auto attendant is created, a number of short codes are automatically added to the System Short Codes table. One short code is created for each auto attendant prompt. The short codes allow an extension user to record the associated prompt.
  - **Routing Caller to an Auto Attendant**  
An integral voicemail auto attendant created can be specified as a destination in the IP Office Incoming Call Routes table. Internal callers can access an auto attendant through a programmed DSS button or Phone Manager speed dial.


## Example Auto Attendant Setup

The following process shows by example the setup for an auto attendant on embedded voicemail.

For this example;


- The customer wants all incoming calls to go to an auto-attendant.
- The auto-attendant should give callers the option to press 0 for reception (hunt group 200), 1 for sales (hunt group 301) or 2 for support (hunt group 302).
- Separate time profiles have already been configured for the customer's morning and afternoon hours of business.

1. Start IP Office Manager (Select **Start | Programs | IP Office |  Manager**).
2. Click  and receive the Small Office Edition system's configuration.
3. In the left-hand configuration tree panel, click  **Auto Attendant**.
4. The right-hand panel will show any existing auto attendants.
5. Place the cursor over the right-hand panel and right-click. Select **New**.

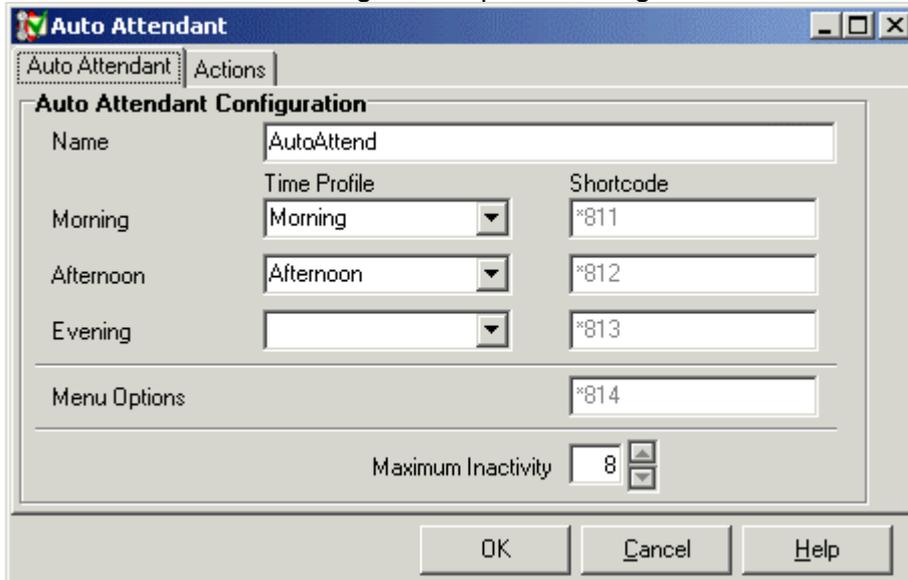

Auto Attendant Configuration		
Name	AutoAttend	
Morning	Time Profile: Morning	Shortcode: *811
Afternoon	Time Profile: Afternoon	Shortcode: *812
Evening	Time Profile: (dropdown)	Shortcode: *813
Menu Options	*814	
Maximum Inactivity	8	

6. In the **Name** field enter the name for the auto attendant. This can be up to 12 characters in length.
7. For the different time periods (**Morning**, **Afternoon** and **Evening**), use the **Time Profile** drop-down to select the appropriate time profile.
  - Note the short codes that have been automatically created and appear greyed out.
8. Set the required **Maximum Inactivity** time. This is how long, after playing the prompts, the auto attendant should wait for a valid key press. If exceeded, the caller is transferring to the **Fallback Destination** in the **Incoming Call Route** used to route their call to the auto attendant, or disconnected. The time can be set between 5 and 20 seconds, the default is 8 seconds.

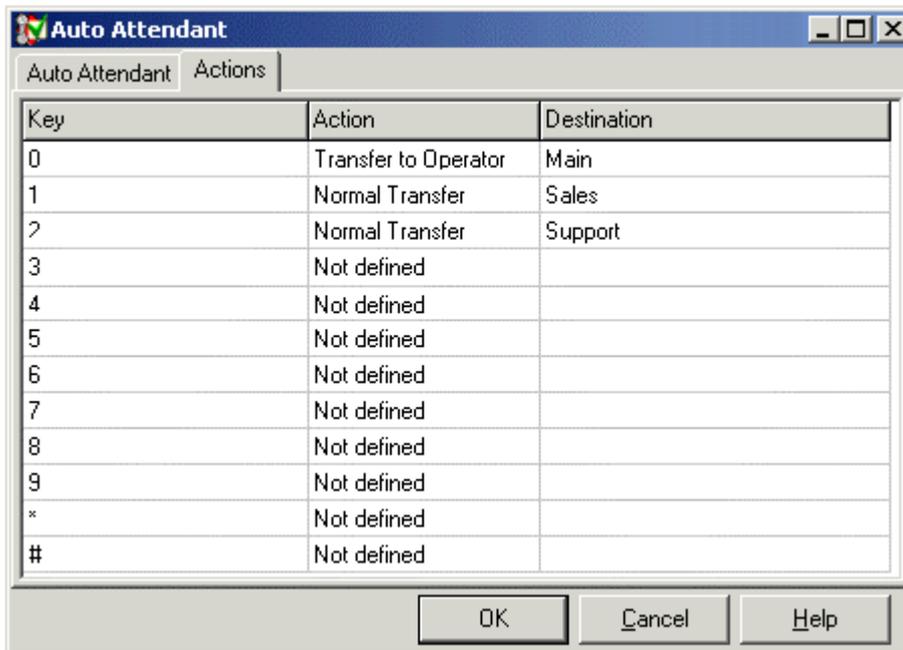9. Click the **Actions** tab.

- For the Key 0 row, click on the **Action** box. Use the drop-down that appears to select **Transfer to Operator**. Click on the **Destination** box. Use the drop-down that appears to select the required destination, for this example the group **Main**.
- For the Key 1 row, click on the **Action** box. Use the drop-down that appears to select **Normal Transfer**. Click on the **Destination** box. Use the drop-down that appears to select the required destination, for this example the group **Sales**. Note that if the destination field is left blank, callers can dial the user extension number that they require. Note however that no prompt is provided for this option.
- Repeat for the Key 2 row to route calls to the **Support** hunt group.
- Click **OK**.


10. Click on **# Shortcode** in the left-hand configuration tree. The existing system short codes are displayed in the right-hand panel. Scroll or sort this list to display the short codes created for the auto attendant.

#814	AA:AutoAttend.4	AutoAttendant	0
#813	AA:AutoAttend.3	AutoAttendant	0
#812	AA:AutoAttend.2	AutoAttendant	0
#811	AA:AutoAttend.1	AutoAttendant	0

- The telephone number part of the short code indicates the name of the auto attendant and which prompt. These are in order, that is 1 for morning greeting, 2 for afternoon, 3 for evening and 4 for menu actions.

11. Click on **Incoming Call Route** in the left-hand configuration tree. The existing incoming call routes are displayed in the right-hand panel. For our example we want to alter the default incoming call route used for voice calls.12. Double-click on the incoming call route with its destination currently set to **Main**.

- Click on the **Destination** drop-down box and select **AA:AutoAttend**. This will now route all incoming voice calls, on lines in Line Group 0 (the default) to the auto attendant.

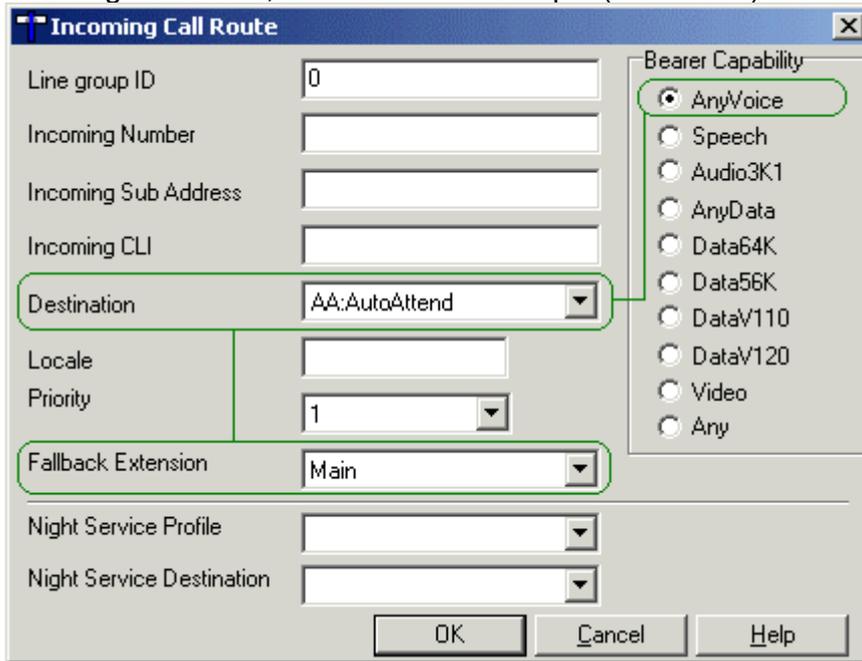

- In this example a **Fallback Extension** has also been set to route calls direct to the **Main** hunt group. This will be used for callers in the auto attendant who do not make a valid key press within the auto attendants **Maximum Inactivity** time.
- Another auto attendant could be created to provide options for when the **Main**, **Sales** and **Support** hunt groups are not open. This could then be set as the **Night Service Destination** along with a **Night Service Time Profile**.


- Click **OK**.

- Click  to send the configuration changes back to the Small Office Edition system.

- Following the system reboot, you should be able to record prompts for the auto attendant using the short codes created. You can then test the auto attendant by making an incoming external call.

## Routing Incoming Calls to an Auto Attendant

As shown in the example setup, the format **AA:Name**, where **Name** is the name of the auto attendant service, can be used in the **Destination** field of an **Incoming Call Route**. Similarly the **AA:Name** format could be entered as the destination in the **Fallback Extension** and/or **Night Service Destination** to route each to the same or different auto attendants.

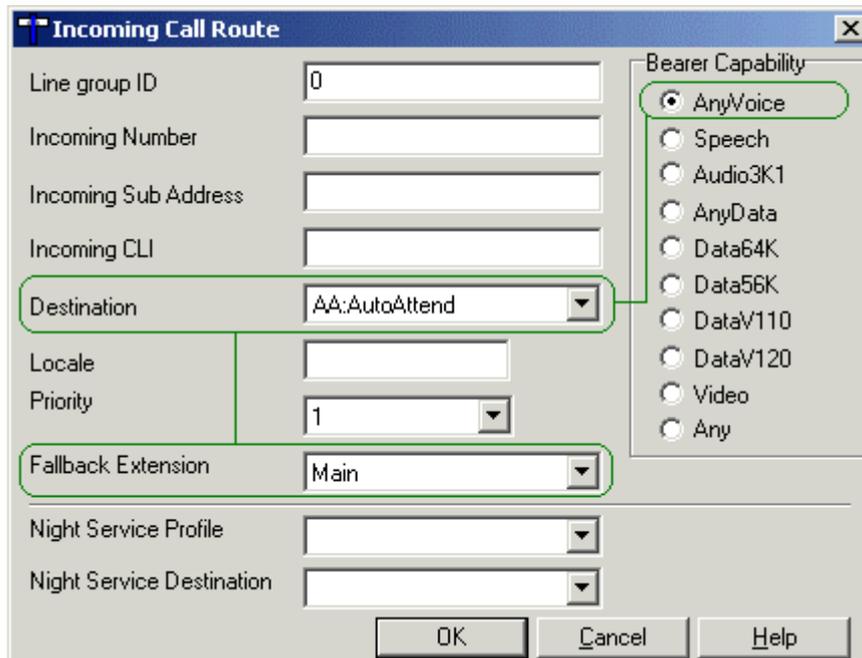

The screenshot shows the 'Incoming Call Route' configuration dialog box. The 'Destination' field is set to 'AA:AutoAttend' and the 'Fallback Extension' is set to 'Main'. The 'Bearer Capability' section is expanded, showing 'AnyVoice' selected. Other fields include 'Line group ID' (0), 'Incoming Number', 'Incoming Sub Address', 'Incoming CLI', 'Locale', 'Priority' (1), 'Night Service Profile', and 'Night Service Destination'. Buttons for 'OK', 'Cancel', and 'Help' are at the bottom.

In addition, if a caller routed to an auto-attendant as the main **Destination** of an Incoming Call Route does not make a key selection within the auto attendants set **Maximum Inactivity** time, they are transferred to the Incoming Call Route's **Fallback Extension**.

## Transferring Calls to an Auto Attendant

Normally calls are directed to an auto attendant by an IP Office incoming call route. However it can also be useful to transfer calls received at an internal extension to an auto attendant. This can be done using the following methods.

---

### Using DSS Keys

On Avaya phones with DSS keys, those keys can be programmed to access auto attendant services.

#### Create an Auto Attendant DSS Key

1. Within the IP Office system's configuration, set the action of one of the users DSS key to **Dial**.
2. Set the associated telephone number to **AA:Name** where **Name** matches the name of the auto attendant.
3. Save this configuration change back to the IP Office.

#### Transferring Call Using the DSS Key

1. When the user receives a call they want to transfer to the auto-attendant, they should:
  - a. Place the call on hold.
  - b. Press the DSS key programmed for the auto-attendant.
  - c. Hang-up the call at their extension.
  - d. This will cause a blind transfer of the held call to the auto-attendant.

---

### Using Phone Manager

#### Create an Auto Attendant Speed Dial

1. Within the user's Phone Manager, click on the **Speed Dials** tab.
2. Right-click on the speed dial panel and select **New...**
3. Enter a memorable name for **Name**.
4. For **Number** enter **AA:Name** where **Name** matches the name of the auto attendant.
5. Click OK.


#### Transferring Calls to the Speed Dial

1. Having answered a call that you want to transfer to the auto attendant.
2. Click  Hold to place the call on hold.
3. Click on the Speed Dials tab.
4. Click on the speed dial created for the auto attendant.
5. Click  Complete Transfer to transfer the held caller.

## Using Short Codes

The **Auto Attendant** short code feature can be used to connect to a particular auto attendant. The **Telephone Number** field takes the form **AA:** followed by the Auto Attendant service name.

In the example below, dialing **\*98** would connect the user with the auto attendant named **AutoAttend**.

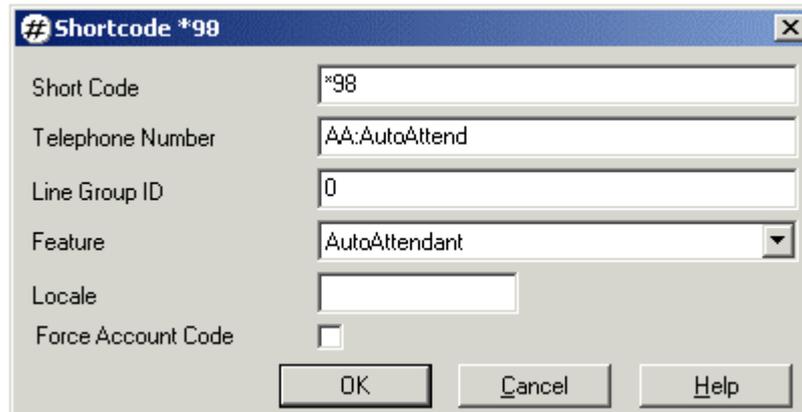

The screenshot shows a dialog box titled "Shortcode \*98" with the following fields and controls:

- Short Code: \*98
- Telephone Number: AA:AutoAttend
- Line Group ID: 0
- Feature: AutoAttend (dropdown menu)
- Locale: (empty text box)
- Force Account Code:
- Buttons: OK, Cancel, Help

Once a short code for a particular auto attendant has been created, callers can be transferred as follows:

1. Place the caller on hold.
2. Dial the auto attendant short code.
3. Hang up.

## Auto Attendant Remote Access

A useful function in auto attendants is to let callers access their own voicemail mailbox. This can be achieved by first creating a short code and using this short code as an auto attendant destination.

1. In Manager, click  and load the Small Office Edition system's configuration.
2. For the user or hunt group for which you want to create remote access, open their settings and on the **Voicemail** tab ensure that a **Voicemail Code** has been set. Remote access will not work without this.
3. Click  **Shortcode** in the left-hand configuration tree panel.
4. Right-click the list of existing short codes and select **New**.
5. Create a short code such as the following example:



6. Click **OK** to add the new short code.
7. In the auto attendant, select the key that the caller should use. Set its **Action** to **Transfer to Operator**. Set the destination to **\*99**.
8. Click **OK** and use  to send the configuration back to the Small Office Edition.
9. External callers to the auto-attendant selecting that right option will now be challenged to enter the mailbox number and then the mailbox access code. Each should be followed by #. If entered correctly they will be able to collect messages.

## Changing Prompts and Prompt Short Codes

The short codes automatically created for each auto attendant allow the recording of the various auto attendant prompts. The short code telephone number indicates the name of the auto attendant service and which prompt the short code records.

*814	AA:AutoAttend.4	AutoAttendant	0
#*813	AA:AutoAttend.3	AutoAttendant	0
#*812	AA:AutoAttend.2	AutoAttendant	0
#*811	AA:AutoAttend.1	AutoAttendant	0

The telephone number part takes the form **AA:Name.x**, where **Name** is the name of the auto attendant service, and **x** is **1** for the morning greeting, **2** for the afternoon greeting, **3** for the evening greeting and **4** for the menu options prompt.

When using any of these short codes, users are given the option **1** to hear the current prompt, **2** to record a new prompt and **3** to save the new prompt.

To prevent abuse of these default short codes, they can be deleted or changed. They can also be removed from the system short codes section and rebuilt in the user short codes of a trusted user.

Using the Dial feature, the short codes can be assigned to a DSS key. This allow quick access and recording of any prompts that changes frequently.

## Cascading Auto Attendants

Using an auto attendant short code, one auto attendant can be accessed from another. For some customers this may provide added flexibility.

Note that only 4 auto attendant services are supported, and linking auto attendant services may increase the time callers remain in the services, reducing the number of free voicemail and auto attendant connections for other callers.

The follow example short code will connect a caller to an auto attendant service named **AutoAttend**.

Within another auto attendant, the short code **\*98** could be set as the **Destination** for a **Normal Transfer**.



---

# Miscellaneous

---

## Short Codes

Embedded voicemail supports many of the same short codes available for Voicemail Lite and Voicemail Pro.

---

### Default Short Codes


The following default system short codes can be used with embedded voicemail.

- **Collect Messages: \*17**  
Can be used by users to access the mailbox associated with their extension.
  - **Voicemail On/Off: \*18/\*19**  
Switches the diverting of callers to the user's mailbox on/off.
  - **Voicemail Ringback On/Off: \*48/\*49**  
Switches new message ringback to the user on/off.
- 

### Adding Custom Short Codes

Additional short codes can be added as required using the features listed below.


- **Voicemail Collect**  
This short code feature can be used to create short codes for collecting or leaving messages. The exact action is set by the use of either ? or # in the telephone number. For example **"?Main"** would indicate collection of messages in the mailbox Main. **"#Main"** would indicate the users wants to leave a message in the mailbox Main. Note that the quotation marks " " are required and the name must match the user or hunt group whose mailbox is being accessed. For example:

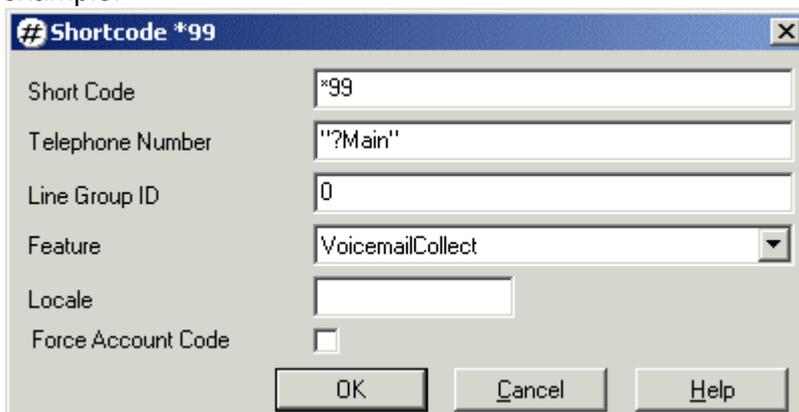

- Using just ? in the Telephone Number without quote marks and a mailbox name allows remote access. The user would be prompted to enter the mailbox number and then the mailboxes access code if set.
- **Voicemail On/Voicemail Off**  
These two features switch the diversion of calls to the user or groups mailbox on/off. No telephone number is required for either of these features.
- **Voicemail Ringback On/Off**  
These two features switch new message ringback notification on/off. No telephone number is required for either of these features.
- **Auto Attendant**  
This feature is used for the recording of auto attendant prompts and greetings. Normally the short codes for this are created automatically. However they can be deleted and reassigned as required. The telephone number part takes the form **AA:Name.x**, where **Name** is the name of the auto attendant service, and **x** is **1** for the morning greeting, **2** for the afternoon greeting, **3** for the evening greeting and **4** for the menu options prompt. Just **AA:Name** can be used to route calls to the named auto attendant service.

## DSS Key Programming

The same features used for embedded voicemail short codes can also be assigned to DSS keys.

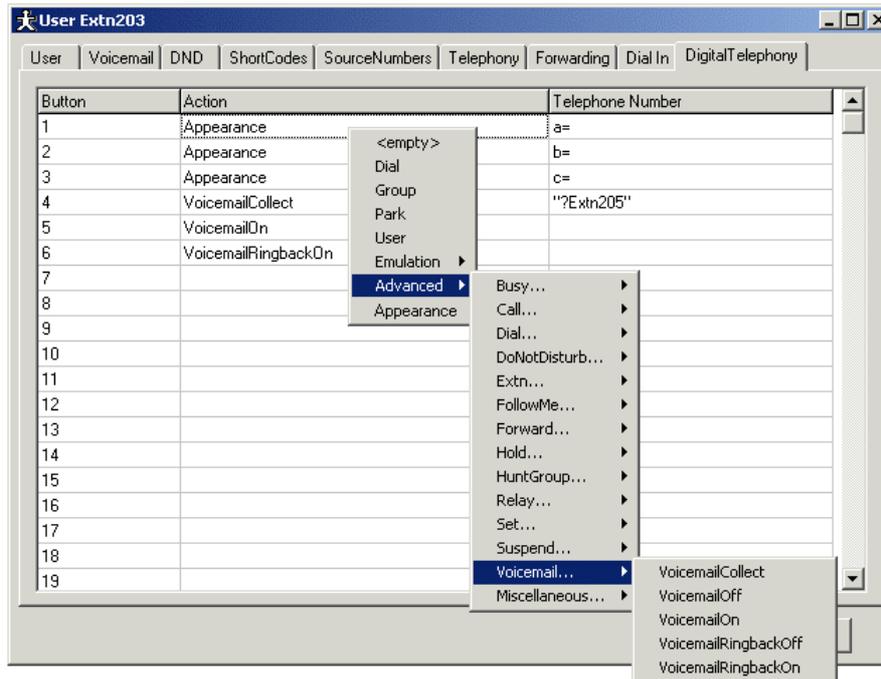

1. In Manager, click to load the IP Office system's configuration.
2. Click **User** to display the list of existing users.
3. Double-click on the required user. Click on the **Button Programming** tab (also called **Digital Telephony** in some locales).
4. Click on the **Action** field of the button you want to program. From the list that appears, click **Advanced**.
5. A list of advanced function categories appears. Click **Voicemail** to display the list of voicemail features.
6. Select the feature required:
  - **Voicemail Collect**  
Allows access to a mailbox to collect or leave messages. The mailbox and action are determined by the associated telephone number. This takes the form "**?Name**" for message collection and "**#Name**" for leaving a message. The **Name** part must match the user or hunt group name set in the IP Office configuration. On suitable phones the DSS key displays **VMCoI** followed by the name.
  - **Voicemail On**  
This feature switches the diversion of calls to the user or groups mailbox on/off. When programmed on a DSS key, the action toggles so no separate Voicemail Off key is required. On suitable phones the DSS key displays **VMOOn**.
  - **Voicemail Ringback On**  
This feature switch new message ringback notification on/off. When programmed on a DSS key, the action toggles so no separate Voicemail Ringback Off key is required. On suitable phones the DSS key displays **VMRB+**.
7. Repeat for all the keys required.
8. Click **OK**.
9. Repeat for any other users.
10. Use to save the new changes back to the IP Office system.

---

## Remote Access

For this section, we define Remote Mailbox Access as:


- Accessing a mailbox from an extension that does not match the mailbox number.
  - External caller access to voicemail to collect messages from a mailbox.
- 
- **WARNING**  
Where remote access is setup for any mailbox, it is strongly recommended that a mailbox access code is set for every user and hunt group.

---

## Using a Short Code

A short code using the **Voicemail Collect** feature but without a mailbox name specified in the **Telephone Number** field will trigger remote access.

An example is show below. This short code could be utilized by users on the system, as the destination in an Incoming Call Route or as the destination for a auto attendant option.

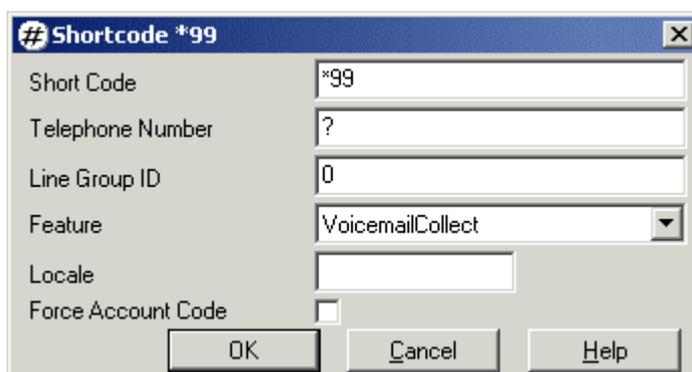

The screenshot shows a dialog box titled "# Shortcode \*99". It contains the following fields and controls:

Short Code	*99
Telephone Number	?
Line Group ID	0
Feature	VoicemailCollect
Locale	
Force Account Code	<input type="checkbox"/>

At the bottom of the dialog are three buttons: OK, Cancel, and Help.

---

## Using an Auto Attendant

A short code similar to the example above can be entered as the Destination for one of the auto attendant **Normal Transfer** key options. See Auto Attendant Remote Access.

---

## Using an Incoming Call Route

The option **Voicemail** can be selected as the **Destination** and/or **Night Service Destination** of an **Incoming Call Route**.

## **Backing Up and Restoring Messages**

The messages on the memory card used for embedded voicemail can be backed up and restored. Note however that restoration is a complete restore, overwriting the current mailbox messages and greetings. It is not possible to backup and restore selected mailboxes, messages and/or greetings.

Backup and restoration requires a PC with a memory card reader able to show the card as an additional removable drive.

### **Backing Up Messages, Greetings and Prompts**

1. Remove the memory card from the IP Office control unit and if necessary from its PCMCIA carrier.
2. Following the memory card reader manufacturer's instructions, insert the memory card into the memory card reader.
3. Open the additional removable drive available on the PC. The embedded voicemail prompts and messages are stored in the **lvmail** folder as a numbered sequence of files.
4. Copy the whole **lvmail** to a folder on the PC's other drives.
5. Again following the memory card reader manufacturer's instructions, remove the memory card from the memory card reader. With USB memory card readers, use the Windows Unplug or Eject Hardware wizard.
6. Reinstall the memory card into the IP Office control unit.

### **Restoring Messages, Greetings and Prompts**

Only perform this procedure if absolutely necessary. It will overwrite all existing mailbox messages and greetings. Note also that this procedure requires the IP Office system to be fully rebooted.

1. On the PC, locate the backup copy of the **lvmail** folder.
2. Remove the memory card from the IP Office control unit and if necessary from its PCMCIA carrier.
3. Following the memory card reader manufacturer's instructions, insert the memory card into the memory card reader.
4. Open the additional removable drive available on the PC and open the **lvmail** folder.
5. Delete the contents of the **lvmail** folder on the memory card and replace with the contents of the **lvmail** folder from the PC.
6. Again following the memory card reader manufacturer's instructions, remove the memory card from the memory card reader. With USB memory card readers, use the Windows Unplug or Eject Hardware wizard.
7. Reinstall the memory card into the IP Office control unit.
8. Remove and then reapply power to the IP Office control unit to ensure a full reboot.

## Loading Files


The Compact Flash memory card used with the Small Office Edition and IP406 V2 systems can be used to store files other than those used for embedded voicemail. For example the 'holdmusic.wav' file.

- Non-Avaya supplied Compact Flash memory cards can be used for this type of file storage. However they will not support embedded voicemail.
- If an Avaya supplied memory card is used, any files stored in this way will reduce the message storage capacity of the Compact Flash memory card.

### Configuring the File Source

This process allows a specified PC to send files to the memory card and tells the IP Office system to use the memory card

1. Using Manager, click  to receive the IP Office system's configuration.
2. On the **System** tab of the **System** form, set the **File Writer IP Address** to the IP address of the PC from which sending files to the memory card will be allowed.

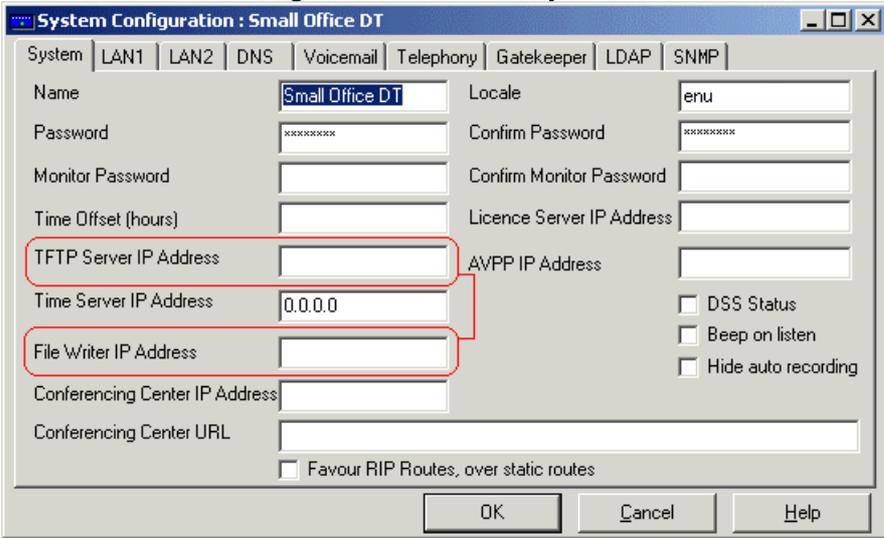

3. Use  to send this configuration back to the control unit and allow it to reboot.
4. Within Windows, select **Start | Run**.
5. Enter **cmd** and click **OK**.
6. Within the command window, you can use TFTP to upload files to the memory card. For example:
 

```
c:\tftp -i 192.168.42.1 put c:\holdmusic.wav
```
7. The above command will send the file **c:\holdmusic.wav** to the IP Office control units LAN1 IP address, in the above example 192.168.42.1. For additional information about the TFTP command, just enter **TFTP**.
  - If a destination needs specifying, the memory card is treated as the IP Office's drive **a:**.
8. Using Manager, click  to receive the IP Office system's configuration again.
9. On the **System** tab of the **System** form, set the **TFTP Server IP Address** to the control unit's own LAN1 IP address.
10. Use  to send the configuration back to the IP Office system and allow it to reboot. The IP Office system will now look on the memory card for any files it needs to download following a reboot.
11. If in future an upgrade or file transfer from the Manager PC is required, the TFTP Server IP Address will first need to be changed back to the Manager PC's IP address.



---

# Glossary

## I

**Integral:** An alternate name for "Embedded".



# Index

- 2**
  - 24-hour
    - uses 6
  - 24-hour 6
  - 2secs 16
- 3**
  - 32MB Smart Media 1, 3
- 4**
  - 40mins 16
  - 46XX 22
  - 46XXupgrade.scr 11
- 5**
  - 512MB 2
  - 512MB Compact Flash 3
  - 512MB Memory 9
  - 512MB Type II
  - Compact Flash 1
- 6**
  - 64MB Compact Flash 1, 3
  - 64XX Series
  - Telephone Users 22
- 8**
  - 898802799mS 16
- 9**
  - 9hrs 16
- A**
  - AA
    - number 28
  - AA 24, 27
  - AA 28
  - AA 31
  - AA 33
  - Access
    - voicemail 35
  - Access 35
  - Access Code 17, 19
  - According
    - IP Office 5
  - According 5
  - Actions
    - Transfer 30
  - Actions 6, 24
  - Actions 30
  - Actions 34
  - Add
    - Custom Short Codes 33
  - Add 21
  - Add 33
  - ADSL 16
  - Advanced 34
  - Afternoon 23, 24
  - ALOG 16
  - And/or
    - System Administrator 3
    - And/or 3
    - And/or 22
    - And/or 36
    - Apply 13
    - Arrange
      - TFTP Log 11
    - Arrange 11
    - Auto Attendant
      - Cascading 31
    - Auto Attendant 2, 3, 6, 23, 24, 27, 28
    - Auto Attendant 31
    - Auto Attendant 33
    - Auto Attendant 35
    - Auto Attendant Configuration 5
    - Auto Attendant DSS Key
      - Create 28
    - Auto Attendant DSS Key 28
    - Auto Attendant Name 6
    - Auto Attendant Overview 23
    - Auto Attendant Remote Access 30
    - Auto Attendant Setup 6
    - Auto Attendant Speed Dial
      - Create 28
    - Auto Attendant Speed Dial 28
    - Auto Attendant Timeout 2
    - AutoAttend 24, 28, 31
    - Avaya
      - Uses 1
    - Avaya 1
    - Avaya 9
    - Avaya 28
    - Avaya 37
    - Avaya 20XX Series
    - Telephone Users 22
    - Avaya 44XX 22
    - Avaya 64MB Small Office Memory 10
  - B**
    - Back
      - IP Office 18, 20, 21, 28, 34, 37
      - Manager PC's IP 37
      - Small Office Edition 24, 30
      - Up 36
      - Up Messages 36
    - Back 18
    - Back 20
    - Back 21
    - Back 24
    - Back 28
    - Back 30
    - Back 34
    - Back 36
    - Back 37
    - BRI 16
    - Button Programming 34
  - C**
    - C 37
    - C/F TII 1, 9
    - Call Recording 3
    - Call Using
      - Transferring 28
    - Call Using 28
    - Caller
      - Routing 23
    - Caller 23
    - Calls
      - Support 24
      - Transferring 28
    - Calls 16
    - Calls 24
    - Calls 28
    - Cancel 13
    - Cascading
      - Auto Attendants 31
    - Cascading 31
    - CD
      - Ivmail 13
      - Type 13
    - CD 13
    - Changing
      - Hunt Group Names 19
      - Prompts 31
      - User Names 17
      - Voicemail Type 11
    - Changing 11
    - Changing 17
    - Changing 19
    - Changing 31
    - Checking
      - Control Unit Type 16
      - Voice Compression Channels 10
    - Checking 10
    - Checking 16
    - Chinese 4
    - Chs 4
    - CkSRC 16
    - Close 11
    - Collect Messages 33
    - Compact Flash 2, 9, 10, 37
    - Complete Transfer 28
    - Compressed Prompts 13
    - Compression Method 3
    - Configuring
      - File Source 37
    - Configuring 37
    - Containing
      - Embedded Voicemail 11
    - Containing 11
    - Control Unit IP Address
      - Enter 16
    - Control Unit IP Address 16
    - Control Unit Type
      - Check 16
    - Control Unit Type 16
    - Copy
      - Ivmail 36
    - Copy 36
    - Create
      - Auto Attendant DSS Key 28
      - Auto Attendant Speed Dial 28
    - Create 28
    - Custom Short Codes
      - Adding 33
    - Custom Short Codes 33
  - D**
    - D 13
    - Dan 4
    - Danish 4
    - Default Short Codes 33
    - Defined 6, 23
    - Depending
      - IP Office 16
    - Depending 16
    - Destination
      - Incoming Call Route 27
      - Normal Transfer 31
    - Destination 24
    - Destination 27
    - Destination 31
    - Destination 35
    - Destination and/or
      - Night Service Destination Incoming Call Route 35
    - Destination and/or
      - Night Service Destination 35

Destination Location 13	Embedded Voicemail User Guide	Following 4	Incoming Calls 27
Deu 4	refer 17, 19	Fra 4	Insert
Dial	Embedded Voicemail User Guide 17	Frc 4	IP Office 3.0
DSS key 28	Embedded Voicemail User Guide 19	French-Canadian 4	Administrator
Dial 28	End Time 6	<b>G</b>	Application 13
Dial 31	Eng	G711 Files 13	Memory Card 10
Digit Mailbox Access Code 2	UK English 13	G723 Files 13	Insert 10
Digital Telephony 34	Eng 4	Gather Setup Information 5	Insert 13
Direct	Eng 13	German 4	Install
Main 24	English-UK 4	Greeting	Memory
Direct 24	English-US 4	Prompts 23	Expansion Card 9, 10
Divert	Enter	Greeting 23	Install 9
voicemail 18, 20	Control Unit IP Address 16	Greetings 36	Install 10
Divert 18	Enter 13	Greyed 24	Installation Overview 5
Divert 20	Enter 16	Group Number 6	Integral
Downgrade	Enter cmd 13, 37	<b>H</b>	set 11
IP Office 13	Enu	H 21	Integral 11
Downgrade 13	US English 13	Hardware Installation 5	Internal ringback 3
DS 22	Enu 4	HMain 21	IP 13, 37
DSS 28, 34	Enu 13	Hold 28	IP 401 2.1 16
DSS button 23	Esm 4	Holdmusic.wav	IP 406 V2 Memory Card 9
DSS key	Esp 4	IP Office 37	IP Office
Dial 28	Ess 4	Holdmusic.wav 37	according 5
Press 28	Evening 23, 24	HoldMusic.wav file	back 18, 20, 21, 28, 34, 37
DSS key 22	Example Auto	Requests 11	Depending 16
DSS key 28	Attendant Setup 24	HoldMusic.wav file 11	downgrade 13
DSS key 31	Existing	Hours 6	following 4
DSS key 34	Small Office	Hunt 18	holdmusic.wav 37
DSS Key Access 22	Edition 1	Hunt Group 20	power 36
DSS Key	Existing 1	Hunt Group Mailbox Access 22	receive 13, 37
Programming 34	<b>F</b>	Hunt Group Mailbox Configuration 5, 20	require 1, 13, 36
DT 22	Fallback Destination transferring 24	Hunt Group	Set 5, 16
DTMF 23	Fallback Destination 2, 6	Mailboxes 6, 19	tells 37
<b>E</b>	Fallback Destination 24	Hunt Group Message Waiting Indication 21	IP Office 1
Eject Hardware 13, 36	Fallback Extension 24	Hunt Group Names Changing 19	IP Office 2
Email 3	Fallback Extension and/or Night Service Destination 27	Hunt Group Names 19	IP Office 3
Embedded Voicemail containing 11	File Source	Hunt Group Queued 3	IP Office 4
Monitoring 16	Configuring 37	<b>I</b>	IP Office 4
Embedded Voicemail 1, 2, 4	File Source 37	le 13	IP Office 5
Embedded Voicemail 11	File Writer IP Address	Incoming Call Route	IP Office 6
Embedded Voicemail 16	set 13, 37	Destination 27	IP Office 9
Embedded Voicemail 17	File Writer IP Address 13	Destination and/or Night Service	IP Office 10
Embedded Voicemail 18	File Writer IP Address 37	Destination 35	IP Office 11
Embedded Voicemail 19	Files	Incoming Call Route 2, 24	IP Office 13
Embedded Voicemail 20	Loading 37	Incoming Call Route 27	IP Office 16
Embedded Voicemail 33	Files 37	Incoming Call Route 35	IP Office 17
Embedded Voicemail Mailbox Features 3	Filters 16	Incoming Call Route's Fallback Extension	IP Office 18
Embedded Voicemail System Comparison 3	Finnish 4	27	IP Office 19
	Folder 13	Incoming Calls Routing 27	IP Office 20
	Following IP Office 4		IP Office 21

- IP Office 3.0
  - prompts 2
  - Upgrading 4
- IP Office 3.0 2
- IP Office 3.0 4
- IP Office 3.0 4
- IP Office 3.0 13
- IP Office 3.0
  - Administrator Application
    - Insert 13
  - IP Office 3.0 Administrator Application 13
  - IP Office 3.0. 4
  - IP Office 406 DS/DT 1
  - IP Office 406 V2 9, 13, 23
  - IP Office 406 V2 Control Unit 1
  - IP Office Administration CD 9, 10
  - IP Office Administrator Applications CD 13
  - IP Office Embedded Voicemail
    - Overview 1
  - IP Office Embedded Voicemail 1
  - IP Office Embedded Voicemail 18
  - IP Office Incoming Call Routes 23
  - IP Office IP401 Control Unit 1
  - IP Office IP406 V2 2
  - IP Office IP406 V2 Control Unit 1
  - IP Office Manager 13
  - IP Office Manager application 1, 9, 10
  - IP Office Monitor 11
  - IP Office Monitor application 10, 13, 16
  - IP Office Phone Manager 3, 19, 21
  - IP Office Small Office Edition 1, 10, 13, 23
  - IP Office Voicemail Lite 18, 20
  - IP Office's LAN1 IP 13
  - IP401 1, 2, 3
  - IP403/406 1
  - IP406 V2
    - voicemail 9
  - IP406 V2 3
  - IP406 V2 9
  - IP406 V2 13
  - IP406 V2 37
- IP406 V2 Installation 9
- IP406 V2 Support 2
- Ita 4
- Italian 4
- IVMSounds
  - sending 11
- IVMSounds 11
- J**
  - Japanese 4
  - Jpn 4
  - Just AA 33
- K**
  - Key
    - Repeat 24
  - Kor 4
  - Korean 4
- L**
  - LAN1 IP 37
  - Languages Supported 4
  - LANM 16
  - LAW 16
  - Line Group 24
  - Loading
    - Files 37
  - Loading 37
  - Locale 2, 4, 11
  - LV 16
  - Lvmail
    - CD 13
    - copy 36
    - open 36
  - Lvmail 13
  - Lvmail 36
  - LVMSound 13
  - LVMSound/G711 Files 13
  - LVMSound/G723 Files 13
- M**
  - Mailbox Access 17, 19
  - Mailbox Help 2
  - Main
    - direct 24
    - set 24
  - Main 21, 22
  - Main 24
  - Main 33
  - Major Features Not Supported 3
  - Manager 11, 18, 24, 30, 34
  - Manager PC 4, 37
  - Manager PC's IP back 37
  - Manager PC's IP 37
  - Maximum Inactivity 6, 24, 27
  - Maximum Individual Message Length 3
  - Maximum Message Length 2
  - Maximum Record Time
    - Set 11
  - Maximum Record Time 6
  - Maximum Record Time 11
  - Maximum Simultaneous Connections 3
  - MDM 16
  - Memory Card
    - Insert 10
  - Memory Card 1
  - Memory Card 10
  - Memory Card Reader 13
  - Memory Expansion Card
    - Install 9, 10
  - Memory Expansion Card 9
  - Memory Expansion Card 10
  - Memory Type 3
  - MENU 22
  - MENU key 22
  - Message Playback Completion 2
  - Message Waiting Indication 17, 19, 22
  - Messages
    - Restoring 36
  - Messages 22
  - Messages 36
  - MG 33
  - MODU 16
  - Monitor application 16
  - Monitor Started IP 16
  - Monitoring
    - Embedded Voicemail 16
  - Monitoring 16
  - Morning 23
  - Msgs 22
  - Multi-Lingual Operation 2
  - My Computer 13
- N**
  - Name
    - Name 28
    - Name 24, 27
    - Name 28
    - Name 31
    - Name 33
    - Name 34
    - Name.x 31, 33
    - New 28, 30
  - Night Service Destination 24
  - Night Service Time Profile 24
  - Nid 4
  - Non-Avaya 37
  - Normal Transfer
    - Destination 31
  - Normal Transfer 6, 23, 24
  - Normal Transfer 31
  - Normal Transfer key 35
  - Norwegian 4
  - Number
    - AA 28
  - Number 28
- O**
  - Off 6
  - OK 11, 13, 16, 18, 20, 21, 24, 28, 30, 34, 37
  - On/off 33, 34
  - Open
    - Ivmail 36
    - System Configuration 11
  - Open 11
  - Open 13
  - Open 36
  - Operator
    - Transfer 6, 23, 24
  - Operator 6
  - Operator 23
  - Operator 24
  - Operator 30
  - Options Prompt 23
  - Overview
    - IP Office Embedded Voicemail 1
  - Overview 1
- P**
  - PC
    - requires 36
  - PC 1, 9, 10, 13
  - PC 36
  - PC 37
  - PCMCIA 1, 3, 10, 13, 36
  - PC's 36
  - PC's CD 13
  - Phone Manager 3, 22, 23, 28
  - Phone Manager Users 22
  - Portuguese 4
  - Portuguese-Brazilian 4
  - Possible Values 6
  - Power
    - IP Office 36
  - Power 36
  - Pre-3.0 13
  - Pre-IP Office 3.0 13

Pressing	Remote Mailbox	Integral 11	Still Queued
DSS key 28	Access 2, 35	IP Office 5, 16	Messages 3
VOICE 22	Repeat	Main 24	Support
Pressing 22	Key 24	Maximum Record	calls 24
Pressing 28	Repeat 24	Time 11	Support 24
PRI 16	Replay Greeting 6,	TFTP Server IP	Supported Features 3
Print 16	23	Address 13, 37	Sve 4
Pro 1, 11	Requests	Voicemail	Swedish 4
Programs 11, 16, 24	HoldMusic.wav file	Reception 17	SysMonitor 4.1 16
Prompt Pre-Load 2	11	Set 5	System 11, 13, 16,
Prompt Short Codes	Requests 11	Set 11	37
31	Require	Set 13	System Administrator
Prompt Source 13	IP Office 1, 13, 36	Set 16	and/or 3
Prompts	PC 36	Set 17	System Administrator
Changing 31	Require 1	Set 24	3
Greeting 23	Require 13	Set 37	System Configuration
IP Office 3.0 2	Require 36	Setup Information 6	open 11
Recording 23	Restoring	Short Code 22, 33,	System Configuration
Upgrading 13	Messages 36	35	5, 9, 10
Prompts 2	Restoring 36	Shortcode 24, 30	System Configuration
Prompts 13	Restoring Messages	Slot 10	11
Prompts 23	36	Slot B 10	System Settings 6
Prompts 31	Ringback 17, 18, 19,	SMALL OFFICE 10	System Short Codes
Prompts 36	33, 34	Small Office Edition	23
Prompts Using	Ringback on/off 3	back 24, 30	<b>T</b>
Upgrading 13	Routing	existing 1	Telephone Number
Prompts Using 13	Caller 23	rear 10	21, 28, 33, 35
Prompts Using TFTP	Incoming Calls 27	receive 24	Tells
File Transfer	Routing 23	voicemail 10	IP Office 37
Upgrading 13	Routing 27	Small Office Edition 1	Tells 37
Prompts Using TFTP	Run	Small Office Edition 3	TFTP 1, 2, 4, 13, 37
File Transfer 13	10days 16	Small Office Edition	TFTP Log
Properties 13	Voicemail Lite 1	10	Arrange 11
Ptb 4	Run 1	13	start 11
Ptg 4	Run 13	Small Office Edition	TFTP Log 11
<b>R</b>	Run 16	24	TFTP Log window 11
Read Only 13	Run 37	Small Office Edition	TFTP Server IP
Rear	Rus 4	30	Address
Small Office	Russian 4	Small Office Edition	set 13, 37
Edition 10	<b>S</b>	37	TFTP Server IP
Rear 10	Sales 24	Small Office	Address 13
Reboot Mode 11	Select File 16	Embedded Voicemail	TFTP Server IP
Receive	Select Immediately	Installation 10	Address 37
IP Office 13, 37	11	Small Office Memory	Time Profile
Small Office	Select Monitor 16	Card 10	use 24
Edition 24	Select New 24	SNMP 2	Time Profile 6, 23
Receive 13	Select Start 16, 24	SNMP Disk Full	Time Profile 24
Receive 24	Select Unit 16	Warning 2	Timeout 2
Receive 37	Select View 11	Source Numbers 3,	TOT 16
Record Greeting 2	Select Yes 13	18, 21	Trace Color 16
Recording	Selecting	Spanish 4	Trace Options 16
Prompts 23	Voicemail 2	Spanish-Argentina 4	Transferring
Recording 23	Selecting 2	Spanish-Mexico 4	Action 30
Refer	Send711.bat	Speed Dials 28	Call Using 28
Embedded	192.168.42.1. 13	Start	Calls 28
Voicemail User	Send723.bat	TFTP Log 11	Fallback
Guide 17, 19	192.168.42.1. 13	Start 11	Destination 24
IP Office	Sending	Start 13	Operator 6, 23, 24
2030/2050 User's	IVMSounds 11	Start 37	Transferring 6
Guide 22	Sending 11	Start IP Office	Transferring 23
Refer 17	Series IP 11	Manager 11, 24	Transferring 24
Refer 19	Set	Start Time 6	Transferring 28
Refer 22	File Writer IP		Transferring 30
Remote Access 22	Address 13, 37		TYP 16

- Type
  - CD 13
- Type 13
- Type G711 Files 13
- Type G723 Files 13
- Type II Compact Flash
  - writing 13
- Type II Compact Flash 9
- Type II Compact Flash 13
- Type send711.bat 13
- Type send723.bat 13
- U**
- UK English
  - ENG 13
- UK English 13
- Uncompressed Prompts 13
- Under Attributes 13
- Up
  - Backing 36
- Up Messages
  - Backing 36
- Up Messages 36
- Upgrading
  - IP Office 3.0 4
  - Prompts 13
  - Prompts Using 13
  - Prompts Using TFTP File
  - Transfer 13
- Upgrading 4
- Upgrading 13
- US English
  - ENU 13
- US English 13
- USB 13, 36
- Use
  - 24-hour 6
  - Avaya 1
  - Time Profile 24
  - VoIP 3
  - Windows Unplug 13, 36
- Use 1
- Use 3
- Use 6
- Use 13
- Use 24
- Use 36
- User 6, 18, 21, 34
- User Mailbox Configuration 5, 18
- User Mailboxes 6, 17
- User Names
  - Changing 17
- User Names 17
- Using DSS Keys 28
- Using Explorer 13
- Using Manager 13, 37
- Using Phone Manager 28
- Using Short Codes 28
- V**
- VC 10
- VC16 3
- VC3 3
- VCM 1
- VCM5 1, 3
- VCOMP 16
- VER 16
- VMAIL 16
- VMCol 34
- VMOOn 34
- VMRB 34
- VOICE
  - pressing 22
- VOICE 22
- Voice Compression Channels
  - Checking 10
- Voice Compression Channels 1
- Voice Compression Channels 10
- Voice Recording 18, 20
- Voicemail
  - access 35
  - divert 18, 20
  - IP406 V2 9
  - selecting 2
  - Small Office Edition 10
  - Voicemail 1
  - Voicemail 2
  - Voicemail 3
  - Voicemail 4
  - Voicemail 5
  - Voicemail 9
  - Voicemail 10
  - Voicemail 11
  - Voicemail 13
  - Voicemail 16
  - Voicemail 18
  - Voicemail 20
  - Voicemail 23
  - Voicemail 24
  - Voicemail 30
  - Voicemail 31
  - Voicemail 33
  - Voicemail 34
  - Voicemail 35
  - Voicemail 36
  - Voicemail 37
  - Voicemail Code 6, 18, 20, 30
  - Voicemail Collect 22, 33, 34, 35
  - Voicemail Email 3
  - Voicemail Lite
    - running 1
  - Voicemail Lite 1
  - Voicemail Lite 11
  - Voicemail Lite 33
  - Voicemail Off key 34
  - Voicemail On 6, 18, 20, 34
  - Voicemail On/Off 3, 17, 19, 33
  - Voicemail On/Voicemail Off 33
  - Voicemail Pro 1, 11, 18, 20, 33
  - Voicemail Reception
    - Setting 17
  - Voicemail Reception 2, 6
  - Voicemail Reception 17
  - Voicemail Reception 18
  - Voicemail Reception Number 2
  - Voicemail Ringback 6, 18
  - Voicemail Ringback Off key 34
  - Voicemail Ringback On 34
  - Voicemail Ringback On/Off 33
  - Voicemail Type
    - Change 11
  - Voicemail Type 11
  - VoIP
    - use 3
  - VoIP 1
  - VoIP 3
- W**
- WAN 16
- WARNING 17, 19, 35
- What's New 2
- When Free 11
- Windows Unplug
  - use 13, 36
- Windows Unplug 13
- Windows Unplug 36
- Within Manager 20, 21
- Within Windows 13, 37
- Writing
  - Type II Compact Flash 13
- Writing 13

Performance figures and data quoted in this document are typical, and must be specifically confirmed in writing by Avaya before they become applicable to any particular order or contract.

The company reserves the right to make alterations or amendments to the detailed specifications at its discretion. The publication of information in this document does not imply freedom from patent or other protective rights of Avaya or others.

Intellectual property related to this product (including trademarks) and registered to Lucent Technologies have been transferred or licensed to Avaya.

All trademarks identified by the ® or ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.

This document contains proprietary information of Avaya and is not to be disclosed or used except in accordance with applicable agreements.

Any comments or suggestions regarding this document should be sent to "wgctechpubs@avaya.com".

© 2005 Avaya Inc. All rights reserved.

Avaya  
Sterling Court  
15 - 21 Mundells  
Welwyn Garden City  
Hertfordshire  
AL7 1LZ  
England

Tel: +44 (0) 1707 392200

Fax: +44 (0) 1707 376933

Web: <http://www.avaya.com>