



Using 9500 Series Phones on Avaya IP Office

Draft

Release 12.1
Issue 13
January 2025

Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer

"Documentation" means information published in varying media which may include product information, subscription or service descriptions, operating instructions and performance specifications that are generally made available to users of products. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of Documentation unless such modifications, additions, or deletions were performed by or on the express behalf of Avaya. End user agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End user.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked websites referenced within this site or Documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on Avaya hardware and software. Please refer to your agreement with Avaya to establish the terms of the limited warranty. In addition, Avaya's standard warranty language as well as information regarding support for this product while under warranty is available to Avaya customers and other parties through the Avaya Support website: <https://support.avaya.com/helpcenter/getGenericDetails?detailId=C20091120112456651010> under the link "Warranty & Product Lifecycle" or such successor site as designated by Avaya. Please note that if the product(s) was purchased from an authorized Avaya channel partner outside of the United States and Canada, the warranty is provided by said Avaya Channel Partner and not by Avaya.

"Hosted Service" means an Avaya hosted service subscription that You acquire from either Avaya or an authorized Avaya Channel Partner (as applicable) and which is described further in Hosted SAS or other service description documentation regarding the applicable hosted service. If You purchase a Hosted Service subscription, the foregoing limited warranty may not apply but You may be entitled to support services in connection with the Hosted Service as described further in your service description documents for the applicable Hosted Service. Contact Avaya or Avaya Channel Partner (as applicable) for more information.

Hosted Service

THE FOLLOWING APPLIES ONLY IF YOU PURCHASE AN AVAYA HOSTED SERVICE SUBSCRIPTION FROM AVAYA OR AN AVAYA CHANNEL PARTNER (AS APPLICABLE). THE TERMS OF USE FOR HOSTED SERVICES ARE AVAILABLE ON THE AVAYA WEBSITE, [HTTPS://SUPPORT.AVAYA.COM/LICENSEINFO](https://support.avaya.com/licenseinfo) UNDER THE LINK "Avaya Terms of Use for Hosted Services" OR SUCH SUCCESSOR SITE AS DESIGNATED BY AVAYA, AND ARE APPLICABLE TO ANYONE WHO ACCESSES OR USES THE HOSTED SERVICE, BY ACCESSING OR USING THE HOSTED SERVICE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE DOING SO (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THE TERMS OF USE. IF YOU ARE ACCEPTING THE TERMS OF USE ON BEHALF A COMPANY OR OTHER LEGAL ENTITY, YOU REPRESENT THAT YOU HAVE THE AUTHORITY TO BIND SUCH ENTITY TO THESE

TERMS OF USE. IF YOU DO NOT HAVE SUCH AUTHORITY, OR IF YOU DO NOT WISH TO ACCEPT THESE TERMS OF USE, YOU MUST NOT ACCESS OR USE THE HOSTED SERVICE OR AUTHORIZE ANYONE TO ACCESS OR USE THE HOSTED SERVICE.

Licenses

The Global Software License Terms ("Software License Terms") are available on the following website <https://www.avaya.com/en/legal-license-terms/> or any successor site as designated by Avaya. These Software License Terms are applicable to anyone who installs, downloads, and/or uses Software and/or Documentation. By installing, downloading or using the Software, or authorizing others to do so, the end user agrees that the Software License Terms create a binding contract between them and Avaya. In case the end user is accepting these Software License Terms on behalf of a company or other legal entity, the end user represents that it has the authority to bind such entity to these Software License Terms.

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, Hosted Service, or hardware provided by Avaya. All content on this site, the documentation, Hosted Service, and the product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Virtualization

The following applies if the product is deployed on a virtual machine. Each product has its own ordering code and license types. Unless otherwise stated, each Instance of a product must be separately licensed and ordered. For example, if the end user customer or Avaya Channel Partner would like to install two Instances of the same type of products, then two products of that type must be ordered.

Third Party Components

The following applies only if the H.264 (AVC) codec is distributed with the product. THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Service Provider

WITH RESPECT TO CODECS, IF THE AVAYA CHANNEL PARTNER IS HOSTING ANY PRODUCTS THAT USE OR EMBED THE H.264 CODEC OR H.265 CODEC, THE AVAYA CHANNEL PARTNER ACKNOWLEDGES AND AGREES THE AVAYA CHANNEL PARTNER IS RESPONSIBLE FOR ANY AND ALL RELATED FEES AND/OR ROYALTIES. THE H.264 (AVC) CODEC IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO: (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION FOR H.264 (AVC) AND H.265 (HEVC) CODECS MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

Compliance with Laws

You acknowledge and agree that it is Your responsibility to comply with any applicable laws and regulations, including, but not limited to laws and regulations related to call recording, data privacy, intellectual property, trade secret, fraud, and music performance rights, in the country or territory where the Avaya product is used.

Preventing Toll Fraud

"Toll Fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Toll Fraud intervention

If You suspect that You are being victimized by Toll Fraud and You need technical assistance or support, please contact your Avaya Sales Representative.

Security Vulnerabilities

Information about Avaya's security support policies can be found in the Security Policies and Support section of <https://support.avaya.com/security>.

Suspected Avaya product security vulnerabilities are handled per the Avaya Product Security Support Flow (<https://support.avaya.com/css/P8/documents/100161515>).

Trademarks

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation, Hosted Service(s), and product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, its licensors, its suppliers, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation, Hosted Service(s) and product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya LLC.

All non-Avaya trademarks are the property of their respective owners.

Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

Downloading Documentation

For the most current versions of Documentation, see the Avaya Support website: <https://support.avaya.com>, or such successor site as designated by Avaya.

Contact Avaya Support

See the Avaya Support website: <https://support.avaya.com> for Product or Cloud Service notices and articles, or to report a problem with your Avaya Product or Cloud Service. For a list of support telephone numbers and contact addresses, go to the Avaya Support website: <https://support.avaya.com> (or such successor site as designated by Avaya), scroll to the bottom of the page, and select Contact Avaya Support.

Contents

Part 1: Your Phone	11
Chapter 1: Phone Overview	12
Important Safety Information	12
The Phone Stand	13
Chapter 2: Phone Keys and Display	14
Phone Keys	14
Call Soft Keys	15
Programmable Feature Buttons	16
Chapter 3: Status Display	18
Status Icons	18
Status Letters	18
Chapter 4: Appearance Buttons	20
Call Appearance Buttons	21
Bridged Appearance Buttons	21
Call Coverage Buttons	22
Line Appearance Buttons	22
Part 2: Making and Answering Calls	24
Chapter 5: Making Calls	25
Making a Call	25
Making Additional Calls	26
Calling from Your Contacts	26
Calling from the Call Log	27
Redialling a Previous Number	28
Redialling in List Mode	28
Redialling in Last Number Mode	28
Making a Page Call	29
Busy Indication	29
En-Bloc Dialing	30
Dialing a Number in En-Bloc Mode	30
Enabling/Disabling En-Bloc Dialing	30
Withholding Your Number	31
Adjusting the Call Volume	31
Muting a Call	32
Ending Calls	32
Chapter 6: Answering Calls	33
Caller Display	33
Answering a New Call	34
Answering Another Call	35

Diverting a Call to Voicemail.....	36
Silence (Ignore) an Alerting Call.....	36
Dropping an Incoming Call.....	36
Page Calls.....	37
Displaying Other Calls.....	37
Using Call Pickup.....	38
Call Pickup Short Codes.....	38
Chapter 7: Redialling	40
Redialling in List Mode.....	40
Redialling in Last Number Mode.....	41
Selecting Your Redial Mode.....	41
Chapter 8: Transferring Calls	42
Transferring a Call to Voicemail.....	43
Transferring a Held Call.....	43
Transferring a Call to Your Mobile.....	44
Chapter 9: Holding Calls	45
Holding Conference Calls.....	46
Holding a Call.....	46
Taking a Call Off Hold.....	46
Switching Between Calls.....	47
Transferring a Held Call.....	47
Chapter 10: Parking Calls	49
Parking Short Codes.....	49
Parking Calls (<i>Features Menu</i>).....	50
Unparking Calls Using the Status Menu.....	50
Park & Page.....	51
Chapter 11: Conferencing	53
Starting a Conference.....	53
Turning a Normal Call Into a Conference.....	54
Adding Another Party Using Hold.....	54
Adding Another Party Without Using Hold.....	55
Viewing Conference Details.....	55
Dropping/Muting Parties.....	56
Holding a Conference Call.....	56
Exiting a Conference.....	56
Context Sensitive Conferencing.....	57
Conference Short Codes.....	58
Part 3: Redirecting Your Calls	60
Call Redirection Options.....	60
Chapter 12: Forwarding Calls	62
Forward Unconditional (<i>Status Menu</i>).....	63
Forward Unconditional (<i>Features Menu</i>).....	64

Forward on Busy/No Answer (<i>Features Menu</i>).....	64
Forward on No Answer (<i>Status Menu</i>).....	65
Forward on Busy (<i>Status Menu</i>).....	66
Call Forwarding Short Codes.....	67
Chapter 13: Do Not Disturb	68
DND On/Off (<i>Features Menu</i>).....	68
DND Off (<i>Status Menu</i>).....	69
Do Not Disturb Exceptions.....	69
Do Not Disturb Short Codes.....	70
Chapter 14: Follow Me	71
Follow Me To (<i>Features Menu</i>).....	71
Follow Me (<i>Status Menu</i>).....	72
Follow Me Here (<i>Features Menu</i>).....	72
Follow Me Here (<i>Status Menu</i>).....	73
Follow Me Short Codes.....	73
Chapter 15: Twinning	75
Switching Mobile Twinning On.....	76
Changing Your Twinning Number.....	76
Transferring a Call to Your Mobile.....	77
Reclaiming a Twinned Call.....	77
Switching Mobile Twinning Off.....	77
Part 4: Contacts and Call Log	79
Chapter 16: Contacts	80
How the Directory Search Works.....	81
Managing External Contacts.....	84
Viewing Contacts.....	84
Making a Call from the Directory.....	85
Using the Directory for Other Functions.....	86
Adding a New Contact.....	86
Adding a Contact from Your Call Log.....	87
Editing a Contact.....	88
Deleting a Contact.....	89
Chapter 17: Using the Call Log	90
Missed Calls.....	90
Missed Group Calls.....	91
Accessing Your Call Log.....	91
Making a Call from Your Call Log.....	92
Viewing Call Details.....	92
Deleting a Call from Your Call Log.....	93
Deleting the Whole Call Log.....	94
Adding a Call Log Call to Your Contacts.....	94
Part 5: Voicemail	96

Chapter 18: Voicemail	97
Message Waiting Indication	97
Accessing the Visual Voice Menus	98
Checking Messages Using Visual Voice	98
Leaving a Message	99
Using Voicemail Email	100
Recording Your Mailbox Greeting	100
Record Your Name	101
Changing Your Voicemail Code	102
Switching Voicemail On/Off	102
Transferring a Call to Voicemail	103
Sending an Incoming Call to Your Mailbox	103
Voicemail Short Codes	103
Other Mailbox Guides	104
Part 6: Other Features	105
Chapter 19: Account Codes	106
Forced Account Codes	106
Manual Account Code Entry	107
Chapter 20: Headset Operation	108
Using a Headset	108
Headset Caller Volume	109
Automatic Gain Control	109
Default Handsfree Audio Path	109
Chapter 21: Handsfree Speaker Operation	111
Using Handsfree	111
Speaker Volume	112
Default Audio Path	112
Automatic Gain Control	113
Chapter 22: Logging In/Out	114
Logging In	115
Logging In on Another User's Phone	115
Logging In on a "Not Logged In" Phone	116
Logging In on an Unregistered Phone	116
Logging Out	116
Changing Your Security PIN	117
Locking Your Phone	118
Unlocking Your Phone	118
Auto Lock	119
Login Short Codes	119
Chapter 23: Groups	121
Group Membership	121
Switching Your Group Membership On/Off (Status Menu)	122

Switching Your Group Membership On/Off (<i>Features Menu</i>).....	122
Group Service Status and Fallback.....	123
Changing a Group's Service Status (<i>Features Menu</i>).....	123
Changing a Group's Service Status (<i>Status Menu</i>).....	124
Changing a Group's Fallback Destination.....	125
Short Codes.....	125
Part 7: Phone Configuration	127
Chapter 24: Ringer Controls	128
Disabling the Ringer.....	128
Visual Alerting.....	128
Coverage Ring.....	129
Ringer Volume.....	129
Internal Auto-Answer.....	130
Chapter 25: Display Controls	131
Display Brightness.....	131
Display Contrast.....	132
Single/Dual Column Display.....	132
Last Call Duration Display.....	133
Call Timer Display.....	133
Display Language.....	134
Auto Display Waiting Call.....	134
Inactivity Timer (Auto-Return).....	135
Chapter 26: Volume and Sound	136
Button Clicks.....	136
Error Tones.....	137
Ringer Volume.....	137
Handset Volume.....	137
Headset Volume.....	138
Speaker Volume.....	138
Automatic Gain Control.....	138
Default Handsfree Audio Path.....	139
Chapter 27: Programmable Feature Buttons	140
Editing Your Programmable Buttons.....	140
Programmable Button Features.....	141
Abbreviated Dial Button.....	142
Absence Text Button.....	142
Account Code Button.....	142
Auto Answer Button.....	142
Call Forward All Button.....	143
Call Park Button.....	143
Call Park to Other Button.....	143
Call Pickup Button.....	143

Call Pickup Any Button.....	144
Conf Meet Me Button.....	144
Drop Button.....	144
Flash Hook Button.....	144
Group Button.....	144
Page Button.....	144
Park and Page Button.....	145
Ringer Off Button.....	145
Self-Administer Button.....	145
Send All Calls Button.....	145
Suppress Digits Button.....	145
Timer.....	146
Twinning Button.....	146
User Button.....	146
Part 8: Miscellaneous.....	148
Chapter 28: Short Codes.....	149
Chapter 29: System Administration.....	152
Checking the System Information.....	152
Checking the Time Server Status.....	153
Setting the Date.....	153
Setting the Time.....	154
Setting the Time Offset.....	155
Restarting the System.....	155
Managing the Memory Cards.....	156
Reporting System Alarms.....	158
Chapter 30: The Status Menu.....	159
Do Not Disturb.....	159
Follow Me To.....	160
Follow Me Here.....	160
Forward on Busy.....	160
Forward on No Answer.....	161
Forward Unconditional.....	162
Forwarded Here.....	162
Group Membership.....	163
Group Status.....	163
Switch Mobile Twinning Off.....	164
Parked Calls.....	164
System Alarms.....	165
Chapter 31: Menus.....	166
Status Menu.....	166
Features Menu.....	166
A Menu.....	167

Menu Access Control.....	167
Chapter 32: Entering Text Characters.....	169
Entering Characters for a Directory Search.....	169
Entering Additional and Accented Characters.....	169
Entering Characters for Other Functions.....	170
Part 9: Further Help.....	171
Chapter 33: Additional Help and Documentation.....	172
Forgotten Password.....	172
Getting Help.....	172
Additional Documentation.....	173

Draft

Part 1: Your Phone

Draft

Chapter 1: Phone Overview

This guide covers using 9500 Series telephones on an Avaya IP Office telephone system.

The 9504 and 9508 phones are supported on IP Office systems only. They are physically and functionally the same as their 9400 Series equivalents but are not supported on other Avaya telephone systems.

If this is not the correct guide that you need, see [Additional Documentation](#) on page 173.

Related links

[Important Safety Information](#) on page 12

[The Phone Stand](#) on page 13

Important Safety Information

Warning:

- This handset may pick up small metal objects such as metal pins or staples.
- During a power surge, EFT (Electronically Fast Transients), or ESD (Electrostatic Discharge), calls may be dropped. After a power surge, EFT or ESD, it is normal for the phone to restart.
- Using a cell phone, mobile phone, GSM phone or two-way radio in close proximity to an Avaya telephone might cause interference.
- The phone should not be connected directly to the outdoor telecommunication network.

Related links

[Phone Overview](#) on page 12

The Phone Stand

The phones all include a stand that clips to the base of the phone. The stand allows the phone to be used in either of two different angles.

- When changing the position of the stand, be sure to check that the stand has locked into the chosen position.
- When used in the upright position, a plastic peg in the earpiece rest area for the handset can be reversed to more securely anchor the handset when not in use.

Related links

[Phone Overview](#) on page 12

Draft

Chapter 2: Phone Keys and Display

This section gives an overview of the keys and controls you will find on your phone.

Related links

[Phone Keys](#) on page 14

[Call Soft Keys](#) on page 15

[Programmable Feature Buttons](#) on page 16

Phone Keys

The following keys may be found on the phone (the keys can vary depending on the particular model of phone):




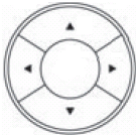










Key	Description
Appearance or Feature  or 	These keys have two roles: <ul style="list-style-type: none">• Appearance Buttons – These buttons are used to make and receive calls. Each button represents a separate call. For example, the currently connected call to which you are talking, a held call and a new incoming call that is waiting to be answered. See Appearance Buttons on page 20.• Feature Buttons – Any other keys can be used for programmable feature buttons. The label next to the button indicates its function. You can reprogram some buttons, see Programmable Feature Buttons on page 140.
Soft Keys 	The keys below the display have variable functions. When the key is active, its function is indicated by the text label that appears above it. See Call Soft Keys on page 15.
Cursor Keys 	This dial acts as a set of cursor key: <ul style="list-style-type: none">• You can use the up and down cursor keys to scroll through lists.• You can also use the left and right cursor keys to enter and exit different levels of the menu. Menu option that accesses a sub-menu is indicated by the ... dots (ellipsis) after its name or a > symbol.• When changing settings, the left and right cursor keys can sometimes be used to scroll through possible settings.

Table continues...

Key	Description
OK Button 	This button, in the center of the cursor keys has multiple functions: <ul style="list-style-type: none"> When the phone is idle, it can acts the same as going off-hook to dial. When on a call or in a menu, pressing it matches the function offered by the left-most soft key below the screen.
MESSAGE 	This key is used to access your voicemail system. By default this uses a series of menus on your phone's display. See Voicemail on page 97.
PHONE 	This key is used to exit any menu you are in and return to the phone's normal button display. During a call it can also be used to toggle the options displayed on the appearance menu.
MAIN MENU 	This key is used to access a menu for phone settings and information. These are settings stored by the phone itself rather than the telephone system.
CONTACTS 	This key is used to display the various directories (personal and shared) of names and telephone numbers to which you have access. See Contacts on page 80.
CALL LOG 	This key displays a record of your most recent calls (answered, missed, and outgoing). The button is illuminated when you have new missed calls. See Using the Call Log on page 90.
VOLUME 	Press + plus or – minus ends of the key to adjust the volume. When the phone is idle, the button adjusts the ringer volume. When on a call, the button adjusts the caller volume on the handset, headset or speaker depending on which is being used at the time.
HEADSET 	This key is used to answer and end calls using a headset connected to the phone's headset socket. The button is lit when you are connected to a call using the headset.
MUTE 	This key can be used to mute your speech to the currently connected call. The button is lit while mute is active.
SPEAKER 	This key is used to answer and end calls using the phone's handsfree speaker and microphone. The button is lit when you are connected to a call handsfree.

Related links

[Phone Keys and Display](#) on page 14

Call Soft Keys

The functions performed by the buttons just below the display change dynamically. Each buttons current function is shown by the label above it on the display.

- The soft keys relate to the currently highlighted appearance button.
- You can use the up and down cursor keys to change which appearance button is currently highlighted without interrupting the connected call. This allows you to access the soft key options for calls other than the connected call.

The following are some of the common soft key options. Note that some soft key options are only be available if enabled by your system administrator.

Label	Function
Account	Enter an account code to associate with the call.
Answer	Answer a page call, turning it into a normal call.
CallBack	Set an automatic callback on the user that you have called but who has not answered. When they next end a call, the telephone system will call you and when answered, will automatically make a call to the user.
Complete	Complete the transfer of a held call. A Cancel option is also shown which will end the transfer attempt.
Conf	Put your current call on hold and present dial tone for you to dial the number you want to add to a conference with the held caller.
Connect	Take a call off hold.
Dir	Access the directory in order to select a number by name rather than dialing it. The type of names available in the directory is adjusted to match those suitable for use by the feature.
Drop	If you are connected to the call, this option ends the call. If the call is a personal call alerting, this option sends the call to your forward on busy number if set or else to your voicemail if enabled. If it is a hunt group call that is alerting, this option sends the call to the next member of the group.
Ignore	Silence the ringer for the current alerting call. The call will continue alerting until either answered, it goes to voicemail, or the caller abandons the call.
Pickup	Answer the call that is held or alerting another user.
Redial	If there are outgoing numbers in your call log, display the list of those numbers.
Transfer	Put your current call on hold and present dial tone for you to dial the number to which you want to transfer the call.
ToVM	Send an alerting call to your voicemail.

Related links

[Phone Keys and Display](#) on page 14

Programmable Feature Buttons

Those programmable buttons not assigned as appearance buttons by your administrator can be used for a range of other features. Those other features can be programmed by you or by your system administrator.

- Your administrator can restrict which buttons you can change.
- This guide covers only those features that assignable through the phone menus. Your administrator has access to a larger range of button functions.

- The use of the button lamps depends on the feature assigned to the button.
- Buttons programmed with a feature not supported by the phone, display **Invalid**.

For more details, see [Programmable Feature Buttons](#) on page 140.

Related links

[Phone Keys and Display](#) on page 14

Draft

Chapter 3: Status Display

The top lines of the phone display shows information about you and your phone. For example:

- The top line shows the date and time plus various status icons.
- The next line shows information about the call/feature on the currently selected (outlined in white) button or your own extension/name if the button idle/unprogrammed. It can also display various status letter on the right-hand side.

Related links

[Status Icons](#) on page 18

[Status Letters](#) on page 18

Status Icons

Status Icons

The top lines of the display can include the following icons:


- **Muted** – This icon indicates that the your connection to the current call is muted. You can hear the caller but they cannot hear you.
- **Ringer Off** – This icon indicates that your phone has its ringer turned off. See [Ringer Off Button](#) on page 145.
- **Missed Calls** – This icon indicates that you have had missed calls. The number next to the icon indicates the number of different callers. Pressing the button opens your call log at the missed calls display. See [Missed Calls](#) on page 90.

Related links

[Status Display](#) on page 18

Status Letters

The top lines of the display can include the following status letters. These letter may appear as a group of letters, for example **OG** or **NG**.

Letter	Description
B	<i>Barred</i> The system administrator has prohibited you from making external calls. You can only make internal calls.
D	<i>Diverting (Forwarding) Call</i> You have forward unconditional enabled. See Forwarding Calls on page 62. <ul style="list-style-type: none"> • 9621 and 9641 phones displays a  icon instead when you have either forward unconditional or do not disturb enabled.
G	<i>In Group</i> You have been configured as a member of a hunt group and your membership of the group is enabled. This means you may receive calls targeted to the hunt group. See Group Membership on page 121.
N	<i>Do Not Disturb</i> You have do not disturb enabled. See Do Not Disturb on page 68.
O	<i>Out of Service</i> A group of which you are a member is in night service mode. Calls to the group are diverted to its fallback if set or otherwise to voicemail if available. See Group Service Status and Fallback on page 123
S	<i>System Alarm</i> If you are configured as a system administrator, this indicates a system alarm. See Reporting System Alarms on page 158.
T	<i>Twinned</i> Your phone is internally twinned with another extension. Calls to you alert on both phones and can be answered at either. See Twining Button on page 146.
!	<i>Cannot Retrieve Settings</i> This indicates that the phone was not able to retrieve all your user settings. If this happens, it may limit some telephone functions. Contact your system administrator.

Related links

[Status Display](#) on page 18

Chapter 4: Appearance Buttons

Appearance buttons are used to represent calls made and received by you and other users on the telephone system. They are configured by your system administrator.

Normally, your first three buttons are call appearance buttons, but your administrator can configure additional appearance buttons for you if required.

Those buttons not programmed as appearance buttons can be programmed as feature buttons. See [Programmable Feature Buttons](#) on page 140.

There are several different types of appearance button:

- **Call Appearance Buttons** – These buttons are used to make and answer general calls.
- **Bridged Appearance Buttons** – This type of button mirrors another user's call appearance buttons and allows you to make and answer calls for a colleague.
- **Call Coverage Buttons** – Be alerted when a colleague has unanswered calls and answer those calls.
- **Line Appearance Buttons** – Make and answer external calls on a particular telephone line.

Which appearance button is currently selected and gets used when you go off-hook, for example by lifting the handset, is controlled by two system settings which are normally on by default. Those settings are:

- **Idle Line Preference** – Idle line preference automatically selects the first available call appearance or line appearance button as your currently selected button when you do not have a call connected. This means it will be the appearance button used when you go off hook. If this was not the case, you would need to select an appearance button before going off hook to make a call.
- **Ringing Line Preference** – If not connected to a call, when you receive an incoming call, ringing line preference automatically makes the alerting appearance button your selected appearance button. This means that you can answer the call by simply lifting the handset or pressing the **Headset** or **Speaker** button. Without ringing line preference, to answer the call on the alerting appearance button you must first press that appearance button to select it.

Related links

[Call Appearance Buttons](#) on page 21

[Bridged Appearance Buttons](#) on page 21

[Call Coverage Buttons](#) on page 22

[Line Appearance Buttons](#) on page 22

Call Appearance Buttons

Call appearance buttons are used to display calls to and from your phone. By having several call appearance buttons, you are able to answer and make several calls, switch between calls, and perform other actions.

When all your call appearance buttons are in use, any further calls to your number follow your 'forward on busy' setting, if set. Otherwise, calls go to voicemail (if available).

By default **a=**, **b=** and so on is displayed. This can be replaced by another label if required.

When the user is not connected to a call, the button indicated as selected is the button that will be used if the user goes off hook without pressing an appearance button. When a user is connected to a call, that call is the selected button.

Red	Green	Name	Description
Off	Off	Idle	The call appearance is not in use and is not currently selected.
On	Off	Idle+Selected	As above but this is the current selected button that will be used if you go off hook.
Off	Flash	Alerting	Alerting for an incoming call, accompanied by ringing. If already on a call, only a single ring is given.
On	Flash	Alerting+Selected	As above but this is the current selected button that answered if you go off hook..
On	On	In Use Here	You have a currently connected call or are dialing.
Off	On	In Use Elsewhere	The call appearance button is in use on a bridged appearance.
Off	Fast Flash	On Hold Here	You have put a call on hold.
Fast Flash	Fast Flash	On Hold Pending Transfer	
Off	Intermittent Flash	On Hold Elsewhere	A call on a bridged appearance button matched to the call appearance has been put on hold.
Off	Broken Flash	Invalid	The button is not programmed for any function.

Related links

[Appearance Buttons](#) on page 20

Bridged Appearance Buttons

A bridged appearance button shows the state of one of another user's call appearance buttons. It can be used to answer or join calls on that other user's call appearance button.

It can also be used to make a call that the call appearance user can then join or retrieve from hold.

- When the user's call appearance button alerts, your matching bridged appearance button also alerts. The bridged appearance button can be used to answer the call on the call appearance button user's behalf.
- When the call appearance button user answers or makes a call using that call appearance, your matching bridged appearance button shows the status of that call, for example connected, on hold, etc. The bridged appearance button can be used to retrieve the call if on hold or to join the call if active.
- Bridged appearance buttons are not supported between users on different systems in a network.

Related links

[Appearance Buttons](#) on page 20

Call Coverage Buttons

Each call coverage button is associated with another user on your telephone system. The button allows you to be alerted when that user has an unanswered call still ringing.

You can view the details of the call and answer it if required.

The settings of the user being covered control how long it rings at their phone before it also starts alerting on your call coverage button for that user.

Call coverage appearance buttons are not supported between users on different systems in a network.

Related links

[Appearance Buttons](#) on page 20

Line Appearance Buttons

Line appearance buttons allow you to make and receive calls on a specific telephone line connected to your telephone system. The button also allows you to see when the line is in use by other users.

For incoming calls, the telephone system still determines the destination for the call. That may be a user or group. However, if you have a line appearance button for the line, you will see that there is a call alerting and can answer it if required.

- **Private Lines** – Special behavior is applied to calls when you are the system's default destination for a line for which you have a line appearance button. In that case, incoming calls on that line will alert only on the Line Appearance button and not on any other buttons. These calls will also not follow any forwarding.

Related links

[Appearance Buttons](#) on page 20

Draft

Part 2: Making and Answering Calls

Draft

Chapter 5: Making Calls

The phone provides a number of ways to make calls.

At its simplest, just dial the number required. When answered, continue handsfree or lift the handset if required.

Related links

- [Making a Call](#) on page 25
- [Making Additional Calls](#) on page 26
- [Calling from Your Contacts](#) on page 26
- [Calling from the Call Log](#) on page 27
- [Redialling a Previous Number](#) on page 28
- [Making a Page Call](#) on page 29
- [Busy Indication](#) on page 29
- [En-Bloc Dialing](#) on page 30
- [Withholding Your Number](#) on page 31
- [Adjusting the Call Volume](#) on page 31
- [Muting a Call](#) on page 32
- [Ending Calls](#) on page 32

Making a Call

If you are not already on a call, then you can just dial the number. You can do this without lifting the handset.

Procedure

With no connected call, start dialing:

- The first available appearance button is automatically selected for the call.
- If you started dialing without lifting the handset, the call uses either the phone's speaker or headset depending on the phone's default handsfree audio setting. To switch to the handset, just lift the handset.
- If you started dialing by lifting the handset, you will hear dial tone. If you have do not disturb or forward all calls enabled, the continuous dial tone is replaced with broken or interrupted dial tone (dial tone with pauses) as a reminder that your phone is set to not receive calls.

- If the number you dial matches a user or group on the telephone system, the directory name is shown and the call starts altering them. Otherwise, as soon as there are enough digits, the phone is connected to an external telephone line.
- If the call is to an internal user, and they do not answer, you can set a callback by pressing **CallBack** and then ending the call by pressing **Drop**. When a callback is set, the next time that user uses their phone or when they end their current call, the system will call you and when you answer, automatically make another call to the user.

Related links

[Making Calls](#) on page 25

Making Additional Calls

If you are already on a call, you can still make and answer other calls.

Procedure

1. Either:
 - Simply press any idle call appearance key. For example, **b=**.
 - Press **Hold**.
2. The existing call is automatically put on hold, shown by a fast flashing green lamp.
3. Make the additional call as normal.
4. Once the additional call is connected:
 - You can press the appearance buttons to switch between calls.
 - Press **Conf** to conference the calls together.

Related links


[Making Calls](#) on page 25


Calling from Your Contacts

You can use any directory contact to make a call.

- You can also use the directory to select a contact anytime the **Dir** soft key is displayed in the function's menus. In that case, the system automatically only shows the types of contacts supported for the function.

Procedure

1. Access the contacts directory:
 - a. Press the  **CONTACTS** key. The directory menu is displayed.

- b. Use the left and right cursor keys to select the type of directory entries shown.
 - **All** - All directory entries.
 - **Personal** - Your own personal directory entries.
 - **External** - Directory entries stored by the telephone system for all users to use.
 - **Users** - The names and numbers of other users on the telephone system.
 - **Groups** - The names and numbers of hunt groups on the telephone system.
 - a. Use the up and down cursor keys to scroll through the list. Alternatively, you can start dialing the name you want to display only matching entries as follows:
 - Pressing a key enters all of the characters represented by that key. Pressing another key adds the characters from that button to the previous key press.
 - For example, dialing **527** matches all names starting with **JAS** (for example "Jason") and with **KAR** (for example "Karl") plus any other letter combinations from those 3 key presses. See [How the Directory Search Works](#) on page 81.
 - To remove all the characters entered so far, press **Clear**.
 - b. To view more details of the highlighted name, press **Details**. To return to the directory press **List**.
2. When the required entry is highlighted, press **Call** or press the  button next to the name.


Related links

[Making Calls](#) on page 25

Calling from the Call Log

You can use your call log to make calls.

Procedure

1. Access your call log:
 - a. Press the  **CALL LOG** button.
 - If you have any new missed calls, the button is illuminated and opening the call log shows missed calls.
 - b. Use the left/right cursor keys to select the type of records shown: **All**, **Outgoing**, **Incoming** and **Missed**.
 - c. Use the up/down cursor keys to scroll through the records.
2. Press **Call** to call the number displayed in the call record. This option is not available if the caller withheld their number.

Related links

[Making Calls](#) on page 25

Redialling a Previous Number

When **Redial** is displayed it can be used to make a call to a previously used number.

Redial can work in one of two ways, set by your choice of redial mode see [Selecting Your Redial Mode](#) on page 41.

Related links

[Making Calls](#) on page 25

[Redialling in List Mode](#) on page 28

[Redialling in Last Number Mode](#) on page 28

Redialling in List Mode

This redial method is used when your phone's redial mode is set to **Open Call Log**. See [Selecting Your Redial Mode](#) on page 41.

Procedure

1. Access the redial list:
 - a. Press **Redial**. The list of outgoing calls is displayed.
 - b. Use the up and down cursor keys to scroll through the 10 most recent outgoing calls.
2. Press **Call** to call the number displayed in the call record.
3. Continue in the same way as for a normal dialed call.

Related links

[Redialling a Previous Number](#) on page 28

[Redialling](#) on page 40

Redialling in Last Number Mode

This redial method is used when your phone's redial mode is set to **Last Dialed**. See [Selecting Your Redial Mode](#) on page 41.

Procedure

1. Press **Redial**.
2. The number for the most recent outgoing call in your personal call log is redialed.
3. Continue in the same way as for a normal dialed call.

Related links

[Redialling a Previous Number](#) on page 28

[Redialling](#) on page 40

Making a Page Call

In order to make page calls you must have access to a paging short code provided by the system administrator or a **Page** feature button.

You can use the self-administration function to assign one of your phone's feature buttons as a **Page** button. See [Programmable Feature Buttons](#) on page 140.

- If the short code or the paging button have been pre-configured with an extension number, the user or group at that number is paged if available.
- If the short code of paging button does not have a pre-configured extension number, it allows extension number entry when used.

Procedure

1. Press the paging button.
2. Dial the number of the user or group you want to page.
3. When the dialing is completed, the page call is made.

Related links

[Making Calls](#) on page 25

Busy Indication

By default, when making internal calls, the telephone system does not provide any indication if the internal user you call is available, already on a call or set to do not disturb. Instead the call either just rings or goes to voicemail.

However, there are various methods by which you can get some indication of their status:

- If you need status indication for a user without needing to make a call, you can add a 'user ' button to your phone. See [Programmable Feature Buttons](#) on page 140
- Other users can configure an absence message. If they have done that, the message is displayed on your phone when you call them. To set your own absence message, you can use a programmable set to the **Absence Text** button. See [Programmable Feature Buttons](#) on page 140.
- Your system administrator can enable busy indication for selected users or for the whole system. When enabled, calling those users displays **Do Not Disturb** or **On Another Call** on your phone if the call is not diverted to voicemail.

Related links

[Making Calls](#) on page 25

En-Bloc Dialing

Through the phone's menus you can select whether you want to use traditional or en-bloc dialing when making calls. Your chosen setting is then applied whenever you use a phone that supports en-bloc dialing.

- En-bloc dialing allows you to compose and edit the number to dial on your phone's display before it is sent to the phone system to be dialed.
- With traditional dialing, when you start dialing a number on your phone, the phone immediately connects to the telephone system and starts passing the digits you dial to the phone system. You cannot correct the digits you have already dialed except by ending the call and starting over.

Related links

[Making Calls](#) on page 25

[Dialing a Number in En-Bloc Mode](#) on page 30

[Enabling/Disabling En-Bloc Dialing](#) on page 30

Dialing a Number in En-Bloc Mode

Procedure

1. With no connected call, start dialing. Do not lift the handset or select the headset, speaker or an appearance button before dialing:
 - You can use the left cursor key or the **Bksp** key to delete the previous digit dialed.
 - Press **Clear** to erase the whole number dialed so far.
2. When you have completed the number, you can select how you want to make the call:
 - Lift the handset to make a call using the handset.
 - Press the **Call** soft key or **OK** button to start the call using the phone's default handsfree audio path (speaker or headset). You can also press one of your idle call appearance buttons to make the call using that appearance.
 - Press the **HEADSET** button to start the call on a headset connected to your phone.
 - Press the **SPEAKER** button to start the call on your phone's handsfree speaker.

Related links

[En-Bloc Dialing](#) on page 30

Enabling/Disabling En-Bloc Dialing

You can enable or disable your en-bloc dialing setting through the phone's **Features** menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the **PHONE** key and then press **Features**.

2. Use cursor keys to select **Call Settings**.
3. Use the up and down cursor keys to highlight **Enbloc Dial**.
4. Change the setting as required.
5. Press **Save**.

Related links

[En-Bloc Dialing](#) on page 30

Withholding Your Number


You can select to withhold your number on external calls.

- Your IP Office system administrator controls whether you can access this menu.

Note:

- Use of this option depends on the external line provider. In some cases, attempting to use this feature can cause calls to fail. If this occurs, the feature should be switched off.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use cursor keys to select **Call Settings**.
3. Use the up and down cursor keys to highlight **Withhold Number**.
4. Change the setting as required.
5. Press **Save**.

Related links

[Making Calls](#) on page 25

Adjusting the Call Volume

Whilst talking, you can adjust the volume of the incoming call. The volume is adjusted separately for whichever device is in use (handset, headset or speaker).

Procedure

1. With the call connected, use the **+** plus and **-** minus keys to adjust the volume.
2. The display returns to normal after a few seconds.

Related links

[Making Calls](#) on page 25

Muting a Call

Muting a call stops the caller from hearing you, however you can still hear them.

- Calls remain muted even if you switch between calls.
- The phone's mute control and indication, and those in an application such as Avaya one-X Portal controlling your calls, are separate. Use one or the other to mute calls. Using both will cause confusion.

Procedure

1. To activate mute, press the **MUTE** key. The button is lit whilst the call is muted.
2. To switch mute off, press the **MUTE** key again.

Related links

[Making Calls](#) on page 25

Ending Calls

Procedure

There are multiple methods that can be used to a call. Either:

- To end the call currently highlighted on the display, press **Drop**.
- To end the call connected on the phone's handset, replacing the handset ends the call.
- To end the call connected on the phone's speaker, press the **SPEAKER** key.
- To end the call connected on the phone's headset, press the **HEADSET** key.

Related links

[Making Calls](#) on page 25

Chapter 6: Answering Calls

Your phone lets you handle multiple calls at the same time. Whilst you can only have one call connected (talking) at any moment, you can have other calls waiting to be answered and further calls on hold.

Each call appears on one of the phone's appearance buttons, see [Appearance Buttons](#) on page 20. The system doesn't treat you as busy to further calls until all your available call appearance buttons are in use.

Related links

- [Caller Display](#) on page 33
- [Answering a New Call](#) on page 34
- [Answering Another Call](#) on page 35
- [Diverting a Call to Voicemail](#) on page 36
- [Silence \(Ignore\) an Alerting Call](#) on page 36
- [Dropping an Incoming Call](#) on page 36
- [Page Calls](#) on page 37
- [Displaying Other Calls](#) on page 37
- [Using Call Pickup](#) on page 38
- [Call Pickup Short Codes](#) on page 38

Caller Display

For incoming calls, in addition to the audible ring and ringer light, the phone displays information about the caller.

Name Matching

Where possible, the IP Office system displays a name rather than a caller's number.

- For internal callers, all users and groups have names in the IP Office system configuration.
- For external callers, it tries to match the caller's number to names in the systems directory. It can also match the number to a name in your personal directory. A personal directory match overrides any system directory match.

Caller Display Text

In the table below, Caller represents the name or number of the caller.

Call Type	Phone Display
Direct Call A call that has been routed directly to you.	<i>Caller</i> For example: <i>0123456789</i> or <i>Example</i> .
Forwarded Call A call that has been forwarded from another user's to you.	<i>Caller>Original Target</i> For example: <i>0123456789>Extn201</i> or <i>Example>Extn201</i> .
Group Call A call to a group of which you are a member.	<i>Caller>Group Name</i> For example: <i>0123456789>Main</i> or <i>Example>Main</i> .
Transferred Call A call to another user which they are now transferring to you.	<i>Caller[Transferer]</i> For example: <i>0123456789[Extn201]</i> or <i>Example[Extn201]</i> .
Returning Call A call that you answered and then left parked or on hold for too long.	<i><Caller</i> For example: <i><0123456789</i> or <i><Example</i> .

Related links

[Answering Calls](#) on page 33

Answering a New Call

A slow flashing red lamp on an appearance button indicates an alerting call. This may also be accompanied by ringing and by the message lamp flashing.

- **Note:** This guide assumes that auto hold is enabled (the default). The system administrator can disable auto hold for the system, in which case calls are automatically disconnected rather than held.

Procedure

1. If you are not already on a call, you can answer the alerting call in the following ways:
 - To answer the call using the handset, lift the handset.
 - To answer the call handsfree, press the **SPEAKER** key.
 - To answer the call on a headset, press the **HEADSET** key.
 - Just pressing the alerting appearance key answers the call either on the speaker or headset depending on the phone's default audio path setting. See [Default Handsfree Audio Path](#) on page 139.
2. Once you have answered the call, you can switch between different talk modes:
 - To switch to using the handset, lift the handset.

- To switch to handsfree, press the **SPEAKER** key. If you were using the handset you, can now safely replace it.
- To switch to headset mode, press the **HEADSET** key. If you were using the handset, you can now safely replace it.
- If you have answered the call on the speaker or headset, pressing the **SPEAKER** or **HEADSET** key again before you select another mode ends the call.
- Just pressing the call appearance key or any other appearance button puts the current call on hold.

Related links

[Answering Calls](#) on page 33

Answering Another Call

Your phone lets you handle multiple calls at the same time. Whilst you can only have one call connected (talking) at any time, you can have other calls on hold.

A slow flashing red lamp on an appearance button indicates an alerting call. For additional calls, there is no ringing or just a single alert tone.

If you are already on a call, answering a new call automatically put that existing call on hold unless your first press **Drop**.

- **Note:** This guide assumes that auto hold is enabled (the default). The system administrator can disable auto hold for the system, in which case calls are automatically disconnected rather than put on hold.

Procedure

1. To answer the waiting call, press the appearance key indicating the new call. The new call is answered and your existing call is automatically put on hold.
2. You can switch between calls by pressing the appearance button of the call to which you want to speak.
3. The soft key functions shown relate to the call which is currently highlighted. Normally that is the call just answered or represented by the last appearance key pressed, but using the cursor keys below the display you can change which call is highlighted whilst still remaining connected to your current call.

Related links

[Answering Calls](#) on page 33

Diverting a Call to Voicemail

You can transfer a call targeted at you directly to your voicemail mailbox.

Procedure

1. If the call is not the currently highlighted call on the display, use the up and down cursor keys to highlight it.
2. Press the **ToVM** soft key. The call is redirected to your mailbox.

Related links

[Answering Calls](#) on page 33

Silence (Ignore) an Alerting Call

You can silence the ringer of a currently alerting call.

Procedure

1. If the call is not the currently highlighted call on the display, use the up and down cursor keys to highlight it.
2. Press the **Ignore** soft key. The call continues alerting but with no audible ring.

Related links

[Answering Calls](#) on page 33

Dropping an Incoming Call

You can attempt to drop an incoming call rather than answering it. Doing this has different effects depending on the call type and other options:

- If the call is a hunt group call, dropping the incoming call causes it to be presented to the next agent in the group or follow other hunt group settings (which can include presenting the call to you again).
- If the call is a direct call to you, dropping it causes it to:
 - Go to your forward on no answer destination if set and enabled. See [Forwarding Calls](#) on page 62.
 - Else, the call goes to your voicemail if available.
 - Else, the call continues to ring (drop has no effect).
- If the call is returning from being held or parked for too long, you cannot drop it.

Procedure

1. If the call is not the currently highlighted call on the display, use the up and down cursor keys to highlight it.
2. Press the **Drop** key.
 - You can also assign the drop function to a programmable key. See [Programmable Feature Buttons](#) on page 140.

Related links

[Answering Calls](#) on page 33

Page Calls

Your phone can be paged if you have no other connected call in progress and your phone is currently idle. You can hear the caller but they cannot hear you.

The page is heard through the phone's speaker following a single beep. A page call is also indicated in the display by the word **Page**.

- To answer the page call, press the **Answer** key. The call is turned into a normal call. You can continue handsfree or pickup the handset.
- To ignore the page call, press the **Drop** key.

Related links

[Answering Calls](#) on page 33

Displaying Other Calls

The phone can handle multiple calls at the same time. Whilst you can only have one connected call at any time, you can have other calls on hold, parked and further incoming calls alerting. The status of each call (except parked calls) is indicated by a separate call appearance button for each call.

Changing the currently displayed call before starting a conference affects which calls are conferenced. See [Context Sensitive Conferencing](#) on page 57.

Procedure

Use the up and down cursor keys to select which call appearance is highlighted. This can be done without affecting any currently connected or held calls.

- The currently highlighted button is shown by a white border around the button label.
- The soft keys at the bottom of the display automatically change to reflect actions that can be performed on the call, if any, associated with the currently highlighted button.

Related links

[Answering Calls](#) on page 33


Using Call Pickup

Pickup is used to answer a call ringing elsewhere on the phone system.

* Note:

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Pickup**.
 - To answer any ringing call, press the **Any** soft key.
 - To answer a call ringing against a particular target, dial the extension number. Alternatively, press the **Dir** soft key to select the extension from the directory.
3. The menu then depends on the type of number entered:
 - **User Number**
 - To answer a call ringing against the user, press the **Pickup** soft key.
 - To return to entering a number, press the **Clear** key.
 - **Hunt Group Number**
 - To answer a call ringing against the members of the group, press the **Members** soft key. The call does not have to be a call to the hunt group.
 - To answer a call ringing for the hunt group, press the **Group** soft key.
 - To return to entering a number, press the **Clear** key.

Related links

[Answering Calls](#) on page 33

Call Pickup Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. However, your system administrator can remove and change the short codes available to you or all users. To use a short code, you may have to put your currently call on hold.

These are useful as they can be dialed from any phone on the system. For example, this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by **N** in the short codes shown below.

- For a list of other common dialing short codes, see [Short Codes](#) on page 149.

Call Pickup

Feature	Dial	Description
Pickup Any Call	*30	Answer a call ringing on the telephone system.
Pickup a Group Call	*31	Answer a call ringing a group of which you are a member. You can use this even if your group membership is currently set to disabled.
Pickup a Users Call	*32*N#	Pickup a call ringing a user's extension number (N).
Pickup a Group Members Call	*53*N#	Pickup a call ringing the members of a group (N). This does not necessarily have to be a group call.

Related links

[Answering Calls](#) on page 33

Chapter 7: Redialling

The phone's redial operation works in one of the following modes:

- **Open Call Log** – In this mode, pressing **Redial** displays a list of your most recent outgoing calls. You can select the call that you want to redial from the list.
- **Last Dialed** – In this mode, pressing **Redial** immediately repeats your most recent outgoing call.

In either case, the redial function uses the outgoing call records in your personal call log. If you delete the records in your call log (see [Deleting the Whole Call Log](#) on page 94), redial will not work until new outgoing call records exist.

Related links

[Redialling in List Mode](#) on page 28

[Redialling in Last Number Mode](#) on page 28

[Selecting Your Redial Mode](#) on page 41

Redialling in List Mode

This redial method is used when your phone's redial mode is set to **Open Call Log**. See [Selecting Your Redial Mode](#) on page 41.

Procedure

1. Access the redial list:
 - a. Press **Redial**. The list of outgoing calls is displayed.
 - b. Use the up and down cursor keys to scroll through the 10 most recent outgoing calls.
2. Press **Call** to call the number displayed in the call record.
3. Continue in the same way as for a normal dialed call.

Related links

[Redialling a Previous Number](#) on page 28

[Redialling](#) on page 40

Redialling in Last Number Mode

This redial method is used when your phone's redial mode is set to **Last Dialed**. See [Selecting Your Redial Mode](#) on page 41.

Procedure

1. Press **Redial**.
2. The number for the most recent outgoing call in your personal call log is redialed.
3. Continue in the same way as for a normal dialed call.

Related links


[Redialling a Previous Number](#) on page 28

[Redialling](#) on page 40

Selecting Your Redial Mode

You can select whether your phone uses the redial list or last call redial mode.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use cursor keys to select **Call Settings**.
3. Use the up and down cursor keys to highlight **Redial Action**.
4. The current mode is displayed:
 - **Open Call Log** – In this mode, pressing **Redial** displays a list of your most recent outgoing calls. You can select the call that you want to redial from the list.
 - **Last Dialed** – In this mode, pressing **Redial** immediately repeats your most recent outgoing call.
5. To change the mode, press **Change**.
6. When the desired mode is displayed, press **Save**.

Related links

[Redialling](#) on page 40

Chapter 8: Transferring Calls

You are able to transfer calls even if all your current call appearance buttons are in use.

- **Calls and Button Status Indication:**

The status indication for a call on hold pending transfer differs from that used for standard held calls:

- Both the green and red lamps fast flash (flutter) when the button represents a call on hold pending transfer.
- The call status information shown when a call on hold pending transfer is highlight is prefixed with **On-Hold-Xfer** rather than **On-Hold**.

- **Switching Between Calls:**

Switching from a connected call to an existing call on hold pending transfer puts the connected call on hold pending transfer.

Procedure

1. Press **Transfer**. The current call is automatically put on hold pending transfer.
2. Dial the number for the transfer.
 - You can also press **Dir** to select a destination from the directory or use the **Redial** option, if applicable.
 - By default, the IP Office will not let you to forward or transfer calls to external numbers unless enabled by your system administrator.
3. If the transfer destination does not answer or does not want to accept the call, press the **Cancel** soft key.
4. To complete the transfer, press **Complete**. You can do this while the call is still ringing.
 - Transferring a call while it is still ringing is called an unsupervised transfer.
 - Transferring a call after ringing finishes is called a supervised transfer.


Related links

[Transferring a Call to Voicemail](#) on page 43


[Transferring a Held Call](#) on page 43

[Transferring a Call to Your Mobile](#) on page 44

Transferring a Call to Voicemail

When set to visual voice mode, the  **MESSAGE** key can be used to transfer your current call to the voicemail mailbox of another user or group.

Procedure

1. With the call connected, press the  **MESSAGE** key. You are still connected to the call and can continue talking.
2. Dial the extension number of the user or group to which you want to transfer the call.
3. When the number matches a user or group, their name is displayed.
 - To transfer the call to the user or group's mailbox, press **Select**. The caller hears a few seconds of ringing and then the mailbox greeting.
 - To cancel the transfer, press **Cancel**.

Related links

[Transferring Calls](#) on page 42

Transferring a Held Call

There are various call transfer scenarios to consider:

- **Note:** It is also possible to transfer a held call by starting a conference and then dropping yourself from that conference. However, if you are the only internal user in the conference, depending on your telephone system's configuration, dropping yourself might end the conference.

Procedure

1. **Transfer to a Held Call:** If you have multiple calls on hold and you want to transfer a connected call to one of the held calls:
 - a. Press **Transfer** and use the up and down cursor keys to highlight the desired call appearance.
 - b. When you are satisfied, press **Complete** to transfer the call while the other held call(s) remain on hold.
2. **Transfer to a New Call:** If you have calls on hold but you want to connect your current call with a new destination:
 - Press **Transfer**, enter the destination manually using the numerical keypad and press **Complete**.
 - Alternatively, press **Dir** to select a destination from the directory or use the **Redial** option, if applicable.

3. **Consult the Caller Before Transferring:** If you have a destination call connected but you wish to refer back to the originating call before completing the transfer:
 - a. Do NOT press **Complete** to transfer the destination call as in scenario #2.
 - b. Select the originating call ('on hold pending transfer') by pressing its call appearance button. This places the destination call 'on hold pending transfer' so that you can notify the originating caller.
 - c. With the originating call connected, you can now press **Complete** to connect the two calls.
 - d. Held calls that are not pending transfer are not affected. Moreover, it is not possible to have more than one call 'on hold pending transfer'.

Related links


[Transferring Calls](#) on page 42

[Holding Calls](#) on page 45

Transferring a Call to Your Mobile

If you have been configured as a mobile twinning user, you can transfer a call to your mobile device using the **Features** menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Transfer to Mobile**.

Related links

[Transferring Calls](#) on page 42

Chapter 9: Holding Calls

You can hold one or more calls.

- The held call still occupies the appearance button on which it was made or answered. A fast flashing green lamp is used to indicate held calls.
- The caller hears music on hold. If your system does not have music on hold available, the caller hears double-beep tones every few seconds.
- Calls that you leave on hold for too long return to your phone (when it is idle). The default return delay is 15 seconds, but can be changed by the system administrator. Returning calls ignore any forwarding or do not disturb settings.
- If you have more than one held call, or one held call and a connected call, pressing the **Conf** soft key starts a conference between yourself and the calls.

Holding a call and parking a call are two similar actions. The table below summarizes the main differences between parking a call and holding a call.

When used to park or hold a call...	Hold	Park
... the call occupies an appearance button.	✓	–
... the caller hears music on hold if available.	✓	✓
... the call can be retrieved by other users dialing a short code.	–	✓
... the call recalls you automatically if your phone is idle.	✓	✓
... can be used with conference calls.	✓	✓
... can be used to start or add calls to a conference.	–	–
... the call is assigned a unique ID.	–	✓

Related links

[Holding Conference Calls](#) on page 46

[Holding a Call](#) on page 46

[Taking a Call Off Hold](#) on page 46

[Switching Between Calls](#) on page 47

[Transferring a Held Call](#) on page 43

Holding Conference Calls

You can hold a conference call in the same way as holding a normal call. Holding the conference call does not affect the other conference parties who can continue talking.

You are also still listed as a member of the conference call in the conference details.

Important:

This only applies to conference calls hosted by your own telephone system. Holding your call to a conference hosted on another telephone system may cause that conference to hear your system's music on hold.

Related links

[Holding Calls](#) on page 45

Holding a Call

Procedure

To put your current call on hold, press **Hold** or press the call's appearance button.

- The held call is indicated by its call appearance button with a fast-flashing green lamp.
- The phone displays **On-Hold** before the call information.
- Whilst held, the caller hears music on hold. If your system does not have music on hold available, the caller hears double beep tones every few seconds.

Related links

[Holding Calls](#) on page 45

Taking a Call Off Hold

Either of the following methods can be used to retrieve a call from hold. If you have a currently connected call, that call is automatically put on hold.

Procedure

1. Press the appearance button with the fast-flashing green call appearance.
2. Scroll the display using the up/down cursor keys. To take the call off hold, press the **Cancel** soft key.

Related links

[Holding Calls](#) on page 45

Switching Between Calls

With a call on hold (fast-flashing appearance button) and another call connected (red call appearance button), you can switch between calls by pressing the appearance button of the held call. The current call is automatically put on hold and the previously held call is connected.

When you place a call on hold in order to make a transfer, the call is considered '*on hold pending transfer*' and is indicated by fast-flashing red *and* green appearance buttons.

Related links

[Holding Calls](#) on page 45

Transferring a Held Call

There are various call transfer scenarios to consider:

- **Note:** It is also possible to transfer a held call by starting a conference and then dropping yourself from that conference. However, if you are the only internal user in the conference, depending on your telephone system's configuration, dropping yourself might end the conference.

Procedure

1. **Transfer to a Held Call:** If you have multiple calls on hold and you want to transfer a connected call to one of the held calls:
 - a. Press **Transfer** and use the up and down cursor keys to highlight the desired call appearance.
 - b. When you are satisfied, press **Complete** to transfer the call while the other held call(s) remain on hold.
2. **Transfer to a New Call:** If you have calls on hold but you want to connect your current call with a new destination:
 - Press **Transfer**, enter the destination manually using the numerical keypad and press **Complete**.
 - Alternatively, press **Dir** to select a destination from the directory or use the **Redial** option, if applicable.
3. **Consult the Caller Before Transferring:** If you have a destination call connected but you wish to refer back to the originating call before completing the transfer:
 - a. Do NOT press **Complete** to transfer the destination call as in scenario #2.
 - b. Select the originating call ('on hold pending transfer') by pressing its call appearance button. This places the destination call 'on hold pending transfer' so that you can notify the originating caller.
 - c. With the originating call connected, you can now press **Complete** to connect the two calls.

- d. Held calls that are not pending transfer are not affected. Moreover, it is not possible to have more than one call 'on hold pending transfer'.

Related links

[Transferring Calls](#) on page 42

[Holding Calls](#) on page 45

Draft

Chapter 10: Parking Calls

Parking a call is similar to holding a call. However, parked calls can be unparked by other users on the phone system.

Each parked call is given a number. By default, the number is your extension number plus a digit.

Calls that you park return to your phone (when idle) if they remain parked for too long. The default return delay is five minutes. This is a system delay that is applied to all users and can be changed by the system administrator. Returning calls ignore any forwarding or do not disturb settings.

A feature button set to the **Call Park** action can be used to park and unpark calls and to indicate parked calls.

Holding a call and parking a call are two similar actions. The table below summarizes the main differences between parking a call and holding a call.

When used to park or hold a call...	Hold	Park
... the call occupies an appearance button.	✓	–
... the caller hears music on hold if available.	✓	✓
... the call can be retrieved by other users dialing a short code.	–	✓
... the call recalls you automatically if your phone is idle.	✓	✓
... can be used with conference calls.	✓	✓
... can be used to start or add calls to a conference.	–	–
... the call is assigned a unique ID.	–	✓

Related links

[Parking Short Codes](#) on page 49

[Parking Calls \(Features Menu\)](#) on page 50

[Unparking Calls Using the Status Menu](#) on page 50

[Park & Page](#) on page 51

Parking Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. However, your system administrator can remove and change the short codes available to you or all users. To use a short code, you may have to put your currently call on hold.

These are useful as they can be dialed from any phone on the system. For example, this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by **N** in the short codes shown below.

- For a list of other common dialing short codes, see [Short Codes](#) on page 149.

Park/Unpark

Feature	Dial	Description
Park Call	*37*N#	Parks the held call using the park number dialed in place of N .
Unpark Call	*38*N#	Unpark the call parked using the park number N .


Related links

[Parking Calls](#) on page 49

Parking Calls (*Features Menu*)

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select one of the following:
 - **Call Park** – Park the call on the system with parked call indication on your phone
 - **Call Park To Other** – Park the call on the system with parked call indication on another selected extension.
3. Press **Select**.

Related links


[Parking Calls](#) on page 49

Unparking Calls Using the Status Menu

While parked calls are parked on the telephone system and can be unparked by any other user, the parked call indication is sent to a particular extension. If there are any calls parked against your phone, you can view and unpark them via the **Status** menu.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. If you have any parked calls, the **Parks...** option is displayed. The option is not present if you do not have calls parked against your extension.
3. Press the **Details** soft key.
4. Use the cursor keys to scroll through the parked calls.
5. To unpark a particular call, highlight it and then press the **Connect** soft key.

Related links

[Parking Calls](#) on page 49

Park & Page

This method of parking calls is available only if specifically configured on your telephone system. To use it, you also need to add a **Park and Page** button on your phone. See [Programmable Feature Buttons](#) on page 140.

- Park and page uses a set of park slot numbers, configured by your system administrator, that act like extension numbers.
- When you parked a call in one of those park slots, you or any other user on the system can dial that park slot number to unpark the call.
- Your system administrator can also configure up to 3 hunt groups for paging. When you park a call, after displaying the park slot number used, your phone displays options for paging.
- Calls parked using Park & Page are not indicated in your phone's **Status** menu. However, calls that you park recall to your phone if left parked for too long.
- If your phone has any **Call Park** buttons set to match the park slot numbers configured for Park & Page, those buttons indicate when a call is parked in that park slot and can be used to unpark it. However, when used to park a call, the phones does not display the page options.

Procedure

1. Press the **Park and Page** button on your phone. The call is parked and the parked slot number needed to unpark the call is displayed.
2. If you want to make a page announcement of the parked call, press **Page**. Otherwise, press **Exit**.
3. There are several methods by which you can select the user or hunt group that you want to page:
 - Select one of the pre-configured hunt groups and press **Page**.

Parking Calls

- Press **Dir**. Select the required user or hunt group from the directory and press **Page**.
- Dial the extension number of the user or hunt group that you want to page and then press **Page**.

Related links

[Parking Calls](#) on page 49

Draft

Chapter 11: Conferencing

The telephone system supports multiple conference calls, with additional parties addable to any conference call until the system's conference capacity is reached. A maximum of 64 parties in any particular conference call is supported.

- If you are the only internal user in the conference, depending on your telephone system's configuration, dropping yourself might end the conference. Consult your system administrator for details.

Related links

[Starting a Conference](#) on page 53
[Turning a Normal Call Into a Conference](#) on page 54
[Adding Another Party Using Hold](#) on page 54
[Adding Another Party Without Using Hold](#) on page 55
[Viewing Conference Details](#) on page 55
[Dropping/Muting Parties](#) on page 56
[Holding a Conference Call](#) on page 56
[Exiting a Conference](#) on page 56
[Context Sensitive Conferencing](#) on page 57
[Conference Short Codes](#) on page 58

Starting a Conference

This is a simple method for creating a conference. For more complex scenarios, see [Context Sensitive Conferencing](#) on page 57.

Procedure

1. If not already on a call, make a call to the first party or answer a call.
2. Press the **Conf** key. The current call is automatically put on hold.
3. Dial the party that you want to add to the conference.
 - If they answer and want to join the call, press **Conf** again. This call and your current held calls are turned into a conference call.
 - If they do not want to join the call or do not answer, press **Drop**. Then press the appearance key of the previously held call to reconnect to that call.

Related links

[Conferencing](#) on page 53

Turning a Normal Call Into a Conference

If your system administrator has configured a **Conference Add** button on your phone, you can press that button to turn your current call into a two-party conference. That then gives you access to the conference details features such as adding, muting and dropping conference parties without having had to put the existing call on hold.

Contact your system administrator for details of adding a **Conference Add** button.

Related links

[Conferencing](#) on page 53

Adding Another Party Using Hold

This method of adding someone to a conference temporarily put your connection to the conference on hold. That allows you to hear the call progress and talk to the whoever answers the new call without the existing conference parties hearing that conversation.

The other parties already in the conference are able to continue talking to each other whilst you try to add the new party. You can also add a new party without using hold.

Procedure

1. Press **Conf** to put the conference on hold. This does not affect the other conference parties who can continue talking to each other.
2. Press an available appearance key on which to make a call.
3. Dial the party that you want to add to the conference.
 - If they answer and want to join the call, press **Conf** again. This call and your current held calls are turned into a conference call.
 - If they do not want to join the call or do not answer, press **Drop**. Then press the appearance key of the previously held call to reconnect to that call.

Related links

[Conferencing](#) on page 53

Adding Another Party Without Using Hold

You can add another party to a conference without putting your connection to the conference on hold. This means that everyone in the conference hears the call progress and can immediately hear the other party when they answer.

You can also add a new party using hold if you do not want the existing conference to hear the process.

Procedure

1. If not already highlighted, press the up or down cursor keys to display and highlight the conference call.
2. Press the **Details** soft key.
3. Press **Add**.
4. Enter the number of the party you want to add and press **Call**. Alternatively, press **Dir** to select a name from the directory.
5. If the other party does not answer, is not available or does not want to join the conference, press **Drop**.

Related links

[Conferencing](#) on page 53

Viewing Conference Details

You can display a list of the parties involved in a conference call.

Procedure

1. If not already highlighted, press the up or down cursor keys to display and highlight the conference call.
2. Press the **Details** soft key.
3. You can perform various actions:
 - To scroll through the list of callers in the conference, use the up and down cursor keys.
 - To drop a caller from the conference, highlight them and press **Drop**. To leave the conference, drop yourself.
 - To mute a caller, highlight them and press **Mute**. Repeat this to unmute them.
 - To add another party to the conference without putting the conference on hold, press **Add**.
 - To return to the call display, press the **Back** soft key.

Related links

[Conferencing](#) on page 53

Dropping/Muting Parties

You can drop parties from a conference call, including yourself. You can also mute other parties.

- If you are the only internal user in the conference, depending on your telephone system's configuration, dropping yourself might end the conference. Consult your system administrator for details.

Procedure

1. While connected to a conference call, if you press the **Details** key, the conference details menu is displayed.
2. You can then perform the following actions:

Related links

[Conferencing](#) on page 53

Holding a Conference Call

Using the **Hold** soft key you can put a conference call on hold in the same way as you can for a normal call. The appearance key for the conference call shows a fast-flashing red lamp.

To take the conference call off hold, press the appearance key.

! Important:

- You can hold a conference call in the same way as holding a normal call. Holding the conference call does not affect the other conference parties who can continue talking. You are still be listed as a member of the conference call in the conference details.
- This only applies to conference calls hosted by your own telephone system. Holding your call to a conference hosted on another telephone system may cause that conference to hear your system's music on hold.

Related links

[Conferencing](#) on page 53

Exiting a Conference

- If you are the only internal user in the conference, depending on your telephone system's configuration, dropping yourself might end the conference. Consult your system administrator for details.

Procedure

1. If not already highlighted, press the up or down cursor keys to display and highlight the conference call.
2. Press the **Details** soft key.
3. Normally your own name is already selected by default. However, if not use the up or down cursor keys to select your own name.
4. Press **Drop**.

Related links

[Conferencing](#) on page 53

Context Sensitive Conferencing

The previous starting a conference method in this manual covers just simple scenarios where you want your current call and all held calls to be conferenced together. However, there may be some scenarios where you have multiple calls in progress where you may want to only conference particular calls.

This can be done by scrolling the display to change which call is highlighted when you press **Conf**. For example:

- **To conference the current call and a particular held call:** Scroll the call display to highlight the required held call. Press **Conf**. That held call is conferenced with your current call without affecting any other held calls.

The table below summarizes which calls are conferenced based on which call is currently highlighted on the telephone's display. A 'held pending transfer' call is one which has been put on hold by pressing **Conf** or **Transfer**.

The below only applies to conferences initiated from the telephone. The traditional behavior of conferencing the current and all held calls regardless of hold type still applies if the conference is initiated from elsewhere, for example an application.

Highlighted Call	Other conditions in priority order	Result when Conf is pressed:	Current Call	Held Calls	Held Pending Transfer
Connected Call	No call held pending transfer	Conferences the connected call and all held calls.	✓	✓	—
	Call held pending transfer	Conferences the connected call and the held pending transfer call. Any other held calls are unaffected.	✓	—	✓

Table continues...

Highlighted Call	Other conditions in priority order	Result when Conf is pressed:	Current Call	Held Calls	Held Pending Transfer
Held Call	Connected call	Conferences the held call and the connected call. Any other held calls including held pending transfer are unaffected.	✓	–	–
	Held pending transfer call	Conferences the held and held pending transfer call. All other held calls are unaffected.	–	–	✓
	Held calls	Conferences with all other held calls.	–	✓	–
Held Pending Transfer Call	Connected call	Conferences the held pending transfer call to a connected call. Any other held calls are unaffected.	✓	–	✓
	Held calls	Conferences the call held pending transfer with all other held calls.	–	✓	✓

To change which call is currently highlighted:

1. Use the up and down cursor keys to select the current highlighted call appearance. This can be done without affecting any currently connected or held calls.
 - The currently highlighted button is shown by a white border around the button label.
 - The soft keys at the bottom of the display automatically change to reflect actions that can be performed on the call, if any, associated with the currently highlighted button.

Related links

[Conferencing](#) on page 53

Conference Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. However, your system administrator can remove and change the short codes available to you or all users. To use a short code, you may have to put your currently call on hold.

These are useful as they can be dialed from any phone on the system. For example, this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by **N** in the short codes shown below.

- For a list of other common dialing short codes, see [Short Codes](#) on page 149.

Conference

Feature	Dial	Description
Conference Held Calls	*47	Start a conference between yourself and any calls that you have on hold.
Join a Conference	*55*N#	Join a conference where N is the conference ID.

Related links

[Conferencing](#) on page 53

Draft

Part 3: Redirecting Your Calls

Call Redirection Options

The telephone system supports a number of different ways in which you can redirect your calls. The main methods are:

- **Follow Me** – Temporarily redirect all your calls to another phone shared with that phone's normal user. This function can be used in two ways:
 - **Follow Me To** – Set the follow me destination from your own phone.
 - **Follow Me Here** – Set the follow me destination from the phone that you want to use.
- **Forward** – Forward calls to an internal or external number.
 - **Forward on Busy** – Forward calls when you have reached the limit of the number of calls that the phone can present to you.
 - **Forward on No Answer** – Forward calls if they have rung unanswered at your phone.
 - **Forward Unconditional** – Immediately forward calls. Forwarding to voicemail can be selected as an option.
- **Do Not Disturb** – Redirect all calls to voicemail, if available. Otherwise, calls are redirected to a busy tone.
 - Do not disturb exception numbers can be used to allow calls from specific numbers to ignore do not disturb.
- **Twinning** – Twinning is a process whereby your calls ring on other phones than your own. Twinning is only available if configured by your system administrator. The system supports several twinning methods:
 - **Internal Twinning** – Ring on your extension and on another internal extension.
 - **Mobile Twinning** – Ring on your extension and an external number.
 - **Fallback Twinning** – Ring on an external number when the system cannot detect a connection to your normal phone.

Method	Calls Redirected			Destination		
	Internal	External	Group	Internal	External	Voicemail
Follow Me						
Follow Me To	✓	✓	✓	✓	–	–
Follow Me Here	✓	✓	✓	✓	–	–
Forward						
Forward on Busy	✓	✓	–	✓	✓	–
Forward on No Answer	✓	✓	–	✓	✓	–
Forward Unconditional	✓	✓	✓	✓	✓	✓
Do Not Disturb	✓	✓	–	–	–	✓
Twinning						
Internal	✓	✓	✓[1]	✓	✓	✓
Mobile	✓	✓	✓[1]	–	✓	–
Fallback	✓	✓	✓[1]	–	✓	–

1. Configured by your system administrator.

Chapter 12: Forwarding Calls

Forwarding is used to redirect calls to another extension or an external number.

- By default, the IP Office will not let you to forward or transfer calls to external numbers unless enabled by your system administrator.

Forward Unconditional

Forward unconditional can be used to immediately redirect your calls.

- Through the phone menus, you can select which types of calls are forwarded. By default, forwarding is applied to incoming internal and external calls to you, but not to calls to a hunt group of which you are a member.
- When enabled, all calls matching the settings are forwarded to the number set as your forward unconditional destination. That number can be internal or external.
- You can still use the phone to make outgoing calls. When you lift the handset, the IP Office replaces the normal continuous dial tone with broken or interrupted dial tone (dial tone with pauses) as a reminder that your phone is set to not receive calls.
- If you also have forward on no answer set, if the unconditionally forwarded call is still unanswered after having rung for your no answer time (default 15 seconds), the system redirects the call to your forward on no answer destination if different. Note that this is not always possible for calls that have been forwarded to an external number.
- If you have voicemail enabled, if a forwarded call remains unanswered, the IP Office redirects the call to voicemail. Note, this is not always possible for calls forwarded to an external number.

Forward on Busy

'Forward on busy' redirects your calls when your phone is not able to present you with any more alerting calls.

- Through the phone menus, you can select which types of calls are forwarded. By default, forwarding is applied to both your incoming internal and external calls.
- When enabled, all calls matching the settings are forwarded to the number set as the 'forward on busy'/'no answer' destination. That number can be internal or external.
- 'Busy' is defined as having no available call appearance buttons on which further calls can be presented.
- Hunt group calls are not presented when you are busy and so are not forwarded by this setting.
- The 'forward on busy' and 'forward on no answer' options use the same forwarding destination number. If no number is set, they use the same destination as set for 'forward unconditional.'
- If you have voicemail enabled, if a forwarded call remains unanswered, the IP Office redirects the call to voicemail. Note, this is not always possible for calls forwarded to an external number.

Forward on No Answer

Forward on no answer redirect calls that have alerted your phone but have not been answered for some reason.

- Through the phone menus, you can select which types of calls are forwarded. By default, forwarding is applied to both your incoming internal and external calls.
- When enabled, all calls matching the settings are forwarded to the number set as the forward on busy/no answer destination. That number can be internal or external.
- No answer is defined as having been presented to your phone for your no answer time (default 15 seconds).
- Hunt group calls are not forwarded.
- The 'forward on busy' and 'forward on no answer' options use the same forwarding destination number. If no number is set, they use the same destination as set for 'forward unconditional.'
- If you have voicemail enabled, if a forwarded call remains unanswered, the IP Office redirects the call to voicemail. Note, this is not always possible for calls forwarded to an external number.


Related links

[Forward Unconditional \(Status Menu\)](#) on page 63
[Forward Unconditional \(Features Menu\)](#) on page 64
[Forward on Busy/No Answer \(Features Menu\)](#) on page 64
[Forward on No Answer \(Status Menu\)](#) on page 65
[Forward on Busy \(Status Menu\)](#) on page 66
[Call Forwarding Short Codes](#) on page 67

Forward Unconditional (*Status Menu*)

You can clear or change your 'forward unconditional' settings through the **Status** menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the cursor keys to select **Forward Unconditional**.
 - To switch off forward unconditional, press the **Off** soft key.
 - To change the forwarding settings, press the **Details** soft key.
3. Press **Save**.

Related links


[Forwarding Calls](#) on page 62

Forward Unconditional (*Features Menu*)

You may be able to change your 'forward unconditional' settings using the **Features** menu.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Forward**.
3. Use the cursor keys to select **Forward Unconditional**.
 - **To Switch Forwarding On/Off** – Select **Forward Unconditional**. Press **On** or **Off** to change the current setting. If no destination is currently set when you switch 'forward unconditional' on, the display jumps to the destination field.
 - **To Select Which Calls as Forwarded** – Select **Call type**. Press **Change** to see the different options. When the required option is displayed, press **Save**. The options are **External Only**, **External and Group**, **Non Group Calls** and **All Calls**.
 - **To Set the Destination** – Select **Destination**. Either press **Edit** and enter the number required or press **ToVM** for the 'forward to voicemail' option.
 - If your IP Office does not allow you to forward or transfer calls to external numbers, you can only enter another extension number. The **Save** option is hidden if you enter any other type of number.
 - If you select voicemail as the destination, to enter a different destination, you first need to switch 'forward unconditional' off.
4. Press **Save**.

Related links


[Forwarding Calls](#) on page 62

Forward on Busy/No Answer (*Features Menu*)

You may be able to use the **Features** menu to switch 'forward on no answer' and 'forward on busy' on or off.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Forward**.

3. Use the cursor keys to select **Forward Busy/No Answer**.
4. Use the cursor keys to scroll through the menu options:
 - To switch 'forward on busy' on or off, highlight **Fwd Busy** and press **On** or **Off**.
 - To switch 'forward on no answer' on or off, highlight **Fwd No Answer** and press **On** or **Off**.
 - To select which calls are forwarded, highlight **Call type**. Press **Change** to change the option between **All Calls** or **External Only**.
 - To change the destination, highlight **Destination** and press **Edit**. Enter the number and press **Select**.
 - If your IP Office does not allow you to forward or transfer calls to external numbers, you can only enter another extension number. The **Save** option is hidden if you enter any other type of number.
 - Press **Save** to save any changes.

Related links


[Forwarding Calls](#) on page 62

Forward on No Answer (*Status Menu*)

If your phone is set to 'forward on no answer' you can clear or change the forward settings through the **Status** menu.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the cursor keys to select **Forward on No Answer**.
3. To switch forwarding off, press **Off**.
4. To change the setting, press **Details**.
 - To switch 'forward on busy' on or off, highlight **Fwd Busy** and press **On** or **Off**.
 - To switch 'forward on no answer' on or off, highlight **Fwd No Answer** and press **On** or **Off**.
 - To select which calls are forwarded, highlight **Call type**. Press **Change** to change the option between **All Calls** or **External Only**.

- To change the destination, highlight **Destination** and press **Edit**. Enter the number and press **Select**.
 - If your IP Office does not allow you to forward or transfer calls to external numbers, you can only enter another extension number. The **Save** option is hidden if you enter any other type of number.
- Press **Save** to save any changes.

Related links


[Forwarding Calls](#) on page 62

Forward on Busy (*Status Menu*)

If your phone is set to 'forward on busy' you can clear or change the forward settings through the **Status** menu.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the cursor keys to select **Forward on No Answer**.
3. To switch forwarding off, press **Off**.
4. To change the setting, press **Details**.
 - To switch 'forward on busy' on or off, highlight **Fwd Busy** and press **On** or **Off**.
 - To switch 'forward on no answer' on or off, highlight **Fwd No Answer** and press **On** or **Off**.
 - To select which calls are forwarded, highlight **Call type**. Press **Change** to change the option between **All Calls** or **External Only**.
 - To change the destination, highlight **Destination** and press **Edit**. Enter the number and press **Select**.
 - If your IP Office does not allow you to forward or transfer calls to external numbers, you can only enter another extension number. The **Save** option is hidden if you enter any other type of number.
 - Press **Save** to save any changes.

Related links

[Forwarding Calls](#) on page 62

Call Forwarding Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. However, your system administrator can remove and change the short codes available to you or all users. To use a short code, you may have to put your currently call on hold.

These are useful as they can be dialed from any phone on the system. For example, this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by **N** in the short codes shown below.

- For a list of other common dialing short codes, see [Short Codes](#) on page 149.

Forwarding

Feature	Dial	Description
Set the Forward Unconditional Destination	*07*N#	Set the destination number (N) for 'forward unconditional' when it is switched on.
Switch Forward Unconditional On	*01	Switch on 'forward unconditional.' A destination must have been set.
Switch Forward Unconditional Off	*02	
Include Hunt Group Calls in Forward Unconditional	*50	
Exclude Hunt Group Calls from Forward Unconditional	*51	
Set the Forward On Busy/No Answer Destination	*57*N#	Set the destination number (N) for 'forward on busy' and 'forward on no answer.' If no number has been set, those functions use the 'forward unconditional' number if set.
Switch Forward On Busy On	*03	
Switch Forward On Busy Off	*04	
Switch Forward on No Answer On	*05	
Switch Forward on No Answer Off	*06	
Cancel All Forwarding	*00	Switch off any forwarding (includes 'forward unconditional,' 'forward on busy,' 'forward on no answer,' 'follow me,' and 'do not disturb').

Related links

[Forwarding Calls](#) on page 62

Chapter 13: Do Not Disturb

When you enable 'do not disturb':

- Calls to you are redirected to voicemail if available. Otherwise, the callers hear busy tone.
- People calling from numbers in your 'do not disturb' exceptions list can still call you and forwarding can still be applied to these calls.
- Calls to any hunt group of which you are a member are no longer presented to you (unless you are the last available member of the group).
- Call already alerting your phone are not affected and continue alerting.
- You can still use the phone to make outgoing calls. When you lift the handset, the IP Office replaces the normal continuous dial tone with broken or interrupted dial tone (dial tone with pauses) as a reminder that your phone is set to not receive calls.

Related links

[DND On/Off \(Features Menu\)](#) on page 68

[DND Off \(Status Menu\)](#) on page 69


[Do Not Disturb Exceptions](#) on page 69

[Do Not Disturb Short Codes](#) on page 70

DND On/Off (*Features Menu*)

Enabling DND does not affect any calls already being presented to your phone.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use cursor keys to select **Call Settings**.
3. Use the cursor keys to select **Do Not Disturb**.
4. Change the setting as required.
5. Press **Save**.

Related links

[Do Not Disturb](#) on page 68

DND Off (*Status Menu*)

You can use the **Status** menu to switch off 'do not disturb.'

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the cursor keys to select **Do Not Disturb**.
3. To clear the 'do not disturb' setting, press the **Off** soft key.

Related links


[Do Not Disturb](#) on page 68

Do Not Disturb Exceptions

These numbers are used to indicate callers who you want to be allowed to call you as normal even when you have 'do not disturb' on. This does not include group calls which are not presented when you are in 'do not disturb'.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use cursor keys to select **Call Settings**.
3. Use the cursor keys to select **DND Exceptions**.
 - To add a number, highlight **Add Another**. Dial the number and press **Add**.
 - If your system uses an external dialing prefix to make outgoing calls, add the prefix when adding an external number as an exception.
 - To remove an existing number, highlight it and press **Remove**.
4. Press **Done** when completed.

Related links

[Do Not Disturb](#) on page 68

Do Not Disturb Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. However, your system administrator can remove and change the short codes available to you or all users. To use a short code, you may have to put your currently call on hold.

These are useful as they can be dialed from any phone on the system. For example, this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by **N** in the short codes shown below.

- For a list of other common dialing short codes, see [Short Codes](#) on page 149.

Do Not Disturb

Feature	Dial	Description
Switch Do Not Disturb On	*08	Set your phone to 'do not disturb.'
Switch Do Not Disturb Off	*09	Switch off 'do not disturb.'
Add a Do Not Disturb Exception Number	*10*N#	Add a number (N) to your list of 'do not disturb' exceptions.
Delete a Do Not Disturb Exception Number	*11*N#	Remove a number (N) from your list of 'do not disturb' exceptions.
Cancel All Forwarding	*00	Switch off any forwarding (includes 'forward unconditional,' 'forward on busy,' 'forward on no answer,' 'follow me,' and 'do not disturb').

Related links

[Do Not Disturb](#) on page 68

Chapter 14: Follow Me

'Follow me to' is used to redirect your calls to another extension that you are temporarily sharing.

The calls are presented with your user name so that they can be distinguished from calls for the extension's normal user. This allows you to share another person's phone without logging them off their phone.

All calls are redirected and the calls are still subject to all your user settings as if they were ringing at your phone.

- **'Follow me to'** is used to enable 'follow me' from your own phone.
- **'Follow me here'** is used to enable 'follow me' at the extension to which you want your calls redirected.

Related links

[Follow Me To \(Features Menu\)](#) on page 71

[Follow Me \(Status Menu\)](#) on page 72

[Follow Me Here \(Features Menu\)](#) on page 72

[Follow Me Here \(Status Menu\)](#) on page 73


[Follow Me Short Codes](#) on page 73

Follow Me To (*Features Menu*)

Using the phone's **Features** menu, you can set and clear follow me to settings.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Forward**.
3. Use the cursor keys to select **Follow Me To**.
4. Dial the number of another user. When it matches a user, their name is displayed.
Alternatively, use the **Dir** soft key to select a user from the directory.

5. Select an action:

- **Save** – Save the selected number as your 'follow me to' destination. All calls to your extension number are redirected to that destination.
- **Clear** – Clear the currently selected or set number.
- **Back** – Go back to the previous menu.


Related links

[Follow Me](#) on page 71

Follow Me (*Status Menu*)

If you have set a 'follow me to' destination for your calls, you can clear or change the setting through your phone's **Status** menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight **Follow Me To**.
 - To clear the 'follow me to' setting, press the **Clear** soft key.
 - To change the destination of the setting, press the **Details** soft key.

Related links


[Follow Me](#) on page 71

Follow Me Here (*Features Menu*)

You may be able to change 'follow me here' using the **Features** menu.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Forward**.
3. Use the cursor keys to select **Follow Me Here**.
4. Use the menu to add or remove users:
 - Use the up and down cursor keys to scroll through the names.

- To remove a user, press the **Clear** soft key.
 - To add a user, press the **Add** soft key.
 - Dial the number of another user. When it matches a user, their name is displayed. Alternatively, use the **Dir** soft key to select a user from the directory.
 - Press the **Save** soft key to add them.
5. Press **Save**.


Related links

[Follow Me](#) on page 71

Follow Me Here (*Status Menu*)

If other users has a 'follow me' set to your phone, you can clear or change the setting through the **Status** menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight **Follow Me Here**.
 - To clear the setting, press the **Clear** soft key.
 - To change the destination of the setting, press the **Details** soft key.

Related links

[Follow Me](#) on page 71

Follow Me Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. However, your system administrator can remove and change the short codes available to you or all users. To use a short code, you may have to put your currently call on hold.

These are useful as they can be dialed from any phone on the system. For example, this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by **N** in the short codes shown below.

- For a list of other common dialing short codes, see [Short Codes](#) on page 149.

Follow Me

Feature	Dial	Description
Follow Me Here	*12*N#	Dialed at the extension to which you want your calls redirected. Use your own extension number (N) when dialing the short code.
Follow Me Here Cancel	*13*N#	Dialed at the extension from which you had redirected calls. Use your own extension number (N) when dialing the short code.
Follow Me To	*14*N#	Dialed at your phone. Dial the extension number (N) to which you want your calls redirected. You can dial just *14# to cancel follow me.
Cancel All Forwarding	*00	Switch off any forwarding (includes 'forward unconditional,' 'forward on busy,' 'forward on no answer,' 'follow me,' and 'do not disturb').

Related links

[Follow Me](#) on page 71

Chapter 15: Twinning

Twining allows your calls to ring on two phones. Twinning is only available if configured by for you by your system administrator.

The IP Office supports the following methods of twinning:

Feature	Description
Mobile Twinning	<p>Mobile twinning allows your calls to ring at both your phone's and at another phone's number, which can include an external number. If you have been configured as a mobile twinning user, you can switch the use of mobile twinning on or off through the phone's menus and can also change the number to which you are twinned.</p> <p>Using the phone menus, you can switch use of mobile twinning on/off and change the destination number for twinned calls.</p>
Internal Twinning	<p>This method of twinning twins your normal phone with another internal phone. Your incoming calls ring on both phones. You can also make your calls from either extension.</p> <ul style="list-style-type: none">• You cannot change your internal twinning settings from your phone. Contact your system administrator.• A typical example for internal twinning would be a user who uses both a normal desk phone and also needs a DECT phone when moving around the building.• Your settings are applied to both phones. Similarly, message waiting indication and voicemail access from either phone accesses your mailbox.• If both phones are phones that store your contacts and call history on the system, the contacts and call history on each is the same.

Related links

[Switching Mobile Twinning On](#) on page 76

[Changing Your Twinning Number](#) on page 76

[Transferring a Call to Your Mobile](#) on page 77

[Reclaiming a Twinned Call](#) on page 77


[Switching Mobile Twinning Off](#) on page 77

Switching Mobile Twinning On

The twinning menu is only available if you have been configured by the system administrator to be able to use mobile twinning.

- Setting a button to the **Twinning** function is recommended. The button allows you to transfer calls to your twinning destination, reclaim twinned calls, and quickly access the twinning menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Forward**.
3. Use the cursor keys to select **Mobile Twinning**.
4. If no twinning number has been set yet, select **Destination** and click **Edit**. Enter the number required and press **Select**.
5. Select **Twinning**. Press **On**.
6. Press **Save**.

Related links


[Twinning](#) on page 75

Changing Your Twinning Number

The mobile twinning number is used for both mobile and fallback twinning. It is not used for internal twinning. See [Twinning](#) on page 75.

It should be an external number. If your system users an external dialing prefix you should include that in the number you set.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Forward**.
3. Use the cursor keys to select **Mobile Twinning**.
4. Highlight **Destination** and press **Edit**.
 - Use the **Bksp** to remove the last digit of the existing number.
 - Use **Clear** to remove the whole number.
 - Dial the number you want to use for twinning and press **Select**.

5. Press **Save**.

Related links


[Twinning](#) on page 75

Transferring a Call to Your Mobile

If you have been configured as a mobile twinning user, you can transfer a call to your mobile device using the features menu.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Transfer to Mobile**.


Related links

[Twinning](#) on page 75

Reclaiming a Twinned Call

When using mobile twinning, you can use the status menu to take back a call that has been redirected to and answered at your mobile twinning destination.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the cursor keys to select **Mobile Twin Call**.
3. Press **Connect**.


Related links

[Twinning](#) on page 75

Switching Mobile Twinning Off

If you have been configured as a mobile twinning user, you can use the status menu to switch mobile twinning mode off.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight **Mobile Twining**.
 - To clear the setting, press the **Off** soft key.
 - To access the twinning menu instead, press **Details**.

Related links


[Twining](#) on page 75

Draft

Part 4: Contacts and Call Log

Draft

Chapter 16: Contacts

This menu is accessed by pressing the  **CONTACTS** key. It is used to display names and numbers that you can then use for making calls.

The directory includes names stored for use by all users, names stored for use by just you and the name and numbers of all the other users and groups on the phone system.

The contacts shown in the directory come from a number of sources.

Source/Type	Description
Personal	<p>These contacts are stored by the telephone system as part of your user settings.</p> <ul style="list-style-type: none">• They are displayed on the phone while you are using it. If you hot desk to another phone that also stores your contacts on the system, your personal contacts move with you.• You can have up to 250 personal directory entries that you can add, edit and delete through the phone.<ul style="list-style-type: none">- Note: While you are allowed up to 250 personal directory entries, the total capacity of the system may limit that if it has been reached.• The system administrator can add, edit and delete your personal directory entries.• The system administrator can apply an exclude from directory setting to particular users and hunt groups. They are then not included in the directory seen by other users.
Users	<p>These contacts list all the other users on the telephone system. If your system is part of a network of telephone systems, it includes users on the other systems.</p>
Groups	<p>These contacts list all the hunt groups on the telephone system. If your system is part of a network of telephone systems, it includes those hunt groups that the system administrator has configured to be advertised across the network.</p>
External	<p>These contacts are viewable and usable by all phone users. These are two types of external contacts:</p> <ul style="list-style-type: none">• Some external contacts are entered into the telephone system configuration by the system administrator.• Other external contacts are those imported by the telephone system from other directory sources.

Related links

[How the Directory Search Works](#) on page 81
[Managing External Contacts](#) on page 84
[Viewing Contacts](#) on page 84
[Making a Call from the Directory](#) on page 85
[Using the Directory for Other Functions](#) on page 86
[Adding a New Contact](#) on page 86
[Adding a Contact from Your Call Log](#) on page 87
[Editing a Contact](#) on page 88
[Deleting a Contact](#) on page 89

How the Directory Search Works

The phone's directory search works by applying a progressive match as you dial additional keys. That matching is applied simultaneously to all parts of the names.

For example:

1. Starting by pressing **4** (the **GHI** key). That matches all names where part of the name begins with a **G**, **H** or **I**.
2. Then pressing **3** (the **DEF** key) reduces the matches shown to those where part of the name begins with **Gd**, **Ge**, **Gf**, **Hd**, **He** and so on.
3. As you dial further characters, the possible matches are reduced further.
4. At any time, you can scroll the list of matches and select one of the matches or press another dialpad key to improve the matching further.

For example, to search for "Henry Jones", you can dial **HENRY** by pressing 43679.

Dial	H	E	N	R	Y
Matches	4GHI	3DEF	6MNO	7PQRS	9WXYZ
Adam Johns	Claire <u>G</u> reggs	<u>G</u> emma Jones	<u>G</u> emma Jones	<u>H</u> enrietta Green	<u>H</u> enry Jones
Bob Smith	<u>G</u> emma Jones	<u>H</u> enrietta Green	<u>H</u> enrietta Green	<u>H</u> enry Jones	<u>H</u> enry Smith
Claire Greggs	<u>H</u> arold Bishop	<u>H</u> enry Jones	<u>H</u> enry Jones	<u>H</u> enry Smith	
Gemma Jones	<u>H</u> enrietta <u>G</u> reen	<u>H</u> enry Smith	<u>H</u> enry Smith	Tony <u>G</u> eorge	
Harold Bishop	<u>H</u> enry Jones	<u>I</u> da James	Tony <u>G</u> eorge	Simon <u>H</u> enricks	
Henrietta Green	<u>H</u> enry Smith	IT <u>H</u> elpdesk	Simon <u>H</u> enricks		
Henry Jones	<u>I</u> da James	Tony <u>G</u> eorge			
Henry Smith	IT <u>H</u> elpdesk	Simon <u>H</u> enricks			
Ida James	Tony <u>G</u> eorge	Sales <u>H</u> elp			
IT Helpdesk	Simon <u>H</u> enricks				
London Office	Sales <u>H</u> elp				
John Smith					
Tony George					
Simon Henricks					
Sales Support					
Sales Help					

Alternatively to search for "Henry Jones", you could dial **JONES** by pressing 56637.

Dial	J	O	N	E	S
Matches	5JKL	6MNO	6MNO	3DEF	7PQRS
Adam Johns	Adam <u>J</u> ohns	Adams <u>J</u> ohns	Gemma <u>J</u> ones	Gemma <u>J</u> ones	Gemma <u>J</u> ones
Bob Smith	Gemma <u>J</u> ones	Gemma <u>J</u> ones	Henry <u>J</u> ones	Henry <u>J</u> ones	Henry <u>J</u> ones
Claire Greggs	Henry <u>J</u> ones	Henry <u>J</u> ones	<u>L</u> ondon Office	<u>L</u> ondon Office	
Gemma Jones	Ida <u>J</u> ames	<u>J</u> ohn Smith			
Harold Bishop	<u>J</u> ohn Smith	<u>L</u> ondon Office			
Henrietta Green	<u>L</u> ondon Office	Peter <u>J</u> ohnson			
Henry Jones	Peter <u>J</u> ohnson				
Henry Smith					
Ida James					
IT Helpdesk					
John Smith					
London Office					
Peter Johnson					
Tony George					
Simon Henricks					
Sales Support					
Sales Help					

Dialing Additional and Accented Characters

The keys on the telephone number pad can be used to enter characters other than those marked on the button.

For example, though marked with just **ABC**, the 2 key also matches the accented forms of those characters, for example À, Á, Â, Ã, Ä, Å and Ç. The set of additional unmarked characters matched varies depending on the language settings of your system.

Alternate Search Methods

By default, the name matching is applied simultaneously all parts of the contact names. That is, the first, middle and last parts of the displayed names. Your system administrator can change this to a more basic search if required; for example to match from just the start of the first name or last name. However, the change applies to all phones on the system.

Related links

[Contacts](#) on page 80

Managing External Contacts

If you have been configured as a system phone user by the system administrator, then you can also add, edit and delete some external directory contacts.


- This only applies to external directory contacts entered locally into configuration of the telephone system to which you are logged in.
- External directory contacts imported by the system from other sources cannot be edited. However, if a local entry is created with the same name or number as an imported entry, the imported entry is discarded in favor of the local one.

Related links

[Contacts](#) on page 80

Viewing Contacts

Procedure

1. Access the directory contacts:
 - a. Press the  **CONTACTS** key. The directory menu is displayed.
 - b. Use the left and right cursor keys to select the type of directory entries shown.
 - **All** - All directory entries.
 - **Personal** - Your own personal directory entries.
 - **External** - Directory entries stored by the telephone system for all users to use.
 - **Users** - The names and numbers of other users on the telephone system.
 - **Groups** - The names and numbers of hunt groups on the telephone system.
 - a. Use the up and down cursor keys to scroll through the list. Alternatively, you can start dialing the name you want to display only matching entries as follows:
 - Pressing a key enters all of the characters represented by that key. Pressing another key adds the characters from that button to the previous key press.
 - For example, dialing **527** matches all names starting with **JAS** (for example "Jason") and with **KAR** (for example "Karl") plus any other letter combinations from those 3 key presses. See [How the Directory Search Works](#) on page 81.
 - To remove all the characters entered so far, press **Clear**.
 - b. To view more details of the highlighted name, press **Details**. To return to the directory press **List**.
2. When the required entry is highlighted, press **Details** to display the name, number and type of contact.
3. Use the up and down cursor keys to scroll through the contacts.

4. The soft keys available depends on the type of directory entry:
- **Call** - Make a call to the stored number.
 - **List** - Return to the list of contacts.
 - **More** - If the contact is one you can edit, the **More** soft key allows you to access the options below.
 - **Edit** - Edit the name and number.
 - **Delete** - Delete the name and number.
 - **New** - Add a new personal directory contact.

Related links


[Contacts](#) on page 80


Making a Call from the Directory

You can use any directory contact to make a call.

- You can also use the directory to select a contact anytime the **Dir** soft key is displayed in the function's menus. In that case, the system automatically only shows the types of contacts supported for the function.

Procedure

1. Access the contacts directory:
 - a. Press the  **CONTACTS** key. The directory menu is displayed.
 - b. Use the left and right cursor keys to select the type of directory entries shown.
 - **All** - All directory entries.
 - **Personal** - Your own personal directory entries.
 - **External** - Directory entries stored by the telephone system for all users to use.
 - **Users** - The names and numbers of other users on the telephone system.
 - **Groups** - The names and numbers of hunt groups on the telephone system.
 - a. Use the up and down cursor keys to scroll through the list. Alternatively, you can start dialing the name you want to display only matching entries as follows:
 - Pressing a key enters all of the characters represented by that key. Pressing another key adds the characters from that button to the previous key press.
 - For example, dialing **527** matches all names starting with **JAS** (for example "Jason") and with **KAR** (for example "Karl") plus any other letter combinations from those 3 key presses. See [How the Directory Search Works](#) on page 81.
 - To remove all the characters entered so far, press **Clear**.

- b. To view more details of the highlighted name, press **Details**. To return to the directory press **List**.
2. When the required entry is highlighted, press **Call** or press the  button next to the name.

Related links

[Contacts](#) on page 80

Using the Directory for Other Functions

Within other menus where entry of a number is required, it may be possible to use the directory to select an existing number by name. If this option is available, it is indicated by the **Dir** soft key appearing.

When using the directory in this way, the contacts shown depend on the type of function being set. For example, for some functions only group names are displayed, for others only user names.

Procedure

1. Press the **Dir** soft key.
2. Either dial the name to see a list of matches or press the **List** soft key to list all names.
 - a. Use the up and down cursor keys to scroll through the list. Alternately start dialing the name you want to find to display only matching entries. If you dial a name, to return to the full list press the **Clear** soft key.
 - b. To view more details of the highlighted name press **Details**. To return to the directory press **List**.
3. When the required entry is highlighted, press **Select**.
4. You are returned to the menu in which you selected the **Dir** soft key.

Related links


[Contacts](#) on page 80

Adding a New Contact

So long as the telephone system capacity has not been reached, you can add up to 250 personal directory entries.

- If you have been configured as a system phone user by the system administrator, then you can also add, edit and delete some external directory contacts.

Procedure

1. Access your personal directory contacts:
 - a. Press the  **CONTACTS** key. The directory menu is displayed.
 - b. Use the left and right cursor keys to select your **Personal** directory.
2. Press the **New** soft key.
 - a. Use the menu to edit the name and number. See [Entering Text Characters](#) on page 169.
 - b. Use the up and down cursor keys to switch between number and name entry.
 - c. To exit without making any changes, press the **Cancel** soft key.
 - d. When you have entered the name and number, press **Save**.
3. If you have system phone rights, select where you want to save the new contact:
 - **Personal Contact** - Save the contact as one of your private contacts.
 - **External Contact** - Save the contact as a system contact that all users can see and call.


Related links

[Contacts](#) on page 80

Adding a Contact from Your Call Log

You can add a name and number shown in your call log to your personal contacts.

Procedure

1. Access your call log:
 - a. Press the  **CALL LOG** button.
 - If you have any new missed calls, the button is illuminated and opening the call log shows missed calls.
 - b. Use the left/right cursor keys to select the type of records shown: **All**, **Outgoing**, **Incoming** and **Missed**.
 - c. Use the up/down cursor keys to scroll through the records.
2. Press **More** and then press the **+Contact** soft key.
3. Use the up and down cursor keys to switch between the name and number details for the new contact.
4. Using the telephone keypad and the **Bksp** soft key you can edit the name and the number. See [Entering Text Characters](#) on page 169.
5. To return without saving the name and number, press the **Cancel** soft key.

6. When the name and number are set as required, press the **Save** soft key.
7. If you have system phone rights, select where you want to save the new contact:
 - **Personal Contact** - Save the contact as one of your private contacts.
 - **External Contact** - Save the contact as a system contact that all users can see and call.

Related links


[Contacts](#) on page 80

Editing a Contact

You can edit the contacts in your own personal directory.

- If you have been configured as a system phone user by the system administrator, then you can also add, edit and delete some external directory contacts.

Procedure

1. Access your personal directory contacts:
 - a. Press the  **CONTACTS** key. The directory menu is displayed.
 - b. Use the left and right cursor keys to select your **Personal** directory.
 - a. Use the up and down cursor keys to scroll through the list. Alternatively, you can start dialing the name you want to display only matching entries as follows:
 - Pressing a key enters all of the characters represented by that key. Pressing another key adds the characters from that button to the previous key press.
 - For example, dialing **527** matches all names starting with **JAS** (for example "Jason") and with **KAR** (for example "Karl") plus any other letter combinations from those 3 key presses. See [How the Directory Search Works](#) on page 81.
 - To remove all the characters entered so far, press **Clear**.
 - b. To view more details of the highlighted name, press **Details**. To return to the directory press **List**.
2. Locate the required entry and press **Details**.
3. Press **More** and then **Edit**.
 - a. Use the menu to edit the name and number. See [Entering Text Characters](#) on page 169.
 - b. Use the up and down cursor keys to switch between number and name entry.
 - c. To exit without making any changes, press the **Cancel** soft key.
 - d. When you have entered the name and number, press **Save**.

Related links


[Contacts](#) on page 80

Deleting a Contact

You can delete a contact from your own personal directory.

- If you have been configured as a system phone user by the system administrator, then you can also add, edit and delete some external directory contacts.


Procedure

1. Access your personal directory contacts:
 - a. Press the  **CONTACTS** key. The directory menu is displayed.
 - b. Use the left and right cursor keys to select your **Personal** directory.
 - a. Use the up and down cursor keys to scroll through the list. Alternatively, you can start dialing the name you want to display only matching entries as follows:
 - Pressing a key enters all of the characters represented by that key. Pressing another key adds the characters from that button to the previous key press.
 - For example, dialing **527** matches all names starting with **JAS** (for example "Jason") and with **KAR** (for example "Karl") plus any other letter combinations from those 3 key presses. See [How the Directory Search Works](#) on page 81.
 - To remove all the characters entered so far, press **Clear**.
 - b. To view more details of the highlighted name, press **Details**. To return to the directory press **List**.
2. Locate the required entry and press **Details**.
3. Press **More** and then **Delete**.
4. Press **Delete** again to confirm the action.

Related links

[Contacts](#) on page 80

Chapter 17: Using the Call Log

This menu is accessed by pressing the  key. The call log you see is a call log stored on the telephone system.

If you log in at another phone, your call history moves with you.


Your call history contains your most recent answered calls, the most recent calls you made and the most recent missed calls. If configured by the system administrator, it can also include the most recent calls missed by each hunt group of which you are a member.

Related links

- [Missed Calls](#) on page 90
- [Missed Group Calls](#) on page 91
- [Accessing Your Call Log](#) on page 91
- [Making a Call from Your Call Log](#) on page 92
- [Viewing Call Details](#) on page 92
- [Deleting a Call from Your Call Log](#) on page 93
- [Deleting the Whole Call Log](#) on page 94
- [Adding a Call Log Call to Your Contacts](#) on page 94

Missed Calls

Missed calls are calls to you that you did not answer. Your system administrator can also configure whether or not the log includes calls presented to you but are answered by someone else or by voicemail.

The  button is illuminated when you have any new missed calls in your call log. The lamp is extinguished when you have viewed the missed call in the call log or the record of that call is no longer in your call log.

Related links

- [Using the Call Log](#) on page 90

Missed Group Calls

If you are a member of any hunt groups, the system administrator can configure whether or not your missed calls log should also include missed hunt groups calls.



Missed hunt group do not have to have rung at your phone. They are recorded as missed if presented to the hunt group and not answered by any of the members.

Related links

[Using the Call Log](#) on page 90

Accessing Your Call Log

Procedure

1. Access your call log:
 - a. Press the  **CALL LOG** button.
 - If you have any new missed calls, the button is illuminated and opening the call log shows missed calls.
 - b. Use the left/right cursor keys to select the type of records shown: **All**, **Outgoing**, **Incoming** and **Missed**.
 - c. Use the up/down cursor keys to scroll through the records.
2. You can use the functions listed at the bottom of the display by pressing the soft key below the function name.
 - **Call** – Make a call to the number stored in the currently displayed call log record.
 - **Details** – Display more details about the current call log record. You can also add the caller details to your personal directory if required.
 - **More** – Switch between the different sets of available soft key functions.
 - **Delete** – Deletes the currently displayed record.
 - **Del All** – Delete all the call log records, not just the current types of records being shown.
 - **+Contact** – Add the currently highlighted call log record to your personal contacts.
3. To exit the call log, press  **PHONE** button.

Related links

[Using the Call Log](#) on page 90

Making a Call from Your Call Log

You can use your call log to make calls.

Procedure

1. Access your call log:
 - a. Press the **CALL LOG** button.
 - If you have any new missed calls, the button is illuminated and opening the call log shows missed calls.
 - b. Use the left/right cursor keys to select the type of records shown: **All**, **Outgoing**, **Incoming** and **Missed**.
 - c. Use the up/down cursor keys to scroll through the records.
2. Press **Call** to call the number displayed in the call record. This option is not available if the caller withheld their number.

Related links

[Using the Call Log](#) on page 90

Viewing Call Details

You can view additional details about the currently shown call.

Procedure

1. Access your call log:
 - a. Press the **CALL LOG** button.
 - If you have any new missed calls, the button is illuminated and opening the call log shows missed calls.
 - b. Use the left/right cursor keys to select the type of records shown: **All**, **Outgoing**, **Incoming** and **Missed**.
 - c. Use the up/down cursor keys to scroll through the records.
2. Press the **Details** soft key. The individual details of the currently selected call record are displayed. The possible values are:
 - **Name** - The name of the caller if known.
 - **Number** - The number of the caller if available.
 - **Time and Date** - The time of the call.
 - **Call Type Icon** - The type of call record.

- **Count** - How many time a call of the same type, name and number has occurred. Only the details of the most recent call are kept in your call log. However the count indicates if the caller has rung or has been rung several times.
 - **Duration** - The length of the call.
3. While you are in the details of a call record, the soft key functions available are:
- **Call** – Make a call to the number stored in the currently displayed call log record.
 - **List** - Go back to the normal call screen to select another call record. You can also use the up and down cursor keys to view the previous or next record.
 - **Delete** – Deletes the currently displayed record.
 - **More** – Switch between the different sets of available soft key functions.
 - **Del All** – Delete all the call log records, not just the current types of records being shown.
 - **+Contact** – Add the currently highlighted call log record to your personal contacts.

Related links

[Using the Call Log](#) on page 90

Deleting a Call from Your Call Log

You can delete the currently displayed call record. If the record is a missed hunt group call, the record is also deleted from the call log of other users configured to see the same hunt group's missed calls.

Procedure

1. Access your call log:
 - a. Press the **CALL LOG** button.
 - If you have any new missed calls, the button is illuminated and opening the call log shows missed calls.
 - b. Use the left/right cursor keys to select the type of records shown: **All**, **Outgoing**, **Incoming** and **Missed**.
 - c. Use the up/down cursor keys to scroll through the records.
2. When the required record is highlight, press **More** and then press **Delete**.

Related links

[Using the Call Log](#) on page 90

Deleting the Whole Call Log

You can delete all call records from your call log. This action deletes all call logged , not just the type you are currently viewing.

Procedure

1. Access your call log:
 - a. Press the **CALL LOG** button.
 - If you have any new missed calls, the button is illuminated and opening the call log shows missed calls.
 - b. Use the left/right cursor keys to select the type of records shown: **All**, **Outgoing**, **Incoming** and **Missed**.
 - c. Use the up/down cursor keys to scroll through the records.
2. When the required record is highlight, press **More** and then press **Del All**.

Related links

[Using the Call Log](#) on page 90

Adding a Call Log Call to Your Contacts

You can add a name and number shown in your call log to your personal contacts.

Procedure

1. Access your call log:
 - a. Press the **CALL LOG** button.
 - If you have any new missed calls, the button is illuminated and opening the call log shows missed calls.
 - b. Use the left/right cursor keys to select the type of records shown: **All**, **Outgoing**, **Incoming** and **Missed**.
 - c. Use the up/down cursor keys to scroll through the records.
2. Press **More** and then press the **+Contact** soft key.
3. Use the up and down cursor keys to switch between the name and number details for the new contact.
4. Using the telephone keypad and the **Bksp** soft key you can edit the name and the number. See [Entering Text Characters](#) on page 169.
5. To return without saving the name and number, press the **Cancel** soft key.
6. When the name and number are set as required, press the **Save** soft key.

7. If you have system phone rights, select where you want to save the new contact:

- **Personal Contact** - Save the contact as one of your private contacts.
- **External Contact** - Save the contact as a system contact that all users can see and call.

Related links


[Using the Call Log](#) on page 90

Draft

Part 5: Voicemail

Draft

Chapter 18: Voicemail

If your telephone system includes a voicemail server, pressing the  **MESSAGE** button accesses voicemail. Your system administrator can configure whether that access uses either spoken prompts from the voicemail server or visual menus on the phone called 'visual voice'. This guide assumes the default operation of using the visual voice menus.

This section covers just the visual voice functions that you can use from the phone's menus. For the full range of mailbox controls that you may be able to use, see [Other Mailbox Guides](#) on page 104.

Related links

- [Message Waiting Indication](#) on page 97
- [Accessing the Visual Voice Menus](#) on page 98
- [Checking Messages Using Visual Voice](#) on page 98
- [Leaving a Message](#) on page 99
- [Using Voicemail Email](#) on page 100
- [Recording Your Mailbox Greeting](#) on page 100
- [Record Your Name](#) on page 101
- [Changing Your Voicemail Code](#) on page 102
- [Switching Voicemail On/Off](#) on page 102
- [Transferring a Call to Voicemail](#) on page 103
- [Sending an Incoming Call to Your Mailbox](#) on page 103
- [Voicemail Short Codes](#) on page 103
- [Other Mailbox Guides](#) on page 104

Message Waiting Indication


The message lamp on your phone is used to indicate when you have new messages in your voicemail mailbox.

The system administrator can also configure it so that you receive new message waiting indications for hunt groups or other users.

Related links


- [Voicemail](#) on page 97

Accessing the Visual Voice Menus

Normally, pressing the  **MESSAGE** key accesses your phone's visual voice menus. However, if your system has been configured to use spoken prompts by default, you can still access the visual voice menus by using the following process.

- The number of simultaneous users using voicemail can be limited by the system licenses. In order to prevent licenses being used unnecessarily, the phone will automatically exit the visual voice menus after 10 minutes if idle.

Procedure


1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Visual Voice**.
 - Depending on how your system is configured, you may be required to enter your voicemail password and then press **Done**.

Related links

[Voicemail](#) on page 97

Checking Messages Using Visual Voice

Procedure

1. Press the  **MESSAGE** button.
 - Depending on how your system is configured, you may be required to enter your voicemail password and then press **Done**.
2. The **Visual Voice** menu is displayed.
3. The numbers shown against the **Listen** option indicate the number of new, old, and saved messages in your mailbox.
 - If the system administrator has configured you to receive message waiting indication for any other users and/or hunt group mailboxes, you can also use the up and down cursor keys to highlight their names access the messages in those mailboxes.
4. Highlight **Listen** and press **Select**
5. Use the up and down cursor keys to highlight which messages (**New**, **Old** or **Saved**) you want to listen to and press **Select**. The details of the first message of that type are displayed.
6. You can use the up and down cursor keys to scroll through the messages.
7. Use the soft keys to control the playback actions for the currently highlighted message:
 - To select the next message or previous message, use the up and down cursor keys.

- To fast forward or rewind the current playing message by 5 seconds, use the left and right cursor keys.
- **Call** – Call the person who left the message.
- **Back** – Return to the previous menu.
- **Play/Pause** – Start/stop playback of the currently displayed message.
- **Delete** – Delete the message.
- **Save** – Mark the message as saved. Saved messages are not normally automatically deleted.
- **Copy** – Copy the message to another mailbox. The menu prompts you to enter the destination number.

Related links

[Voicemail](#) on page 97

Leaving a Message

You can use visual voice to record and send a voicemail message to other users' mailboxes.

Procedure

1. Press the **MESSAGE** button.
 - Depending on how your system is configured, you may be required to enter your voicemail password and then press **Done**.
2. The **Visual Voice** menu is displayed.
3. Use the cursor keys to select **Message**.
4. Press **Record** to start recording a messages.
5. To stop recording, press **Stop**.
6. You can now use the following soft keys:
 - **New** – Record the message again.
 - **Send To** – Enter the number to which you want to send the message and press **Add**. You can add several numbers. When the list of numbers to which the message should be sent is complete press **Send**.
 - **Play** – Listen to the recording.
 - **Cancel** – Abandon the message.


Related links

[Voicemail](#) on page 97

Using Voicemail Email

Voicemail email is a feature where emails are sent to your email address when your voicemail mailbox receives a new voicemail message. The email can include the voicemail message as an attachment or it can be just an alert.

Procedure

1. Press the  **MESSAGE** button.
 - Depending on how your system is configured, you may be required to enter your voicemail password and then press **Done**.
2. The **Visual Voice** menu is displayed.
3. Use the up and down cursor keys to scroll to the option **Email**. This option is only available if your email address has been set in your voicemail settings by the system administrator.
4. The menu displays your current voicemail email mode setting. Press **Change** to scroll through the possible settings:
 - **Off** - Do not send any emails.
 - **Copy** - Send an email with a copy of the new voicemail message attached.
 - **Forward** - Send an email with the new voicemail message attached and delete the message from the voicemail mailbox.
 - **Alert** - Send an email telling you there is a new message but do not attach a copy of the message.
5. When the required setting is displayed, press **Save**. To exit without changing the setting, press **Cancel**.


Related links

[Voicemail](#) on page 97

Recording Your Mailbox Greeting

Whilst the voicemail system plays a generic greeting to callers, prompting them to leave a message, you can replace it with your own greeting for your mailbox.

Procedure

1. Press the  **MESSAGE** button.
 - Depending on how your system is configured, you may be required to enter your voicemail password and then press **Done**.
2. The **Visual Voice** menu is displayed.
3. Use the up and down cursor keys to select **Greeting** and press **Select**.

4. Use the soft keys to listen to and record your mailbox greeting:
 - **Record** - Record a new greeting. Note that the greeting must be at least three seconds long or the voicemail system discards it.
 - **Listen** - Listen to the current greeting or the new greeting just recorded.
 - **Submit** - Submit the new recording as your mailbox greeting.
 - **Delete** - Delete your mailbox greeting. Your mailbox returns to using the system's default mailbox greeting.
 - **Cancel** - Cancel any new recording and return to the main visual voice menu.


Related links

[Voicemail](#) on page 97

Record Your Name

Use the following procedure to record a mailbox name. This feature is only available on systems using Embedded Voicemail.

Procedure


1. Press the  **MESSAGE** button.
 - Depending on how your system is configured, you may be required to enter your voicemail password and then press **Done**.
2. The **Visual Voice** menu is displayed.
3. Use the cursor keys to select **Name**.
4. Use the soft keys to listen to and record your mailbox name:
 - **Record** - Record a new name.
 - **Listen** - Listen to the existing recording or the one just recorded.
 - **Submit** - Submit the new recording as your mailbox name.
 - **Delete** - Delete your current name.
 - **Cancel** - Cancel any new recording and return to the main visual voice menu.

Related links

[Voicemail](#) on page 97

Changing Your Voicemail Code

Procedure

1. Press the  **MESSAGE** button.
 - Depending on how your system is configured, you may be required to enter your voicemail password and then press **Done**.
2. The **Visual Voice** menu is displayed.
3. Use the cursor keys to select **Password**.
4. Enter your current password and press **Save**.
5. Enter the new password that you want to use. When the desired password is complete, press **Save**.
 - Your system administrator set the rules for the required length of the code and to block the use of obvious codes (1234, 1111). You cannot save a new code until those requirements have been met. Contact your system administrator for details of your system's settings if necessary.


Related links

[Voicemail](#) on page 97

Switching Voicemail On/Off

You can control whether the telephone system uses voicemail to answer your unanswered calls. This does not switch off your mailbox which you can still access to play existing messages and use other functions.

Procedure

1. Press the  **MESSAGE** button.
 - Depending on how your system is configured, you may be required to enter your voicemail password and then press **Done**.
2. The **Visual Voice** menu is displayed.
3. Use the up and down cursor keys to highlight **Voicemail**.
4. Press the **Change** to switch between **On** or **Off**.
5. Press **Save** to save the change.


Related links

[Voicemail](#) on page 97

Transferring a Call to Voicemail

When set to visual voice mode, the  **MESSAGE** key can be used to transfer your current call to the voicemail mailbox of another user or group.

Procedure

1. With the call connected, press the  **MESSAGE** key. You are still connected to the call and can continue talking.
2. Dial the extension number of the user or group to which you want to transfer the call.
3. When the number matches a user or group, their name is displayed.
 - To transfer the call to the user or group's mailbox, press **Select**. The caller hears a few seconds of ringing and then the mailbox greeting.
 - To cancel the transfer, press **Cancel**.

Related links

[Voicemail](#) on page 97

Sending an Incoming Call to Your Mailbox

You can transfer a call targeted at you directly to your voicemail mailbox.

Procedure

1. If the call is not the currently highlighted call on the display, use the up and down cursor keys to highlight it.
2. Press the **ToVM** soft key. The call is redirected to your mailbox.

Related links

[Voicemail](#) on page 97

Voicemail Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. However, your system administrator can remove and change the short codes available to you or all users. To use a short code, you may have to put your currently call on hold.

These are useful as they can be dialed from any phone on the system. For example, this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by **N** in the short codes shown below.

- For a list of other common dialing short codes, see [Short Codes](#) on page 149.

Voicemail

Feature	Dial	Description
Check Messages	*17	Access mailboxes to check for messages.
Voicemail On	*18	Allow voicemail to be used to answer calls.
Voicemail Off	*19	Stop voicemail being used to answer calls.
Voicemail Ringback On	*48	Have voicemail ring your phone when you have any new messages. It rings after you next use the phone.
Voicemail Ringback Off	*49	

Related links

[Voicemail](#) on page 97

Other Mailbox Guides

In addition to accessing messages from the phone's menus, you can dial *17 to access your mailbox through spoken menu prompts. Your system administrator can also configure methods to access the spoken mailbox prompts remotely.

Depending on the voicemail server being used and the mode it is running in, use one of the following user guides to understand the features available:

- [Using IP Office Embedded Voicemail IP Office Mode](#)
- [Using IP Office Embedded Voicemail Intuity Mode](#)
- [Using a Voicemail Pro Intuity Mode Mailbox](#)
- [Using a Voicemail Pro IP Office Mode Mailbox](#)

Related links

[Voicemail](#) on page 97

Part 6: Other Features

Draft

Chapter 19: Account Codes

The telephone system can store a number of account codes. Account codes may be used to keep track of calls in relation to particular activities or clients. They can also be used to keep track of calls by particular users or sets of users.

- When an account code is entered while making a call or during a call, that account code is included in the call records output by the system.
- Accounts entered are checked against those stored by the telephone system. If an invalid code is entered, the account code is requested again.
- The system administrator can configure certain numbers or types of numbers to require entry of an account code before you can continue making a call to such a number.
- The system administrator can also configure a requirement for you to enter an account code before making any external call.

Related links

[Forced Account Codes](#) on page 106

[Manual Account Code Entry](#) on page 107

Forced Account Codes

The system administrator can configure certain numbers or types of numbers to require entry of an account code before you can continue making a call to such a number.

Procedure

1. The **Account Code** menu is displayed when you are required to enter an account code.
2. Enter the account code that you want to use.
3. Press the **Done** soft key.
4. If the account code was not a valid account code, the **Reenter Account** menu is displayed.

Related links


[Account Codes](#) on page 106

Manual Account Code Entry

You can enter account codes during a call or before making a call. The account code that you enter must match an account code set on the telephone system.

- Your IP Office system administrator controls whether you can access this menu.
- Access to this menu can be assigned to a programmable button configured with the **Account Code** action. See [Programmable Feature Buttons](#) on page 140.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use cursor keys to select **Call Settings**.
3. Use the up and down cursor keys to highlight **Account Code**.
4. Press the **Set** soft key.
5. Enter the account code that you want to use.
6. Press the **Done** soft key.
7. If the account code was not a valid account code, the **Failed** menu is displayed.

Related links

[Account Codes](#) on page 106

Chapter 20: Headset Operation

Your phone has a telephony headset socket suitable for the connection of phone headsets that connect via a HIS headset cable.

- If there are no currently connected call, a call answered or made by pressing an appearance button is connected either handsfree or through the headset according to the phone's audio path setting. See [Default Handsfree Audio Path](#) on page 109. The same applies to dialing a new call.
- If there is already a connected call to which you are talking through the headset, answering another call by pressing the appearance button, answers that call using the headset.

Related links

[Using a Headset](#) on page 108

[Headset Caller Volume](#) on page 109

[Automatic Gain Control](#) on page 109

[Default Handsfree Audio Path](#) on page 109

Using a Headset

- **To answer a call using a headset:** Press the **📞 HEADSET** button.
- **To end a headset call:** Press the **📞 HEADSET** button. If the other party ends the call, the **📞 HEADSET** button remains active. Press the button to end the headset usage.
- **To switch from the headset to the handset:** To switch from the headset to the handset, simply lift the handset.
- **To switch to handsfree from the headset:** To switch to handsfree from the headset, press the **📞 HEADSET** button. Replace the handset.
- **To switch from the headset to handsfree:** Press the **🔊 SPEAKER** button. See [Handsfree Speaker Operation](#) on page 111.
- **To switch to headset from handsfree:** Press the **📞 HEADSET** button. The button remains lit whilst you have a call connected handsfree.
- **To mute the call while on the headset:** Press the **🔇 MUTE** button. The button remains lit whilst the call is muted.

Related links

[Headset Operation](#) on page 108

Headset Caller Volume

While talking via the headset, you can adjust the volume of the caller.

Procedure

1. Use the + plus and – minus keys to adjust the volume.
2. Once you stop adjusting the volume, the display returns to normal after a few seconds.

Related links

[Headset Operation](#) on page 108

Automatic Gain Control

When using automatic gain control (AGC), the phone tries to maintain a constant audio level even if the incoming call changes between loud and quiet.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Audio**.
4. Use the cursor keys to select **Automatic gain control**.
5. Use the cursor keys to switch between **Handset**, **Headset**, or **Speaker**.
6. To change the current setting, press **Toggle**.
7. When completed, press **Save** or **Done**.
8. Press **Back/Exit** to exit the menus.

Related links

[Headset Operation](#) on page 108

Default Handsfree Audio Path

By default, when you make a call or answer a call without lifting the handset, the audio is played through the phone's speaker while you speak via the phone's microphone.

If you have a headset attached, you can change the phone's behavior so that the audio is played through the headset by default rather than the speaker.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Audio**.
4. Use the up and down cursor keys to highlight **Audio path**.
5. Use the left and right cursor keys to switch between **Headset** or **Speaker**.
6. When completed, press **Save** or **Done**.
7. Press **Back/Exit** to exit the menus.

Related links

[Headset Operation](#) on page 108

Chapter 21: Handsfree Speaker Operation

Your phone has a speaker and microphone that allows you make and answer calls handsfree. The speaker is located under the handset. The microphone is located near the bottom right of the phone's keypad.

- If there are no currently connected calls to which you are talking, a call answered by pressing its appearance button is connected either handsfree or through the headset according to the phone's audio path setting.
- If there is already a connected call to which you are talking handsfree, answering another call by pressing the appearance button answers that call handsfree.

Conference Phones

Your phone is not designed as a conference room speakerphone. It is designed for use by a user located directly in front of the phone, with no obstructions between themselves and the microphone. Phones designed to be used as conference speakerphones typically have multiple microphones and are able to handle sounds coming from multiple directions. For details of conference speakerphones supported by your phone system, contact your system administrator.

Related links

[Using Handsfree](#) on page 111

[Speaker Volume](#) on page 112

[Default Audio Path](#) on page 112

[Automatic Gain Control](#) on page 113

Using Handsfree

Procedure

Use the following options to work handsfree:

- **To answer a call handsfree:** Press the **|| SPEAKER** button. The button remains lit whilst you have a call connected handsfree.
- **To end a handsfree call:** Press the **|| SPEAKER** button again.
- **To switch from handsfree to the handset:** Simply lift the handset.
- **To switch to handsfree from the handset:** Press the **|| SPEAKER** button. The button remains lit whilst you have a call connected handsfree. Replace the handset.

- **To switch from handsfree to the headset:** Press the **📞 HEADSET** button. See [Headset Operation](#) on page 108.
- **To mute the call while handsfree:** Press the **🔇 MUTE** button.

Related links

[Handsfree Speaker Operation](#) on page 111

Speaker Volume

While talking via the speaker, you can adjust the volume of the caller.

Procedure

1. Use the **+** plus and **-** minus keys to adjust the volume.
2. Once you stop adjusting the volume, the display returns to normal after a few seconds.

Related links

[Handsfree Speaker Operation](#) on page 111

Default Audio Path

By default, when you make a call or answer a call without lifting the handset, the audio is played through the phone's speaker while you speak via the phone's microphone.

If you have a headset attached, you can change the phone's behavior so that the audio is played through the headset by default rather than the speaker.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Audio**.
4. Use the up and down cursor keys to highlight **Audio path**.
5. Use the left and right cursor keys to switch between **Headset** or **Speaker**.
6. When completed, press **Save** or **Done**.
7. Press **Back/Exit** to exit the menus.

Related links

[Handsfree Speaker Operation](#) on page 111

Automatic Gain Control

When using automatic gain control (AGC), the phone tries to maintain a constant audio level even if the incoming call changes between loud and quiet.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Audio**.
4. Use the cursor keys to select **Automatic gain control**.
5. Use the cursor keys to switch between **Handset**, **Headset**, or **Speaker**.
6. To change the current setting, press **Toggle**.
7. When completed, press **Save** or **Done**.
8. Press **Back/Exit** to exit the menus.

Related links

[Handsfree Speaker Operation](#) on page 111

Chapter 22: Logging In/Out

You may always use the same phone in the same location. However, the telephone system provides a number of features that allow you to use any phone on the system to make and receive calls.

Log In

You can log in at any phone that you want to use. All your calls are then redirected to that phone and your user settings are applied to calls made and received. If it is a phone that stores your contacts and call history on the system, your contacts and call log are displayed by the phone.

- Any other existing user of that phone is logged out while you are logged in.
- If you were logged in on another phone, you are logged out from it.
- If your phone system is in a network of phone systems, it may be possible to log in at extensions located on other phone systems in the network. Your system administrator will advise if you can 'remote hot desk' and what features are available to you when you do.

Log Out

When you log out from a phone, or are logged out by another user logging in, the telephone system may apply several actions:

- If you have a normal default extension and no one else is logged in there, you return to being logged in on that phone.
- If you remain logged out, you are treated the same as being on 'do not disturb', except that all calls to you go to voicemail if available.
- If you have a mobile twinned number, the system administrator can configure the system so that calls are still presented to your mobile twin while you are logged out.
- Your system administrator can configure a timeout which automatically logs you out if you do not use the phone in that time to make or answer a call.

Lock/Unlock

Separately from logging in and out, you can lock your phone settings. While locked, the phone can still be used to answer your calls and can be used to make internal and emergency calls. However it cannot be used to make external calls and your user settings cannot be accessed through the phones menus.

- You can set your phone to automatically lock itself after a period of inactivity.

Related links

[Logging In](#) on page 115

[Logging Out](#) on page 116

[Changing Your Security PIN](#) on page 117

[Locking Your Phone](#) on page 118

[Unlocking Your Phone](#) on page 118

[Auto Lock](#) on page 119

[Login Short Codes](#) on page 119

Logging In

When you log in to a phone, you take control of that phone. Incoming calls for you are redirected to that phone and your user information and settings are available. Any existing user on the phone is logged off when you log in.

The method for logging in depends on the current state of the phone:

- **Phone In Use** – If the phone is already in use you can still login. The existing user is logged out.
- **Logged Out - Not Logged In** – If the phone has no current user, it displays a basic menu with just the **Login** option is displayed. Note that in this state the phone can still be used to make internal and emergency calls.

Related links

[Logging In/Out](#) on page 114

[Logging In on Another User's Phone](#) on page 115

[Logging In on a "Not Logged In" Phone](#) on page 116

[Logging In on an Unregistered Phone](#) on page 116

Logging In on Another User's Phone

You can login at a phone that is already in use by another user. The existing user is logged out.

Procedure

1. Press the **Features** soft key.
2. Use the cursor keys to select **Mobile Twinning**.
3. Use the cursor keys to select **Login**.
4. The login menu is displayed.
 - a. Enter your extension number and press **Next**.
 - b. Enter your security PIN (login code).
 - c. Press **Done**.

Related links

[Logging In](#) on page 115

Logging In on a “Not Logged In” Phone

This method is used to login at an extension where the previous user has logged out and the phone has no current user. You can recognize a phone in this state by **NOT LOGGED IN** on the display.

Procedure

1. Press **Login**.
2. The login menu is displayed.
 - a. Enter your extension number and press **Next**.
 - b. Enter your security PIN (login code).
 - c. Press **Done**.

Related links

[Logging In](#) on page 115

Logging In on an Unregistered Phone

This method is used to login at an unregistered phone. You can recognize an unregistered phone by **Enter Extension** on the display. This method is not supported for hot desking, you can only log in using the base extension number originally used to install the phone.

Procedure

1. Enter your extension number. As you enter it, you can use the **Bksp** and **Clear** soft keys to make corrections.
2. When your number is displayed, press the **OK** soft key.
3. Enter the phone password. Use the **Bksp** and **Clear** soft keys to make corrections. This password is determined by your system administrator and is required for registration.
4. When you have entered the phone password, press **Done**. If the details are correct, you user details are loaded into the phone.

Related links


[Logging In](#) on page 115

Logging Out

Logging out using the method below disassociates you from the extension. What happens then depends on whether you are the default user of another extension and various other settings.

- This menu is only available if you have a security PIN/login code set.
- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **Logout**.
4. You are logged out of the phone. The results depend on several factors:
 - If the phone does not have a default user, or the default user is currently logged on elsewhere, the phone displays **NoUser**.
 - If the phone has a default user and they are not current logged on elsewhere, they are automatically logged back in unless they are set to forced login.
 - If you are the default user of another extension that is free (doesn't have anyone else logged in to it), you are automatically logged back in to that extension unless you are set to forced login.


Related links

[Logging In/Out](#) on page 114

Changing Your Security PIN

You can change your own security PIN (login code). This is not your voicemail code used for voicemail access. If set, this PIN is used for logging in at other phones, locking your phone, and accessing system administration features.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **Set Security Pin**.
4. Enter your current security PIN if you already have one and press **Done**.
5. Enter your new security PIN.
 - Your system administrator set the rules for the required length of the code and to block the use of obvious codes (1234, 1111). You cannot save a new code until those requirements have been met. Contact your system administrator for details of your system's settings if necessary.
6. Press **Save**.

Related links

[Logging In/Out](#) on page 114

Locking Your Phone

Rather than logging out, you can lock your phone. You can either lock your phone manually using the steps below or have it automatically locked after a period of phone inactivity. To use the lock feature you need to set a security PIN (you can lock the phone with a code but anyone can also unlock it).


Warning:

- If you have been given a phone login code set, you will need that code to unlock the phone. If you do not know your login code, contact your system administrator before using any lock features.

When your phone is locked:

- You can only use the phone to make internal and emergency calls.
- You cannot access the phone menus for your user settings.
- To unlock your phone, click **Unlock**. If you have a login code set, you need that code to unlock the phone. If you do not know your login code, contact your system administrator.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the up and down cursor keys to highlight **Lock**. Press the **Select**.
4. The phone is now locked and displays **Phone Locked**.

Related links

[Logging In/Out](#) on page 114

Unlocking Your Phone

The message **PHONE LOCKED** indicates that the phone has been locked. While locked, the phone can only be used to make internal calls to other extensions and none of the phone and user menus can be accessed.

Procedure

1. Press the **Unlock** soft key.
2. If you have a login code, enter that code to unlock the phone. If you do not know your login code, contact your system administrator.
3. Press the **Done** soft key.

Related links

[Logging In/Out](#) on page 114


Auto Lock

Rather than logging out, you can lock your phone. You can either lock your phone manually using the steps below or have it automatically locked after a period of phone inactivity.

When your phone is locked:

- You can only use the phone to make internal and emergency calls.
- You cannot access the phone menus for your user settings.
- To unlock your phone, click **Unlock**. If you have a login code set, you need that code to unlock the phone. If you do not know your login code, contact your system administrator.
-
- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **Phone Screen Settings**.
4. Use the up and down cursor keys to highlight **Auto Lock (minutes)**.
5. Press the **Change** soft key to change the setting or use the left or right cursor keys.
 - **Disabled** - Do not use the inactivity timer.
 - **1/5/30/60** - Lock the phone after the indicated number of minutes.
6. Press the **Save** soft key.

Related links

[Logging In/Out](#) on page 114

Login Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. However, your system administrator can remove and change the short codes available to you or all users. To use a short code, you may have to put your currently call on hold.

These are useful as they can be dialed from any phone on the system. For example, this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by **N** in the short codes shown below.

- For a list of other common dialing short codes, see [Short Codes](#) on page 149.

Login

Feature	Dial	Description
Log In	*35*N*P#	Log in to a phone using your extension number (N) and login code (P).
Log Out	*36	Log yourself out from the phone where you are currently logged in.

Related links

[Logging In/Out](#) on page 114

Chapter 23: Groups

Your system administrator can include you as a member of a group along with other users. Each group has its own extension number which can be used as the destination for a call.

- When a call is made to a group, it is presented to the available group members, either one at a time or all at the same time, until answered by one of the members.
- How long a group call rings at each group member before being presented to the next member is controlled by the group's own settings. Hunt groups also use voicemail and have their own settings for when an unanswered call should go to the group's mailbox. For group calls, the hunt group's voicemail settings are used rather than your settings.

The system administrator can enable a number of hunt group menu options on your phone. Each option is enabled for a selected hunt group or for all hunt groups of which you are a member:

- **Enable/Disable Your Group Membership** – When your membership of a hunt group is disabled, you no longer receive hunt group calls for that group. You are still a member of the group and can re-enable your membership.
- **Change the Hunt Group Service Status** – Each hunt group can either be in service, in night service, or out of service. When in night service or out of service, the groups calls are redirected to an alternate group, or to voicemail if available.
- **Change the Hunt Group Fallback Destination** – These menus allow you to change the alternate groups used for the group's calls when it is in night service or out of service status.

Related links

[Group Membership](#) on page 121

[Group Service Status and Fallback](#) on page 123

Group Membership

Only the system administrator can change a group, the group members, or group settings. However, you can be provided with options to enable or disable your group membership. While membership to a group is disabled, you do not receive any calls for that group.

Related links

[Groups](#) on page 121

[Switching Your Group Membership On/Off \(Status Menu\)](#) on page 122


[Switching Your Group Membership On/Off \(Features Menu\)](#) on page 122

Switching Your Group Membership On/Off (Status Menu)

Your system administrator can grant you the ability to enable/disable your membership to a group through the Status menu. When your membership to a group is disabled, you do not receive group calls for that group.

- Your IP Office system administrator can configure whether you have access to the **Membership**, **State** and **Fallback** options of a group. If they have not configured you for any groups, the **Group** menu is not shown.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight the hunt group name and your current membership status.
3. Press the **Enabled** or **Disabled** soft key to change the status of your membership to that group.
4. Press **Exit**.

Related links


[Group Membership](#) on page 121

Switching Your Group Membership On/Off (Features Menu)

You may be able to enable or disable your group membership for some of the groups to which you belong.

- Your IP Office system administrator can configure whether you have access to the **Membership**, **State** and **Fallback** options of a group. If they have not configured you for any groups, the **Group** menu is not shown.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Group**.
3. Use the cursor keys to select **Membership**.
4. Use the cursor keys to scroll through the list of hunt groups you can configure.
 - To change your membership to the highlighted group, press **Change**.
 - To change your membership to all groups, press **More** and then press either **All Ena** or **All Dis**.

Related links

[Group Membership](#) on page 121

Group Service Status and Fallback

- **Group Service Status** – A hunt group can be in one of the following service modes:
 - **InS (In Service)** – The group operates as normal, distributing calls to available members of the group.
 - **NS (Night Service)** – The group is in 'night service' mode. Calls are redirected to its night service fallback destination if set, otherwise to voicemail if available. A hunt group can also be put into and out of night service automatically by the telephone system using a time profile.
 - **OOS (Out of Service)** – The group is out of service. Calls are redirected to its out of service fallback destination if set, otherwise to voicemail if available. The phone displays an **O** when one of the groups of which you are a member is out of service.
 - **TP (Time Profile)** – This setting indicates that the group's status is being controlled by a time profile on the telephone system. That time profile sets when the group is in service and in night service. You can override this to put the group into the **Out of Service** state. You can then use the phone to return the group to time profile control when required.
- **Fallback Destination** – For the night service and out of service states, the hunt group can be configured with a fallback destination to which its calls are redirected. This destination can be another hunt group or user extension. If no fallback destination is set, the group's voicemail is used (if available). Separate night service and out of service fallback destinations can be set for each group.

Related links

[Groups](#) on page 121

[Changing a Group's Service Status \(Features Menu\)](#) on page 123

[Changing a Group's Service Status \(Status Menu\)](#) on page 124

[Changing a Group's Fallback Destination](#) on page 125


[Short Codes](#) on page 125

Changing a Group's Service Status (*Features Menu*)

Using the **Features** menu you may be able to change the service status of some groups to which you belong.

- Your IP Office system administrator can configure whether you have access to the **Membership**, **State** and **Fallback** options of a group. If they have not configured you for any groups, the **Group** menu is not shown.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Group**.
3. Use the cursor keys to select **State**.

4. Use the cursor keys to scroll through the list of hunt groups you can configure. The current status of each group is shown next to the group name.
 - **InS (In Service)** – The group operates as normal, distributing calls to available members of the group.
 - **NS (Night Service)** – The group is in 'night service' mode. Calls are redirected to its night service fallback destination if set, otherwise to voicemail if available. A hunt group can also be put into and out of night service automatically by the telephone system using a time profile.
 - **OOS (Out of Service)** – The group is out of service. Calls are redirected to its out of service fallback destination if set, otherwise to voicemail if available. The phone displays an **O** when one of the groups of which you are a member is out of service.
 - **TP (Time Profile)** – This setting indicates that the group's status is being controlled by a time profile on the telephone system. That time profile sets when the group is in service and in night service. You can override this to put the group into the **Out of Service** state. You can then use the phone to return the group to time profile control when required.
5. Use the controls at the bottom on the display to change the currently selected group's status.
 - **Change** - Change the status of the selected group.
 - **Save** - Exit the menus.


Related links

[Group Service Status and Fallback](#) on page 123

Changing a Group's Service Status (Status Menu)

If the system administrator has allowed you, you can change the service state of a group through the **Status** menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight the hunt group name and your current membership status.
3. Select the required state using the soft keys:
 - **InS (In Service)** – The group operates as normal, distributing calls to available members of the group.
 - **NS (Night Service)** – The group is in 'night service' mode. Calls are redirected to its night service fallback destination if set, otherwise to voicemail if available. A hunt group can also be put into and out of night service automatically by the telephone system using a time profile.

- **OOS (Out of Service)** – The group is out of service. Calls are redirected to its out of service fallback destination if set, otherwise to voicemail if available. The phone displays an **O** when one of the groups of which you are a member is out of service.
- **TP (Time Profile)** – This setting indicates that the group's status is being controlled by a time profile on the telephone system. That time profile sets when the group is in service and in night service. You can override this to put the group into the **Out of Service** state. You can then use the phone to return the group to time profile control when required.

Related links


[Group Service Status and Fallback](#) on page 123

Changing a Group's Fallback Destination

You may be able to use the **Features** menu to change the fallback destination for some hunt groups of which you are a member. These are the destinations to which the hunt groups calls are routed when it is in either night service state or the out of service state. The destination can be another group, another user or a dialing code configured by your system administrator.

- Your IP Office system administrator can configure whether you have access to the **Membership**, **State** and **Fallback** options of a group. If they have not configured you for any groups, the **Group** menu is not shown.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Group**.
3. Use the cursor keys to select **Fallback**.
 - Use the left/right cursor keys to switch between altering night service or out of service settings.
 - Use the cursor keys to scroll through the list of hunt groups you can configure in the current mode.
 - To change the fallback destination of the currently highlighted hunt group, press **Edit**.
 - To change the fallback destination of all the hunt groups, press **More** and then press **Edit All**.

Related links

[Group Service Status and Fallback](#) on page 123

Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. However, your system administrator can remove and change the short codes available to you or all users. To use a short code, you may have to put your currently call on hold.

These are useful as they can be dialed from any phone on the system. For example, this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by **N** in the short codes shown below.

- For a list of other common dialing short codes, see [Short Codes](#) on page 149.

Hunt Group

Feature	Dial	Description
Night Service Status On	*20*N#	Set a hunt group into night service status by entering its extension number (N).
Night Service Status Off	*21*N#	Take a hunt group out of night service status by entering its extension number (N).

Related links

[Group Service Status and Fallback](#) on page 123

Part 7: Phone Configuration

Draft

Chapter 24: Ringer Controls

This section covers controls for adjusting the ringing used by your phone.

Related links

- [Disabling the Ringer](#) on page 128
- [Visual Alerting](#) on page 128
- [Coverage Ring](#) on page 129
- [Ringer Volume](#) on page 129
- [Internal Auto-Answer](#) on page 130

Disabling the Ringer

This option can be used to turn off the ringer for all calls. If set to no ring, this disables both the phone's audible alerting and visual alerting.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the **PHONE** key and then press **Features**.
2. Use cursor keys to select **Call Settings**.
3. Use the cursor keys to select **Disable Ringer**.
4. To change the setting, press **Change**. Selecting **On** turns the ringer off.

Related links

- [Ringer Controls](#) on page 128

Visual Alerting

The message waiting lamp at the top-right corner of the phone can also be used to indicate when you have a call alerting your phone. The lamp is flashed to indicate a call waiting to be answered.

Procedure

1. Press the **A** button.

2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Phone**.
4. Use the cursor keys to select **Alerting on calls**.
5. Use the cursor keys to select **Beacon LED**.
6. Press **Toggle** to change the setting.
7. When completed, press **Save** or **Done**.
8. Press **Back/Exit** to exit the menus.

Related links


[Ringer Controls](#) on page 128

Coverage Ring

If you have any bridged appearance and or call coverage buttons, you can set the type of ringing (coverage ring) that should be used when a call alerts on any of those buttons. The options are to use normal ringing, a single non-repeated ring (abbreviated ring) or no ring. The coverage ring setting is only used if you do not already have a connected call. If you already have a connected call in progress, the shorter of the coverage ring and attention ring settings is used.

- This is a user setting which moves with you if you hot desk another phone.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use cursor keys to select **Call Settings**.
3. Use the cursor keys to select **Coverage Ring**.
4. Press the **Change** soft key to change the setting.
 - **Ring** - Use normal ringing.
 - **Abbreviated** - Use a single non-repeated ring (abbreviated ring).
 - **Off** - No ring.

Related links

[Ringer Controls](#) on page 128

Ringer Volume

You can adjust the ringer volume while the phone is idle or while it is ringing.

Procedure

1. With the phone idle or ringing, use the **+** plus and **–** minus keys to adjust the volume.
2. Once you stop adjusting the volume, the display returns to normal after a few seconds.

Related links


[Ringer Controls](#) on page 128

Internal Auto-Answer

You can select to have internal calls automatically connected if you are not already on a call. The phone connects the call after a brief tone, using either the phone's speaker or the headset as set by the phone's audio path setting (see [Default Handsfree Audio Path](#) on page 139).

You can assign this function to a feature button using the **Auto Answer** action. You can then use the button to turn auto-answer on/off. The button lamp indicates when auto answer is on. See [Programmable Feature Buttons](#) on page 140.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use cursor keys to select **Call Settings**.
3. Use the up/down cursor keys to select **Internal Auto-Answer**.
4. To change the setting, press **Change**.

Related links

[Ringer Controls](#) on page 128

Chapter 25: Display Controls

This section covers controls for adjusting the phone's display and the information shown on the display.

Related links

- [Display Brightness](#) on page 131
- [Display Contrast](#) on page 132
- [Single/Dual Column Display](#) on page 132
- [Last Call Duration Display](#) on page 133
- [Call Timer Display](#) on page 133
- [Display Language](#) on page 134
- [Auto Display Waiting Call](#) on page 134
- [Inactivity Timer \(Auto-Return\)](#) on page 135

Display Brightness

You can adjust the brightness of the phone's displays.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Display**.
4. Use the cursor keys to select **Brightness**.
5. Use the left/right cursor keys to adjust the brightness.
6. When completed, press **Save** or **Done**.
7. Press **Back/Exit** to exit the menus.

Related links

- [Display Controls](#) on page 131

Display Contrast

Through the phone menus you can change the contrast used on the display.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Display**.
4. Use the cursor keys to select **Contrast**.
5. Use the left/right cursor keys to adjust the contrast as required.
6. When completed, press **Save** or **Done**.
7. Press **Back/Exit** to exit the menus.

Related links

[Display Controls](#) on page 131

Single/Dual Column Display

The phone can use full-width display (single-column mode) or half-width display (dual-column mode) for the programmable buttons. The display mode used does not affect the number of programmable buttons configurable.

Your system administrator can select which mode the phone uses by default. However, you can then select the mode you prefer.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **Phone Screen Settings**.
4. Use the up and down cursor keys to highlight **Display Mode**.
5. Press the **Change** soft key to change the setting or use the left or right cursor keys.
 - **Dual Column** – Each programmed button occupies one half of the screen line on which it is displayed, either the right-hand or left-hand side. The adjacent physical button on that side of the display is used to indicate the button's status and to control the button feature.
 - **Single Column** – Each programmed button feature occupies the full width of the screen. The physical buttons on both sides of the display are used to control the button feature. However, the button status is only shown by the left-hand button. In this

mode, appearance button labels also show a call status icon (for example: idle, alerting, connected).

6. Press **Save**.


Related links

[Display Controls](#) on page 131

Last Call Duration Display

As an alternate to call timer display, you can have the phone briefly (4 seconds) display the duration of the call after it is ended.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use cursor keys to select **Call Settings**.
3. Use the up and down cursor keys to highlight **Show Last Call Duration**.
4. Change the setting as required.
5. Press **Save**.

Related links

[Display Controls](#) on page 131

Call Timer Display

When you have calls alerting on appearance buttons, the phone can include a timer in the appearance details shown on the display.

- The timer shows how long the call has been alerting.
- When you answer the call, it resets to show how long the call has been connected.
- The timer also shows how long a call has been on hold when you hold the call.

You can turn the timer display on or off. Turning it off provides more space for other call details on the display.

- For the currently selected call appearance, the call timer display can be temporarily turned on or off using a programmable button set to the **Timer** function.

Related links

[Display Controls](#) on page 131

Display Language

Your IP Office system administrator can configure which languages are available for use by the phone for its menus. You can select which of those languages the phone uses.

- The IP Office also sends text that is displayed in some of the menus. Wherever possible, the IP Office and the phone try to use the same languages. For example, if you change the phone language, the IP Office will try to send text to the phone in that language and to change your voicemail to use that language for spoken prompts.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Screen & Sound**.
4. Select **Language**.
5. Scroll through the different languages available.
6. To select the currently highlighted language, press **Select**.
7. When completed, press **Save** or **Done**.
8. Press **Back/Exit** to exit the menus.

Related links


[Display Controls](#) on page 131

Auto Display Waiting Call

By default, when you are connected on a call, the phone shows details of that call and soft key actions you can perform for that call. In order to see details of a waiting call, you need to scroll the display using the up and down cursor buttons.

You can opt to have the phone automatically show details of a waiting call when one alerts the phone and soft key actions that you can perform on the waiting call. If you use the scroll keys to return the display focus to the currently connected call, the focus automatically returns to the waiting call after a few seconds.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use cursor keys to select **Call Settings**.
3. Use the up and down cursor keys to highlight **Auto Display Waiting Call**.
4. Change the setting as required.

5. Press **Save**.

Related links


[Display Controls](#) on page 131

Inactivity Timer (Auto-Return)

You can set a timer to return the phone to its normal call display after a set period of phone inactivity.

- The timer is not applied to menus accessed through the **A** button.
- The timer does not affect the **Visual Voice** menu. However, the phone automatically closes that menu after 10 minutes if idle.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **Phone Screen Settings**.
4. Use the up and down cursor keys to highlight **Auto Return**.
5. Press the **Change** soft key to change the setting or use the left or right cursor keys.
 - **Disabled** - Do not use the inactivity timer.
 - **30/60** - Apply the inactivity timer after the selected number of seconds.
6. Press **Save**.

Related links

[Display Controls](#) on page 131

Chapter 26: Volume and Sound

This section covers controls that relate to volume and to the various sounds that your phone uses. These are in addition to the available ringer controls.

Related links

[Button Clicks](#) on page 136
[Error Tones](#) on page 137
[Ringer Volume](#) on page 137
[Handset Volume](#) on page 137
[Headset Volume](#) on page 138
[Speaker Volume](#) on page 138
[Automatic Gain Control](#) on page 138
[Default Handsfree Audio Path](#) on page 139

Button Clicks

While using the phone menus, the phone can provide a key press confirmation click sound. This can be disabled.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Audio**.
4. Use the cursor keys to select **Button clicks**.
5. When completed, press **Save** or **Done**.
6. Press **Back/Exit** to exit the menus.

Related links

[Volume and Sound](#) on page 136

Error Tones

The phone provides an error tone when you make an invalid selection. You can disable the error tone if required.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Audio**.
4. Use the cursor keys to select **Error tones**.
5. When completed, press **Save** or **Done**.
6. Press **Back/Exit** to exit the menus.

Related links

[Volume and Sound](#) on page 136

Ringer Volume

You can adjust the ringer volume while the phone is idle or while it is ringing.

Procedure

1. With the phone idle or ringing, use the **+** plus and **-** minus keys to adjust the volume.
2. Once you stop adjusting the volume, the display returns to normal after a few seconds.

Related links

[Volume and Sound](#) on page 136

Handset Volume

Whilst talking, you can adjust the volume of the incoming call. The volume is adjusted separately for whichever device is in use (handset, headset or speaker).

Procedure

1. With the call connected, use the **+** plus and **-** minus keys to adjust the volume.
2. The display returns to normal after a few seconds.

Related links

[Volume and Sound](#) on page 136

Headset Volume

While talking via the headset, you can adjust the volume of the caller.

Procedure

1. Use the **+** plus and **-** minus keys to adjust the volume.
2. Once you stop adjusting the volume, the display returns to normal after a few seconds.

Related links

[Volume and Sound](#) on page 136

Speaker Volume

While talking via the speaker, you can adjust the volume of the caller.

Procedure

1. Use the **+** plus and **-** minus keys to adjust the volume.
2. Once you stop adjusting the volume, the display returns to normal after a few seconds.

Related links

[Volume and Sound](#) on page 136

Automatic Gain Control

When using automatic gain control (AGC), the phone tries to maintain a constant audio level even if the incoming call changes between loud and quiet.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Audio**.
4. Use the cursor keys to select **Automatic gain control**.
5. Use the cursor keys to switch between **Handset**, **Headset**, or **Speaker**.
6. To change the current setting, press **Toggle**.
7. When completed, press **Save** or **Done**.
8. Press **Back/Exit** to exit the menus.

Related links

[Volume and Sound](#) on page 136

Default Handsfree Audio Path

By default, when you make a call or answer a call without lifting the handset, the audio is played through the phone's speaker while you speak via the phone's microphone.

If you have a headset attached, you can change the phone's behavior so that the audio is played through the headset by default rather than the speaker.

Procedure

1. Press the **A** button.
2. Use the cursor keys to select **Options & Settings**.
3. Use the cursor keys to select **Audio**.
4. Use the up and down cursor keys to highlight **Audio path**.
5. Use the left and right cursor keys to switch between **Headset** or **Speaker**.
6. When completed, press **Save** or **Done**.
7. Press **Back/Exit** to exit the menus.

Related links

[Volume and Sound](#) on page 136

Chapter 27: Programmable Feature Buttons

Those programmable buttons not assigned as appearance buttons by your administrator can be used for a range of other features. Those other features can be programmed by you or by your system administrator.

- Your administrator can restrict which buttons you can change.
- This guide covers only those features that assignable through the phone menus. Your administrator has access to a larger range of button functions.
- The use of the button lamps depends on the feature assigned to the button.
- Buttons programmed with a feature not supported by the phone, display **Invalid**.

Related links


[Editing Your Programmable Buttons](#) on page 140

[Programmable Button Features](#) on page 141

Editing Your Programmable Buttons

Self-administration is used to select and apply a function to a feature key. It can be used to replace or delete existing functions.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **Self-Administer**.
4. Enter your security PIN and press **Done**.
5. Use the cursor keys to scroll through the list of current functions assigned to each button.
 - To remove the existing function from a button press **Erase**.
 - You can also press **More** and use the **Copy** and **Paste** options to copy the settings of an existing button to another button.
 - To assign a function to the highlighted button press **Replace**.
 - Select the required function from the list and press **Select**.

- Depending on the function, you may need to enter some information such as a target extension number.
 - The button is given a default label based on the function assigned. To change the label, press **More** and then select **Label**. Use the keyboard to enter the text you want to display for the button label. Note that the label is only shown while editing the label and after you exit the administration menu.
6. When completed, press **Back**.

Related links

[Programmable Feature Buttons](#) on page 140

Programmable Button Features

There are a wide range of features that can be assigned to the buttons. This guide only lists those that you can assign to a button using the self-administer menu. Features that can only be assigned by your system administrator will be explained by them.

Some actions are not supported on all phones. However, they may be set for users who hot desk between different types of phone.

Related links

[Programmable Feature Buttons](#) on page 140

[Abbreviated Dial Button](#) on page 142

[Absence Text Button](#) on page 142

[Account Code Button](#) on page 142

[Auto Answer Button](#) on page 142

[Call Forward All Button](#) on page 143

[Call Park Button](#) on page 143

[Call Park to Other Button](#) on page 143

[Call Pickup Button](#) on page 143

[Call Pickup Any Button](#) on page 144

[Conf Meet Me Button](#) on page 144

[Drop Button](#) on page 144

[Flash Hook Button](#) on page 144

[Group Button](#) on page 144

[Page Button](#) on page 144

[Park and Page Button](#) on page 145

[Ringer Off Button](#) on page 145

[Self-Administer Button](#) on page 145

[Send All Calls Button](#) on page 145

[Suppress Digits Button](#) on page 145

[Timer](#) on page 146

[Twinning Button](#) on page 146

[User Button](#) on page 146

Abbreviated Dial Button

This action can be used as a speed dial button. While setting up the button, enter the number you would like it to dial.

You can enter a partial number and complete the dialing after pressing the button. For example, you can pre-program a button with a particular international dialing code.

Related links

[Programmable Button Features](#) on page 141

Absence Text Button

Set or clear an absence text message for display on your phone. When set, the absence text appears on the display of other Avaya phones when they call you.

When setting the message, you can select from a number of pre-configured messages and then add more text if you want.

Related links

[Programmable Button Features](#) on page 141

Account Code Button

This action can be set with or without an account code.

- If the button is set with an account code, that account code is applied to the current call when the button is pressed.
- If the button is set without an account code, pressing the button displays the enter account code menu. See [Manual Account Code Entry](#) on page 107.

Related links

[Programmable Button Features](#) on page 141

Auto Answer Button

A button configured with this action can be used to switch 'internal auto-answer' on or off. When 'internal auto-answer' is on, the button's red lamp is lit. Pressing the button again turns 'internal auto-answer' off.

Related links

[Programmable Button Features](#) on page 141

Call Forward All Button

A button with this action can be used to switch 'forwarding unconditional' on/off.

- If set with a preset number, that number is used as the forwarding destination.
- If set without a number, when the button is pressed you are asked to confirm your existing 'forward unconditional' destination number or to enter a new number.

The button's red lamp is lit when forwarding is enabled.

Related links

[Programmable Button Features](#) on page 141

Call Park Button

A button set to this action can be used to park and unpark calls. The button can be set with or without a park slot number.

- When associated with a specific park slot number, the button can park and unpark a call from that park slot. When a call has been parked in that park slot, the button's lamp flashes. Green if the call was parked using that button, red if parked by another method. Pressing the button again retrieves the call.
- When not associated with a specific park slot number:
 - If pressed while you have a call connected, that call is parked using a park slot number assigned by the system based on your extension number.
 - If pressed while you have no call connected, your phone displays details of your parked calls and allow you to unpark a selected call.
 - When you have calls that you parked (other than Park & Page) or others parked against your extension, the button's lamp flashes.

Related links

[Programmable Button Features](#) on page 141

Call Park to Other Button

A button set with this action can be used to park a call against another extension. The park slot number used is based on your extension number.

The button can be set with a target user number or left blank for number entry when the button is pressed. The button's red lamp is lit when a call is parked. The button can be pressed again to retrieve the call.

Related links

[Programmable Button Features](#) on page 141

Call Pickup Button

Answer a call ringing a user or hunt group.

The target user or group number from which to pickup a call can be set when the button is configured. If no number is set, pressing the button displays a menu for number entry.

Related links

[Programmable Button Features](#) on page 141

Call Pickup Any Button

Answer a call currently ringing on the telephone system.

Related links

[Programmable Button Features](#) on page 141

Conf Meet Me Button

A button programmed to this feature allows you to start or enter a conference by entering the conference ID.

Related links

[Programmable Button Features](#) on page 141

Drop Button

This action can be used to drop your current call without having to highlight it on the display. If the call is connected, pressing the key ends the call. If the call is ringing it may follow several routes. See [Dropping an Incoming Call](#) on page 36.

Related links

[Programmable Button Features](#) on page 141

Flash Hook Button

A button configured for this action sends a flash hook signal to a currently connected analog line.

Related links

[Programmable Button Features](#) on page 141

Group Button

A button can be programmed to indicate if there are any calls to a group waiting to be answered. A red flashing lamp indicates that there are calls waiting for the hunt group. Press the button to pickup the longest waiting call.

Related links

[Programmable Button Features](#) on page 141

Page Button

A button configured with this action can be used to make a page call.

The button can be configured with the target user or group for the page. If configured without a number, pressing the button displays a menu for number entry before making the page call.

Related links

[Programmable Button Features](#) on page 141

Park and Page Button

If your system administrator has configured your system for Park & Page, this button allows you to use the feature to park calls and announce the parked call to other users.

Related links

[Programmable Button Features](#) on page 141

Ringer Off Button

A button configured with this action can be used to turn your phone's ringer on or off.

When you turn the ringer off, visual alerting is also turned off. When the ringer has been turned off, the button's red lamp is lit. Pressing the button again turns the ringer on.

Related links

[Programmable Button Features](#) on page 141

Self-Administer Button

A button configured for this action can be used to access the Self Administer menu.

Related links

[Programmable Button Features](#) on page 141

Send All Calls Button

A button configured with this action can be used to switch 'do not disturb' on or off. When 'do not disturb' is on, the button's red lamp is lit or a red warning icon is displayed. Pressing the button again turns 'do not disturb' off.

Related links

[Programmable Button Features](#) on page 141

Suppress Digits Button

Masks the display of digits as you dial them on the phone. Dialed digits are replaced with an **s** character. The button is used to switch the suppression on/off. When 'suppress digits' has been set, the button's red lamp is lit. Pressing the button again cancels the suppression.

- If en-bloc dialing is active you still see the digits as you dial them. When you make the call the digits are suppressed.
- When the option to suppress digits is used, the call is not recorded in the call log.

Related links

[Programmable Button Features](#) on page 141

Timer

When a call is made or answered on a call appearance, the call appearance line can include a call timer. This is controlled by the phone's **Call Timer** setting.

During the call you may want to show or hide the call timer associated with the currently selected call appearance; for example, in order to see more of the caller ID information. Temporarily turning the call timer of the currently selected call appearance on or off can be done using a **Timer** button.

Note that when the call appearance is next used, the **Call Timer** setting determines whether or not the timer is initially displayed.

Related links

[Programmable Button Features](#) on page 141

Twinning Button

A button configured for this feature allows you to control your phone's mobile twinning operation. [Twinning](#) on page 75

This is only usable if your system administrator has configured you for mobile twinning.

- If pressed when the phone is idle, the phone displays the mobile twinning menu. You can use the menu to switch mobile twinning on/off and to setting the twinned destination.
- If pressed while a twinned call is connected to the twinned destination, the system attempts to reclaim the call.
- If pressed while connected to a call on the phone, the system attempts to transfer the call to the twinned destination. You do not need twinning switched on to use this feature.

Related links

[Programmable Button Features](#) on page 141

User Button

This type of button monitors the status of another user. The button lamp indicates the status of the user.

- **Off = Available** – Pressing the button makes a call to the user. In addition to calling the user, you can use the user button to transfer calls to the user or to start a conference with the user.
- **Slow Flash = Ringing** – Pressing the button display options to pickup the call.
- **Fast Flash = On a Call** – Pressing the button display the following options:
 - **Call** – Call the user.
 - **Message** – Cause a single burst of ringing on the user's phone. They also see the message "**Please Call**" followed by your extension number.

- **Voicemail** – Call the user's voicemail mailbox to leave a message.
- **CallBack** – Set an automatic callback on the user. The callback occurs when the user ends their current call.

The following options are only available if configured for you by your system administrator:

- **Drop** – Disconnect the user's current call.
- **Acquire** – Seize the user's current call.
- **Intrude** – Join the user's current call, turning it into a conference call.
- **Listen** – Start silent monitoring of the user's call.

Related links

[Programmable Button Features](#) on page 141

Draft

Part 8: Miscellaneous

Draft

Chapter 28: Short Codes

Short codes are numbers that you can dial to enable and disable various features. The following are default short codes that may be available. However, your system administrator can remove and change the short codes available to you or all users. To use a short code, you may have to put your currently call on hold.

These are useful as they can be dialed from any phone on the system. For example, this allows you to login at a basic analog extension and still control a number of features.

Some short codes require you to enter some information when you dial them, typically an extension number. That is indicated by **N** in the short codes shown below.

Park/Unpark

Feature	Dial	Description
Park Call	*37*N#	Parks the held call using the park number dialed in place of N .
Unpark Call	*38*N#	Unpark the call parked using the park number N .

Call Pickup

Feature	Dial	Description
Pickup Any Call	*30	Answer a call ringing on the telephone system.
Pickup a Group Call	*31	Answer a call ringing a group of which you are a member. You can use this even if your group membership is currently set to disabled.
Pickup a Users Call	*32*N#	Pickup a call ringing a user's extension number (N).
Pickup a Group Members Call	*53*N#	Pickup a call ringing the members of a group (N). This does not necessarily have to be a group call.

Conference

Feature	Dial	Description
Conference Held Calls	*47	Start a conference between yourself and any calls that you have on hold.
Join a Conference	*55*N#	Join a conference where N is the conference ID.

Do Not Disturb

Feature	Dial	Description
Switch Do Not Disturb On	*08	Set your phone to 'do not disturb.'

Table continues...

Feature	Dial	Description
Switch Do Not Disturb Off	*09	Switch off 'do not disturb.'
Add a Do Not Disturb Exception Number	*10*N#	Add a number (N) to your list of 'do not disturb' exceptions.
Delete a Do Not Disturb Exception Number	*11*N#	Remove a number (N) from your list of 'do not disturb' exceptions.
Cancel All Forwarding	*00	Switch off any forwarding (includes 'forward unconditional,' 'forward on busy,' 'forward on no answer,' 'follow me,' and 'do not disturb').

Follow Me

Feature	Dial	Description
Follow Me Here	*12*N#	Dialed at the extension to which you want your calls redirected. Use your own extension number (N) when dialing the short code.
Follow Me Here Cancel	*13*N#	Dialed at the extension from which you had redirected calls. Use your own extension number (N) when dialing the short code.
Follow Me To	*14*N#	Dialed at your phone. Dial the extension number (N) to which you want your calls redirected. You can dial just *14# to cancel follow me.
Cancel All Forwarding	*00	Switch off any forwarding (includes 'forward unconditional,' 'forward on busy,' 'forward on no answer,' 'follow me,' and 'do not disturb').

Forwarding

Feature	Dial	Description
Set the Forward Unconditional Destination	*07*N#	Set the destination number (N) for 'forward unconditional' when it is switched on.
Switch Forward Unconditional On	*01	Switch on 'forward unconditional.' A destination must have been set.
Switch Forward Unconditional Off	*02	
Include Hunt Group Calls in Forward Unconditional	*50	
Exclude Hunt Group Calls from Forward Unconditional	*51	
Set the Forward On Busy/No Answer Destination	*57*N#	Set the destination number (N) for 'forward on busy' and 'forward on no answer.' If no number has been set, those functions use the 'forward unconditional' number if set.
Switch Forward On Busy On	*03	

Table continues...

Feature	Dial	Description
Switch Forward On Busy Off	*04	
Switch Forward on No Answer On	*05	
Switch Forward on No Answer Off	*06	
Cancel All Forwarding	*00	Switch off any forwarding (includes 'forward unconditional,' 'forward on busy,' 'forward on no answer,' 'follow me,' and 'do not disturb').

Hunt Group

Feature	Dial	Description
Night Service Status On	*20*N#	Set a hunt group into night service status by entering its extension number (N).
Night Service Status Off	*21*N#	Take a hunt group out of night service status by entering its extension number (N).

Login

Feature	Dial	Description
Log In	*35*N*P#	Log in to a phone using your extension number (N) and login code (P).
Log Out	*36	Log yourself out from the phone where you are currently logged in.

Voicemail

Feature	Dial	Description
Check Messages	*17	Access mailboxes to check for messages.
Voicemail On	*18	Allow voicemail to be used to answer calls.
Voicemail Off	*19	Stop voicemail being used to answer calls.
Voicemail Ringback On	*48	Have voicemail ring your phone when you have any new messages. It rings after you next use the phone.
Voicemail Ringback Off	*49	

Chapter 29: System Administration

Your IP Office system administrator can configure you as a 'system phone' user. That allows you to use your phone to perform functions to help maintain your phone system and to report its status.

Related links

[Checking the System Information](#) on page 152

[Checking the Time Server Status](#) on page 153

[Setting the Date](#) on page 153

[Setting the Time](#) on page 154

[Setting the Time Offset](#) on page 155

[Restarting the System](#) on page 155


[Managing the Memory Cards](#) on page 156

[Reporting System Alarms](#) on page 158

Checking the System Information

Being able to check and report the system name, software version and IP address may be useful when reporting any potential problems to the system maintainer.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **System Administration**.
 - This option is only present if you have been configured as a system phone user by your system administrator.
4. Enter your security PIN (login code) and press **Done**.
5. Use the cursor keys to select **System Information**.
6. The system displays information about itself.


Related links

[System Administration](#) on page 152

Checking the Time Server Status

For systems that automatically obtain the time from a time server, this option allows you to check the current status of the time server and the information obtained from it.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **System Administration**.
 - This option is only present if you have been configured as a system phone user by your system administrator.
4. Enter your security PIN (login code) and press **Done**.
5. Use the cursor keys to select **Time Server Status**.
6. The time server information is listed. It includes the address of the time server, the current local time and the UTC time. If the phone system is configured for daylight savings then the current amount of daylight savings being applied to the local time is also shown.


Related links

[System Administration](#) on page 152

Setting the Date

The process below can be used when the telephone system does not obtain the time and date automatically. On systems that are configured to obtain the time automatically, the option for checking the **Time Server Status** is available instead. See [Checking the Time Server Status](#) on page 153.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **System Administration**.
 - This option is only present if you have been configured as a system phone user by your system administrator.
4. Enter your security PIN (login code) and press **Done**.
5. Use the cursor keys to select **Date**.
6. The current date being used by the telephone system is displayed.

7. Enter the required date:
 - Use the * or # keys to enter the / separators.
 - To delete the previous digit or character entered, press **Bksp**.
8. When a valid date has been entered, the display confirms that by showing the **Set** soft key.
9. To set the date as the new date to be used by the telephone system, press **Set**.

Related links


[System Administration](#) on page 152

Setting the Time

The process below can be used when the telephone system does not obtain the time and date automatically. On systems that are configured to obtain the time automatically, the option for checking the **Time Server Status** is available instead. See [Checking the Time Server Status](#) on page 153.

- The time display format is controlled by the telephone system. It can be set to either 12-hour or 24-hour format for all phones by your system administrator.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **System Administration**.
 - This option is only present if you have been configured as a system phone user by your system administrator.
4. Enter your security PIN (login code) and press **Done**.
5. Use the cursor keys to select **Time**.
6. The current time being used by the telephone system is displayed.
7. Enter the required time in 24-hour clock format:
 - Use either the * or # keys to enter the : separator.
 - To delete the previous digit or character, press **Bksp**.
8. When a valid time has been entered, the display confirms that by showing the **Set** soft key.
9. To set the time as the new time to be used by the telephone system, press **Set**.


Related links

[System Administration](#) on page 152

Setting the Time Offset

The process below can be used when the telephone system does not obtain the time and date automatically. On systems that are configured to obtain the time automatically, the option for checking the **Time Server Status** is available instead. See [Checking the Time Server Status](#) on page 153.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **System Administration**.
 - This option is only present if you have been configured as a system phone user by your system administrator.
4. Enter your security PIN (login code) and press **Done**.
5. Use the cursor keys to select **Local Time Offset**.
6. The current offset is displayed.
7. Enter the offset required in hours and minutes:
 - To enter the : separator press either the * or # key.
 - To delete the previous digit or character entered press the **Bksp** key.
 - To change the offset from between positive or negative press the right cursor key.
8. When a valid offset has been entered, the **Set** soft key is displayed.
9. To apply the offset to the current telephone system time, press the **Set** soft key.

Related links

[System Administration](#) on page 152

Restarting the System

You can shutdown the telephone system for a specified number of minutes.


The telephone system remains unavailable for the duration you specify, the default 10 minutes. After the shutdown duration, there is a further short delay for the telephone system to complete its restart.

Important:

- A shutdown must always be used to switch off the system. Simply removing the power cord or switching off the power input may cause errors.

- This is not a polite shutdown, any users calls and services in operation are stopped. Once shutdown, the system cannot be used to make or receive any calls until restarted.
- The shutdown process takes up to a minute to complete. When shutdown, the CPU LED and the base card LEDs 1 and 9 (if trunk daughter card fitted) flash red rapidly. The memory card LEDs are extinguished. Do not remove power from the system or remove any of the memory cards until the system is in this state.
- To restart a system when shutdown indefinitely, or to restart a system before the timed restart, switch power to the system off and on again.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **System Administration**.
 - This option is only present if you have been configured as a system phone user by your system administrator.
4. Enter your security PIN (login code) and press **Done**.
5. Use the cursor keys to select **System Shutdown**.
6. The current default timeout (10 minutes) setting is shown and can be used by pressing **OK** soft key. Otherwise, enter the timeout required in hours and minutes and then press the **Ok** soft key.
 - The allowable range for the timeout is from **00:00** to **24:00**. Note that a timeout of 00:00 indicates infinite (no) timeout.
 - The **OK** soft key is not displayed if the timeout entered is not within the allowed range.
 - To enter the : symbol in the timeout press either the * or # key.
 - To delete the previous digit or character entered press the left cursor key.
7. After pressing **OK**, you are asked to confirm whether you want to shutdown the system. Only proceed if you are sure. If you are not sure press **Back**.
8. If you press the **Confirm** soft key, the telephone system is shutdown.


Related links

[System Administration](#) on page 152

Managing the Memory Cards

The telephone system can be fitted with an additional memory card or cards which are used for various functions. The memory card menu allows you to check the status of the memory card or cards fitted to your telephone system and to perform a number of actions on the cards.

Procedure

1. Press the **Features** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press **Features**.
2. Use the cursor keys to select **Phone User**.
3. Use the cursor keys to select **System Administration**.
 - This option is only present if you have been configured as a system phone user by your system administrator.
4. Enter your security PIN (login code) and press **Done**.
5. Use the up and down cursor keys to scroll the display to the option **Memory Card** (*IP500/ IP500 V2*) or **File System** (*Server Edition*). The option shown varies depending on the type of telephone system.
6. The menu lists the current state of the system's memory cards and the actions that you can perform on the card.
7. The status of each memory card listed is either **No Card**, **Active**, or **Inactive**. Entries are only listed for the types of cards that are supported:
 - **CF** - This refers to the optional compact flash card that can be fitted to IP500 systems.
 - **System** - This refers to the first SD memory card that must be fitted to IP500 V2 systems.
 - **Option** - This refers to the second optional SD memory card that can be fitted to IP500 V2 systems.
8. The actions that can be performed on the memory cards are listed below the status of the card or cards. The actions available depend type of card and its current status. After selecting an action, you can then select the card on which you want the action performed and then press the **Confirm** soft key to start the action.
 - **Shut Down** (*IP500 V2*) – This option is available when an **Active** card is present. It allows the card to be made inactive.
 - **Start Up** – This option is available when an **Inactive** card is present. It allows the card to be made active again.
 - **System Backup** (*IP500 V2/Server Edition*) – This option is available when a **System** card is present and active. It allows the telephone system's current configuration settings to be copied to a backup file on the memory card.
 - **System Restore** – This option is available when a **System** card is present and active. It overwrites the telephone system's current configuration settings with those from a backup file on the card.
 - **Upgrade Config** (*IP500 V2*) – Copy configuration files from an **Option** card to the **System** card in the system control unit.
 - **Upgrade Binaries** (*IP500 V2*) – Copy software files from an **Option** card to the **System** card in the system control unit.

- **Copy** (*IP500 V2*) – This option is available on systems where both a **System** and **Option** memory card are active. It copies the contents of the **System** card to the **Option** card.

Related links

[System Administration](#) on page 152

Reporting System Alarms

An **S** in the phone status letters indicates a system alarm. This happens if you are configured as a system phone user.

Details of the alarm may also appear in your phone's **Status** menu. This allows you to report the problem to your system administrator or maintainer. Note that the alarms vary depending on the type of system.

Procedure

1. Press the **A** button.
2. Scroll to the alarm message text:
 - If displayed, press **Admin** to see additional information.
 - If displayed, press **Clear** to clear the alarm.

Related links

[System Administration](#) on page 152

Chapter 30: The Status Menu

The **Status** menu is not always visible. It is shown when you have any special call routing features active; for example, 'do not disturb' switched on.

It is also shown if the system administrator has given you the rights to change the status of your hunt group memberships or to change the service status of the hunt groups.

Related links


- [Do Not Disturb](#) on page 159
- [Follow Me To](#) on page 160
- [Follow Me Here](#) on page 160
- [Forward on Busy](#) on page 160
- [Forward on No Answer](#) on page 161
- [Forward Unconditional](#) on page 162
- [Forwarded Here](#) on page 162
- [Group Membership](#) on page 163
- [Group Status](#) on page 163
- [Switch Mobile Twinning Off](#) on page 164
- [Parked Calls](#) on page 164
- [System Alarms](#) on page 165

Do Not Disturb

You can use the **Status** menu to switch off 'do not disturb.'

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the cursor keys to select **Do Not Disturb**.
3. To clear the 'do not disturb' setting, press the **Off** soft key.


Related links

- [The Status Menu](#) on page 159

Follow Me To

If you have set a 'follow me to' destination for your calls, you can clear or change the setting through your phone's **Status** menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight **Follow Me To**.
 - To clear the 'follow me to' setting, press the **Clear** soft key.
 - To change the destination of the setting, press the **Details** soft key.


Related links

[The Status Menu](#) on page 159

Follow Me Here

If other users has a 'follow me' set to your phone, you can clear or change the setting through the **Status** menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight **Follow Me Here**.
 - To clear the setting, press the **Clear** soft key.
 - To change the destination of the setting, press the **Details** soft key.

Related links


[The Status Menu](#) on page 159

Forward on Busy

If your phone is set to 'forward on busy' you can clear or change the forward settings through the **Status** menu.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the cursor keys to select **Forward on No Answer**.
3. To switch forwarding off, press **Off**.
4. To change the setting, press **Details**.
 - To switch 'forward on busy' on or off, highlight **Fwd Busy** and press **On** or **Off**.
 - To switch 'forward on no answer' on or off, highlight **Fwd No Answer** and press **On** or **Off**.
 - To select which calls are forwarded, highlight **Call type**. Press **Change** to change the option between **All Calls** or **External Only**.
 - To change the destination, highlight **Destination** and press **Edit**. Enter the number and press **Select**.
 - If your IP Office does not allow you to forward or transfer calls to external numbers, you can only enter another extension number. The **Save** option is hidden if you enter any other type of number.
 - Press **Save** to save any changes.

Related links


[The Status Menu](#) on page 159

Forward on No Answer

If your phone is set to 'forward on no answer' you can clear or change the forward settings through the **Status** menu.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the cursor keys to select **Forward on No Answer**.
3. To switch forwarding off, press **Off**.
4. To change the setting, press **Details**.
 - To switch 'forward on busy' on or off, highlight **Fwd Busy** and press **On** or **Off**.
 - To switch 'forward on no answer' on or off, highlight **Fwd No Answer** and press **On** or **Off**.

- To select which calls are forwarded, highlight **Call type**. Press **Change** to change the option between **All Calls** or **External Only**.
- To change the destination, highlight **Destination** and press **Edit**. Enter the number and press **Select**.
 - If your IP Office does not allow you to forward or transfer calls to external numbers, you can only enter another extension number. The **Save** option is hidden if you enter any other type of number.
- Press **Save** to save any changes.


Related links

[The Status Menu](#) on page 159

Forward Unconditional

You can clear or change your 'forward unconditional' settings through the **Status** menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the cursor keys to select **Forward Unconditional**.
 - To switch off forward unconditional, press the **Off** soft key.
 - To change the forwarding settings, press the **Details** soft key.
3. Press **Save**.

Related links

[The Status Menu](#) on page 159

Forwarded Here

This option allows you to see the names of users who are currently forwarding calls to you. It includes 'forward unconditional,' 'forward on no answer,' and 'forward on busy.' A separate entry is shown for each user.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight **Fwd To Here**.

Related links


[The Status Menu](#) on page 159

Group Membership

Your system administrator can grant you the ability to enable/disable your membership to a group through the Status menu. When your membership to a group is disabled, you do not receive group calls for that group.

- Your IP Office system administrator can configure whether you have access to the **Membership**, **State** and **Fallback** options of a group. If they have not configured you for any groups, the **Group** menu is not shown.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight the hunt group name and your current membership status.
3. Press the **Enabled** or **Disabled** soft key to change the status of your membership to that group.
4. Press **Exit**.


Related links

[The Status Menu](#) on page 159

Group Status

If the system administrator has allowed you, you can change the service state of a group through the **Status** menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight the hunt group name and your current membership status.
3. Select the required state using the soft keys:
 - **InS (In Service)** – The groups operates as normal, distributing calls to available members of the group.

- **NS (Night Service)** – The group is in 'night service' mode. Calls are redirected to its night service fallback destination if set, otherwise to voicemail if available. A hunt group can also be put into and out of night service automatically by the telephone system using a time profile.
- **OOS (Out of Service)** – The group is out of service. Calls are redirected to its out of service fallback destination if set, otherwise to voicemail if available. The phone displays an **O** when one of the groups of which you are a member is out of service.
- **TP (Time Profile)** – This setting indicates that the group's status is being controlled by a time profile on the telephone system. That time profile sets when the group is in service and in night service. You can override this to put the group into the **Out of Service** state. You can then use the phone to return the group to time profile control when required.

Related links

[The Status Menu](#) on page 159

Switch Mobile Twinning Off

If you have been configured as a mobile twinning user, you can use the status menu to switch mobile twinning mode off.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the **PHONE** key and then press the **Status** soft key.
2. Use the up and down cursor keys to highlight **Mobile Twinning**.
 - To clear the setting, press the **Off** soft key.
 - To access the twinning menu instead, press **Details**.

Related links


[The Status Menu](#) on page 159

Parked Calls

While parked calls are parked on the telephone system and can be unparked by any other user, the parked call indication is sent to a particular extension. If there are any calls parked against your phone, you can view and unpark them via the **Status** menu.

- Your IP Office system administrator controls whether you can access this menu.

Procedure

1. Press the **Status** soft key if shown.
 - To do this during a call, press the  **PHONE** key and then press the **Status** soft key.
2. If you have any parked calls, the **Parks...** option is displayed. The option is not present if you do not have calls parked against your extension.
3. Press the **Details** soft key.
4. Use the cursor keys to scroll through the parked calls.
5. To unpark a particular call, highlight it and then press the **Connect** soft key.

Related links

[The Status Menu](#) on page 159

System Alarms

An **S** in the phone status letters indicates a system alarm. This happens if you are configured as a system phone user.

Details of the alarm may also appear in your phone's **Status** menu. This allows you to report the problem to your system administrator or maintainer. Note that the alarms vary depending on the type of system.

Procedure

1. Press the **A** button.
2. Scroll to the alarm message text:
 - If displayed, press **Admin** to see additional information.
 - If displayed, press **Clear** to clear the alarm.

Related links

[The Status Menu](#) on page 159

Chapter 31: Menus

This section provides an overview of the menus displayed on the phone. These are only a general indication. The menu options can vary depending on the version of phone firmware and the configuration of the telephone system.

Your system administrator can also restrict the menu options available.

Related links

- [Status Menu](#) on page 166
- [Features Menu](#) on page 166
- [A Menu](#) on page 167
- [Menu Access Control](#) on page 167

Status Menu

This menu is accessed by pressing the **Status** soft key when displayed. The features shown vary depending on the options currently enabled. See [The Status Menu](#) on page 159.

Mobile Twinning	On
Parks...	On
Follow Me To	On
Do Not Disturb	On
Forward Unconditional	On
Forward on No Answer	On
Forward on Busy	On
Follow Me Here...	On
Forward Here...	On
Main	Enabled
Main	In Service

Related links

- [Menus](#) on page 166

Features Menu

This menu is accessed by pressing the **Features** soft key.


Related links

[Menus](#) on page 166

A Menu

This menu is used mainly for phone specific settings that are stored by the phone rather than settings that are stored by the phone system.

The menu is accessed by pressing the **A** key. Note that the options available vary between different models of telephone.

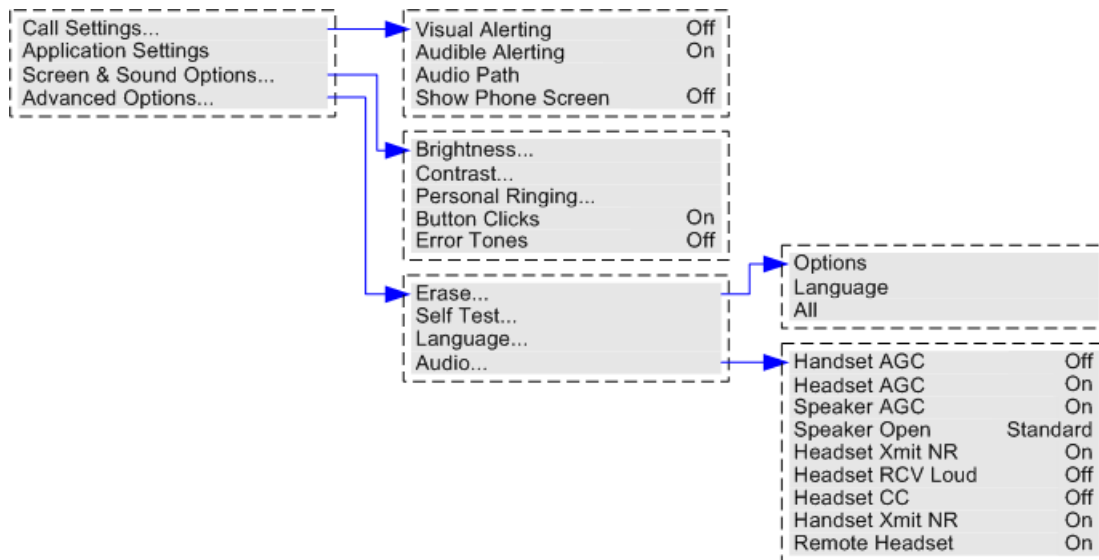

Related links

[Menus](#) on page 166

Menu Access Control

Some menu options are dynamic and only appear when appropriate. For example, the **Features** menu cannot be accessed when the phone is locked.

Access to other menu options is controlled by your system administrator:

- They can set system wide rules that apply to all users. They can also set specific rules for individual users.
- If you are restricted from accessing an option, it may still be applied for you by your system administrator. For example, the system administrator may configure call forwarding settings for you.

- Note that restricting menu access does not restrict access using available short codes and programmable buttons. However, those can also be removed or added by your system administrator.

The system administrator can control your menu access to the following groups of functions:

- **Basic Call Functions** – Controls whether you can access the phone's menu options for call pickup, park, unpark and transfer to mobile functions.
- **Advanced Call Functions** – Controls whether you can access the phone's menu options for do not disturb, account code, withhold number and internal auto-answer functions. In addition, the account code menu is only shown if the system has been configured with accounts codes.
- **Forwarding Functions** – Controls whether you can access the phone's menu options for forwarding and follow me functions.
- **Hot Desk Functions** – Controls whether you can access the menu options for logging in and out.
- **Passcode Change** – Controls whether you can change your login code (security credentials).
- **Phone Lock** – Controls whether you can access the menu options for locking the phone and for setting it to automatically lock.
- **Self Administration** – Controls whether you can access the **Self-Administer** menu option.
- **Voicemail Controls** – Controls whether you can access the **Visual Voice** option through the phone's **Features** menu. Your system administrator can also disable the Messages button from accessing the visual voice menus.
- **Group Controls** – The system administrator is able to configure if you can access the Membership, State and Fallback options of a group. If you are not configured for any groups then the Group menu is not shown.
- **Mobility Controls** – The **Mobile Twinning** options are only shown if you have been configured to use mobile twinning.
- **System Administration Controls** – The **System Administration** option is only shown if you have been configured as a 'System Phone' user.

Related links

[Menus](#) on page 166

Chapter 32: Entering Text Characters

The method of text entry varies on the type of function.

Related links

[Entering Characters for a Directory Search](#) on page 169

[Entering Additional and Accented Characters](#) on page 169

[Entering Characters for Other Functions](#) on page 170

Entering Characters for a Directory Search

When searching the directory, the matching names are shown as follows:

- Pressing a key matches all the characters represented by that key: For example, see [How the Directory Search Works](#) on page 81
 - Dialing **5** matches all names starting with **J**, **K** and **L**. Note that the matching is applied to each part of the name.
 - Pressing another key adds the characters from that key. For example: now dialing **2** simultaneously matches all names starting with **JA** and with **KA** plus various others.
 - Pressing another key adds the characters from that key. For example: now dialing **7** simultaneously matches all names starting with **JAS** (for example "Jason") and with **KAR** (for example "Karl") plus others.
- To remove all the characters entered so far, press **Clear**.

Related links

[Entering Text Characters](#) on page 169

Entering Additional and Accented Characters

Dialing Additional and Accented Characters

The keys on the telephone number pad can be used to enter characters other than those marked on the button.

For example, though marked with just **ABC**, the 2 key also matches the accented forms of those characters, for example **À**, **Á**, **Â**, **Ã**, **Ä**, **Å** and **Ç**. The set of additional unmarked characters matched varies depending on the language settings of your system.

Related links

[Entering Text Characters](#) on page 169

Entering Characters for Other Functions

- Select a character by re-pressing the indicated button until the required character is displayed. Then:
 - Pressing another button enters that character and moves to entering the next character from the newly selected button.
 - Pausing for more than a second after pressing a button also enters the current character and moves to entering the next character.
- You can select the text entry mode. The current mode is shown by the soft-key label as below. Pressing the soft-key switches text entry to the next mode:
 - **abc** – Lower-case.
 - **ABC** – Upper-case.
 - **Abc** – Capitalized.
 - **123** – Number only mode.
 - **Hex** – Hexadecimal only mode.
- Use the left and right cursor keys to move the cursor.
- Press **Bksp** to delete the character before the cursor.

Related links

[Entering Text Characters](#) on page 169

Part 9: Further Help

Draft

Chapter 33: Additional Help and Documentation

The following pages provide sources for additional help.

Related links

[Forgotten Password](#) on page 172

[Getting Help](#) on page 172

[Additional Documentation](#) on page 173

Forgotten Password

Some IP Office features require you to enter information such as your username, password, login code (security PIN), voicemail code (mailbox password).

Avaya cannot or reset the values for your passwords and codes. However, your system administrator can reset the values if necessary, either doing it themselves or through a request to your Avaya business partner.

Your system administrator also sets the rules your IP Office system uses for allowable passwords and codes. The same rules are applied to all users.

Related links

[Additional Help and Documentation](#) on page 172

Getting Help

Avaya sells IP Office through accredited business partners. Those business partners provide direct support to their customers and escalate issues to Avaya if necessary.

If you require further support, you should first contact your own system administrator. They are able to access the full configuration of the IP Office system, either themselves or through a request to your system's Avaya business partner.

Whilst your system administrator/reseller cannot see your existing passwords, they can reset them in order to allow you to login again and then change the value.

Related links

[Additional Help and Documentation](#) on page 172

Additional Documentation

The [Avaya Documentation Center](#) website contains user guides and manuals for Avaya products. The links below cover user guides that you may find useful.

Phone User Guides

- [IP Office J100 Series Phone User Guide](#) | [IP Office J100 Series Quick Reference](#)
- [IP Office 1408/1416 Phone User Guide](#) | [IP Office 1408/1416 Telephone Quick Reference Guide](#)
- [IP Office 1608/1616 Phone User Guide](#) | [IP Office 1608/1616 IP Telephone Quick Reference Guide](#)
- [IP Office 9500 Series Phone User Guide](#) | [IP Office 9500 Series Quick Reference](#)
- [IP Office 9600 Series Phone User Guide](#) | [IP Office 9600 Series Quick Reference](#)
- [IP Office Analog Phone User Guide](#)

Application Guides

- [Using Avaya Workplace Client for IP Office](#)
- [Using the IP Office User Portal](#)
- [Using one-X Portal for IP Office](#)
- [Using IP Office SoftConsole](#)

Voicemail Mailbox User Guides

- [Using a Voicemail Pro IP Office Mode Mailbox](#)
- [Using a Voicemail Pro Intuity Mode Mailbox](#)
- [Using IP Office Embedded Voicemail Intuity Mode](#)
- [Using IP Office Embedded Voicemail IP Office Mode](#)

Related links

[Additional Help and Documentation](#) on page 172

Index

A

A Menu	167
Abbreviated Dial Button	142
Absent Button	142
Accented Characters	169
Account Code	106
Button	142
Forced	106
Manual	107
Add	
Buttons	140
Contact	86
Contact from the Call Log	87 , 94
Feature Buttons	140
Programmable Buttons	140
Additional Calls	26
Answer	35
Administrator	172
AGC	
Headset	109
Speaker	113
Alerting	128
Auto-Answer	130
Coverage Ring	129
Off	128
Visual Alerting	128
Volume	129
Answer	34
Answer another call	35
Call	33
Call Pickup	38
Drop	36
Headset	108
Page	37
Pickup Call	38
Send to voicemail	36
Appearance Buttons	21 , 22
Bridged Appearance	20
Call Appearance	20
Call Coverage	20
Line Appearance	20
Attention Ring	129
Auto Display Waiting Call	134
Auto Lock	119
Auto-Answer	130
Button	142
Auto-Return	
Display	135
Automatic Gain Control	138
Headset	109
Speaker	113

B

Block Calls	68
Bridged Appearance	20 , 21
Brightness	131
Broadcast	29
Answer	37
Page Button	144
Broken dial tone	25
Business Partners	172
Busy	29
Forward Calls	62
Button	
Abbreviated Dial	142
Absence Text	142
Account Code	142
Auto-Answer	142
Broadcast	144
Call Park	143
Call Pickup	143
Call Pickup Any	144
Clicks	136
Conference	144
DND	145
Do Not Disturb	145
Drop	144
Flash Hook	144
Forward	143
Group	144
Hunt Group	144
Mobile Twin	146
Page	144
Park	143
Park and Page	145
Pickup	143
Pickup Any	144
Recall	144
Ringer Off	145
Self-Administer	145
Send All Calls	145
Suppress Digits	145
Timer	146
Twinning	146
User	146
Buttons	14 , 140
Feature Buttons	16
Programmable Buttons	16

C

Call	
Answer	33 , 34
Broadcast	29

Call (<i>continued</i>)		Conference (<i>continued</i>)	
Call details	92	Conference phones	111
Conference	53	Details	55
Display Waiting Call	134	Drop party	56
Drop	36	Drop yourself	56
Duration Display	133	Exit	56
End	32	Hold	46, 56
Forward	62	Mute party	56
From the Directory	85	Short Codes	58
Headset	108	Contacts	80, 169
Hold	45, 46	Add	86
Ignore	36	Add from the Call Log	87
Mute	32	Call from	26
Page	29	Delete	89
Park	49	Edit	88
Recall	28	Make a call	85
Redial	28, 40	Search	81
Send to voicemail	36	Context Sensitive	
Timer Display	133	Conferencing	57
Unhold	46	Contrast	132
View Details	92	Coverage Ring	129
Call Appearance	20, 21	Cursor Keys	14
Call Coverage	20, 22		
Call Log	90	D	
Add to contacts	94	Default Audio Path	109, 112, 139
Delete All	94	Delete	
Delete call	93	Call Log	94
Make a call from	92	Contact	89
Making calls	27	From the Call Log	93
Redial	40	Details	
Call Park Button	143	Call Details	92
Call Pickup	38	Dial tone	
Call Pickup Any Button	144	Broken dial tone	25
Call Pickup Button	143	Dialing	
Callback Call	25	Text	169
Caller display	33	Dialing Codes	149
Caller name	33	Call Pickup	38
Calls	25	Conference	58
Additional Calls	26	Do Not Disturb	70
Busy	29	Follow Me	73
Call Log	90	Forwarding	67
History	90	Group	125
Making Calls	25	Login	119
Missed Calls	90	Park	49
Cellular	75	Voicemail	103
Change		Directory	80
Buttons	140	Add	86
Contacts	88	Add from the Call Log	87
Feature Buttons	140	Call from	26
Programmable Buttons	140	Edit	88
Code		Make a call	85
Login	117	Search	81, 169
Mailbox	102	Display	18, 131
Security PIN	117	Auto-Return	135
Columns	132	Brightness	131
Conference	53	Call Duration	133
Button	144		

Display (<i>continued</i>)		forgotten password	172
Call Timer	133	Forward	60, 62
Columns	132	Button	143
Contrast	132	Short Codes	67
Idle Timer	135		
Language	134	G	
Soft Keys	15	Greeting	100
Waiting Call	134	Group	121
Display Keys	15	Button	144
Divert	60, 62	Fallback	123
DND	68	Membership	121
Button	145	Missed Calls	91
Exceptions	69	Night Service	123
Do Not Disturb	60, 68	Page	29
Button	145	Short Codes	125
Exceptions	69	Status	123
Short Codes	70		
Documentation	173	H	
Double beeps	45	Handset	
Drop	36	Automatic Gain Control	138
Button	144	Handsfree	111
Call	32	Audio Path	139
Party from conference	56	Default	109
Yourself from a Conference	56	Default to speaker	112
Dual-Column	132	Volume	112
Duration	133	Headset	108
		Automatic Gain Control	109, 138
E		Default Handsfree Audio Path	139
EC500	75	Default to	109
Edit		Volume	109
Buttons	140	Help	172
Contact	88	History	90
Feature Buttons	140	Redial	40
Programmable Buttons	140	Hold	45, 46
Email		Conference	46, 56
Voicemail Email	100	Pending Transfer	57
En-Bloc Dialing	30	Transfer	43, 47
End Call	32	versus Park	49
Erase		Hunt Group	121
Call Log	94	Button	144
Error Tones	137	Fallback	123
Exceptions	69	Membership	121
Extension		Night Service	123
Use Two	75	Short Codes	125
Extension to Cellular	75	Status	123
F		I	
Fallback		Idle Display Timer	135
Group	123	Idle Line Preference	20
Twinning	60, 75	Ignore	36
Feature Buttons	16, 140	Internal Auto-Answer	130
Features Menu	166	Internal Twinning	60, 75
Flash Hook Button	144	Interrupted dial tone	25
Follow Me	60, 71		
Short Codes	73		

K

Key Clicks	136
Keys	14
Soft Keys	15

L

Language	134
Last Dialed	28, 41
Last Number	
Redial	28, 41
Last Number Redial	40
Line Appearance	20, 22
Line Preference	20
List Mode	
Redial	28, 40
Lock	114, 118
Auto Lock	119
Log	90
Logging In	114
Login Code	117
Logging Out	114
Login	
Short Codes	119
login code	172

M

Mailbox	97
Code	102
Greeting	100
Name	101
Short Codes	103
Transfer to	103
Mailbox guides	104
Making Calls	25
Additional Calls	26
Broadcast	29
En-Bloc Dialing	30
From Contacts	26
From the call log	27
From the Call Log	92
From the Directory	85
On-Hook Dialing	30
Page Call	29
Recall	28
Redial	28, 40
Volume	31
Manuals	173
Menu	166
A Menu	167
Access	167
Features	166
Status	159, 166
Messages	97
Visual Voice	98

Missed Calls	90
Group calls	91
Mobile	
Mobile Twin Button	146
Mobile Twinning	60
Number	76
Reclaim call	77
Transfer to	44, 77
Twinning	75

Modify	
Buttons	140
Contacts	88
Feature Buttons	140
Programmable Buttons	140
Music on Hold	45
Mute	32
Conference party	56

N

Name	33
Voicemail	101
New	
Contact	86
Contact from the Call Log	87, 94
Night Service Group	123
No Answer	
Forward Calls	62
No Calls	60, 68
Exceptions	69
Number Withhold	31

O

OK Button	14
On-Hook Dialing	30
Open Call Log	28, 40

P

Page	
Answer	37
Button	144
make a Page Call	29
Park and Page	51
Park	49
Button	143
Park and Page	51
Short Code	49
Park and Page Button	145
password	172
Password	
Login	117
Mailbox	102
Personal Contacts	80
Phone	

Phone (continued)

Auto Lock	119
Language	134
Lock	118
Unlock	118
Phone Book	80
Phone Stand	13
Pickup	38
Pickup Any Button	144
Pickup Button	143
PIN Code	
Login	117
Mailbox	102
Programmable Buttons	16, 140
Prompts	104

R

Recall	27, 28
Button	144
Reclaim Twinned Call	77
Redial	27, 28, 40
Last Number	28, 41
List Mode	28, 40
Redial Mode	41
Redirect Calls	60, 62
Remove	
Call Log	94
Contact	89
From the Call Log	93
Replace	
Buttons	140
Feature Buttons	140
Programmable Buttons	140
Reseller	172
Restrictions	
Menu Access	167
Retrieve	
Held Call	46
Twinned Call	77
Ringer	128
Auto-Answer	130
Coverage Ring	129
Off	128
Ringer Off Button	145
Silence	36
Visual Alerting	128
Volume	129
Ring Line Preference	20

S

Screen	131
Auto-Return	135
Brightness	131
Call Duration	133
Call Timer	133

Screen (continued)

Columns	132
Contrast	132
Idle Timer	135
Language	134
Search	169
Directory	81
security PIN	172
Security PIN	117
Mailbox	102
Self-Administer Button	145
Send All Calls	60, 62
Button	145
Share an extension	71
Short Codes	149
Call Pickup	38
Conference	58
Do Not Disturb	70
Follow Me	73
Forwarding	67
Group	125
Login	119
Park	49
Voicemail	103
Show Last Call Duration	133
Single-Column	132
Soft Keys	14, 15
Sound	136
Speaker	111
Automatic Gain Control	113, 138
Default Handsfree Audio Path	139
Default to	112
Volume	112
Spoken prompts	104
Stand	13
Status	18
Busy	29
Icons	18
Letters	18
Menu	166
Status Menu	159
Suppress Digits Button	145
System Administration	152
System Administrator	172
System Directory	80
system phone	152

T

Telephone	
Auto Lock	119
Lock	118
Unlock	118
Telephone Numbers	80
Temporary redirect	71
Text	
Accented Characters	169

Text (<i>continued</i>)	
Entering text	169
Time	
Call Timer	133
Last Call Duration	133
Timer Button	146
Tones	
Button Clicks	136
Double beeps	45
Error Tones	137
Transfer	42
Held Call	43 , 47
Mobile	44
To Mobile Twin	77
To Voicemail	43 , 103
Twin	
Reclaim call	77
Transfer to	44 , 77
Twinning	60 , 75
Button	146
Number	76

U

Unanswered Calls	90
Unhold	46
Unlock	114 , 118
Unmute	32
Unpark	49
User Button	146
User Guides	173

V

View conference details	55
Visual Voice	98
Voicemail	97
Code	102
Forward to	62
Greeting	100
Name	101
Send call to voicemail	36
Short Codes	103
Transfer	43
Transfer to	103
Visual Voice	98
Voicemail Email	100
voicemail code	172
Voicemail guides	104
Volume	136
Call	31
Handset	137
Handsfree	112
Headset	109 , 138
Ringer	129 , 137
Speaker	112 , 138

W

Withhold Number	31
-----------------------	--------------------